

久保田农业机械(苏州)有限公司

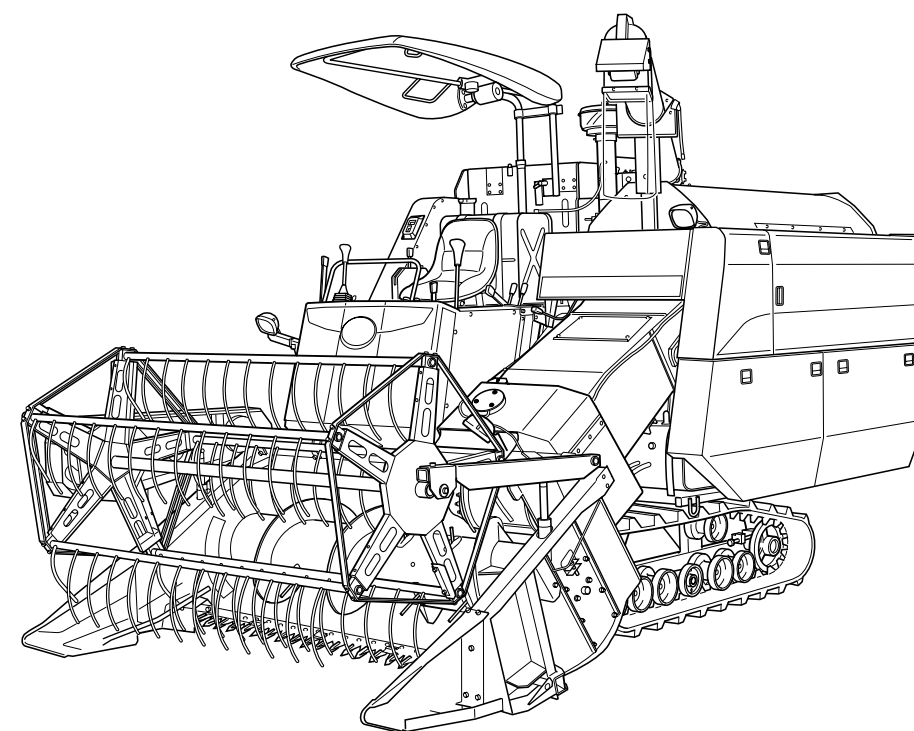 
地址：中国江苏省苏州市苏州工业园区苏虹东路77号
邮编：215026
电话：0512-6716-3122, 0512-6716-3909(服务部)
传真：0512-6716-3344, 0512-6716-8082(服务部)

图解零件表 ILLUSTRATED PARTS LIST

KUBOTA

型号
MODEL DC-68-G

联合收割机
COMBINE



Kubota
久保田农业机械(苏州)有限公司

97900-51351
4月 2010
APR.

注意事项

使用本零件表时，请注意以下事项。

- 1. 订购零件时，请使用本零件表检查确认零件的数量和零件的名称。
- 2. 需要修理时，请参照本零件表中的插图。
- 3. 本零件表如有变更，恕不另行通知。

NOTICE

This Parts List is for the following purposes.

- 1. When ordering parts, check with this Parts List to confirm the part number and the name of parts.
- 2. When making repairs, refer to the illustrations in this Parts List.
- 3. This Parts List is subject to change without notice.

KALPIS.No.		CFK0000040
BLOCK No.	LINE No.	A(1)
01	01 (ENG.)	1G633-11000 V2403-M-DI-TE2-CKMS4
	01	5T055-00000 DC-68-G

变更通知No. DESIGN CHANGE No.
1G700－1318
5T050－0101
5T051－0821
5T055－0229

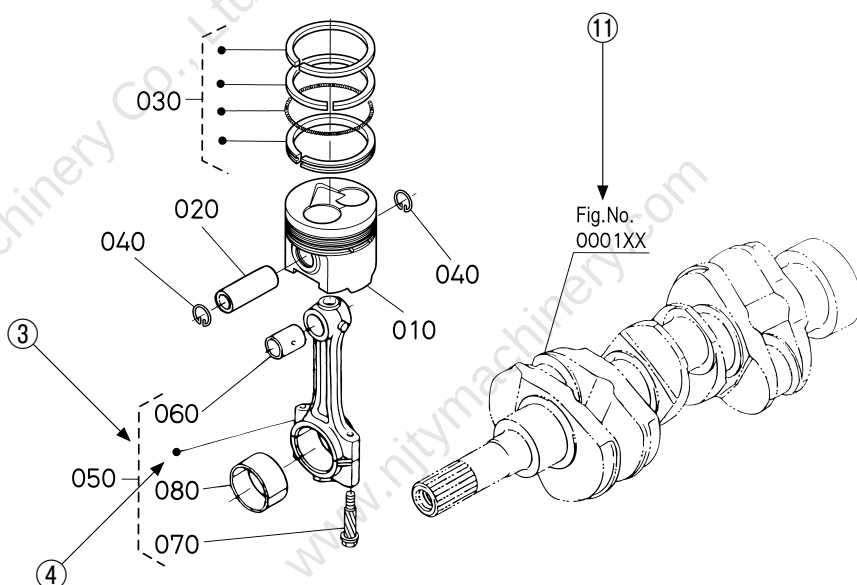 
380・YH×KSI・1・KSI

使用说明
INSTRUCTIONS

①
010200 活塞 / 曲轴
PISTON / CRANKSHAFT

②
[B]

⑩ → 机器序列号 ; A: ≤15000, B: 14000 至 15000



序号 PEF.No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY / S.No.		互换 I.C.	备注 REMARKS
				A	B		
010	15800-0000-0	活塞	PISTON	1 ≤15000	-	↔	例-1 Example-1
010	15800-0000-2	活塞	PISTON	1 ≥15001	-	↔	
020	15800-1000-0	活塞销	PIN, PISTON	1 ≤15000	-	↔	例-2 Example-2
020	15800-1000-2	活塞销	PIN, PISTON	1 ≥15001	-	↔	
030	15800-2000-0	活塞环组件	ASSY PISTON RING	1 ≤15000	-	↔	例-3 Example-3
030	15830-2000-0	活塞环组件	ASSY PISTON RING	1 ≥15001	-	↔	

- ① 图解号 表示与各图解名称相对应的代号。
- ② 有关姊妹型号的说明 表示姊妹型号的类型和标记，并提示这些姐妹样式在本书中的相关页码。
- ③ 组件 同一组装配组件，是以用虚线括号囊括起来识别。
- ④ 点 表示该零件不单独出售。购买时，须订购包含有该零件的整套组件(序号为 050)。
- ⑤ 序号 序号是指为零部件分解图上的零件所配定的代号。通过参照零件列表中的相同序号，即可确认这些零件代号并获取相关零件的信息。
- ⑥ 型号名 在此栏目中表示基本型号名。其他可适用的型号名则在“备注”栏目(⑨)中表示。
- ⑦ 机器序列号 表示一组体现设计变化的序列编号。

发动机序列号

7 J 0001

7 K A001

后4位以数字或以字母(A 到 Z)和数字的组合来表示(从 0001 至最大值 Z999)。
倒数第 5 位 字母(生产月份)。

月份	1	2	3	4	5	6	7	8	9	10	11	12
	A,B	C,D	E,F	G,H	J,K	L,M	N,P	Q,R	S,T	U,V	W,X	Y,Z

倒数第 6 位 字母或数字(生产年份)。

年份	1998	1999	2000	01	02	03	04	05	06	07	08	09	10	11
	W	X	Y	1	2	3	4	5	6	7	8	9	A	B

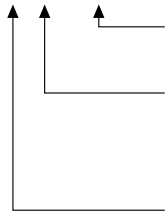 
- ⑧ 互换 表示在经过设计调整后新旧零件之间有无互换性。
- 例-1 记号“←”表示新零件可以替代旧零件使用，而相反则不可。
零件号为 15800-0000-0 的零件适用于序列号为 15000 以下的机器。
零件号为 15800-0000-2 的零件适用于所有序列号的机器。
- 例-2 记号“≠”表示新旧零件不可以相互替代使用。
零件号为 15800-1000-0 的零件适用于序列号为 15000 以下的机器。
零件号为 15800-1000-2 的零件适用于序列号为 15001 以上的机器。
- 例-3 记号“↔”表示新旧零件可以相互替代使用。
零件号为 15800-2000-0 和 15830-2000-0 的零件均适用于所有序列号的机器。
- ⑨ 备注 1 在此栏目中，注明其他可适用的型号名，尺寸以及特定事项。下列记号和缩写形式在本书中通篇使用。
- 29*12.00-15 ... 轮胎尺寸 sq.m ... m² sq.mm ... mm²
cu.m ... m³ cu.mm ... mm³ D ... 直径 L ... 长度
OLD ... 旧部件 Standard(STD) ... 标准 SET ... 组套 T ... 齿数
SUITABILITY ... 适宜 ACCESSORIES ... 标准附件 OPTION ... 选择
THRESHING ... 脱粒 HOPPER ... 粮箱 REEL/FEEDER ... 盘/馈线
Y ... 油菜籽型 GRAIN TANK ... 粮箱 FRONT ... 前
- ⑩ 备注 2 下列表示方式在各图解的注释中使用。
- 机器序列号的表示方式如下。
- ≤15000(~15000) 15000 以下的机器序列号。
≥15001(15001~) 15001 以上的机器序列号。
14000 to 15000 从 14000 至 15000 之间的机器序列号。
对于某些型号，上述表示方式也可使用于备注1(⑨)。
- ⑪ 虚像图号 表示以虚拟图像显示的零件的图号。带有“XX”的虚像图号，说明该零件具有两个或两个以上的形状。其形状取决于机器的姐妹机型的生产模式或地段。

- ① Fig. No. Represents No. corresponding to each group name.
- ② Specifications The types and destinations of sister models are indicated. These indications are given to (for sister models) tell their relevant pages in this book.
- ③ Components The components of an assembly are identified by a bracket of dotted lines.
- ④ Point Indicates that the parts is not sold independently.
The assembly (Ref.No.050) containing the part needs to be ordered.
- ⑤ REF. No. Reference numbers are assigned to parts in the illustration. The code number of a part in the illustration can be identified by referring to the same reference number in the parts list.
- ⑥ Model name The name of the basic model is indicated in this column. Other applicable models are indicated on the "REMARKS" column ⑨.
- ⑦ S. No. Indicates a group of serial numbers to which a design change is applied.
(serial No.)

Engine Serial No.

7 J 0001

7 K A001



Lower 4 digits in Numerals or Alphabetical letter (A to Z) and Numerals (start 0001 to max Z999).

5th digit Alphabetical letter (Month of manufacture).

Month	1	2	3	4	5	6	7	8	9	10	11	12
	A,B	C,D	E,F	G,H	J,K	L,M	N,P	Q,R	S,T	U,V	W,X	Y,Z

6th digit Numerals or Alphabetical letter (Year of manufacture).

Year	1998	1999	2000	01	02	03	04	05	06	07	08	09	10	11
	W	X	Y	1	2	3	4	5	6	7	8	9	A	B

- ⑧ I. C. Indicates the interchangeability of parts due to design change.
(interchangeability)
- Example-1 ← indicates that a new part can replace an old part, but not vice versa.
15800-0000-0 is applicable to the first serial number to S. No. 15000.
15800-0000-2 is applicable to the first serial number and above.
- Example-2 ≠ indicates that the new and old parts are not interchangeable.
15800-1000-0 is applicable to the first serial number to S. No. 15000.
15800-1000-2 is applicable to S. No. 15001 and above.
- Example-3 ↔ indicates that the new and old parts are interchangeable. Both 15800-2000-0 and 15830-2000-0 are applicable to the first serial number and above.
- ⑨ REMARKS 1 In this column, enter other applicable model names, dimensions and other special items.
The following symbols and abbreviations are used throughout this book.
29*12.00-15 ... Tire size sq.m ... m² sq.mm ... mm²
cu.m ... m³ cu.mm ... mm³ D ... Diameter L ... Length
W/G No. ... Whole goods number.
STD ... Standard / SET ... Set sale / T ... Teeth
OLD ... Old parts, old shapes or old models
NEW ... New parts, new shapes or new models
Y ... RAPESEED TYPE

⑩ REMARKS 2 The following expressions are used in NOTE for each group.

Machines' serial numbers are indicated as follows.

≤ 15000 Serial number below 15000.

≥ 15001 Serial number above 15001.

14000 to 15000 Serial number 14000 to 15000.

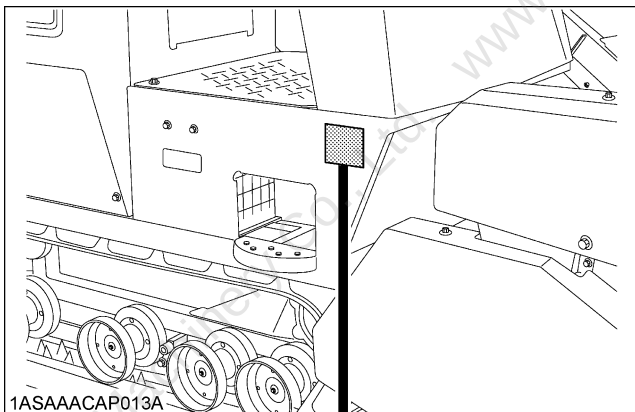 
For some models, the above expressions may also be used REMARKS 1 ⑨.

⑪ Fig. No. Indicates the numbers of figures for the parts that are shown in virtual images.
(virtual images)

A figure numbers with XX means that there are two or more figures depending on the sister models or the production lots.


联合收割机序列编号

如下所示，在联合收割机机身的相应位置标有联合收割机的型号，编号和发动机的号码。请注意，对于不同机型，其号码铭牌的位置也有可能不同。请确认您的联合收割机的机型。




KUBOTA COMBINE	
MODEL	DC-68G
SERIAL NO.	
ENGINE	MODEL KUBOTA V2403-M-DI-TE2-CKMS4
	N O.
	OUTPUT/SPEED 49.2 (67) KW (PS) / 2700 rpm
	KUBOTA AGRICULTURAL MACHINERY (SUZHOU) CO., LTD

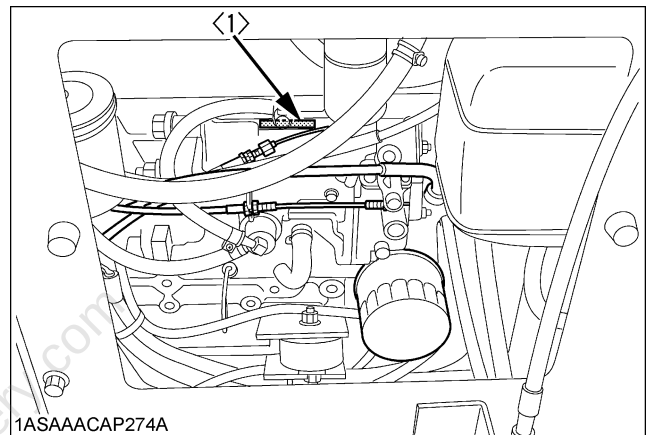 1ASAAACAP255A



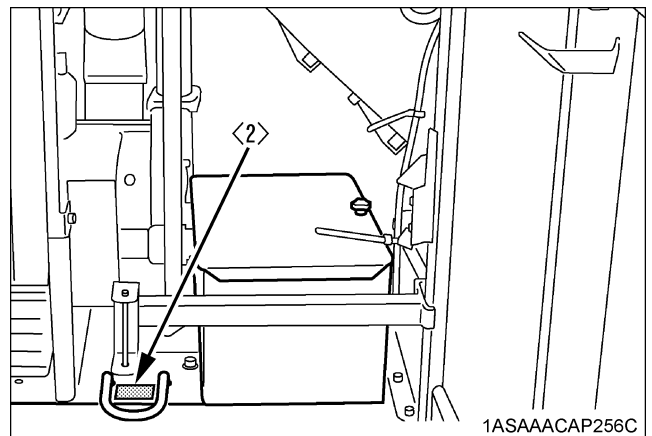 (1) 发动机的号码




(1) 联合收割机序列编号

SERIAL NUMBER


The model name, machine number and engine number of this product are described in their respective positions, as shown below. Note that their positions may be different depending on the specifications.

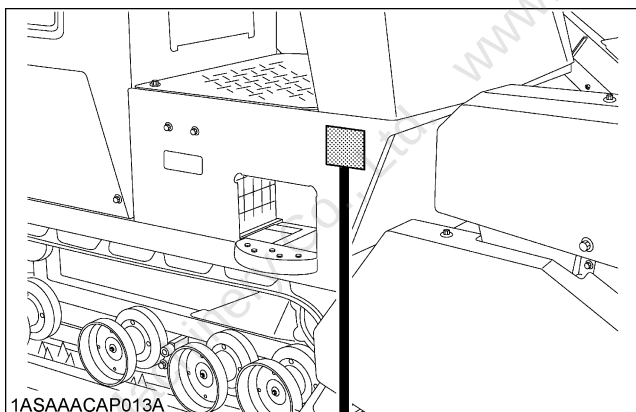 Check the specifications of the product.




KUBOTA COMBINE	
MODEL	DC-68G
SERIAL NO.	
ENGINE	MODEL KUBOTA V2403-M-DI-TE2-CKMS4
	N O.
	OUTPUT/SPEED 49.2 (67) KW (PS) / 2700 rpm
	KUBOTA AGRICULTURAL MACHINERY (SUZHOU) CO., LTD

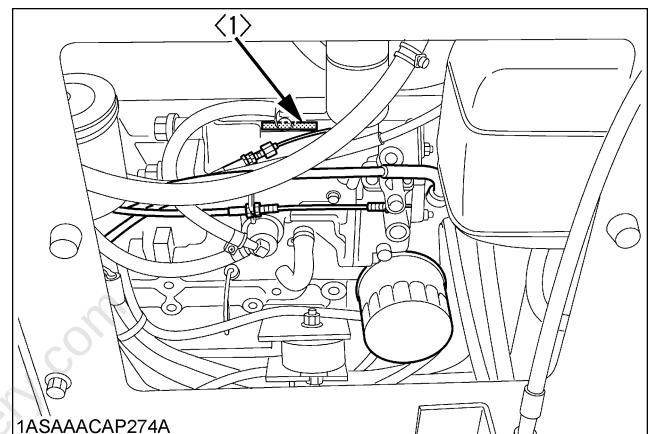 1ASAAACAP255A



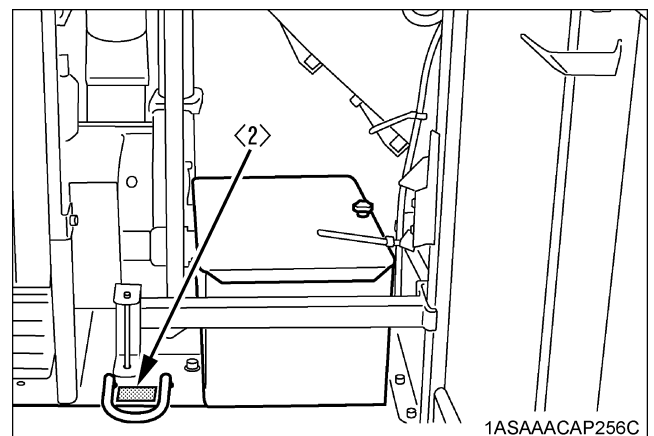 (1) Engine serial number



(1) Combine serial number

目 录

[V2403-M-DI-TE2-CKMS4]

000100 曲轴箱	1
000200 机油盘	2
000300 油缸体	3
000400 齿轮箱	4
000500 顶盖	5
000600 机油滤清器	6
000700 油量计	7
000800 油泵	8
010000 主轴承箱	9
010100 凸轮轴和中间齿轮轴	10
010200 活塞和曲柄轴	11
010300 飞轮	13
010500 燃油凸轮轴和调速器轴	14
020000 怠速限制装置	15
020200 喷射泵	16
020500 调速板	17
020601 喷嘴座和电热塞	18
020602 超流管	19
021200 叉杆(调速器)	20
050000 进出水法兰和节温器	21
050100 水泵	22
050400 风扇	23
060000 气门和摇臂	24
060100 进气歧管	25
060200 排气歧管	26
060600 涡轮增压器	27
061000 油管(涡轮增压器)	28
070200 机油冷却器	29

[DC-68]

130000 燃油滤清器	30
130400 油箱	31
130500 燃油滤清器[零部件]	32
130800 燃油管	33
130900 油水分离器[零件]	34
150200 散热器	35
150300 水管	36
150500 储备油箱	37
160300 空气滤清器	38
160500 消音器	39
501000 交流发电机	40
502000 交流发电机[零件]	41
505000 起动机	42
506000 起动机[零件]	43
511000 蓄电池	44

[V2403-M-DI-TE2-CKMS4]

521000 发动机开关	45
[DC-68]	
522800 机体继电器	46
523000 驾驶室开关	47

[DC-68-THRESHING]

525100 脱粒开关/传感器	48
-----------------	----

[DC-68-GRAIN TANK]

526000 储粮罐开关/继电器	49
------------------	----

[DC-68]

531000 前面板	50
------------	----

541001 工作灯(机体)	51
----------------	----

[DC-68-THRESHING]

541002 工作灯(脱粒)	52
----------------	----

[DC-68-GRAIN TANK]

541003 工作灯(储粮罐)	53
-----------------	----

[DC-68-REEL/FEEDER]

541004 工作灯(离合器)	54
-----------------	----

[DC-68]

571000 线束(机体)	55
---------------	----

[DC-68-THRESHING]

572000 线束(脱粒)	56
---------------	----

[DC-68-GRAIN TANK]

573000 线束(储粮罐)	57
----------------	----

[DC-68-REEL/FEEDER]

577000 线束(防尘风扇)	58
-----------------	----

581000 风扇(馈线)	59
---------------	----

[DC-68]

A01000 反滑轮	60
------------	----

A01400 张紧(移动)	61
---------------	----

A11000 传动箱	62
------------	----

A11100 传动箱内 1	63
---------------	----

A11200 传动箱内 2	64
---------------	----

A11300 传动箱内 3	65
---------------	----

A11400 传动箱内 4	66
---------------	----

A21000 刹车	67
-----------	----

A22000 HST [组成部分] 4	68
---------------------	----

B10800 机油冷却器	69
--------------	----

B11000 HST	70
------------	----

B11100 HST [组成部分] 1	71
---------------------	----

B11200 HST [组成部分] 2	72
---------------------	----

B11300 HST [组成部分] 3	73
---------------------	----

B23000 液压组件(变速箱)	74
------------------	----

B23300 液压组件(储粮罐)	75
------------------	----

B24500 丰收缸	76
------------	----

B24600 丰收缸 [组成部分]	77
-------------------	----

B24700 机(筒)	78
-------------	----

B26000 离合器缸	79
-------------	----

B50400 液压泵	80
------------	----

B50500 液压泵[零部件]	81
-----------------	----

B50600 液压软管(罐)	82
----------------	----

B70000 液压软管(吸)	83
----------------	----

B70100 液压软管(排放)	84
-----------------	----

B70200 液压软管(放泄塞)	85
------------------	----

B70300 液压软管(收割机)	86
------------------	----

目 录

B70400 液压软管(方向).....	87	H80700 摆动张力臂.....	138
B70500 液压软管(机).....	88	H90300 晶粒分子筛.....	139
C00100 主框架.....	89	H92000 筛箱.....	140
C00200 甲板.....	90	H92100 筛箱布.....	141
C00500 发动机底座.....	91	J01000 谷粒螺旋轴.....	142
C10000 履带.....	92	J01100 谷粒锥形齿轮箱.....	143
C10100 履带支重轮.....	93	J01200 谷粒垂直螺旋杆.....	144
C10200 履带张力.....	94	J01500 谷粒输送张紧臂.....	145
C10400 履带指南.....	96	J01600 再筛选螺旋轴.....	146
C10500 传动辊.....	97	J01700 再筛选驱动链条箱.....	147
C10601 载波辊.....	98	J01800 再筛选驱动箱.....	148
C10602 载波辊.....	99	J01900 再筛选锥齿轮箱.....	149
D60300 转向.....	100	J02000 再筛选垂直螺旋杆.....	150
D60500 丰收离合器控制杆.....	101	J20700 开闭盖.....	151
D60700 加速器杆.....	102	J20801 脱粒封面(前/后).....	152
D60800 脱粒离合器控制板.....	103	J20802 脱粒封面(前/后).....	153
D61000 主变速手柄.....	104	J20900 脱粒封面(一侧).....	154
D61100 副变速手柄.....	105	J80000 标签(脱粒).....	155
D61500 主变速杆.....	106	[DC-68-GRAIN TANK]	
D62001 刹车踏板.....	107	K00100 储粮罐.....	156
D62002 刹车踏板.....	108	K00300 净化管.....	157
D63400 丰收移动臂.....	109	K00600 油罐锁.....	158
E60000 运行框架.....	110	K10100 罐(后板).....	159
E60100 操作面板.....	111	K10500 罐(下部).....	160
E60300 座椅.....	112	K18000 罐(驱动器箱).....	161
E60400 防尘罩.....	113	K20000 机(箱1).....	162
E75000 顶篷.....	115	K20100 罐(螺丝轴).....	164
G90100 标签.....	116	K20200 尾气快门.....	165
G95000 标准附件.....	117	K20600 发动机.....	166
[DC-68-THRESHING]		K20700 机(罩1).....	167
H00101 脱粒框架(上).....	118	K20800 机168.....	
H00102 脱离框架(下).....	119	K20900 安装框架.....	169
H01000 清选风机板.....	120	K23000 机(箱2).....	170
H01100 风向板.....	121	K23400 传动轴.....	171
H01200 进口板.....	122	K24000 机(箱3).....	172
H02000 喷粉罩.....	123	K30000 机体.....	173
H30600 脱粒张力臂.....	124	K30300 机(固定件).....	174
H30700 丰收张力组件.....	125	K31500 罐(驱动器).....	175
H31300 丰收杆.....	126	K31700 罐(离合器).....	176
H40000 脱粒滚筒轴.....	127	K80000 标签(储粮罐).....	177
H40200 脱粒齿.....	128	[DC-68-REEL/FEEDER]	
H40300 凹板筛.....	129	U00300 尖端.....	178
H41000 脱粒滚筒驱动齿轮组件.....	130	U00400 盘(中心轴).....	179
H41100 脱粒滚筒驱动轴.....	131	U01100 盘(调节器).....	180
H42100 脱粒滚筒拉力臂.....	132	U01200 盘(架).....	181
H60000 脱粒机罩.....	133	U10700 张紧臂.....	182
H60200 粉尘载阀.....	134	U20000 丰收框架.....	183
H80000 清选风机轴.....	135	U20200 丰收框架罩.....	184
H80401 摇轴(左).....	136	U21000 螺旋鼓.....	185
H80402 摇轴(右).....	137	U21100 螺旋滚筒轴.....	186

目 录

U21200 螺旋鼓链	187
U21700 钩爪轴	188
U23100 丰收传动轴	189
U30100 切割机叶片臂	190
U30600 切割机传动轴	191
U40001 切刀	192
U40002 切刀	193
U40200 分压器(左)	194
U40300 分压器(右)	195
U70300 盘(移动缸)	196
U75000 馈线框架	197
U75100 馈线罩	198
U75300 馈线风扇罩	199
U76000 馈线传动轴	200
U76101 馈线传动链	201
U76102 馈线传动链	202
U76103 馈线传动链	203
U76300 馈线链	204
U76600 馈线滚筒	205
U90100 标签(盘/馈线)	206
■ 零件号索引	207

CONTENTS

[V2403-M-DI-TE2-CKMS4]		523000 COCKPIT SWITCH	47
000100 CRANK CASE	1	[DC-68-THRESHING]	
000200 OIL PAN	2	525100 THRESHING SWITCH/SENSOR	48
000300 CYLINDER HEAD	3	[DC-68-GRAIN TANK]	
000400 GEAR CASE	4	526000 GRAIN TANK SWITCT/RELAY	49
000500 HEAD COVER	5	[DC-68]	
000600 OIL FILTER	6	531000 FRONT PANEL	50
000700 OIL GUIDE	7	541001 WORK LIGHT (BODY)	51
000800 OIL PUMP	8	[DC-68-THRESHING]	
010000 MAIN BEARING CASE	9	541002 WORK LIGHT (THRESHER)	52
010100 CAMSHAFT AND IDLE GEAR SHAFT	10	[DC-68-GRAIN TANK]	
010200 PISTON AND CRANKSHAFT	11	541003 WORK LIGHT (GRAIN TANK)	53
010300 FLYWHEEL	13	[DC-68-REEL/FEDER]	
010500 FUEL CAMSHAFT AND GOVERNOR SHAFT	14	541004 WORK LIGHT (HARVEST)	54
020000 IDLE APPARATUS	15	[DC-68]	
020200 INJECTION PUMP	16	571000 WIRE HARNESS (BODY)	55
020500 SPEED CONTROL PLATE	17	[DC-68-THRESHING]	
020601 NOZZLE HOLDER AND GLOW PLUG	18	572000 WIRE HARNESS (THRESHER)	56
020602 OVER FLOW PIPE	19	[DC-68-GRAIN TANK]	
021200 FORK LEVER (GOVERNOR)	20	573000 WIRE HARNESS (GRAIN TANK)	57
050000 WATER FLANGE AND THERMOSTAT	21	[DC-68-REEL/FEDER]	
050100 WATER PUMP	22	577000 WIRE HARNESS (DUSTPROOF FAN)	58
050400 FAN	23	581000 FAN (FEEDER)	59
060000 VALVE AND ROCKER ARM	24	[DC-68]	
060100 INLET MANIFOLD	25	A01000 COUNTER PULLEY	60
060200 EXHAUST MANIFOLD	26	A01400 TENSION (TRAVEL)	61
060600 TURBO CHARGER	27	A11000 TRANSMISSION CASE	62
061000 OIL PIPE (TURBO CHARGER)	28	A11100 TRANSMISSION CASE INSIDE 1	63
070200 OIL COOLER	29	A11200 TRANSMISSION CASE INSIDE 2	64
[DC-68]		A11300 TRANSMISSION CASE INSIDE 3	65
130000 FUEL FILTER	30	A11400 TRANSMISSION CASE INSIDE 4	66
130400 FUEL TANK	31	A21000 BRAKE	67
130500 FUEL FILTER (COMPONENT PARTS)	32	A22000 HST INPUT SHAFT	68
130800 FUEL PIPE	33	B10800 OIL COOLER	69
130900 SEPALATOR [COMPONENT PARTS]	34	B11000 HST	70
150200 RADIATOR	35	B11100 HST [COMPONENT PARTS] 1	71
150300 WATER PIPE	36	B11200 HST [COMPONENT PARTS] 2	72
150500 RESERVE TANK	37	B11300 HST [COMPONENT PARTS] 3	73
160300 AIR CLEANER	38	B23000 HYDRAULIC UNIT (MISSION)	74
160500 MUFFLER	39	B23300 HYDRAULIC UNIT (GRAIN TANK)	75
501000 ALTERNATOR	40	B24500 HARVEST CYLINDER	76
502000 ALTERNATOR [COMPONENT PARTS]	41	B24600 HARVEST CYLINDER [COMPONENT PARTS]	77
505000 STARTER	42	B24700 UNLOADER CYLINDER	78
506000 STARTER [COMPONENT PARTS]	43	B26000 CLUTCH CYLINDER	79
511000 BATTERY	44	B50400 HYDRAULIC PUMP	80
[V2403-M-DI-TE2-CKMS4]		B50500 HYDRAULIC PUMP [COMPONENT PARTS]	81
521000 ENGINE SWITCH	45	B50600 HYDRAULIC TANK	82
[DC-68]		B70000 HYDRAULIC HOSE (SUCTION)	83
522800 BODY RELAY	46		


CONTENTS

B70100	HYDRAULIC HOSE (DELIVERY)	84	H80000	WINNOWER SHAFT	135
B70200	HYDRAULIC HOSE (DRAIN)	85	H80401	ROCKING SHAFT (LEFT)	136
B70300	HYDRAULIC HOSE (HARVEST)	86	H80402	ROCKING SHAFT (RIGHT)	137
B70400	HYDRAULIC HOSE (DIRECTION)	87	H80700	ROCKING TENSION ARM	138
B70500	HYDRAULIC HOSE (UNLOADER)	88	H90300	GRAIN SIEVE	139
C00100	MAIN FRAME	89	H92000	SIEVE CASE	140
C00200	DECK	90	H92100	SIEVE CASE CLOTH	141
C00500	ENGINE BASE	91	J01000	FIRST HORIZONTAL AUGER SHAFT	142
C10000	CRAWLER	92	J01100	FIRST BEVEL GEAR CASE	143
C10100	TRUCK ROLLER	93	J01200	FIRST VERTICAL AUGER SHAFT	144
C10200	CRAWLER TENSION	94	J01500	FIRST TENSION ARM	145
C10400	CRAWLER GUIDE	96	J01600	SECOND HORIZONTAL AUGER SHAFT	146
C10500	DRIVE ROLLER	97	J01700	SECOND DRIVE CHAIN CASE	147
C10601	CARRIER ROLLER	98	J01800	SECOND CASE	148
C10602	CARRIER ROLLER	99	J01900	SECOND BEVEL GEAR CASE	149
D60300	STEERING	100	J02000	SECOND VERTICAL AUGER SHAFT	150
D60500	HARVEST CLUTCH LEVER	101	J20700	OPEN-CLOSE COVER	151
D60700	ACCEL LEVER	102	J20801	THRESHING COVER	152
D60800	THRESHING CLUTCH LEVER	103	J20802	THRESHING COVER	153
D61000	MAIN GEAR SHIFT LEVER	104	J20900	THRESHING COVER (SIDE)	154
D61100	RANGE GEAR SHIFT LEVER	105	J80000	LABEL (THRESHER)	155
D61500	MAIN GEAR SHIFT ROD	106	[DC-68-GRAIN TANK]		
D62001	BRAKE PEDAL	107	K00100	GRAIN TANK	156
D62002	BRAKE PEDAL	108	K00300	CLEANING PORT	157
D63400	HARVEST ELEVATOR ARM	109	K00600	TANK LOCK	158
E60000	OPERATION FRAME	110	K10100	TANK COVER REAR	159
E60100	OPERATION PANEL	111	K10500	TANK COVER UNDER	160
E60300	SEAT	112	K18000	TANK DRIVE CASE	161
E60400	DUSTPROOF COVER	113	K20000	UNLOADER CASE 1	162
E75000	CANOPY	115	K20100	TANK SCREW SHAFT	164
G90100	LABEL (BODY)	116	K20200	EXHAUST SHUTTER	165
G95000	ACCESSORIES PARTS	117	K20600	UNLOADER MOTOR	166
[DC-68-THRESHING]			K20700	UNLOADER COVER 1	167
H00101	THRESHING FRAME (UPEER)	118	K20800	UNLOADER	168
H00102	THRESHING FRAME (LOWER)	119	K20900	MOUNTING FRAME	169
H01000	WINNOWER PLATE	120	K23000	UNLOADER CASE 2	170
H01100	WIND DIRECTION PLATE	121	K23400	TRANSMISSION SHAFT	171
H01200	INLET PLATE	122	K24000	UNLOADER CASE 3	172
H02000	DUSTING COVER	123	K30000	UNLOADER BODY	173
H30600	THRESHING TENSION ARM	124	K30300	UNLOADER STAY	174
H30700	HARVEST TENSION ARM	125	K31500	TANK DRIVE	175
H31300	HARVEST REVERSAL LEVER	126	K31700	TANK CLUTCH	176
H40000	THRESHING CYLINDER SHAFT	127	K80000	LABEL (GRAIN TANK)	177
H40200	THRESHING CYLINDER TOOTH	128	[DC-68-REEL/FEEDER]		
H40300	CONCAVE	129	U00300	TINE	178
H41000	THRESHING CYLINDER DRIVE CASE	130	U00400	REEL CENTER SHAFT	179
H41100	THRESHING CYLINDER DRIVE SHAFT	131	U01100	REEL ADJUSTMENT	180
H42100	THRESHING CYLINDER TENSION ARM	132	U01200	REEL FRAME	181
H60000	THRESHING BONNET	133	U10700	TENSION ARM	182
H60200	DUST CARRYING VALVE	134	U20000	HARVEST FRAME	183

CONTENTS

U20200	HARVEST FRAME COVER	184
U21000	AUGER DRUM	185
U21100	AUGER DRUM SHAFT	186
U21200	AUGER DRUM CHAIN	187
U21700	FINGER SHAFT	188
U23100	HARVEST DRIVE SHAFT	189
U30100	CUTTING BLADE DRIVE ARM	190
U30600	CUTTING BLADE DRIVE SHAFT	191
U40001	CUTTER	192
U40002	CUTTER	193
U40200	DIVIDER (LEFT)	194
U40300	DIVIDER (RIGHT)	195
U70300	REEL ELEVATOR CYLINDER	196
U75000	FEEDER FRAME	197
U75100	FEEDER COVER	198
U75300	FEEDER FAN COVER	199
U76000	FEEDER DRIVE SHAFT	200
U76101	FEEDER DRIVE CHAIN	201
U76102	FEEDER DRIVE CHAIN	202
U76103	FEEDER DRIVE CHAIN	203
U76300	FEEDER CHAIN	204
U76600	FEEDER DRUM	205
U90100	LABEL (REEL/FEEDER)	206
■	NUMERICAL INDEX	207

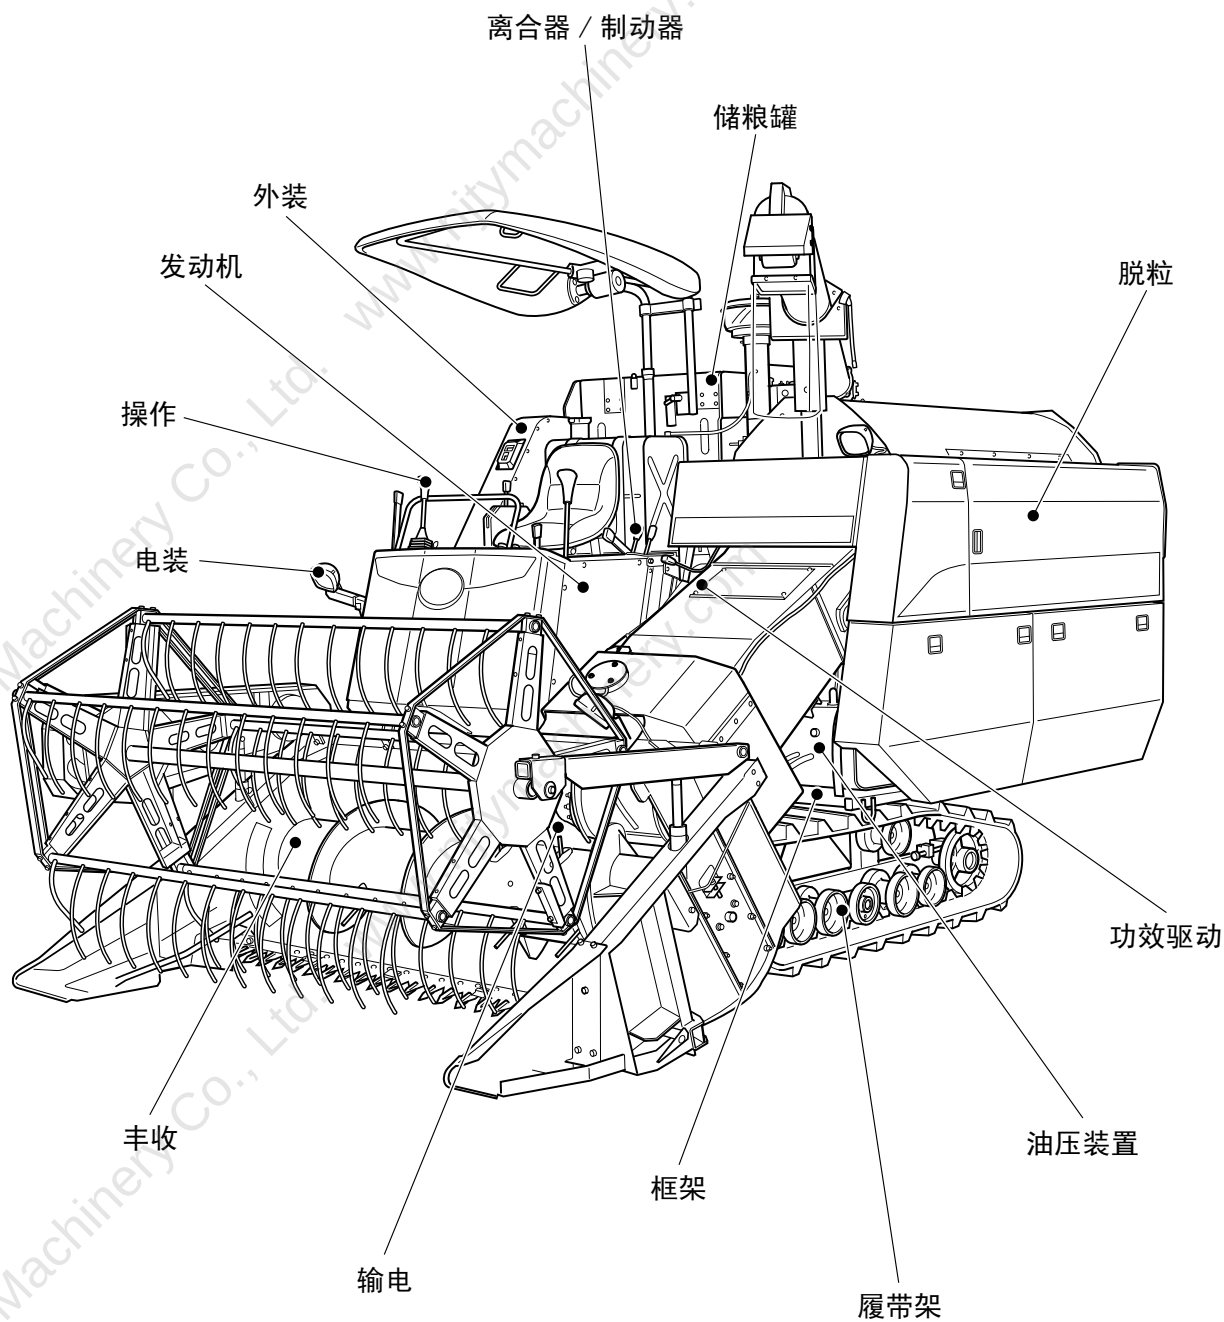 
按功能划分的目录



标签

标准附件

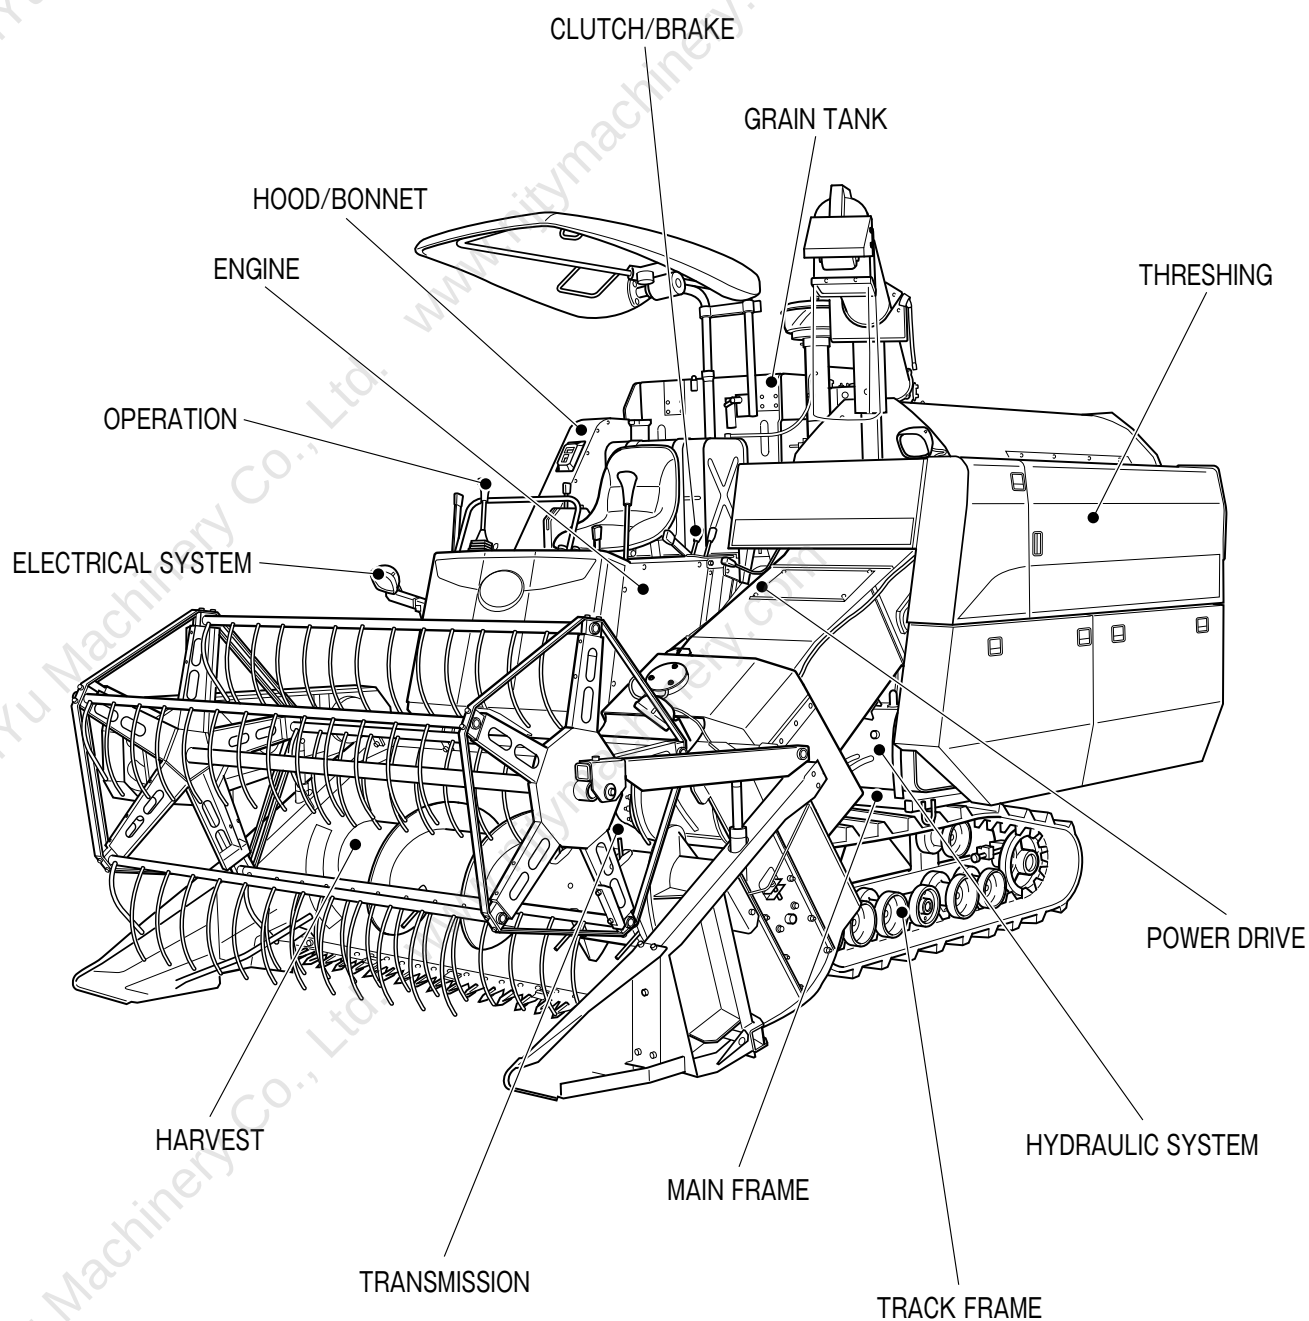 SECTION CONTENTS






LABELS

ACCESSORIES

[带图解目录的阅读方法]

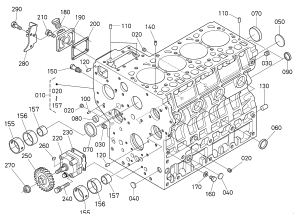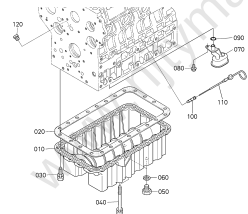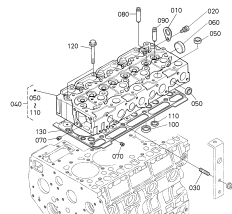   图解示例

发动机 ← 步骤 1			
Fig.No. 000100 曲轴箱 	Fig.No. 000200 油盘 	Fig.No. 000300 汽缸头 	← 步骤 2 ← 步骤 3 ← 步骤 4
Fig.No. 000500 汽缸头盖	Fig.No. 010000 主轴承箱	Fig.No. 010100 凸轮轴和中间齿轮轴	Fig.No. 010200 活塞和曲柄轴

步骤 1：表示“按功能划分的目录”中的项目名。

步骤 2：表示在本文中所配定的图解号。

（图解号 ... 000300）

步骤 3：表示相应的图解名称。




步骤 4：表示相应的图解内容。

如何检索：

在目录部分选择您要查找的项目。在步骤1中找到相同的项目。在步骤4中找到要查找的部件。在步骤2和步骤3中，参阅组件的页码并检索相应的部件号。

[How to read contents with illustrations]

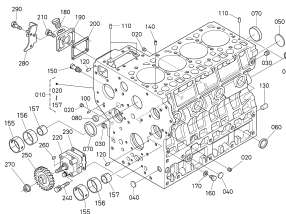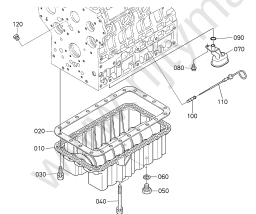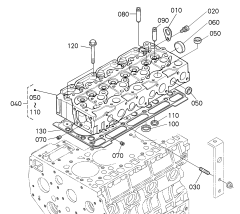   Illustration example

ENGINE ← STEP1			
Fig.No. 000100 CRANKCASE 	Fig.No. 000200 OIL PAN 	Fig.No. 000300 CYLINDER HEAD 	← STEP2 ← STEP3 ← STEP4
Fig.No. 000500 HEAD COVER	Fig.No. 010000 MAIN BEARING CASE	Fig.No. 010100 CAMSHAFT AND IDLE GEAR SHAFT	Fig.No. 010200 PISTON AND CRANKSHAFT

STEP1: This indicates the items listed in SECTION CONTENTS.

STEP2: These indicate the figure number given in the text.

(Fig. No...000300)

STEP3: This indicates the group name in the text.

STEP4: This indicates the illustrations of the group in the text.

How to retrieve:

Look at SECTION CONTENTS to select an item you are looking for. In STEP1, find the same item. In STEP4, find the part you are searching. In STEP2 and STEP3, refer to the page of the group and retrieve the part number.

发动机 ENGINE

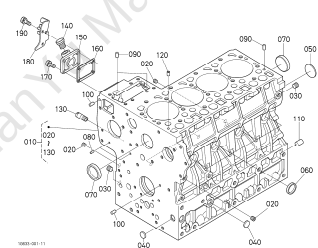 
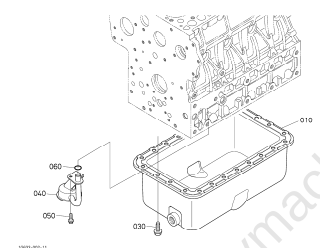 
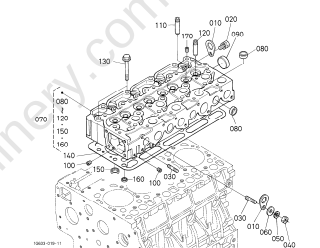 
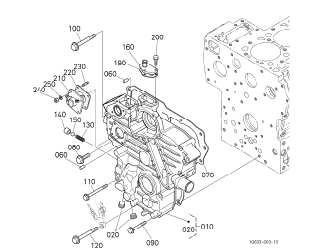 
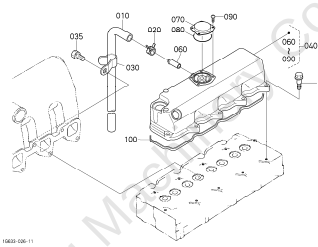 
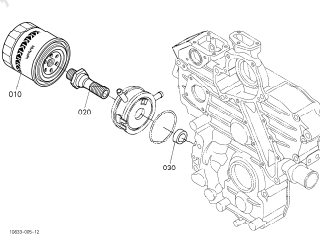 
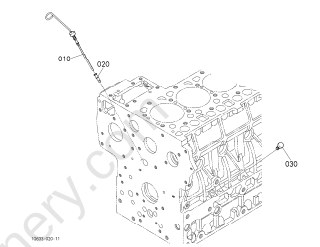 
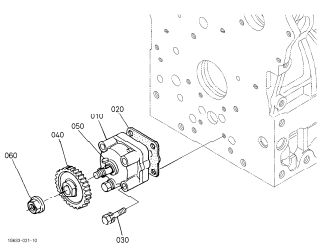 
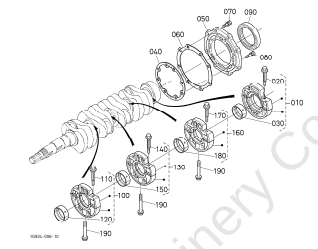 
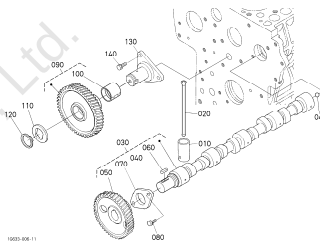 
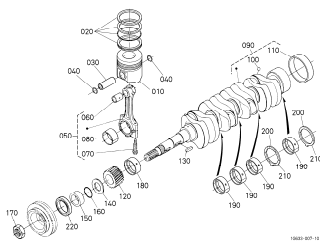 
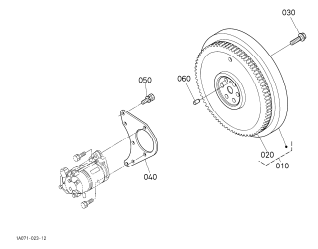 
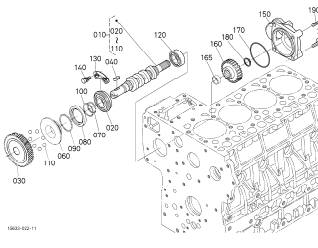 
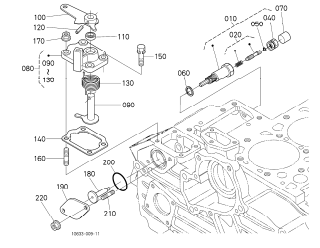 
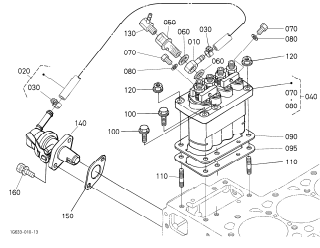 
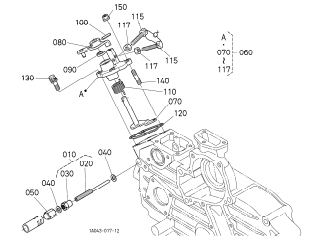 
Fig.No. 000100 曲轴箱 CRANK CASE 	Fig.No. 000200 机油盘 OIL PAN 	Fig.No. 000300 油缸体 CYLINDER HEAD 	Fig.No. 000400 齿轮箱 GEAR CASE 
Fig.No. 000500 顶盖 HEAD COVER 	Fig.No. 000600 机油滤清器 OIL FILTER 	Fig.No. 000700 油量计 OIL GUIDE 	Fig.No. 000800 油泵 OIL PUMP 
Fig.No. 010000 主轴承箱 MAIN BEARING CASE 	Fig.No. 010100 凸轮轴和中间齿轮轴 CAMSHAFT AND IDLE GEAR SHAFT 	Fig.No. 010200 活塞和曲柄轴 PISTON AND CRANKSHAFT 	Fig.No. 010300 飞轮 FLYWHEEL 
Fig.No. 010500 燃油凸轮轴和调速器轴 FUEL CAMSHAFT AND GOVERNOR SHAFT 	Fig.No. 020000 怠速限制装置 IDLE APPARATUS 	Fig.No. 020200 喷射泵 INJECTION PUMP 	Fig.No. 020500 调速板 SPEED CONTROL PLATE 

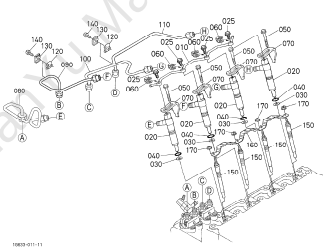 
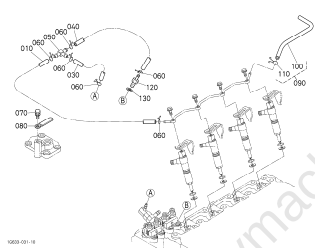 
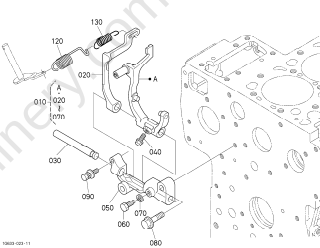 
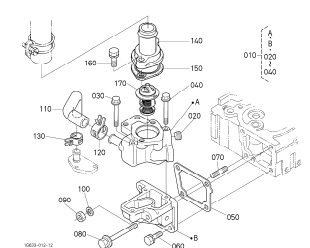 
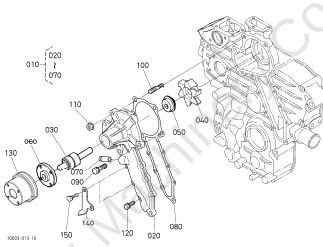 
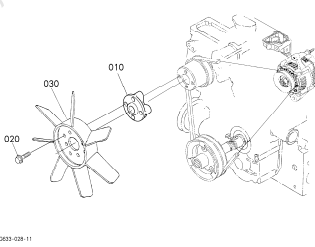 
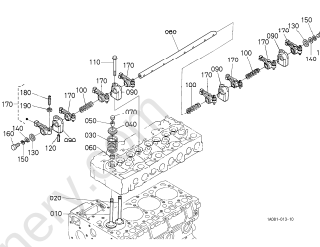 
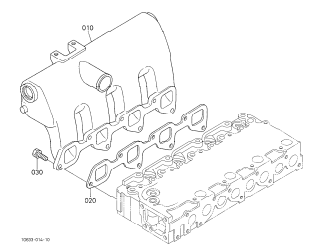 
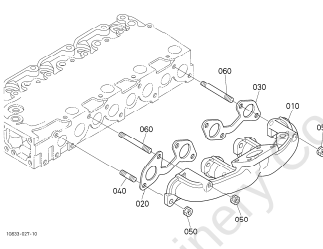 
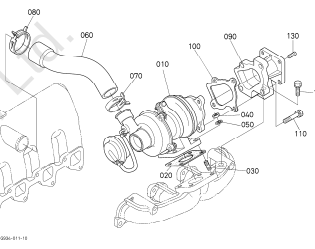 
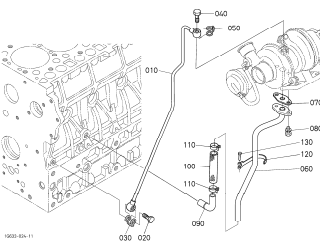 
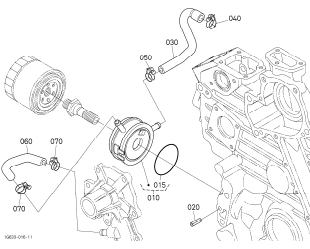 
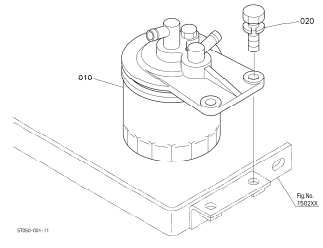 
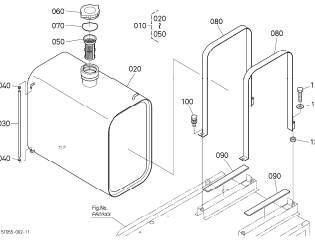 
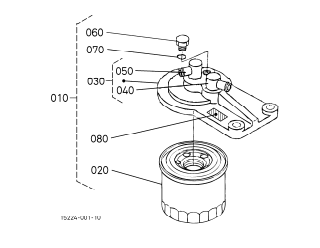 
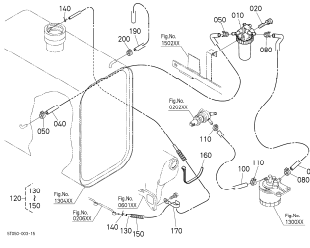 
Fig.No. 020601 喷嘴座和电热塞 NOZZLE HOLDER AND GLOW PLUG 	Fig.No. 020602 超流管 OVER FLOW PIPE 	Fig.No. 021200 叉杆（调速器） FORK LEVER (GOVERNOR) 	Fig.No. 050000 进出水法兰和节温器 WATER FLANGE AND THERMOSTAT 
Fig.No. 050100 水泵 WATER PUMP 	Fig.No. 050400 风扇 FAN 	Fig.No. 060000 气门和摇臂 VALVE AND ROCKER ARM 	Fig.No. 060100 进气歧管 INLET MANIFOLD 
Fig.No. 060200 排气歧管 EXHAUST MANIFOLD 	Fig.No. 060600 涡轮增压器 TURBO CHARGER 	Fig.No. 061000 油管（涡轮增压器） OIL PIPE (TURBO CHARGER) 	Fig.No. 070200 机油冷却器 OIL COOLER 
Fig.No. 130000 燃油滤清器 FUEL FILTER 	Fig.No. 130400 油箱 FUEL TANK 	Fig.No. 130500 燃油滤清器[零部件] FUEL FILTER (COMPONENT PARTS) 	Fig.No. 130800 燃油管 FUEL PIPE 

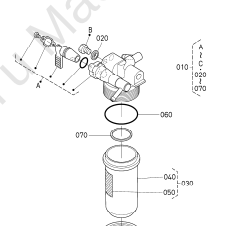 
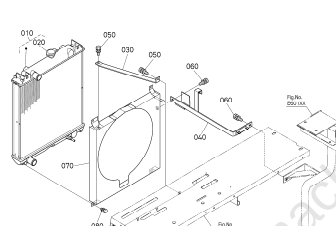 
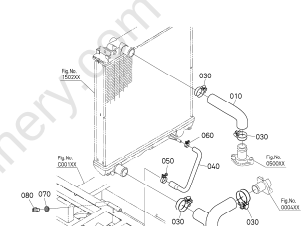 
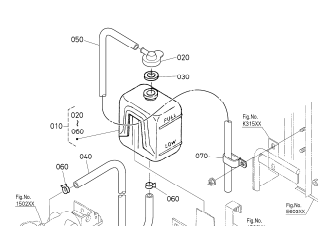 
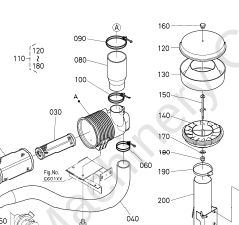 
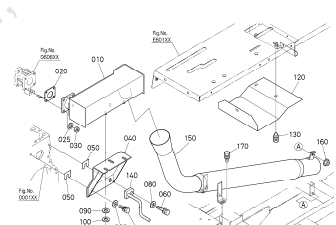 
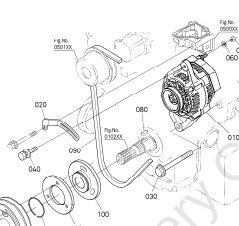 
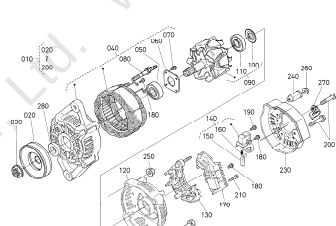 
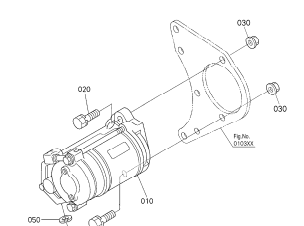 
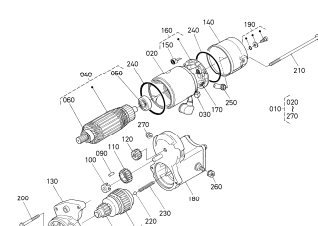 
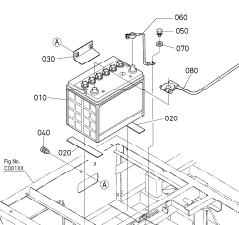 
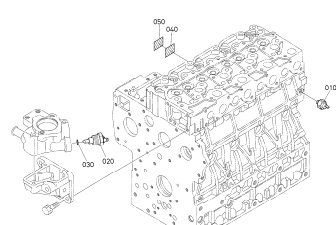 
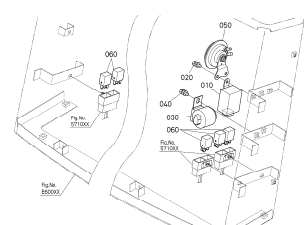 
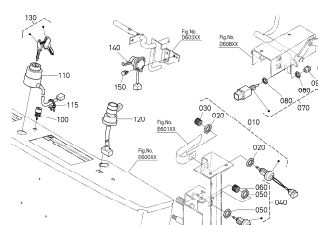 
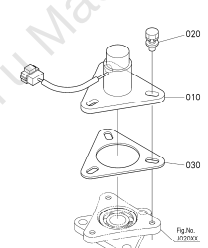 
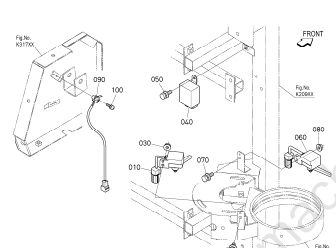 
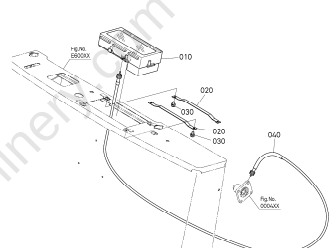 
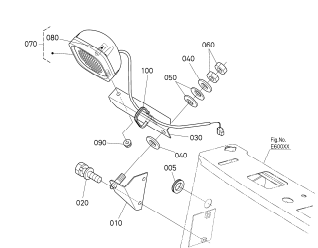 
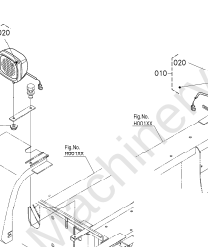 
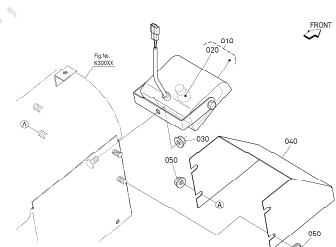 
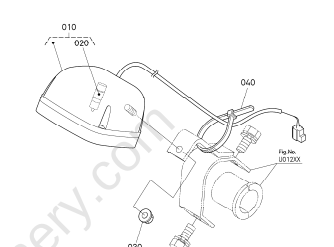 
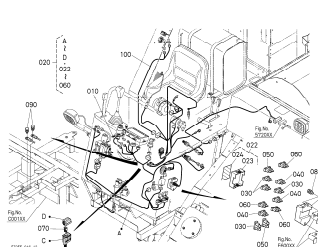 
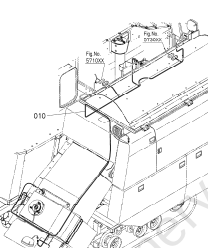 
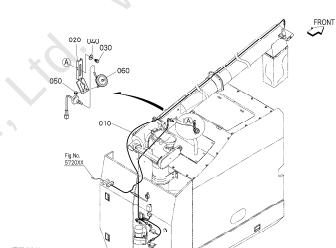 
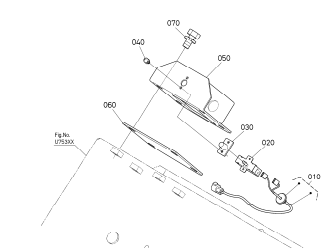 
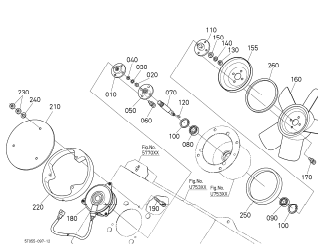 
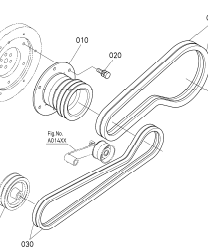 
Fig.No. 130900 油水分离器[零件] SEPALATOR [COMPONENT PARTS] 	Fig.No. 150200 散热器 RADIATOR 	Fig.No. 150300 水管 WATER PIPE 	Fig.No. 150500 储备油箱 RESERVE TANK 
Fig.No. 160300 空气滤清器 AIR CLEANER 	Fig.No. 160500 消音器 MUFFLER 		
电气系统 ELECTRICAL SYSTEM			
Fig.No. 501000 交流发电机 ALTERNATOR 	Fig.No. 502000 交流发电机[零件] ALTERNATOR [COMPONENT PARTS] 	Fig.No. 505000 起动机 STARTER 	Fig.No. 506000 起动机[零件] STARTER [COMPONENT PARTS] 
Fig.No. 511000 蓄电池 BATTERY 	Fig.No. 521000 发动机开关 ENGINE SWITCH 	Fig.No. 522800 机体继电器 BODY RELAY 	Fig.No. 523000 驾驶舱开关 COCKPIT SWITCH 


Fig.No. 525100 脱粒开关/传感器 THRESHING SWITCH/SENSOR 	Fig.No. 526000 储粮罐开关/继电器 GRAIN TANK SWITCH/RELAY 	Fig.No. 531000 前面板 FRONT PANEL 	Fig.No. 541001 工作灯 (机体) WORK LIGHT (BODY) 
Fig.No. 541002 工作灯 (脱粒) WORK LIGHT (THRESHER) 	Fig.No. 541003 工作灯 (储粮罐) WORK LIGHT (GRAIN TANK) 	Fig.No. 541004 工作灯 (离合器) WORK LIGHT (HARVEST) 	Fig.No. 571000 线束 (机体) WIRE HARNESS (BODY) 
Fig.No. 572000 线束 (脱粒) WIRE HARNESS (THRESHER) 	Fig.No. 573000 线束 (储粮罐) WIRE HARNESS (GRAIN TANK) 	Fig.No. 577000 线束 (防尘风扇) WIRE HARNESS (DUSTPROOF FAN) 	Fig.No. 581000 风扇 (馈线) FAN (FEEDER) 
动力传递 POWER DRIVE			
Fig.No. A01000 反滑轮 COUNTER PULLEY 			

功效驱动 POWER DRIVE

Fig.No. **A01400**

张紧(移动)

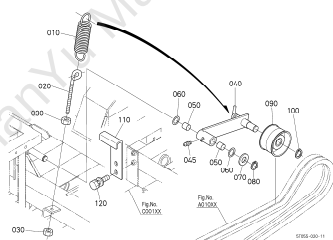 TENSION (TRAVEL)



输电 TRANSMISSION

Fig.No. **A11000**

传动箱

TRANSMISSION CASE

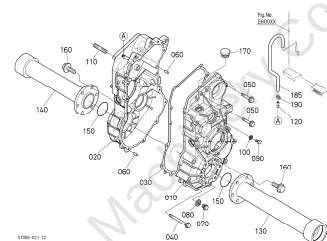 


Fig.No. **A11100**

传动箱内 1

TRANSMISSION CASE INSIDE 1

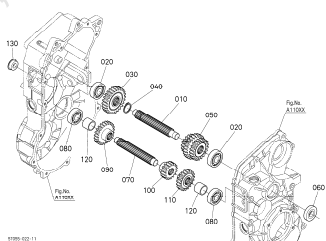 


Fig.No. **A11200**

传动箱内 2

TRANSMISSION CASE INSIDE 2

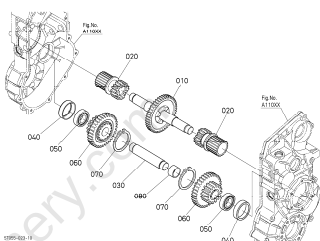 


Fig.No. **A11300**

传动箱内 3

TRANSMISSION CASE INSIDE 3


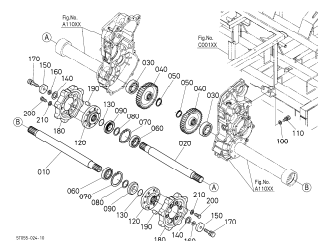 


Fig.No. **A11400**

传动箱内 4

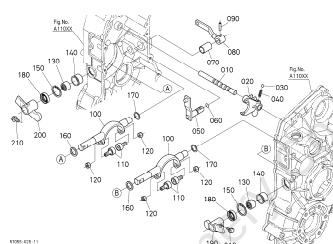 TRANSMISSION CASE INSIDE 4



离合器/制动器 CLUTCH/BRAKE

Fig.No. **A21000**

刹车

BRAKE

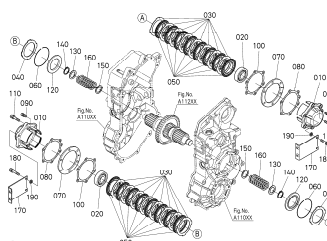 


Fig.No. **D60500**

丰收离合器控制杆

HARVEST CLUTCH LEVER

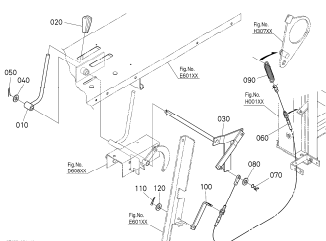 


Fig.No. **D60800**

脱粒离合器控制板

THRESHING CLUTCH LEVER


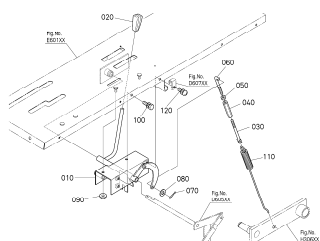 



Fig.No. **D62001**

刹车踏板

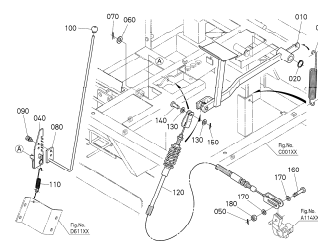 BRAKE PEDAL




BRAKE PEDAL

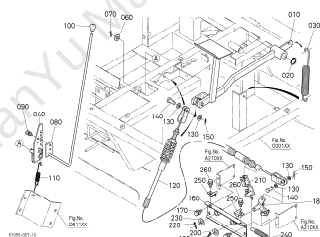 


油圧装置
HYDRAULIC SYSTEM

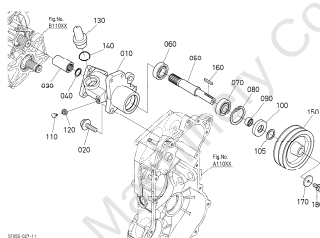 
HST INPUT SHAFT




OIL COOLER

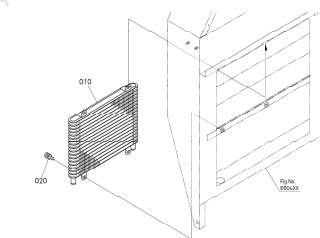 


HST

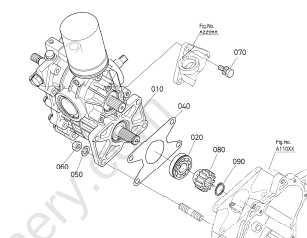 


HST [COMPONENT PARTS] 1

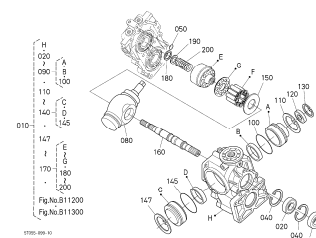 


HST [COMPONENT PARTS] 2

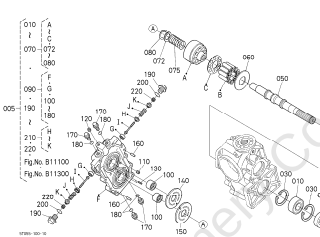 


HST [COMPONENT PARTS] 3

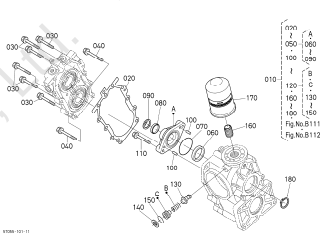 


HYDRAULIC UNIT (MISSION)

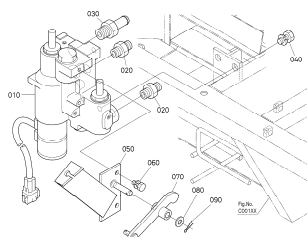 


HYDRAULIC UNIT (GRAIN TANK)

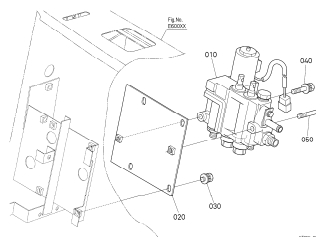 


HARVEST CYLINDER

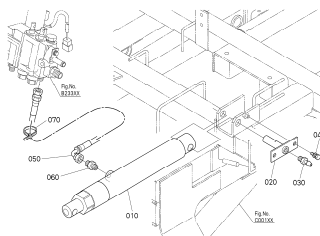 

HARVEST CYLINDER [COMPONENT PARTS]

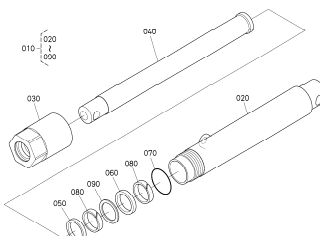 

UNLOADER CYLINDER

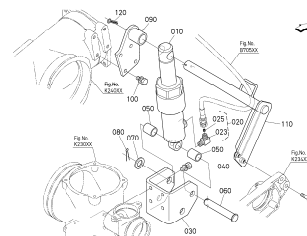 

CLUTCH CYLINDER

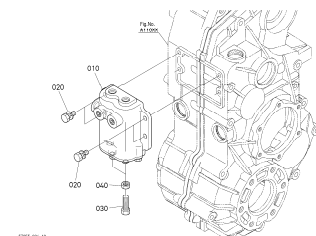 
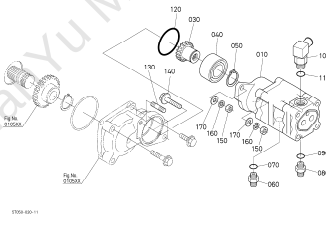 
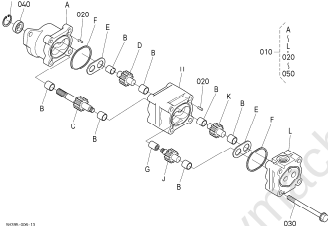 
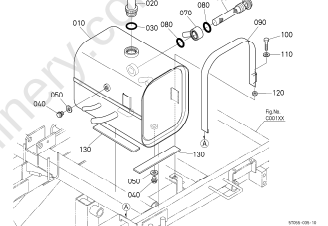 
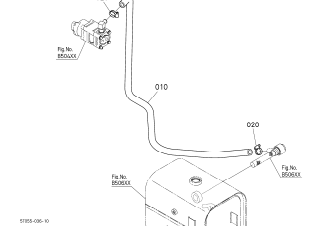 
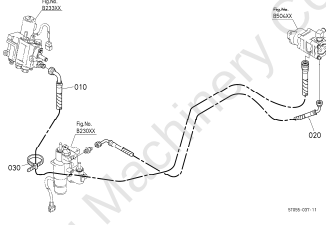 
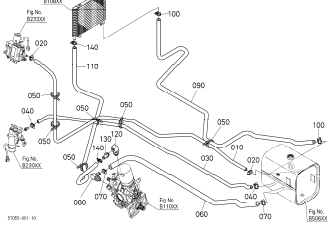 
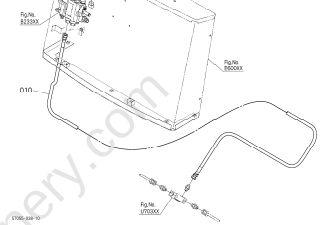 
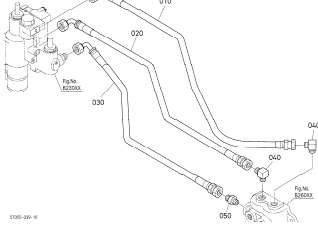 
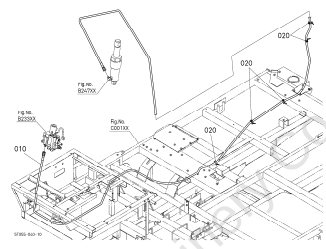 
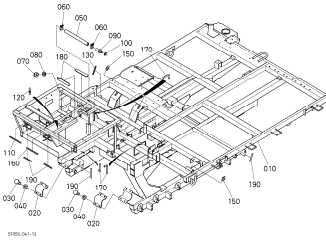 
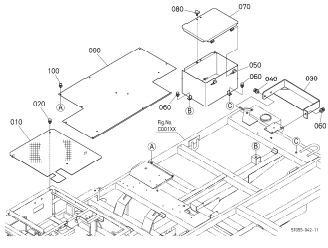 
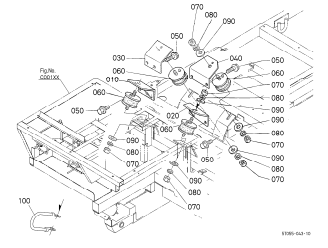 


Fig.No. B50400 液压泵 HYDRAULIC PUMP 	Fig.No. B50500 液压泵[零部件] HYDRAULIC PUMP [COMPONENT PARTS] 	Fig.No. B50600 液压软管(罐) HYDRAULIC TANK 	Fig.No. B70000 液压软管(吸) HYDRAULIC HOSE (SUCTION) 
Fig.No. B70100 液压软管(排放) HYDRAULIC HOSE (DELIVERY) 	Fig.No. B70200 液压软管(放泄塞) HYDRAULIC HOSE (DRAIN) 	Fig.No. B70300 液压软管(收割机) HYDRAULIC HOSE (HARVEST) 	Fig.No. B70400 液压软管(方向) HYDRAULIC HOSE (DIRECTION) 
Fig.No. B70500 液压软管(机) HYDRAULIC HOSE (UNLOADER) 			
框架 MAIN FRAME			
Fig.No. C00100 主框架 MAIN FRAME 	Fig.No. C00200 甲板 DECK 	Fig.No. C00500 发动机底座 ENGINE BASE 	

输送机. 壳体 TRACK FRAME

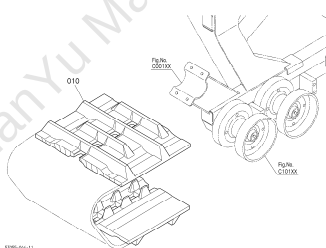 
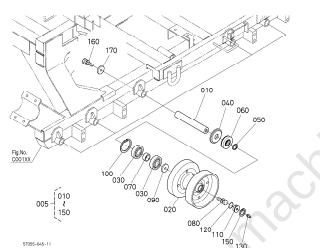 
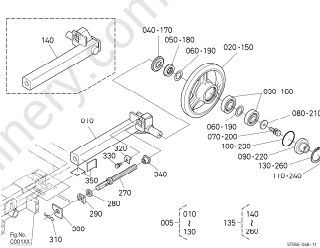 
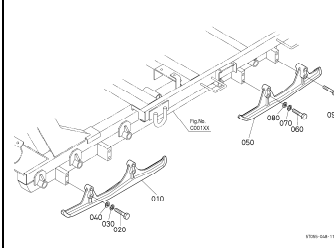 
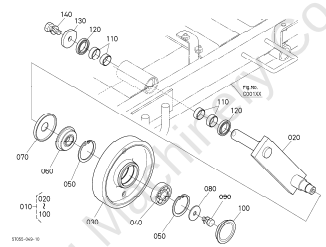 
Fig.No. C10000 履带 CRAWLER 	Fig.No. C10100 履带支重轮 TRUCK ROLLER 	Fig.No. C10200 履带张力 CRAWLER TENSION 	Fig.No. C10400 履带指南 CRAWLER GUIDE 
--	--	---	--

Fig.No. C10500 传动辊 DRIVE ROLLER 			
---	--	--	--

脱粒 THRESHING

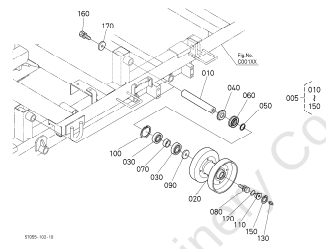 
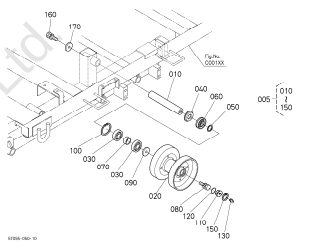 
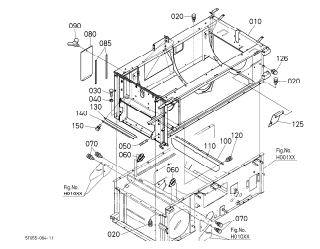 
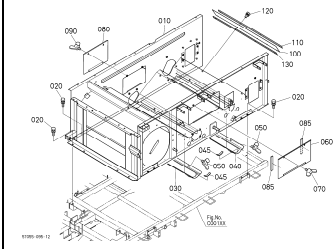 
Fig.No. C10601 载波辊 CARRIER ROLLER 	Fig.No. C10602 载波辊 CARRIER ROLLER 	Fig.No. H00101 脱粒框架(上) THRESHING FRAME (UPEER) 	Fig.No. H00102 脱粒框架(下) THRESHING FRAME (LOWER) 
--	--	--	---

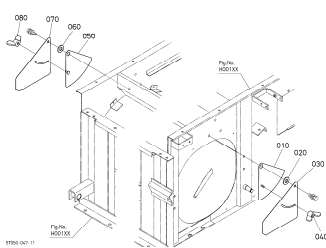 
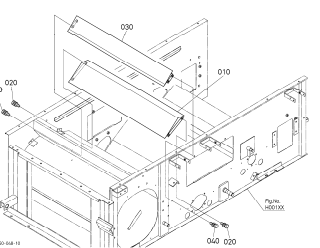 
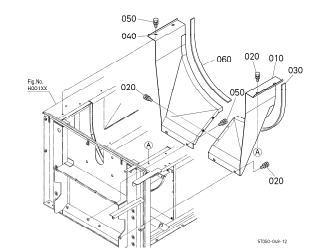 
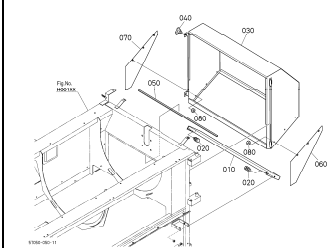 
Fig.No. H01000 清选风机板 WINNOWER PLATE 	Fig.No. H01100 风向板 WIND DIRECTION PLATE 	Fig.No. H01200 进口板 INLET PLATE 	Fig.No. H02000 喷粉罩 DUSTING COVER 
--	--	--	---

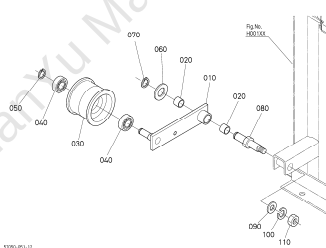 
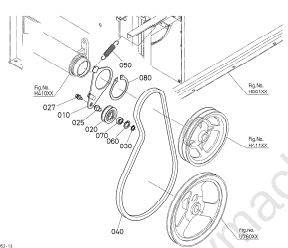 
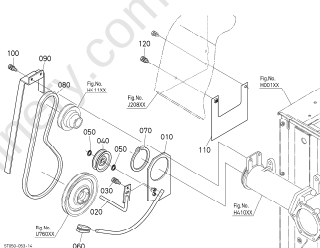 
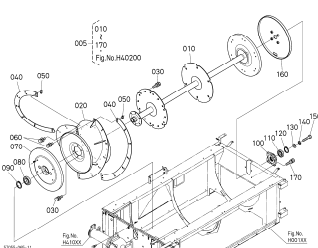 
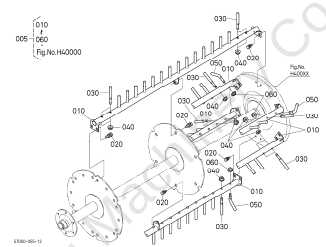 
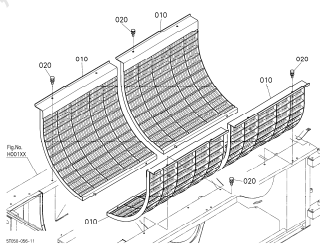 
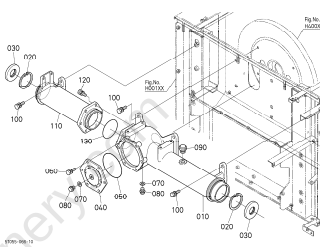 
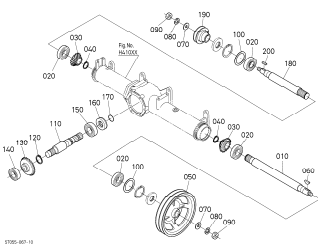 
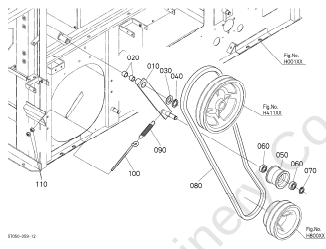 
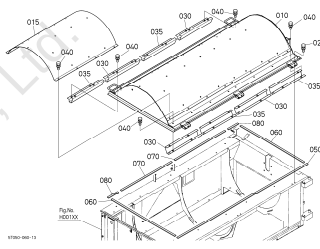 
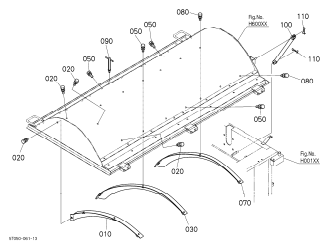 
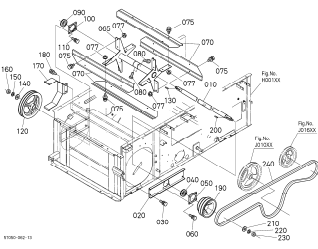 
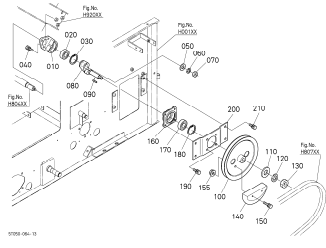 
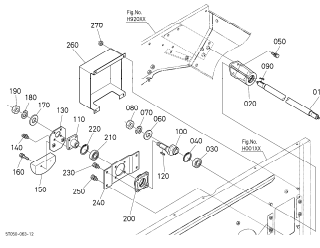 
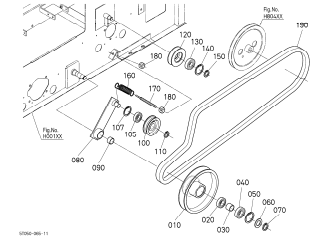 
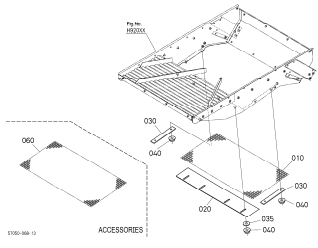 
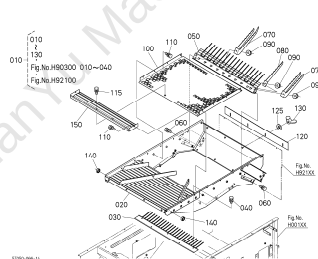 
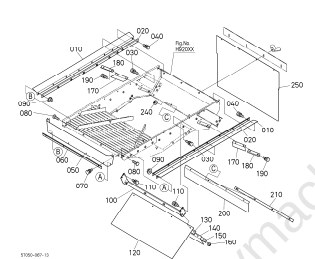 
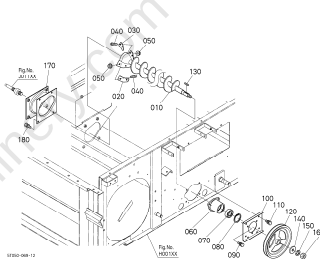 
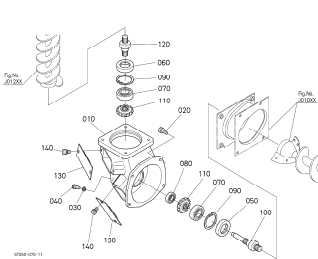 
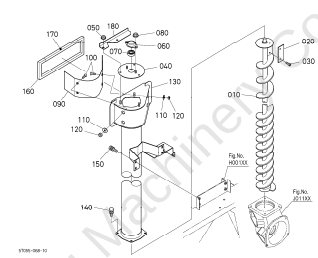 
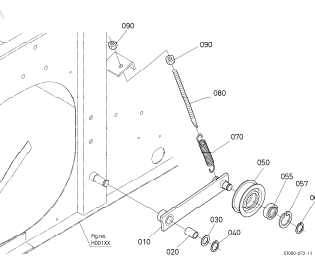 
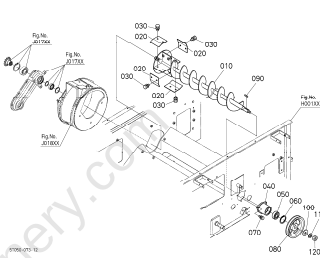 
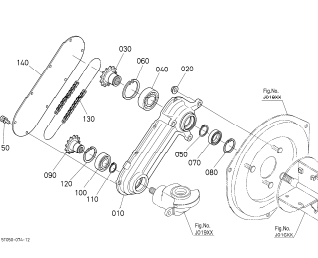 
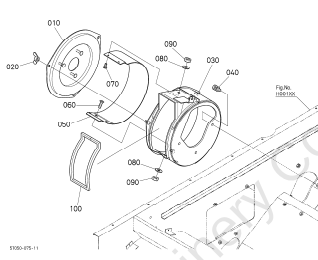 
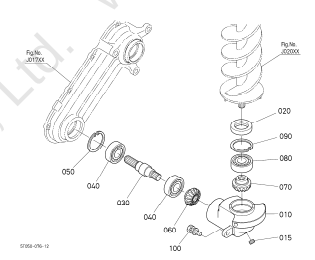 
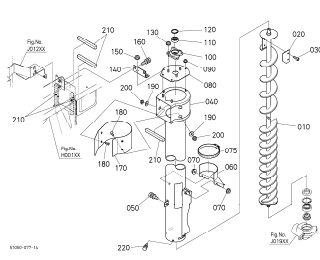 
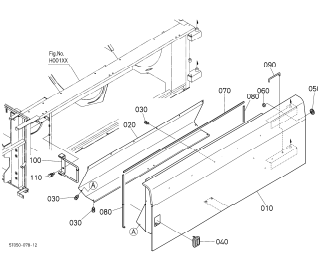 
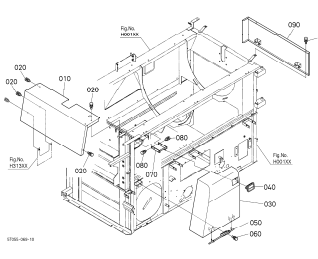 
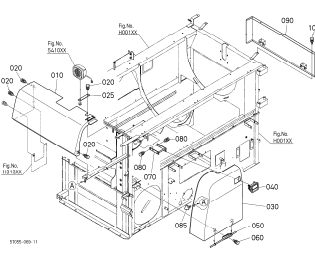 
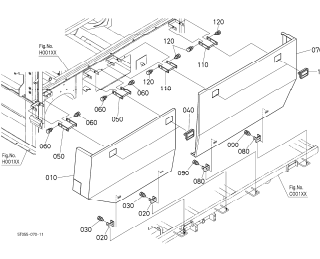 
Fig.No. H30600 脱粒张力臂 THRESHING TENSION ARM 	Fig.No. H30700 丰收张力组件 HARVEST TENSION ARM 	Fig.No. H31300 丰收杆 HARVEST REVERSAL LEVER 	Fig.No. H40000 脱粒滚筒轴 THRESHING CYLINDER SHAFT 
Fig.No. H40200 脱粒齿 THRESHING CYLINDER TOOTH 	Fig.No. H40300 凹板筛 CONCAVE 	Fig.No. H41000 脱粒滚筒驱动齿轮组件 THRESHING CYLINDER DRIVE CASE 	Fig.No. H41100 脱粒滚筒驱动轴 THRESHING CYLINDER DRIVE SHAFT 
Fig.No. H42100 脱粒滚筒拉力臂 THRESHING CYLINDER TENSION ARM 	Fig.No. H60000 脱粒机罩 THRESHING BONNET 	Fig.No. H60200 粉尘载阀 DUST CARRYING VALVE 	Fig.No. H80000 清选风机轴 WINNOWER SHAFT 
Fig.No. H80401 摇轴(左) ROCKING SHAFT (LEFT) 	Fig.No. H80402 摇轴(右) ROCKING SHAFT (RIGHT) 	Fig.No. H80700 摆动张力臂 ROCKING TENSION ARM 	Fig.No. H90300 晶粒分子筛 GRAIN SIEVE 

Fig.No. H92000 筛箱 SIEVE CASE 	Fig.No. H92100 筛箱布 SIEVE CASE CLOTH 	Fig.No. J01000 谷粒螺旋轴 FIRST HORIZONTAL AUGER SHAFT 	Fig.No. J01100 谷粒锥形齿轮箱 FIRST BEVEL GEAR CASE 
Fig.No. J01200 谷粒垂直螺旋杆 FIRST VERTICAL AUGER SHAFT 	Fig.No. J01500 谷粒输送张紧臂 FIRST TENSION ARM 	Fig.No. J01600 再筛选螺旋轴 SECOND HORIZONTAL AUGER SHAFT 	Fig.No. J01700 再筛选驱动链条箱 SECOND DRIVE CHAIN CASE 
Fig.No. J01800 再筛选驱动箱 SECOND CASE 	Fig.No. J01900 再筛选锥齿轮箱 SECOND BEVEL GEAR CASE 	Fig.No. J02000 再筛选垂直螺旋杆 SECOND VERTICAL AUGER SHAFT 	Fig.No. J20700 开闭盖 OPEN-CLOSE COVER 
Fig.No. J20801 脱粒封面(前/后) THRESHING COVER 	Fig.No. J20802 脱粒封面(前/后) THRESHING COVER 	Fig.No. J20900 脱粒封面(一侧) THRESHING COVER (SIDE) 	

操作 OPERATION

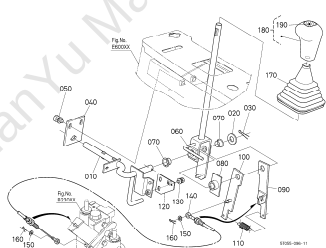 
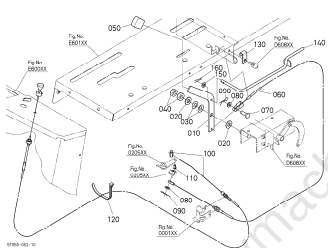 
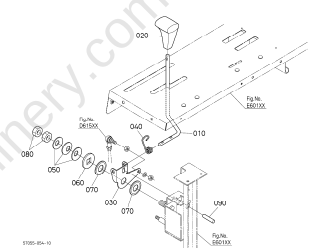 
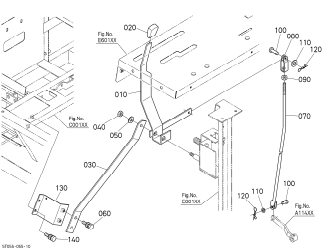 
Fig.No. D60300 转向 STEERING 	Fig.No. D60700 加速器杆 ACCEL LEVER 	Fig.No. D61000 主变速手柄 MAIN GEAR SHIFT LEVER 	Fig.No. D61100 副变速手柄 RANGE GEAR SHIFT LEVER 
---	--	--	--

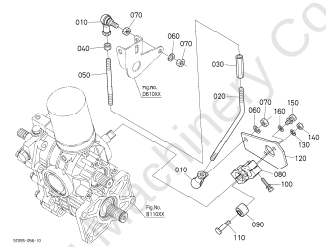 
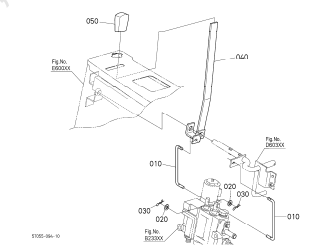 
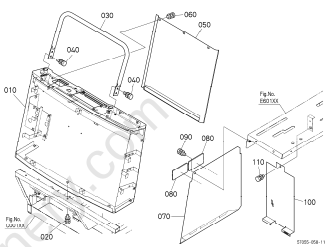 
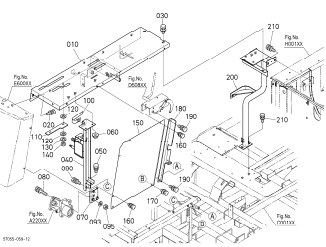 
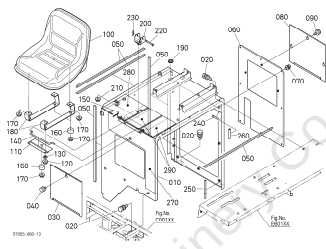 
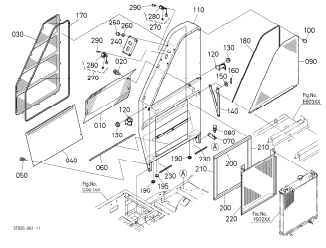 
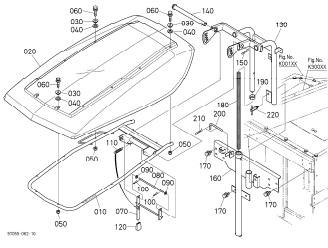 
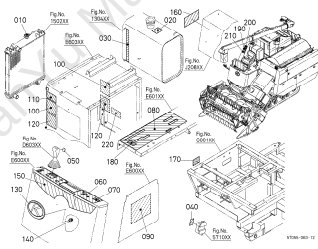 
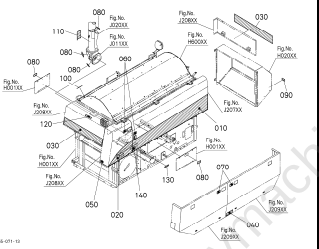 
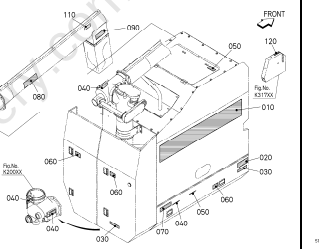 
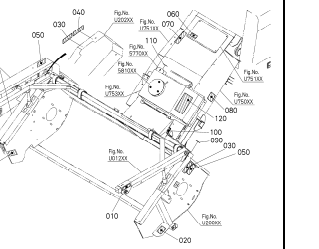 
Fig.No. D61500 主变速杆 MAIN GEAR SHIFT ROD 	Fig.No. D63400 丰收移动臂 HARVEST ELEVATOR ARM 	Fig.No. E60000 运行框架 OPERATION FRAME 	Fig.No. E60100 操作面板 OPERATION PANEL 
---	---	--	---

Fig.No. E60300 座椅 SEAT 			
---	--	--	--

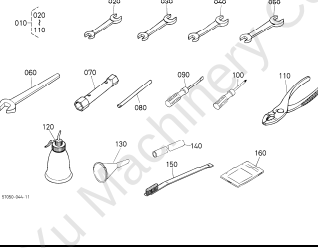 
罩/机罩 HOOD/BONNET

Fig.No. E60400 防尘罩 DUSTPROOF COVER 	Fig.No. E75000 顶篷 CANOPY 		
---	---	--	--

标签 LABELS

Fig.No. G90100 标签 LABEL (BODY) 	Fig.No. J80000 标签(脱粒) LABEL (THRESHER) 	Fig.No. K80000 标签(储粮罐) LABEL (GRAIN TANK) 	Fig.No. U90100 标签(盘/馈线) LABEL (REEL/FEEDER) 
---	---	---	--

标准附件 ACCESSORIES

Fig.No. G95000 标准附件 ACCESSORIES PARTS 			
---	--	--	--

储粮罐 GRAIN TANK

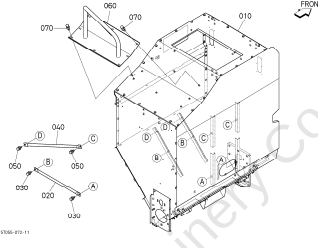 
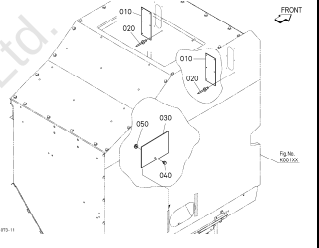 
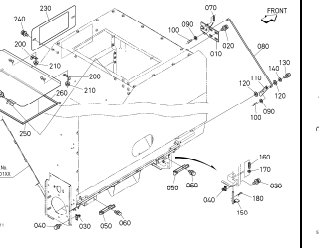 
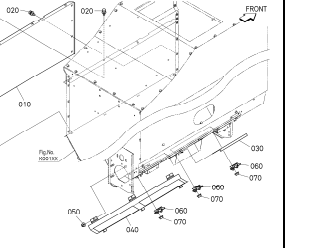 
Fig.No. K00100 储粮罐 GRAIN TANK 	Fig.No. K00300 净化管 CLEANING PORT 	Fig.No. K00600 油罐锁 TANK LOCK 	Fig.No. K10100 罐(后板) TANK COVER REAR 
--	---	--	---

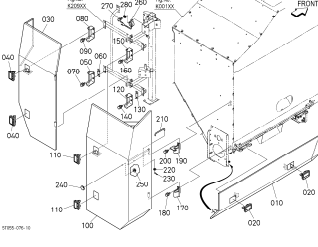 
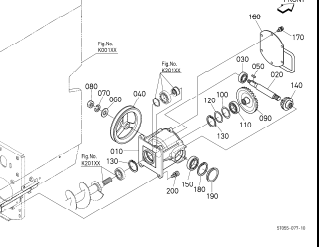 
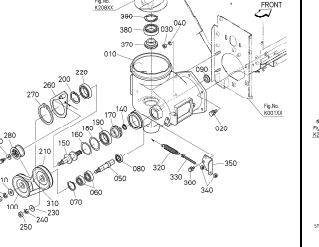 
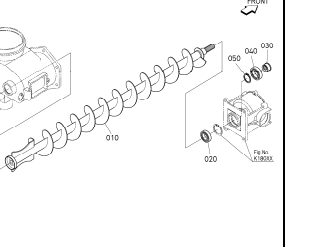 
Fig.No. K10500 罐(下部) TANK COVER UNDER 	Fig.No. K18000 罐(驱动器箱) TANK DRIVE CASE 	Fig.No. K20000 机(箱 1) UNLOADER CASE 1 	Fig.No. K20100 罐(螺丝轴) TANK SCREW SHAFT 
--	---	---	---

Fig.No. K20200 尾气快门 EXHAUST SHUTTER	Fig.No. K20600 发动机 UNLOADER MOTOR	Fig.No. K20700 机(罩 1) UNLOADER COVER 1	Fig.No. K20800 机 UNLOADER
Fig.No. K20900 安装框架 MOUNTING FRAME	Fig.No. K23000 机(箱 2) UNLOADER CASE 2	Fig.No. K23400 传动轴 TRANSMISSION SHAFT	Fig.No. K24000 机(箱 3) UNLOADER CASE 3
Fig.No. K30000 机体 UNLOADER BODY	Fig.No. K30300 机(固定件) UNLOADER STAY	Fig.No. K31500 罐(驱动器) TANK DRIVE	Fig.No. K31700 罐(离合器) TANK CLUTCH
丰收 HARVEST			
Fig.No. U00300 尖端 TINE	Fig.No. U00400 盘(中心轴) REEL CENTER SHAFT	Fig.No. U01100 盘(调节器) REEL ADJUSTMENT	Fig.No. U01200 盘(架) REEL FRAME


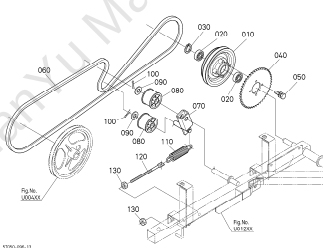 
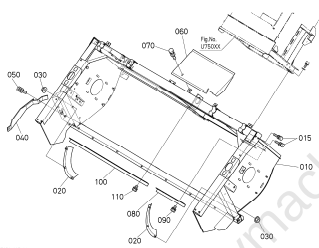 
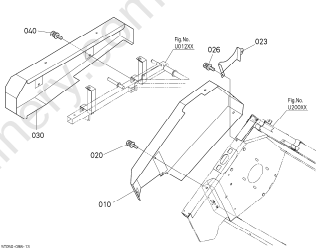 
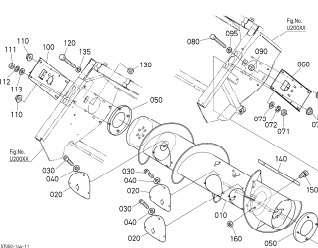 
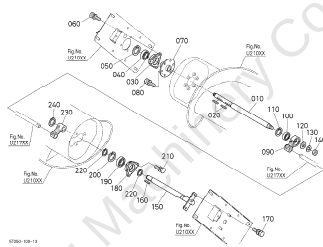 
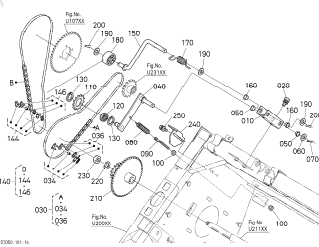 
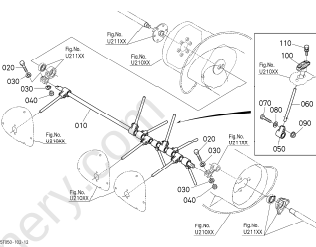 
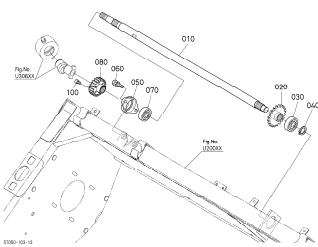 
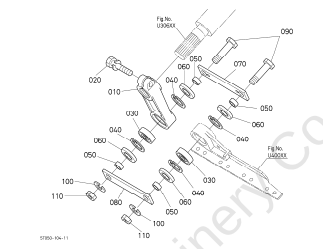 
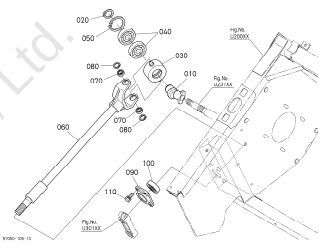 
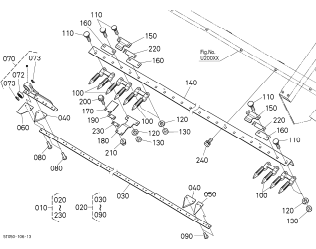 
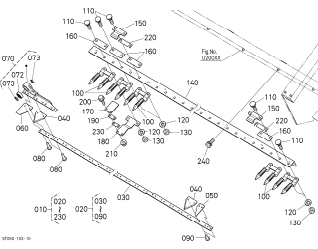 
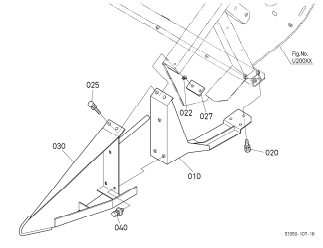 
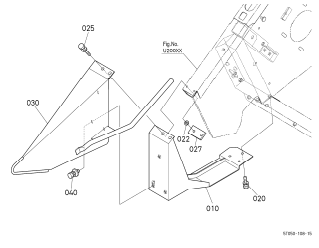 
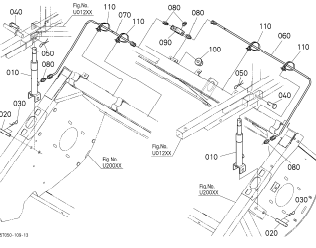 
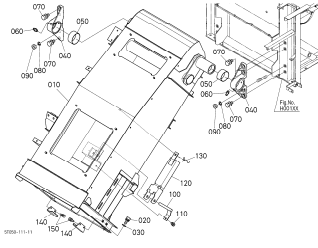 
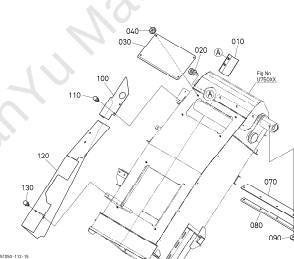 
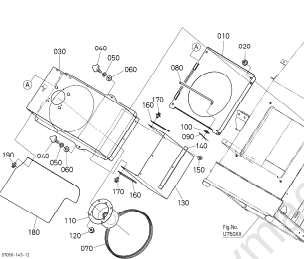 
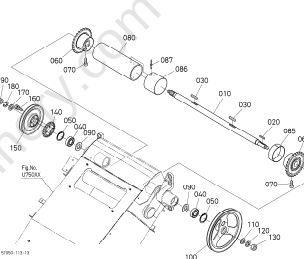 
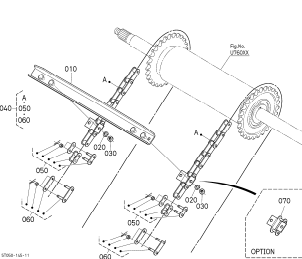 
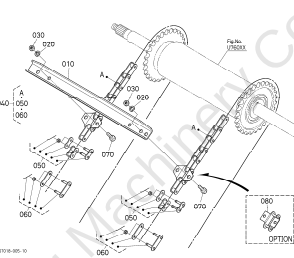 
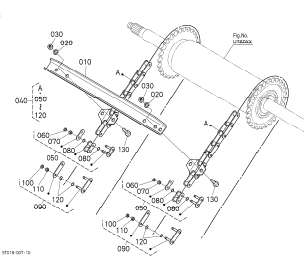 
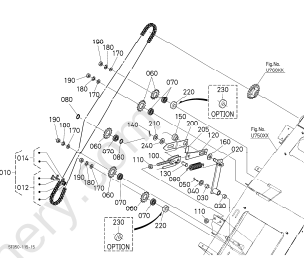 
Fig.No. U10700 张紧臂 TENSION ARM 	Fig.No. U20000 丰收框架 HARVEST FRAME 	Fig.No. U20200 丰收框架罩 HARVEST FRAME COVER 	Fig.No. U21000 螺旋鼓 AUGER DRUM 
Fig.No. U21100 螺旋滚筒轴 AUGER DRUM SHAFT 	Fig.No. U21200 螺旋鼓链 AUGER DRUM CHAIN 	Fig.No. U21700 钩爪轴 FINGER SHAFT 	Fig.No. U23100 丰收传动轴 HARVEST DRIVE SHAFT 
Fig.No. U30100 切割机叶片臂 CUTTING BLADE DRIVE ARM 	Fig.No. U30600 切割机传动轴 CUTTING BLADE DRIVE SHAFT 	Fig.No. U40001 切刀 CUTTER 	Fig.No. U40002 切刀 CUTTER 
Fig.No. U40200 分压器(左) DIVIDER (LEFT) 	Fig.No. U40300 分压器(右) DIVIDER (RIGHT) 	Fig.No. U70300 盘(移动缸) REEL ELEVATOR CYLINDER 	Fig.No. U75000 馈线框架 FEEDER FRAME 

Fig.No. U75100 馈线罩 FEEDER COVER 	Fig.No. U75300 馈线风扇罩 FEEDER FAN COVER 	Fig.No. U76000 馈线传动轴 FEEDER DRIVE SHAFT 	Fig.No. U76101 馈线传动链 FEEDER DRIVE CHAIN 
Fig.No. U76102 馈线传动链 FEEDER DRIVE CHAIN 	Fig.No. U76103 馈线传动链 FEEDER DRIVE CHAIN 	Fig.No. U76300 馈线链 FEEDER CHAIN 	Fig.No. U76600 馈线滚筒 FEEDER DRUM 

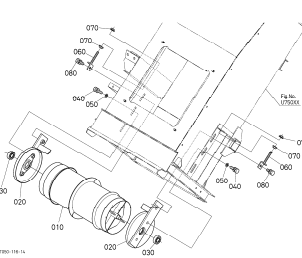 曲轴箱
CRANK CASE



A:V2403-M-DI-TE2-CKMS4

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

油缸体
CYLINDER HEAD

 


A:V2403-M-DI-TE2-CKMS4

[illegible]

$\leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

齿轮箱 GEAR CASE




A:V2403-M-DI-TE2-CKMS4


$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

000500 顶盖
HEAD COVER

 10600-000-11

[illegible]

 
5



A:V2403-M-DI-TE2-CKMS4

[illegible]

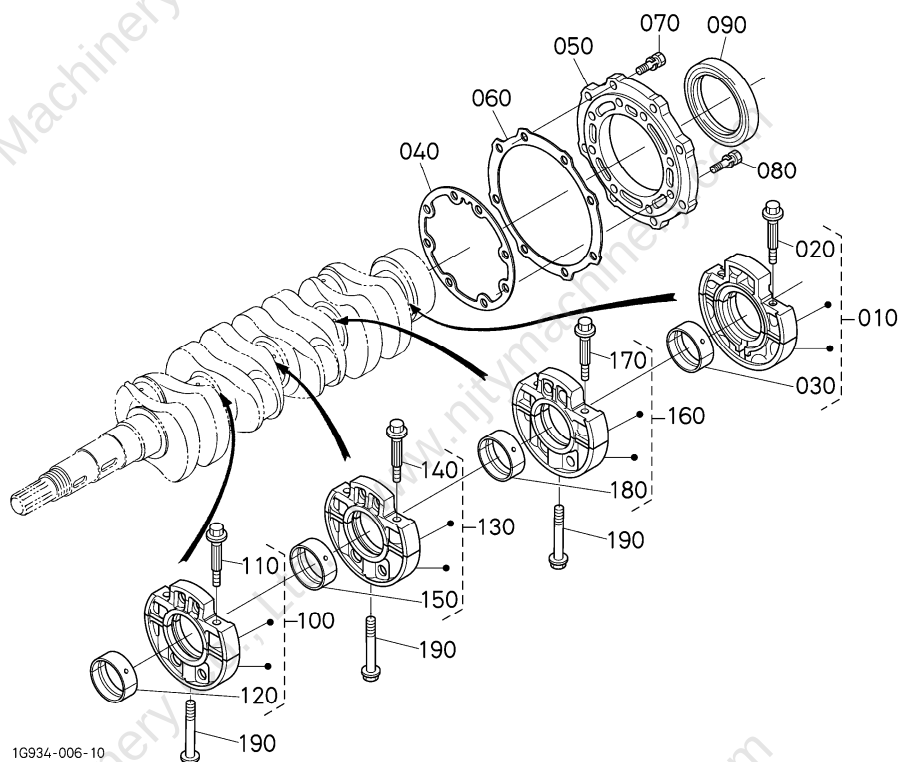 010000 主轴承箱 MAIN BEARING CASE




A: V2403-M-D1-TE2-CKMS4

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	1A091-0709-3	曲轴瓦座组件	ASSY BRG.CASE,WHEEL	1		
010	1A091-0709-5	曲轴瓦座组件	ASSY BRG.CASE,WHEEL	1	↔	
020	1A091-0454-0	曲轴瓦座螺栓	BOLT,BEARING CASE	2		
030	1A091-2348-0	曲柄轴金属件	METAL,CRANKSHAFT	1		标准/组套
030	1A091-2348-2	曲柄轴金属件	METAL,CRANKSHAFT	1	↔	标准/组套
040	1A091-0436-2	曲轴箱垫片	GASKET,BEARING CASE	1		
050	1G851-0481-3	曲轴瓦座	COVER,BEARING CASE	1		
060	1A091-0482-0	箱盖垫片	GASKET,CASE COVER	1		
070	01123-50825	螺栓	BOLT	8		
080	01123-50828	螺栓	BOLT	8		
090	16433-0446-0	密封油	SEAL,OIL	1		
100	1A071-0704-2	曲轴瓦座组件	ASSY BRG.CASE,MAIN	1		
100	1A071-0704-4	曲轴瓦座组件	ASSY BRG.CASE,MAIN	1	↔	
110	1A091-0454-0	曲轴瓦座螺栓	BOLT,BEARING CASE	2		
120	1A091-2348-0	曲柄轴金属件	METAL,CRANKSHAFT	1		标准/组套
120	1A091-2348-2	曲柄轴金属件	METAL,CRANKSHAFT	1	↔	标准/组套
130	1A071-0705-2	曲轴瓦座组件	ASSY BRG.CASE,MAIN	1		
130	1A071-0705-4	曲轴瓦座组件	ASSY BRG.CASE,MAIN	1	↔	
140	1A091-0454-0	曲轴瓦座螺栓	BOLT,BEARING CASE	2		
150	1A091-2348-0	曲柄轴金属件	METAL,CRANKSHAFT	1		标准/组套
150	1A091-2348-2	曲柄轴金属件	METAL,CRANKSHAFT	1	↔	标准/组套
160	1A071-0706-2	曲轴瓦座组件	ASSY BRG.CASE,MAIN	1		
160	1A071-0706-4	曲轴瓦座组件	ASSY BRG.CASE,MAIN	1	↔	
170	1A091-0454-0	曲轴瓦座螺栓	BOLT,BEARING CASE	2		
180	1A091-2348-0	曲柄轴金属件	METAL,CRANKSHAFT	1		标准/组套
180	1A091-2348-2	曲柄轴金属件	METAL,CRANKSHAFT	1	↔	标准/组套
190	15601-0456-0	曲轴瓦座螺栓	BOLT,BEARING CASE	3		

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

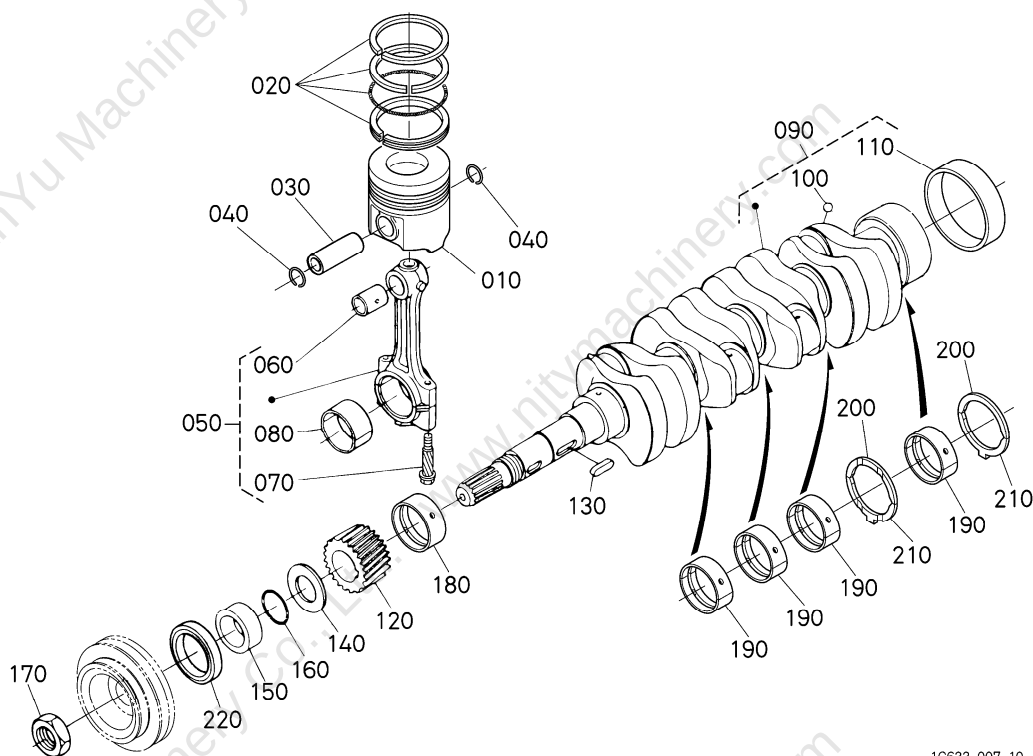 010200 活塞和曲柄轴 PISTON AND CRANKSHAFT




1G633-007-10

A: V2403-M-D1-TE2-CKMS4

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	1G924-2111-2	活塞	PISTON	4		(05) 标准
010	1G924-2190-2	活塞	PISTON	4		(05) +0.25mm
020	1G924-2105-2	活塞环组件	ASSY PISTON RING	4		标准
020	1G924-2109-0	活塞环组件	ASSY PISTON RING	4		+0.25mm
030	1A021-2131-0	活塞销	PIN, PISTON	4		
040	1G279-2133-0	卡环	CIR CLIP, INTERNAL	8		
050	1G924-2201-0	连杆组件	ASSY ROD, CONNECTING	4		
050	1G924-2201-2	连杆组件	ASSY ROD, CONNECTING	4	↔	
050	1G924-2201-3	连杆组件	ASSY ROD, CONNECTING	4	≠	
060	1G924-2198-0	活塞销轴套	BUSH, PISTON PIN	4		
070	15521-2214-2	连杆螺栓	BOLT, CONNECTING ROD	8		
070	1J700-2214-0	连杆螺栓	BOLT, CONNECTING ROD	8	≠	
080	17311-2231-0	连杆瓦	METAL, CRANKPIN	4		标准/组套
080	17311-2231-2	金属曲柄销	METAL, CRANKPIN	4	↔	标准/组套
080	17311-2297-0	连杆瓦	METAL, CRANKPIN	4		-0.20mm/组套
080	17311-2298-0	连杆瓦	METAL, CRANKPIN	4		-0.40mm/组套
090	1G851-2301-7	曲柄轴组件	COMP. CRANKSHAFT	1		
100	07715-00401	钢珠	BALL	4		
110	19202-2328-0	曲轴衬套	BUSH, CRANKSHAFT	1		
120	1A021-2411-0	曲轴齿轮	GEAR, CRANKSHAFT	1		
130	05712-00730	导向键	KEY, FEATHER	1		
140	15471-2331-2	挡油环	SLINGER, OIL	1		
150	19202-2325-0	曲轴套环	COLLAR, CRANKSHAFT	1		
160	04811-10300	O 型环	O RING	1		
170	15221-2336-0	曲轴螺母	NUT, CRANKSHAFT	1		
180	1A091-2347-0	曲柄轴金属件	METAL, CRANKSHAFT	1		标准
180	1A091-2347-2	曲柄轴金属件	METAL, CRANKSHAFT	1	↔	标准
180	1A091-2391-0	曲柄轴金属件	METAL, CRANKSHAFT	1		-0.20mm
180	1A091-2392-0	曲柄轴金属件	METAL, CRANKSHAFT	1		-0.40mm


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 010200



A:V2403-M-DI-TE2-CKMS4

 
↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件



A:V2403-M-DI-TE2-CKMS4

$\leftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

 
010500



A:V2403-M-DI-TE2-CKMS4



$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

 怠速限制装置 IDLE APPARATUS



$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

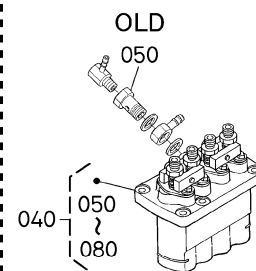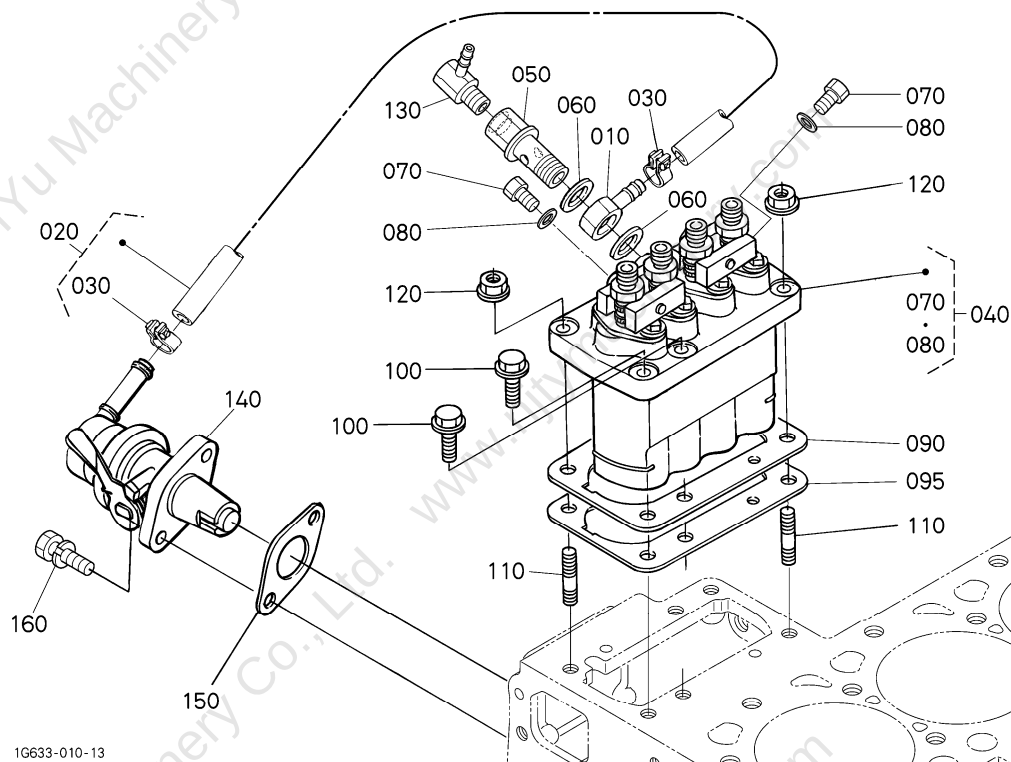  020200 喷射泵 INJECTION PUMP




1G633-805-10

A: V2403-M-D1-TE2-CKMS4

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	14111-4241-0	孔接头	JOINT,EYE	1		
020	14681-4201-0	总成管(燃料)	ASSY PIPE,FUEL	1		
030	14301-4275-0	管夹	CLIP,PIPE	2		
040	1G922-5101-2	喷射泵组件	ASSY PUMP,INJECTION	1		
040	1G922-5101-4	喷射泵组件	ASSY PUMP,INJECTION	1	≠	
050	16496-5132-0	接头螺栓	BOLT,JOINT	1		
050	1G896-5132-0	环眼接头螺栓	BOLT,EYE JOINT	1	≠	
060	15331-9665-0	垫片	GASKET	2		
060	1G896-9665-0	垫片	GASKET	2	≠	
070	15331-5135-0	通气螺钉	SCREW,AIR BLEEDER	2		
080	15331-9666-0	垫片	GASKET	2		
090	19077-5209-2	喷射泵垫片	SHIM,INJECTION PUMP	1		0. 200mm
090	19077-5211-3	喷射泵垫片	SHIM,INJECTION PUMP	1		0. 250mm
090	19077-5212-3	喷射泵垫片	SHIM,INJECTION PUMP	1		0. 300mm
090	1G790-5216-2	喷射泵垫片	SHIM,INJECTION PUMP	1		0. 350mm
095	1G896-5220-0	喷射泵垫片	SHIM,INJECTION PUMP	1		0. 175mm
100	01754-50820	凸缘螺栓	BOLT, FLANGE	4		
110	15221-9153-0	双头螺栓	STUD	2		
120	02751-50080	法兰螺母	NUT,FLANGE	2		
130	15748-6057-0	节流孔组件	ASSY ORIFICE	1		
140	17539-5203-0	燃油泵组件	ASSY PUMP,FUEL	1		
150	1G751-5214-0	燃油泵垫片	GASKET,FUEL PUMP	1		
160	01023-50616	螺栓	BOLT	2		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 SPEED CONTROL PLATE




A:V2403-M-DI-TE2-CKMS4

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

020601

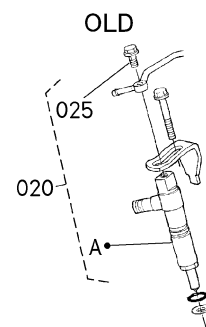 NOZZLE HOLDER AND GLOW PLUG



1G633-011-11

A:V2403-M-DI-TE2-CKMS4

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

超流管
OVER FLOW PIPE



A:V2403-M-DI-TE2-CKMS4

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

021200

FORK LEVER (GOVERNOR)

 


A:V2403-M-DI-TE2-CKMS4

[illegible]

$\leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件


050000



A:V2403-M-DI-TE2-CKMS4

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

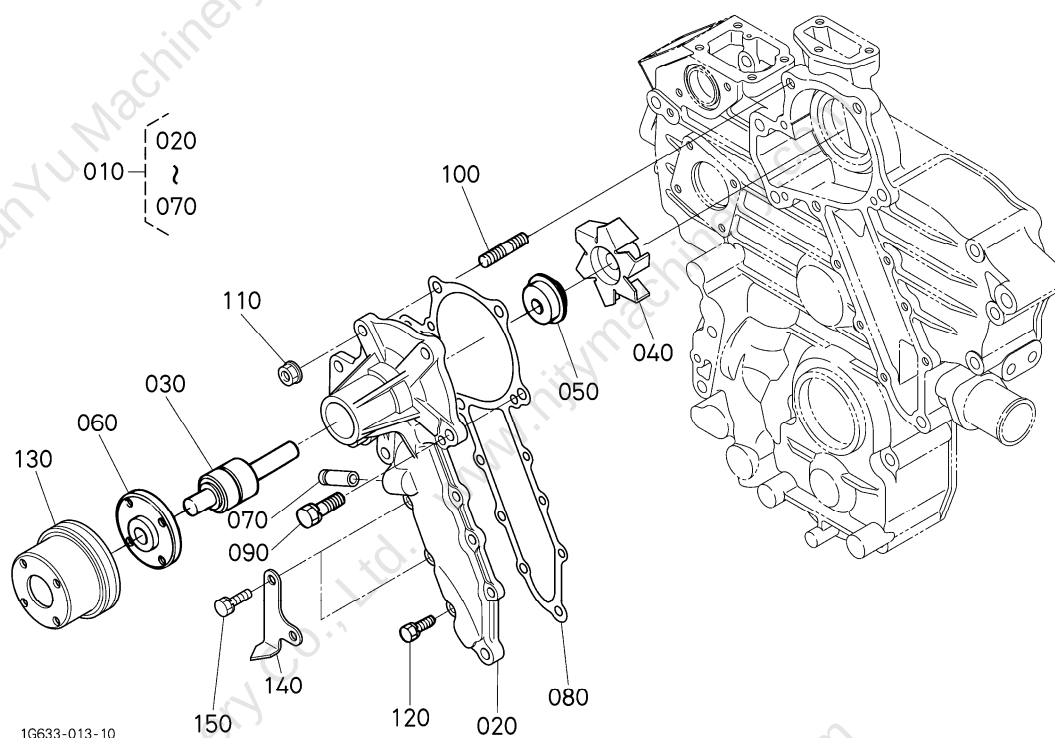 050100 水泵
WATER PUMP



A:V2403-M-DI-TE2-CKMS4

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件



1G633-810-10

[illegible][illegible]

060000 气门和摇臂 VALVE AND RO

This diagram illustrates the exploded view of a valve and rocker assembly. The components are numbered as follows:

- 110: Rocker arm pin
- 170: Rocker arm
- 100: Rocker arm spring
- 090: Rocker arm pin
- 120: Rocker arm pin
- 050: Rocker arm pin
- 030: Rocker arm pin
- 060: Rocker arm pin
- 180: Valve pin
- 190: Valve pin
- 140: Valve pin
- 160: Valve pin
- 130: Valve pin
- 150: Valve pin



A:V2403-M-DI-TE2-CKMS4

序号 REF.No.	零件号 PART No.	零件名
010	17111-1311-0	进气门
010	1G852-1311-0	进气门
020	17111-1312-0	排气门
020	1G852-1312-0	排气门
030	15221-1324-0	气门弹簧
040	15221-1333-0	气门弹簧座
050	15221-1398-0	气门弹簧锁片
060	15221-1315-3	气门杆密封
070	15221-1328-0	气门盖
080	1A091-1426-0	摇臂轴
090	15221-1435-3	摇臂支架
100	15221-1431-0	摇臂弹簧
110	01754-50855	螺栓
120	05411-00528	弹簧销
130	15221-1443-0	摇臂轴垫圈
140	04013-50080	平垫圈
150	04512-60080	弹簧垫圈
160	01153-50812	螺栓
170	15621-1403-0	摇臂组件
180	15521-1423-0	调节螺钉
190	15021-1424-0	螺帽


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

060200 排气歧管 EXHAUST MANIFOLD

This technical diagram illustrates the exploded view of an exhaust manifold assembly. The main component is a cast iron manifold with multiple ports. The assembly includes the following parts and callouts:

- 020**: A gasket or flange plate that fits between the manifold and the cylinder head.
- 040**: A long bolt used to secure the gasket (020) to the manifold.
- 050**: A small nut or washer used to secure the gasket (020) to the manifold.
- 060**: A shorter bolt used to secure the gasket (020) to the manifold.
- 030**: A flange or bracket that connects the manifold to the rest of the exhaust system.

 1G633-027-10

[illegible]

060600 涡轮增压器
TURBO CHARGER

This technical diagram illustrates the exploded view of a turbocharger assembly. The components are labeled with the following numbers:

- 080: A metal clamp or ring at the top left.
- 060: A flexible exhaust manifold pipe connecting to the turbine housing.
- 070: A clamp or bracket on the turbine housing.
- 010: The central turbocharger unit, including the turbine and compressor wheels.
- 100: The turbine housing (exhaust manifold).
- 090: The compressor housing (air inlet manifold).
- 040 and 050: Small fasteners or pins used to secure the housing flanges.
- 020: A mounting bracket or plate for the turbocharger.
- 030: The main engine block or manifold to which the turbocharger is mounted.

1G934-011-10

A:V2403-M-DI-TE2-CKMS4

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

061000

OIL PIPE (TURBO CHARGER)



A:V2403-M-DI-TE2-CKMS4

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

机油冷却器
OIL COOLER

 


A:V2403-M-DI-TE2-CKMS4

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

油箱
FUEL TANK




A : DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

130500


 
FUEL FILTER (COMPONENT PARTS)



A : DC-68

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

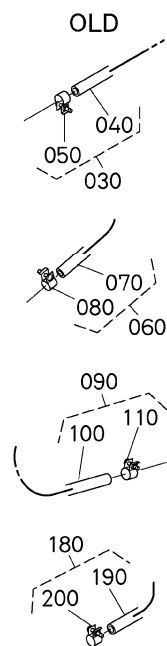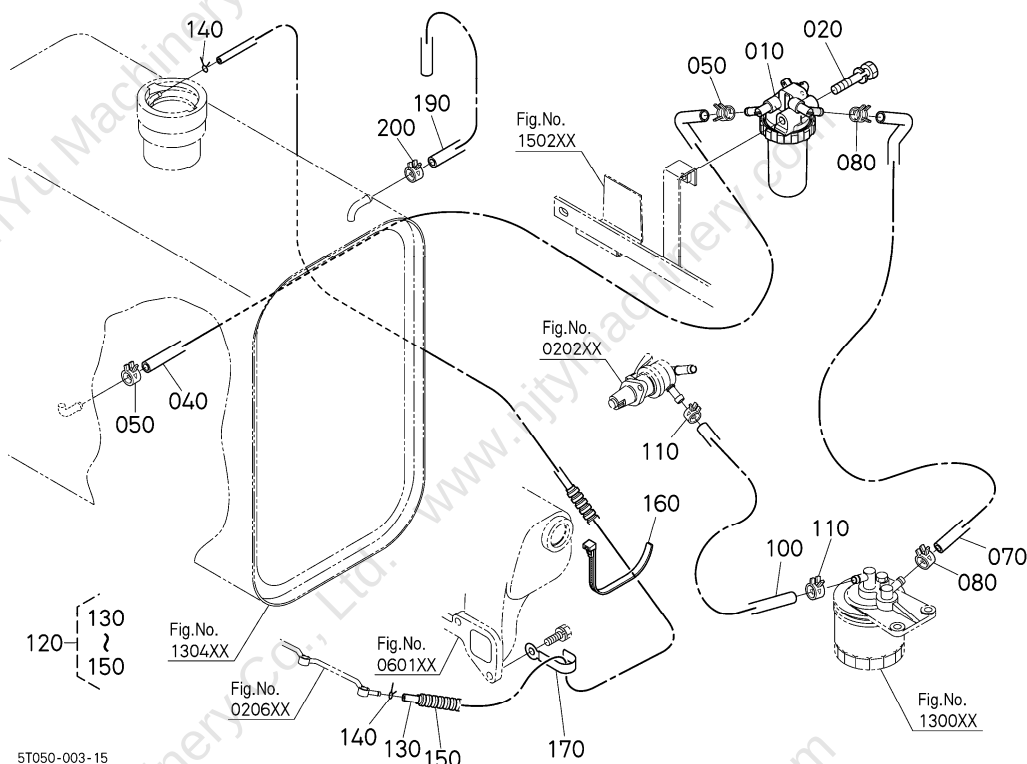  130800 燃油管 FUEL PIPE



5T050-844-10

A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	RA238-5140-0	油水分离器	SEPARATOR,WATER	1		
020	01123-50870	螺栓	BOLT	1		
030	5T051-2571-0	总成燃料管	ASSY TUBE,FUEL	1		新部件次序参见编号 040
040	5T051-2581-0	燃料管	TUBE,FUEL	1		
050	5T051-2591-0	软管夹	CLAMP,HOSE	2		新部件次序参见编号 200
050	14911-4275-0	管夹	CLIP,PIPE	2	≠	
060	5T051-2579-0	总成燃料管	ASSY TUBE,FUEL	1		新部件次序参见编号 070
070	5T051-2582-0	燃料管	TUBE,FUEL	1		
080	5T051-2591-0	软管夹	CLAMP,HOSE	2		新部件次序参见编号 200
080	14911-4275-0	管夹	CLIP,PIPE	2	≠	
090	5T051-2573-0	总成燃料管	ASSY TUBE,FUEL	1		新部件次序参见编号 100
100	5T051-2583-0	燃料管	TUBE,FUEL	1		
110	5T051-2591-0	软管夹	CLAMP,HOSE	2		新部件次序参见编号 200
110	14911-4275-0	管夹	CLIP,PIPE	2	≠	
120	5T051-2575-0	总成燃料管	ASSY TUBE,FUEL	1		
130	5T051-2584-0	燃料管	TUBE,FUEL	1		
140	5T051-2592-0	剪辑. 管	CLIP,HOSE	2		
150	5T051-2699-0	套管	TUBE,PROTECTOR	1		
160	5T051-4126-0	固定管夹	BAND,CLAMP	1		
170	5H400-2591-0	线夹	CLAMP,CORD (1)	1		
180	5T051-2691-0	总成燃料管	ASSY TUBE,FUEL	1		新部件次序参见编号 190
190	5T051-2585-0	燃料管	TUBE,FUEL	1		
200	5T051-2591-0	软管夹	CLAMP,HOSE	1		新部件次序参见编号 200
200	14911-4275-0	管夹	CLIP,PIPE	1	≠	

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

130900

SEPALATOR [COMPONENT PARTS]

 


A: DC-68

[illegible]

150200


散热器



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 水管
WATER PIPE




A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

150500

 储备油箱




A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

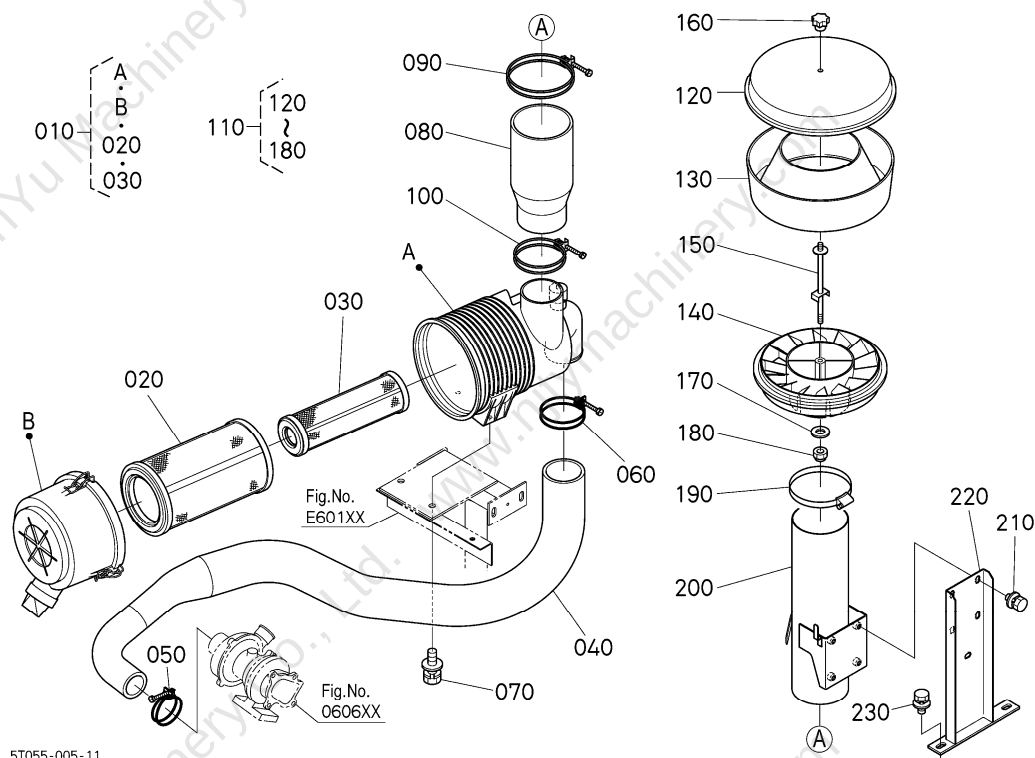 160300 空气滤清器 AIR CLEANER



5T055-802-10

A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T050-2610-0	清洁空气组件	ASSY CLEANER,AIR	1		
020	59800-2611-0	外空气滤芯组件	ASSY ELEMENT,A/C	1		
030	54936-2615-0	内部元件	ELEMENT,INNER	1		
040	5T051-2546-3	进气管	HOSE,INLET	1		
050	09318-89055	软管夹	CLAMP,HOSE	1		
060	09318-89076	软管夹	CLAMP,HOSE	1		
070	01127-50820	螺栓	BOLT	2		
080	5T051-2545-0	进气管	HOSE,INLET	1		
090	09318-89115	软管夹	CLAMP,HOSE	1		
100	09318-89087	软管夹	CLAMP,HOSE	1		
110	5T051-2620-0	滤清器管组件	ASSY CLEANER,PRE-AIR	1		
120	5T051-2621-0	盖	COVER	1		
130	5T051-2622-0	机体	BODY	1		
140	5T051-2623-0	底座	COVER,LOWER	1		
150	5T051-2624-0	清洁杆	ROD,CLEANER	1		
160	5T051-2625-0	鼓形螺母	NUT,KNOB	1		
170	04013-50080	平垫圈	WASHER, PLAIN	1		
180	02552-50080	锁紧螺母	NUT,LOCK	1		
190	5T051-2626-0	软管夹	CLAMP,HOSE	1		
200	5T055-2549-2	滤清器管	PIPE,PRE-CLEANER	≤40291		
200	5T055-2549-3	滤清器管, G	PIPE,PRE-CLEANER	≥40292	←	
210	01125-60816	螺栓	BOLT	4		
220	5T055-2551-0	机架 (预清机, 支撑)	PLATE,PRE-CLEANER	1		
230	01125-60820	螺栓	BOLT	2		

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


160500 消音器 MUFFLER

This technical diagram illustrates the exploded view of a muffler assembly. The main components and their part numbers are as follows:

- Fig.No. 0606XX**: A small bracket or flange component.
- 020**: A square flange with a central hole, shown being inserted into the main muffler body.
- 010**: The main rectangular muffler housing.
- 025**: A small circular gasket or seal.
- 030**: A small circular gasket or seal.
- 050**: A rectangular mounting bracket.
- 040**: A large, angled structural bracket.
- 140**: A mounting bracket with a threaded hole.
- 090**: A small circular gasket or seal.
- 100**: A small circular gasket or seal.
- 110**: A small circular gasket or seal.
- 080**: A bolt or screw.
- 07**: A nut or washer.

The diagram shows the assembly sequence: the main housing (010) is secured with flange (020) and gaskets (025, 030). The angled bracket (040) is attached to the housing using bolts (080) and nuts (07). The mounting bracket (050) is attached to the housing. The bracket (140) is attached to the angled bracket (040) using a bolt (080) and nut (07). The small bracket (0606XX) is attached to the housing (010) using a bolt (080) and nut (07). The gaskets (090, 100, 110) are shown as separate components.

 5T055-006-10



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

交流发电机 ALTERNATOR

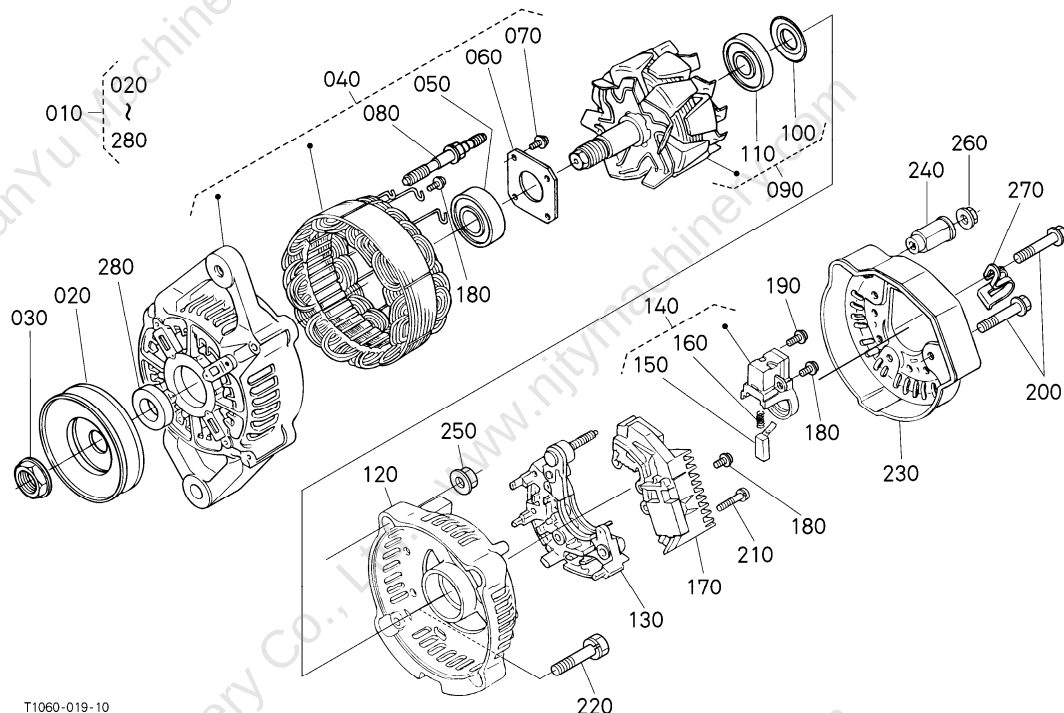 


A: DC-68

[illegible]

$\leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

502000 交流发电机[零件] ALTERNATOR [COMPONENT PARTS]




A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	T1270-1568-2	发电机	ALTERNATOR	1	60A	
020	16427-6411-0	交流发电机皮带轮	PULLEY,ALTERNATOR	1		
030	15881-9201-0	螺母	NUT	1		
040	1K411-6402-0	驱动框架总成	ASSY FRAME,DRIVE END	1		
050	16652-6478-0	球轴承	BEARING,BALL	1		
060	15881-6471-0	定位板	PLATE,RETAINER	1		
070	15881-9301-0	半圆头螺钉	SCREW,ROUND HEAD	4		
080	15881-6426-0	贯穿螺栓	BOLT,THROUGH	2		
090	TA043-6404-0	转子	ROTOR	1		
100	15881-6480-0	轴承盖	COVER,BEARING	1		
110	16652-6477-0	球轴承	BEARING,BALL	1		
120	T1065-1561-0	后端架	FRAME,END REAR	1		
130	T1275-1563-0	固定件	HOLDER	1		
140	16652-6431-0	电刷支架	HOLDER,BRUSH	1		
150	15881-6409-0	电刷	BRUSH	2		
160	15881-6433-0	电刷弹簧	SPRING,BRUSH	2		
170	1K531-6460-2	调节器组件	ASSY REGULATOR	1		
180	15881-9303-0	半圆头螺钉	SCREW,ROUND HEAD	6		
190	15881-9304-0	半圆头螺钉	SCREW,ROUND HEAD	1		
200	15881-9104-0	螺栓	BOLT	3		
210	15881-9302-0	半圆头螺钉	SCREW,ROUND HEAD	2		
220	15881-9105-0	螺栓	BOLT	2		
230	T1065-1566-0	后端盖	COVER,END REAR	1		
240	16241-6490-0	绝缘衬套	BUSH,INSULATION	1		
250	15881-9202-0	螺母	NUT	2		
260	14182-9203-0	螺母	NUT	1		
270	17369-6757-0	线夹	CLAMP,CORD	1		
280	15881-6415-0	轴环	COLLAR	1		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 
**起动机
STARTER**



A : DC-68

[illegible]

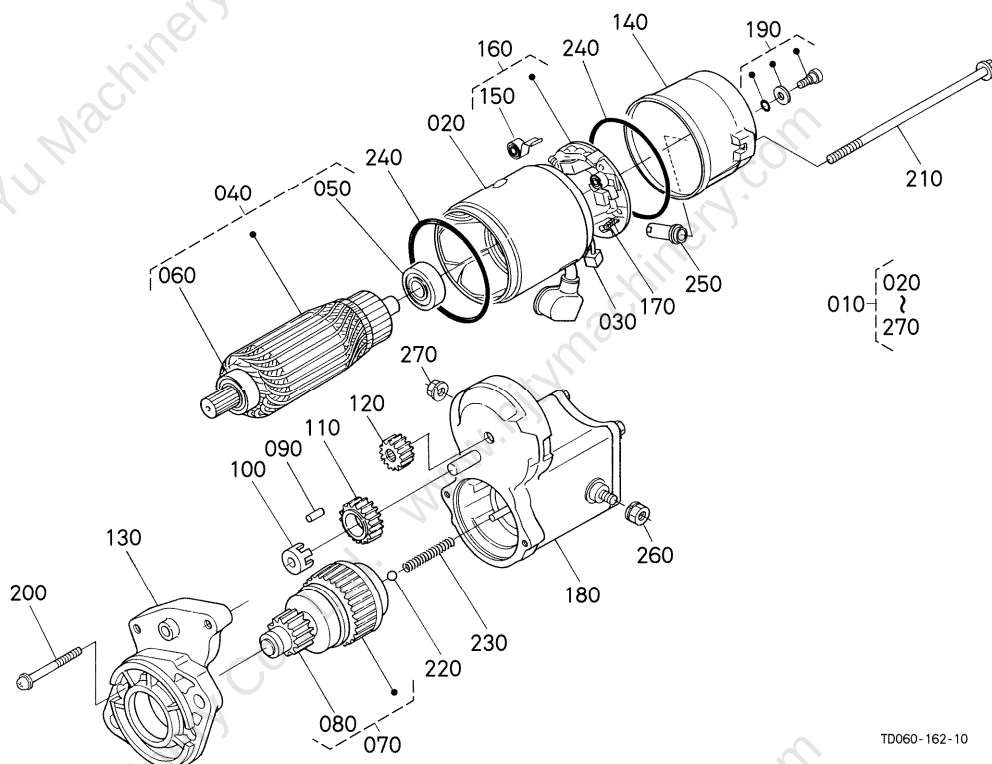 506000 起动器[零件] STARTER [COMPONENT PARTS]




A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	17123-6301-6	启动马达组件	ASSY STARTER	1		
020	17123-6308-0	电磁线圈	YOKE	1		
030	15425-6340-0	电刷套件	KIT BRUSH	2		
040	17123-6307-0	电枢	ARMATURE	1		
050	17123-6350-0	轴承	BEARING	1		
060	11460-6350-0	轴承	BEARING	1		
070	17123-6304-0	过速离合器	CLUTCH,OVER RUNNING	1		
080	17311-6328-0	小齿轮	GEAR,PINION	1		
090	19212-6310-0	滚轴	ROLLER	5		
100	11460-6311-0	定位器	RETAINER	1		
110	11460-6327-0	齿轮	GEAR	1		
120	17123-6326-0	齿轮	GEAR	1		
130	17123-6303-0	驱动端框架	FRAME,DRIVE END	1		
140	17123-6320-0	后端架	FRAME,END	1		
150	15425-6339-0	电刷弹簧	SPRING,BRUSH	4		
160	17123-6338-0	电刷支架	HOLDER,BRUSH	1		
170	17123-6314-0	弹簧	SPRING	4		
180	17123-6302-4	电磁开关组件	ASSY SWITCH,MAGNETIC	1		
190	17123-9331-0	螺钉	SCREW	2		
200	17123-9332-0	螺钉	SCREW	2		
210	17123-6332-0	贯穿螺栓	BOLT,THROUGH	2		
220	19212-9713-0	钢珠	BALL	1		
230	11460-6312-0	弹簧	SPRING	1		
240	15511-9666-0	O 型环	O RING	2		
250	16285-6357-0	线缆管	PIPE,DRAIN	1		
260	13963-9201-0	六角螺母	NUT,HEXAGON	1		
270	16285-9201-0	六角螺母	NUT,HEXAGON	1		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 蓄電池
BATTERY




A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 发动机开关
ENGINE SWITCH



A:V2403-M-DI-TE2-CKMS4

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

机体继电器 BODY RELAY



A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

523000 驾驶舱开关
COCKPIT SWITCH

 


A: DC-68

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

525100

THRESHING SWITCH/SENSOR




A:DC-68-THRESHING

[illegible]


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 储粮罐开关/继电器 GRAIN TANK SWITCT/RELAY



↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 前面板
FRONT PANEL



A: DC-68

$\leftrightarrow$ 新旧部件可替换; $\nleftrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

工作灯(机体)
WORK LIGHT (BODY)

 



Fig.No.
E600XX

A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 工作灯(脱粒)
WORK LIGHT (THRESHER)




A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

541003

 WORK LIGHT (GRAIN TANK)



A:DC-68-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

541004

WORK LIGHT (HARVEST)

 



Fig.No.
U012XX

A:DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

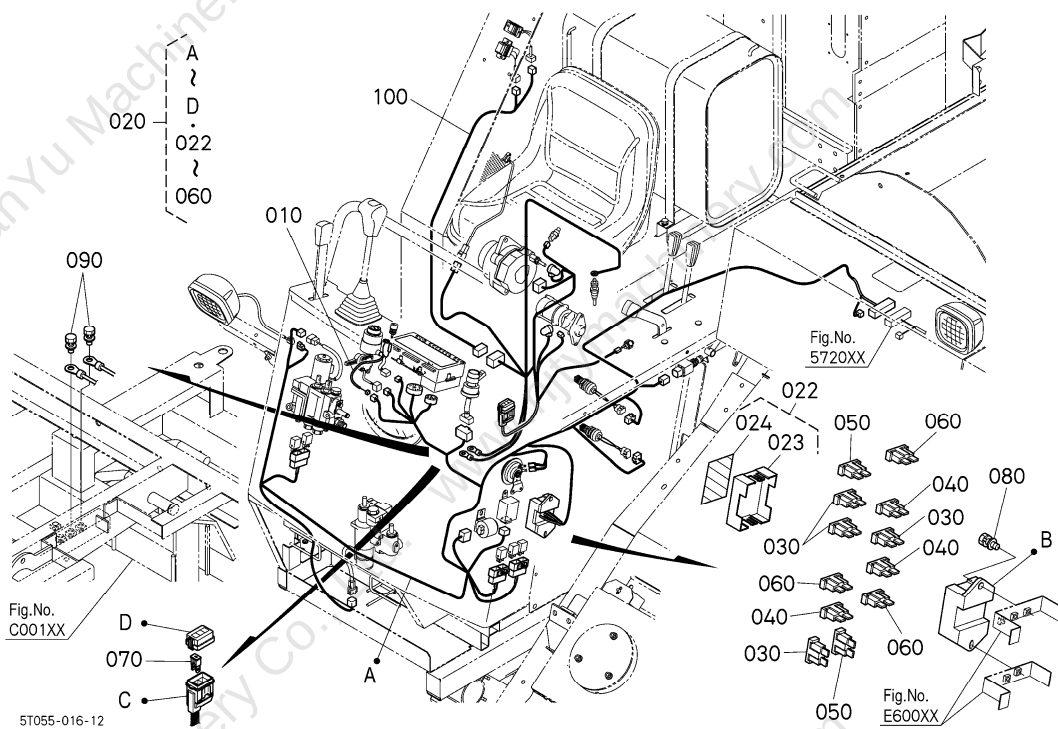 线束(机体) WIRE HARNESS (BODY)



A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

572000

WIRE HARNESS (THRESHER)



A: DC-68-THRESHING

[illegible]

$\leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

573000

WIRE HARNESS (GRAIN TANK)



A:DC-68-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

577000

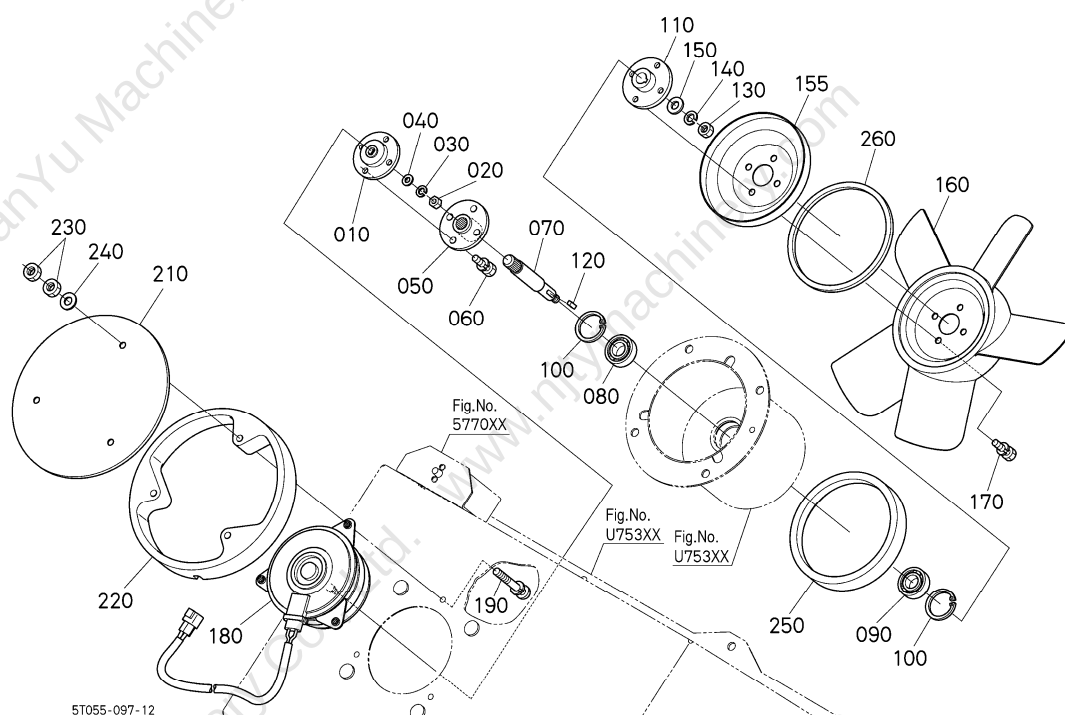 
WIRE HARNESS (DUSTPROOF FAN)

5T050-146-11

A:DC-68-REEL/FEEDER

[illegible]

581000 风扇(馈线) FAN (FEEDER)




A: DC-68-REEL/FEEDER

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T051-5921-0	轴套	BOSS	1		
020	5T051-5922-0	螺母	NUT	1		
030	04512-60050	弹簧垫圈	WASHER, SPRING	1		
040	04013-60050	平垫圈	WASHER, PLAIN	1		
050	5T051-5923-0	接头	JOINT	1		
060	01023-50612	螺栓	BOLT	4		
070	5T051-5924-2	轴	SHAFT	1		
080	08141-06002	滚珠轴承	BEARING, BALL	1		
090	08141-06201	滚珠轴承	BEARING, BALL	1		
100	04611-00320	内卡环	CIR CLIP, INTERNAL	2		
110	5T051-5925-0	风扇接头	BOSS, FAN	1		
120	05712-00415	导向键	KEY, FEATHER	1		
130	02114-50080	螺帽	NUT	1		
140	04512-60080	弹簧垫圈	WASHER SPRING	1		
150	04013-50080	平垫圈	WASHER, PLAIN	1		
155	5T051-5928-0	风扇盖	COVER, FAN	1		
160	5T050-5927-0	风扇	FAN	1		
170	01023-50612	螺栓	BOLT	4		
180	5T050-5926-0	电机	MOTOR	1		
190	03024-50540	带垫圈的螺钉	SCREW, WITH WASHER	3		
200	—	无	BLANK	—		
210	5T051-5939-0	盖	COVER	1		
220	5T051-5941-0	电机盖	COVER, MOTOR	1		
230	02054-50050	螺帽	NUT	6		
240	04013-60050	平垫圈	WASHER, PLAIN	3		
250	5T051-5946-0	橡胶	RUBBER	1 >=41074		
260	5T051-5947-0	橡胶	RUBBER	1 >=41074		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

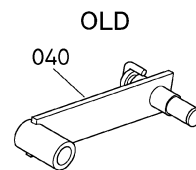 张紧(移动)
TENSION (TRAVEL)




5T055-020-11

A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

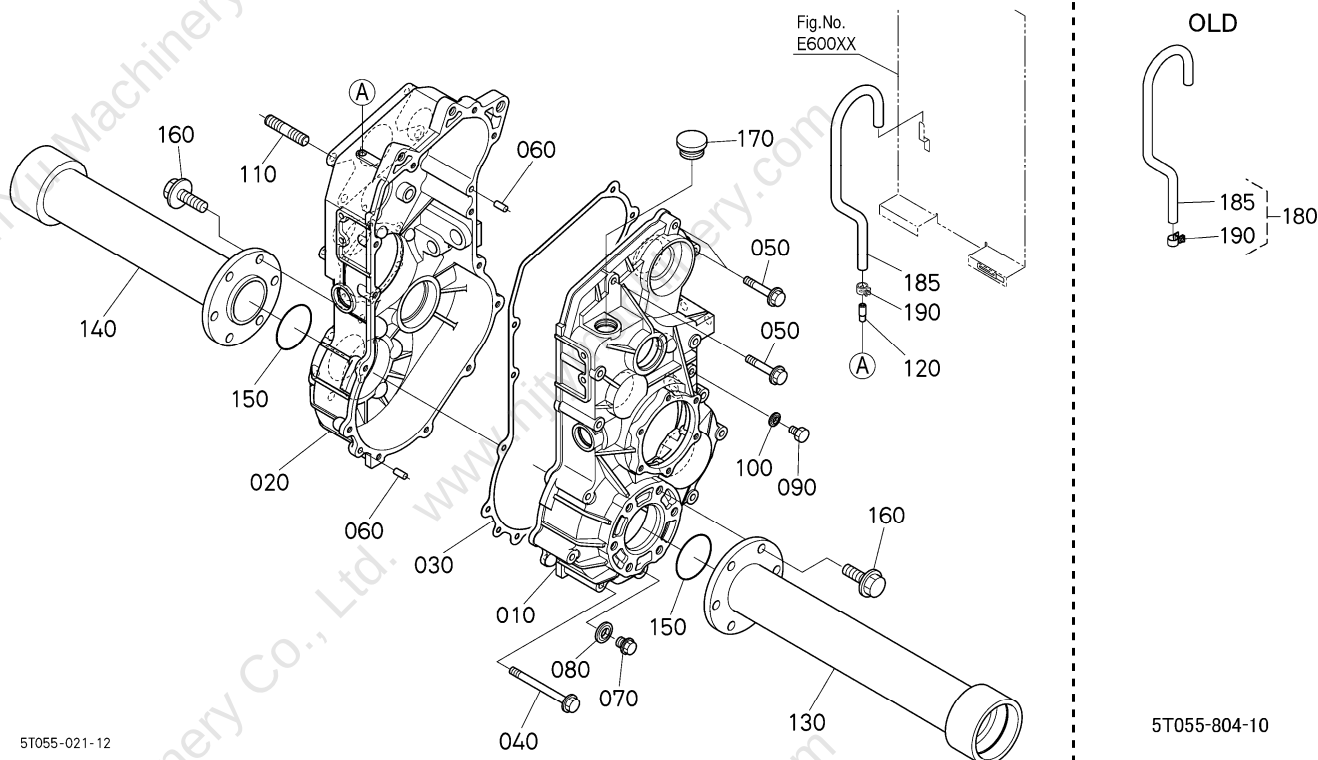 A11000 传动箱 TRANSMISSION CASE



5T055-021-12


5T055-804-10

A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T054-1511-0	变速箱(左)	CASE, TRANSMISSION LH	1		
020	5T054-1512-0	变速箱(右)	CASE, TRANSMISSION RH	1		
030	52200-1513-2	变速箱密封垫	GASKET, T/M.CASE	1		
040	01754-50890	带缘螺栓	BOLT, FLANGE	10		
050	01754-50845	凸缘螺栓	BOLT, FLANGE	3		
060	05012-00818	平行销	PIN, STRAIGHT	2		
070	06331-35012	塞子	PLUG	1		
080	04717-01200	橡胶垫圈	WASHER, WITH RUBBER	1		
090	01153-50812	螺栓	BOLT	1		
100	04717-00800	橡胶垫圈	WASHER, WITH RUBBER	1		
110	52200-1533-0	双头螺栓	STUD, SEAL	4		
120	58511-1531-0	接头	JOINT, BREATHER	1		
130	5T054-1514-0	左车轴箱	CASE, AXLE LH	1		
140	5T054-1515-0	右车轴箱	CASE, AXLE RH	1		
150	04815-50650	O型密封圈	O RING	2		
160	01754-51235	带缘螺栓	BOLT, FLANGE	12		
170	5H400-1516-0	塞(加油)	PLUG, OIL FILLER	1		
180	5T051-1517-0	总成管(吸进)	ASSY PIPE, BREATHER	1		新部件次序参见编号 185
185	5T051-1518-0	吸油管	PIPE, BREATHER	1		
190	5T051-2591-0	软管夹	CLAMP, HOSE	1		新部件次序参见编号 190
190	14911-4275-0	管夹	CLIP, PIPE	1	≠	

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 传动箱内 1
TRANSMISSION CASE INSIDE 1



$\leftrightarrow$ 新旧部件可替换; $\nleftrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

A11200

传动箱内 2

TRANSMISSION CASE INSIDE 2



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

A11300

TRANSMISSION CASE INSIDE 3

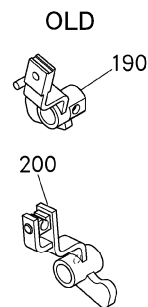 
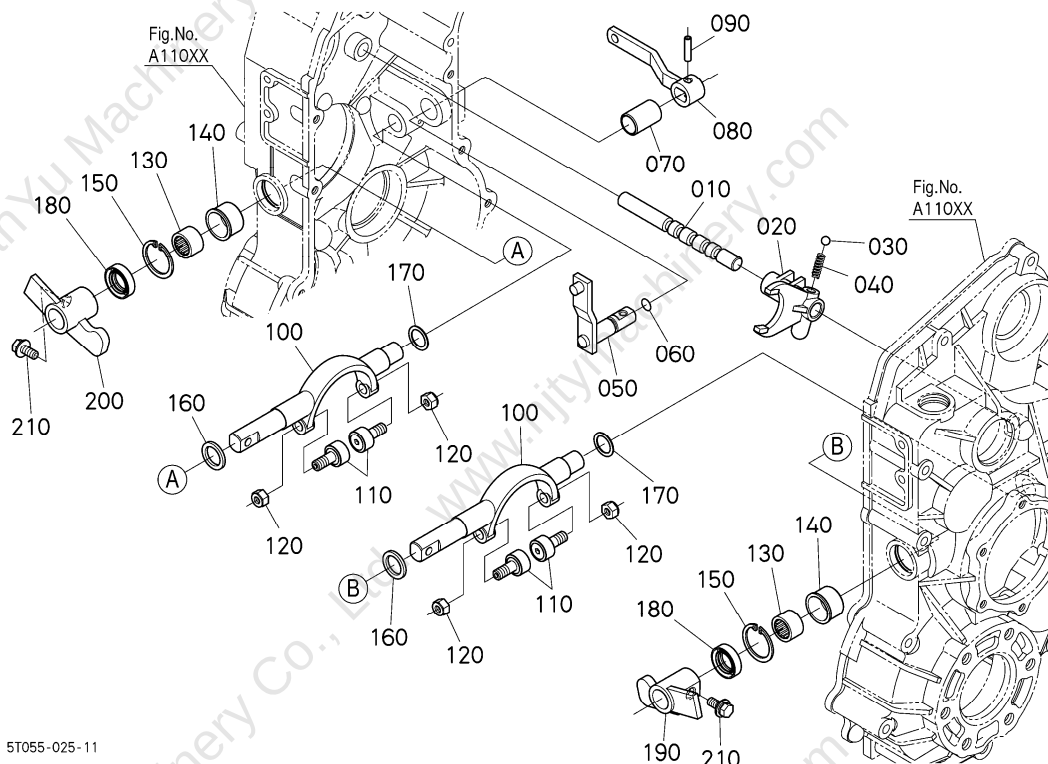 


A: DC-68

$\Leftrightarrow$ 新旧部件可替换: $\nRightarrow$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

A11400 传动箱内 4 TRANSMISSION CASE INSIDE 4

注：按照参考编号 190, 200 和图片编号 A21000 参考编号 170-190 新部件排序



5T055-805-10

A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	52200-1711-0	变速叉轴	SHAFT,FORK	1		
020	52200-1712-0	变速叉挂钩	FORK,RANGE SHIFT	1		
030	07715-01605	钢珠	BALL	1		
040	5H601-1713-0	弹簧挡	SPRING,STOPPER	1		
050	52200-1713-0	变速叉	LEVER,SP CHANGE	1		
060	04816-00120	O 型环	O RING	1		
070	52200-1714-0	衬套	BUSH	1		
080	52500-1781-0	杠杆, 转换	LEVER,SP CHANGE	1		
090	05411-00625	弹簧销	PIN,SPRING	1		
100	5T054-1739-0	叉, 侧离合器	FORK,SIDE CLUTCH	2		
110	52270-1733-0	位子	SCENE	4		
120	52270-1737-0	螺母锁	NUT,LOCK	4		
130	44512-2364-0	滚针轴承	BEARING,NEEDLE	2		
140	5T054-1741-0	针座	HOLDER,NEEDLE	2		
150	04611-00320	内卡环	CIR CLIP,INTERNAL	2		
160	53961-3172-0	轴环	COLLAR	2		
170	41092-1463-0	滚轮轴 2	COLLAR,SHAFT	2		
180	52200-1734-0	油封	SEAL,OIL	2		
190	5H483-1735-2	杠杆, 左侧离合器座	LEVER,SIDE CLUTCH LH	1		见注释
190	5T054-1735-0	手柄 (转向离合器外, 左侧)	LEVER,SIDE CLUTCH LH	<=41127 >=41128	≠	
200	52200-1736-6	杠杆, 右侧离合器座	LEVER,SIDE CLUTCH RH	1		
200	5T054-1736-0	手柄 (转向离合器外, 右侧)	LEVER,SIDE CLUTCH RH	<=41127 >=41128	≠	
210	59700-1737-0	螺栓垫圈	BOLT	2		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

[illegible]

A: DC-68

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

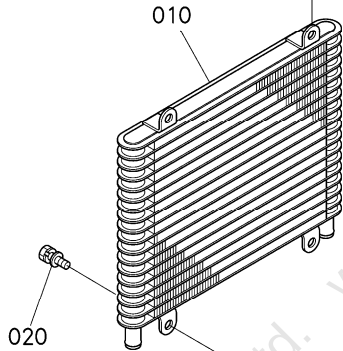 
HST [组成部分] 4 HST INPUT SHAFT



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

机油冷却器
OIL COOLER



5T055-028-10

A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

A: DC-68

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

HST [COMPONENT PARTS] 1



$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

HST [组成部分] 2
HST [COMPONENT PARTS] 2



A : DC-68

[illegible]

$\leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

HST [COMPONENT PARTS] 3



A: DC-68

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

液压组件(变速箱) HYDRAULIC UNIT (MISSION)



Fig.No.
C001XX

 
A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

B23300

HYDRAULIC UNIT (GRAIN TANK)



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

B24500 丰收缸 HARVEST CYLINDER

This technical diagram illustrates the assembly of the B24500 Harvest Cylinder. The main component, the cylinder (010), is shown in an exploded view relative to its mounting bracket. Key assembly points are labeled with callouts: 050 points to the mounting bracket, 060 points to the mounting pin, and 070 points to the mounting nut. A separate component, Fig. No. B233XX, is shown at the top left, connected to the cylinder. The diagram is a black and white line drawing with dashed lines indicating the assembly path.

Fig.No.
B233XX

070

050

060

010

Fig.No.
C00


5T055-032-10

Fig.No.
C001XX

[illegible]

76

 HARVEST CYLINDER [COMPONENT PARTS]



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

UNLOADER CYLINDER



A : DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

离合器缸 CLUTCH CYLINDER



A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

B50400 液压泵 HYDRAULIC PUMP

Fig.No.
0105XX

Fig.No.
0105XX

 
120 030 040 050 01

130 140 170 160 150 160 150

5T050-020-11


[illegible]

液压软管(吸) HYDRAULIC HOSE (SUCTION)



$\leftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

 液压软管(排放) HYDRAULIC HOSE (DELIVERY)



A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

B70300 液压软管(收割机)
HYDRAULIC HOSE (HARVEST)



A: DC-68

[illegible]

$\leftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

B70400 液压软管 (方向)
HYDRAULIC HOSE (DIRECTION)



A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

B70500

液压软管(机)




A: DC-68

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

C00100 主框架 MAIN FRAME

Exploded view diagram of the Main Frame (C00100) showing various components and their assembly positions. The diagram includes a large rectangular frame with internal cross-bracing and a complex front assembly. Callouts with numbers point to specific parts: 020, 030, 040, 050, 060, 080, 090, 100, 110, 120, 130, 150, 160, 170, 180, 190, and 200. Arrows indicate the direction of assembly for several components.

 [illegible]

89

**甲板
DECK**



A: DC-68


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

C00500 发动机底座 ENGINE BASE

The diagram shows an exploded view of the engine base assembly. A large rectangular frame is shown with a smaller component, labeled 050, being inserted into it. The component 050 is a bolt or screw. Other parts are labeled with numbers: 030, 060, and 010. A label 'Fig.No. C001XX' points to the main frame. The diagram is a technical drawing with dashed lines indicating the assembly path.

Fig.No.
C001XX

 030
060
010
060
050



A: DC-68

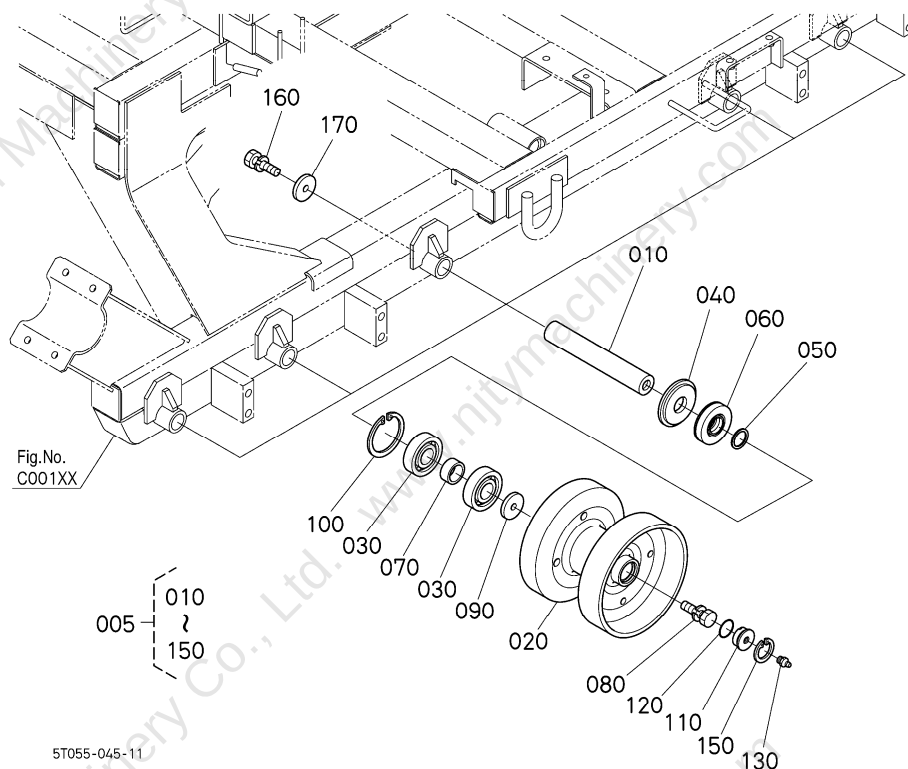 
↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件



A: DC-68

[illegible]

C10100 履帶支重輪
TRUCK ROLLER




A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

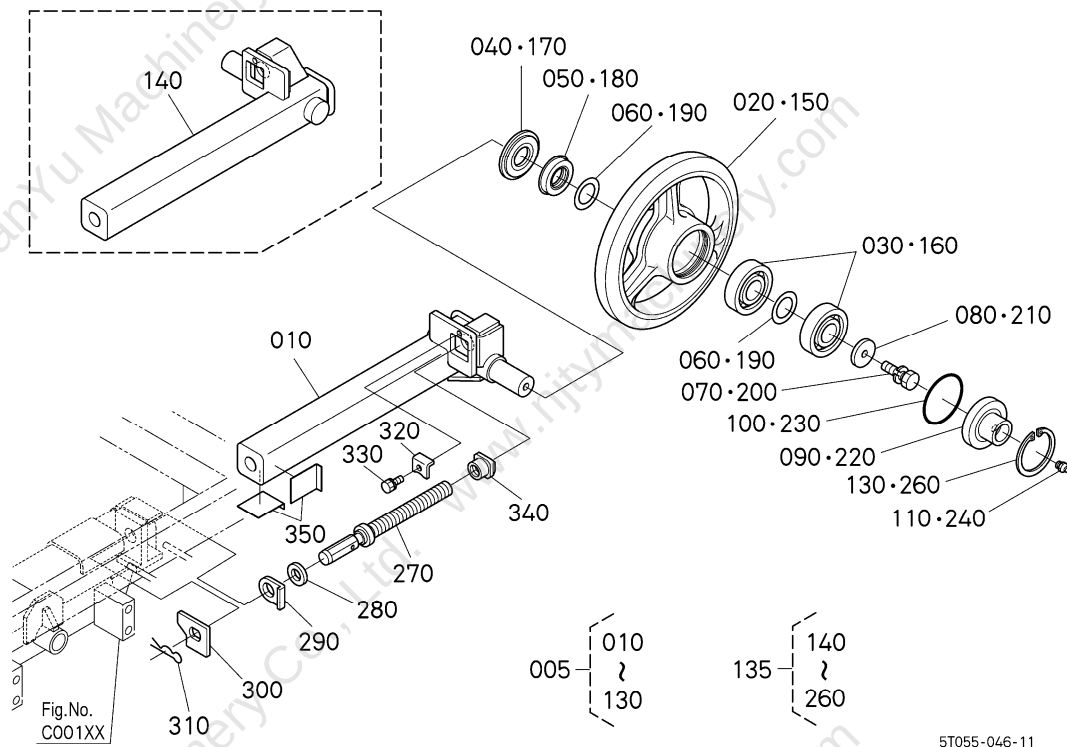 C10200 履带张力 CRAWLER TENSION



5T055-046-11

A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
005	5T051-2380-0	滚轮组件壳(左)	ASSY ROLLER,REAR LH	1		
010	5T051-2383-3	调整框架(左)	FRAME,C-TENSION LH	≤40551		
010	5T051-2383-4	调整框架(左)	FRAME,C-TENSION LH	>40552	←	
010	5T051-2383-5	调整框架(左)	FRAME,C-TENSION LH	>41590	←	
020	5T051-2387-2	滚轴	ROLLER	≤41589		
020	5T051-2387-3	滚轴	ROLLER	>41590	←	
030	08101-06306	滚珠轴承	BEARING,BALL	2		
040	5T051-2388-0	后轮轴环	COLLAR,REAR WHEEL	1		
050	34150-1115-0	油封	SEAL,OIL	1		
060	5T051-2217-0	轴环	COLLAR	2		
070	01133-51025	螺栓	BOLT	1		
080	5F000-5265-0	平垫圈	WASHER,PLAIN	1		
090	5T051-2392-2	塞子	PLUG	1		
100	1C010-9696-2	O型环	O RING	1		
110	06611-15010	黄油嘴	NIPPLE,GREASE	1		
120	---	无	BLANK	-		
130	04611-00720	内卡环	CIR CLIP,INTERNAL	1		
135	5T051-2390-0	滚轮组件壳(右)	ASSY ROLLER,REAR RH	1		
140	5T051-2389-3	调整框架(右)	FRAME,C-TENSION RH	≤40551		
140	5T051-2389-4	调整框架(右)	FRAME,C-TENSION RH	>40552	←	
140	5T051-2389-5	调整框架(右)	FRAME,C-TENSION RH	>41590	←	
150	5T051-2387-2	滚轴	ROLLER	≤41589		
150	5T051-2387-3	滚轴	ROLLER	>41590	←	
160	08101-06306	滚珠轴承	BEARING,BALL	2		
170	5T051-2388-0	后轮轴环	COLLAR,REAR WHEEL	1		
180	34150-1115-0	油封	SEAL,OIL	1		
190	5T051-2217-0	轴环	COLLAR	2		
200	01133-51025	螺栓	BOLT	1		
210	5F000-5265-0	平垫圈	WASHER,PLAIN	1		
220	5T051-2392-2	塞子	PLUG	1		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件


C10200 履带张力 CRAWLER TENSION

Fig.No.
C001XX

A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **C10400 履帶指南
CRAWLER GUIDE**



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

传动辊 DRIVE ROLLER



Fig.No.
C001XX

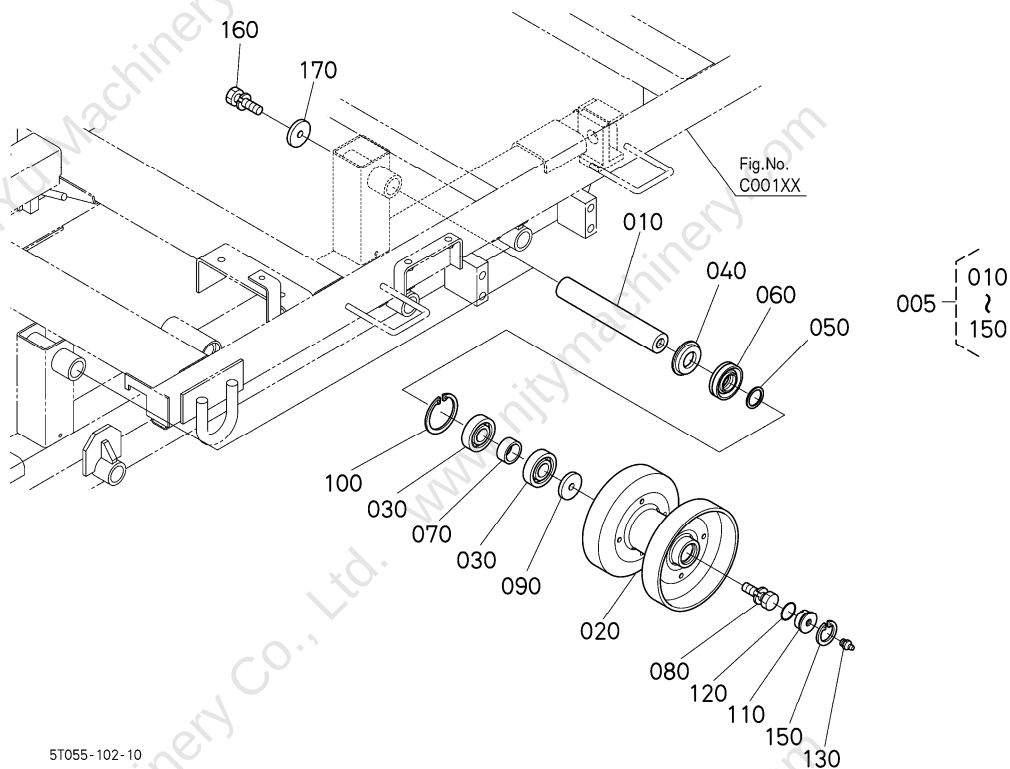 
A: DC-68

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

载波辊 CARRIER ROLLER

机器序列号:A:<=41589




A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

载波辊 CARRIER ROLLER

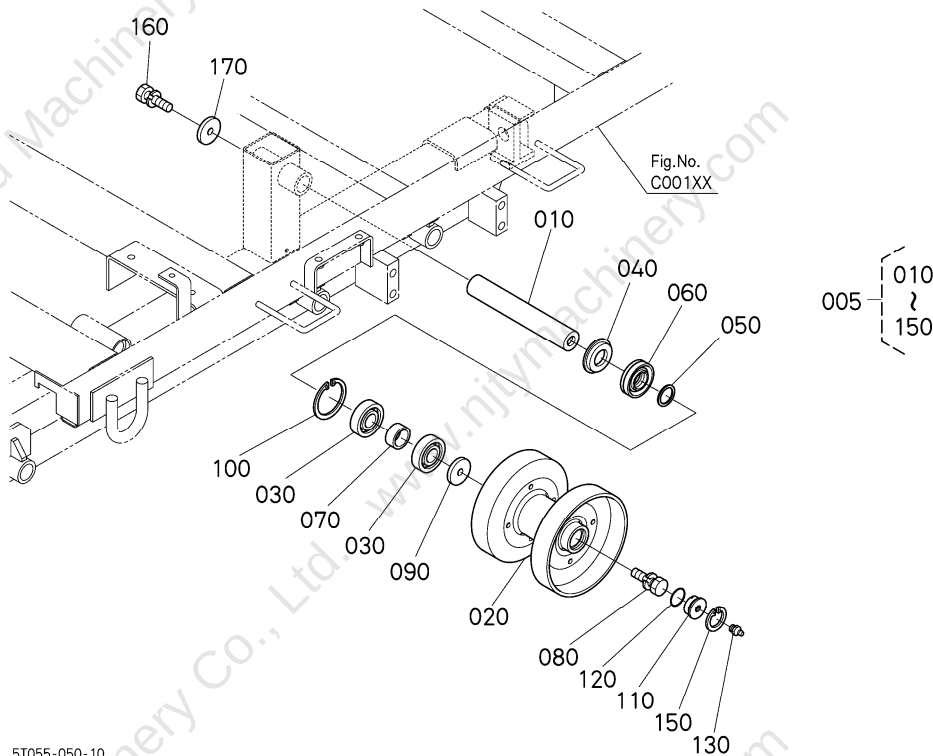 机器序列号;A: >=41590




A : DC-68

[illegible]


$\longleftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

D60300 转向 STEERING

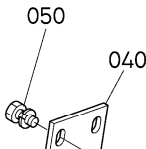 Fig.No.
E600XX



The diagram shows a mechanical assembly. A rectangular plate, labeled 040, has two circular holes. A bolt, labeled 050, is shown passing through one of the holes. The bolt has a hexagonal head and a threaded shaft.

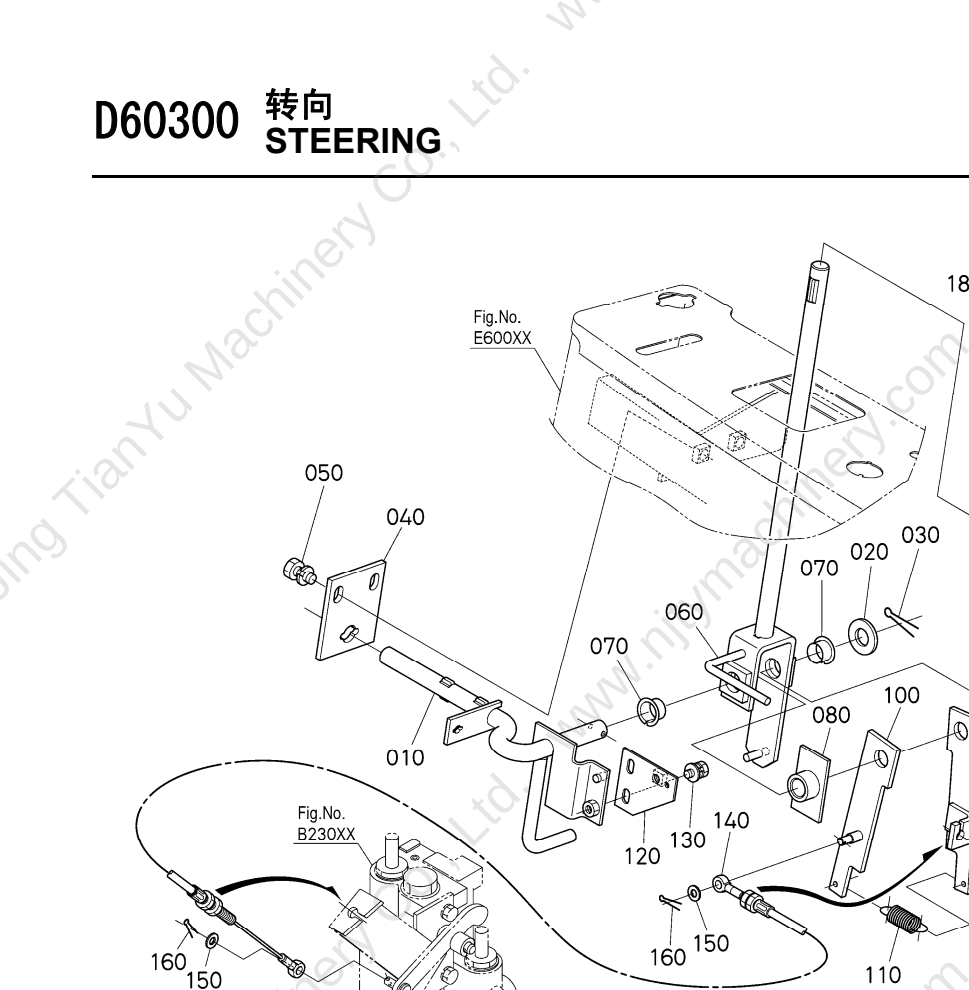 


5T055-096-11

A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 丰收离合器控制杆 HARVEST CLUTCH LEVER




A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 加速器杆
ACCEL LEVER



A: DC-68

[illegible]

$\leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

D60800

脱粒离合器控制板



A : DC-68

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

主变速手柄
MAIN GEAR SHIFT LEVER



A: DC-68

[illegible]

[illegible][illegible]

**D61500 主变速杆
MAIN GEAR SHIFT ROD**



 
A: DC-68

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

刹车踏板
BRAKE PEDAL

机器序列号:A:<=14349




A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

刹车踏板
BRAKE PEDAL

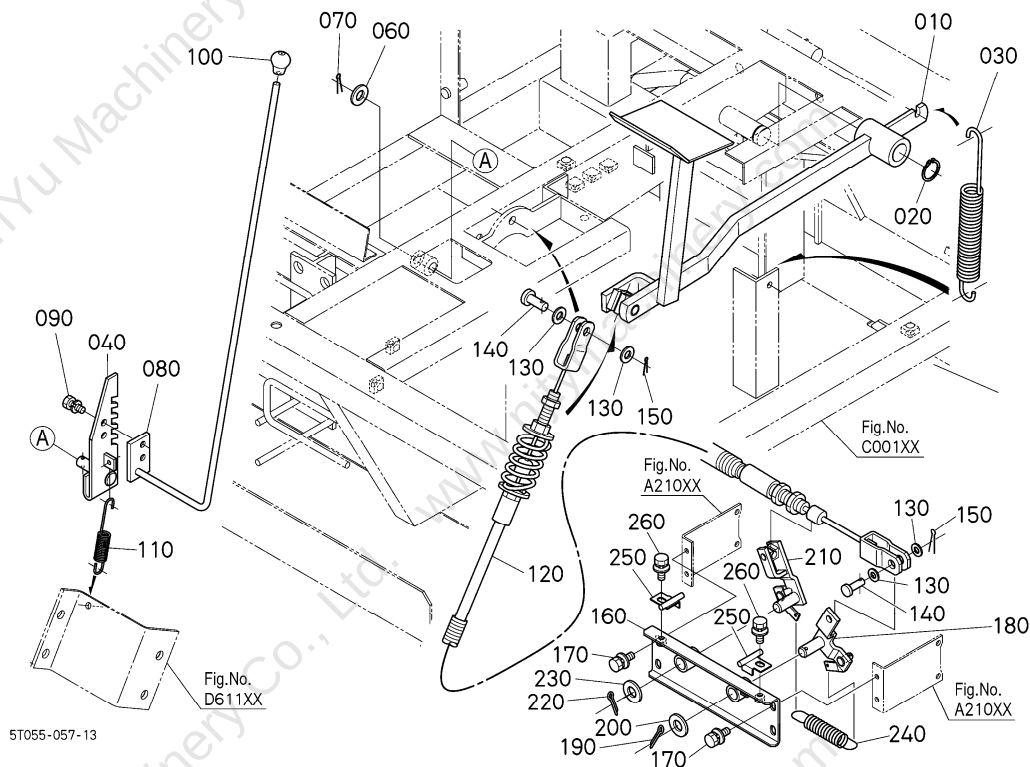 机器序列号:A:>=14350




A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 丰收移动臂 HARVEST ELEVATOR ARM



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

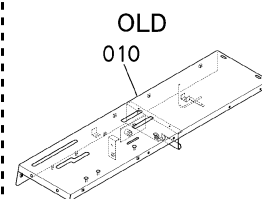 
运行框架 OPERATION FRAME



5T055-058-11

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

E60100 操作面板 OPERATION PANEL




5T055-059-12

A: DC-68

[illegible]

$\Leftrightarrow$ 新旧部件可替换: $\ncong$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

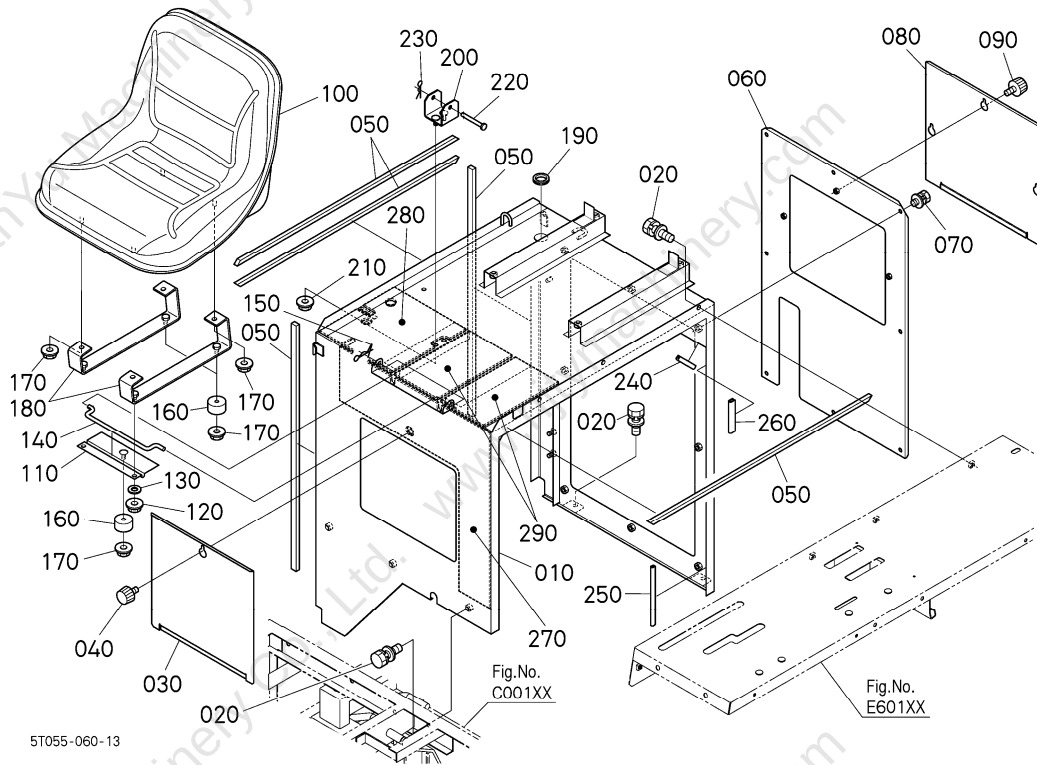 E60300 座椅 SEAT




A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T055-3541-3	座椅支架	FRAME,SEAT	1		
020	01125-60820	螺栓	BOLT	7		
030	5T051-3543-0	罩, 框架座	COVER,SEAT FRAME	1		
040	5T051-4128-0	螺栓, 树脂	BOLT,RESIN	1		
050	5T051-3542-2	垫片, 框架座	GASKET,SEAT FRAME	5		
060	5T055-3546-0	盖板	COVER,SEAT FRAME	1		
070	01125-60816	螺栓	BOLT	9		
080	5T055-3547-0	盖板	COVER,SEAT FRAME	1		
090	5T051-4128-0	螺栓, 树脂	BOLT,RESIN	3		
100	5T051-3539-0	座椅	SEAT	1		
110	5T051-3533-0	前车轴支架座	STAY,SEAT FRONT	1		
120	02121-50080	螺帽	NUT	2		
130	04012-50080	平垫圈	WASHER, PLAIN	2		
140	5T051-3535-0	销	PIN	1		
150	PG001-3411-0	卡销	PIN,SNAP	1		
160	5T051-3536-0	缓冲垫	CUSHION	3		
170	02121-50080	螺帽	NUT	7		
180	5T051-3537-0	前车轴	STAY,SEAT	2		
190	5H400-3556-0	橡胶圈	GROMMET	1		
200	5T051-3538-0	止动板支座	STOPPER,SEAT	1		
210	02121-50080	螺帽	NUT	2		
220	05122-50865	连接销	PIN,JOINT	1		
230	05515-60800	B形销	PIN,SNAP	1		
240	5T051-2122-0	平衡调节片	TRIM	1		
250	5H400-2122-0	平衡调节片	TRIM	1		
260	5H400-2117-0	平衡调节片	TRIM	1		
270	5T050-3752-0	隔热板	INSULATION,HEAT	1 >=41128		
280	5T050-3753-0	隔热板	INSULATION,HEAT	1 >=41128		
280	5T050-3753-2	隔热板	INSULATION,HEAT	1 >=41444	←	
290	5T050-3754-0	隔热板	INSULATION,HEAT	2 >=41128		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

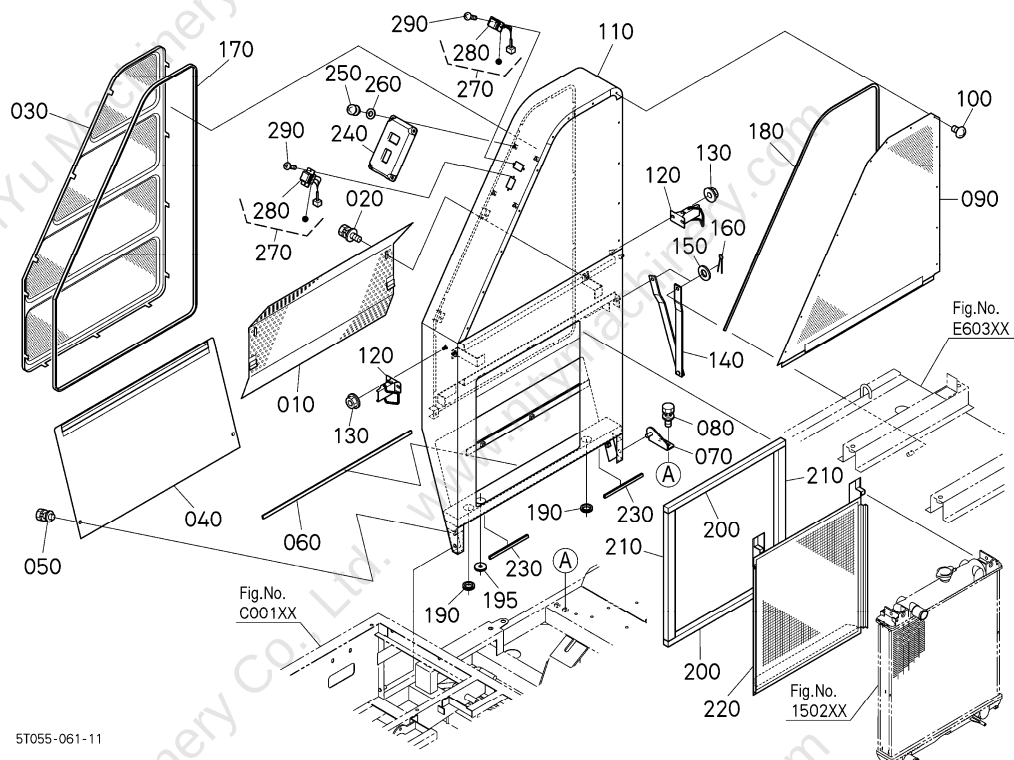 E60400 防尘罩 DUSTPROOF COVER



5T055-061-11

A:DC-68

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T051-3511-0	盖	COVER	1		
020	01127-50820	螺栓	BOLT	2		
030	5T051-3513-0	防尘盖	COVER,DUSTPROOF	1		
040	5T051-3516-0	防尘盖	COVER,DUSTPROOF	1		
050	01125-60816	螺栓	BOLT	2		
060	5T051-3557-2	垫片. 除尘(下)	GASKET,COVER DUST LO	1		
070	5T051-3517-0	防尘支撑件盖	SUPPORT,DUST COVER	1		
080	01125-60820	螺栓	BOLT	2		
090	5T051-3514-0	防尘	COVER,DUST	1		
100	03614-50410	自攻螺钉	SCREW,TAPPING	13		
110	5T055-3551-2	防尘盖板	COVER,DUST	1		
120	5G200-1113-0	固定夹	CLAMP	2 <=41136		
120	5T057-1113-0	固定夹	CLAMP	2 >=41137	≠	
130	02021-50060	螺帽	NUT	4		
140	5T051-3552-0	粉尘盖固定件	STAY.DUST COVER	1 <=40009		
140	5T051-3552-3	粉尘盖固定件	STAY.DUST COVER	1 >=40010	←	
150	04012-50080	平垫圈	WASHER, PLAIN	2		
160	05511-50215	开口销	PIN, SPLIT	2		
170	5T051-3554-0	防尘垫片	GASKET,DUST SOFT	1		
180	5T051-3555-2	防尘垫片(后)	GASKET,DUST SOFT REAR	1		
190	5H400-3556-0	橡胶圈	GROMMET	2		
195	5T055-3558-0	索环(线束, G)	GROMMET	1		
200	5H471-3561-0	垫片. 软	GASKET,SOFT	2		
210	5T051-3563-0	垫片. 软	GASKET,SOFT	2		
220	5T051-3559-0	网	NET	1		
230	5H400-2122-0	平衡调节片	TRIM	2		
240	5T055-3553-0	盖板(G, 开关)	COVER,SWITCH	1		
250	03004-50614	附垫圈螺钉	SCREW,WITH WASHER	4		
260	04013-60060	平垫圈	WASHER, PLAIN	4		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

防尘罩
DUSTPROOF COVER



A: DC-68


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

E75000 顶篷 CANOPY

Diagram illustrating the assembly of the E75000 Canopy. The components shown include:


- 020: Canopy
- 060: Screws
- 030: Washers
- 040: Spacers
- 050: Hinge pin
- 010: Main body
- 070: Cable terminal
- 110: Cable
- 120: Mounting bracket

The diagram shows the canopy (020) being attached to the main body (010) using screws (060), washers (030), and spacers (040). A hinge pin (050) is shown at the bottom. A cable (110) is connected to a terminal (070) on the side. A label 'E75000' is visible on the side panel.

 [illegible]

115

 标签
LABEL (BODY)



A: DC-68

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

标准附件 ACCESSORIES PARTS

 


A: DC-68

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

脱粒框架(上) THRESHING FRAME (UPEER)



A: DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
脱离框架(下)
THRESHING FRAME (LOWER)



A:DC-68-THRESHING

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

清选风机板 WINNOWER PLATE



A:DC-68-THRESHING

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

H01100 风向板
WIND DIRECTION PLATE


 


Fig.No.
H001XX

A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 进口板
INLET PLATE



A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

噴粉罩
DUSTING COVER



A:DC-68-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

H30600

THRESHING TENSION ARM


 


Fig.No.
H001XX

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

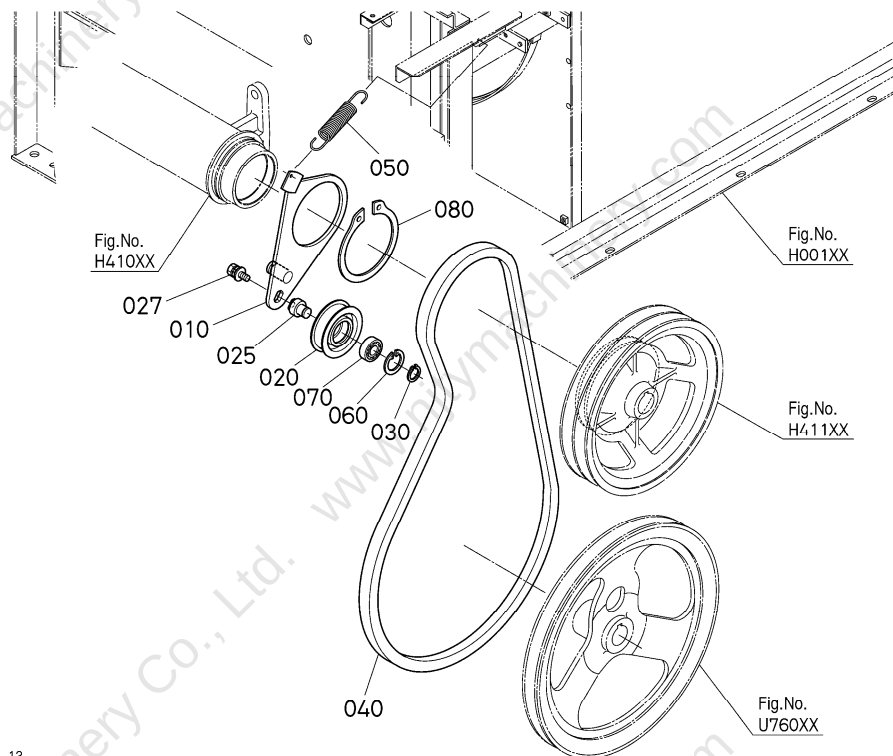 H30700




5T050-052-13

A:DC-68-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 丰收杆 HARVEST REVERSAL LEVER




A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

H40000 脱粒滚筒轴 THRESHING CY

010
050
070
080

 Fig.No.H4



A: DC-68-THRESHING

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

THRESHING CYLINDER TOOTH



A:DC-68-THRESHING

[illegible]

$\leftrightarrow$ 新旧部件可替换; $\nleftrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

H40300 凹板筛 CONCAVE

Fig.No.
H001XX

5T050-056-11



 
5T050-056-11

[illegible]

129

H41000


THRESHING CYLINDER DRIVE CASE



A: DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

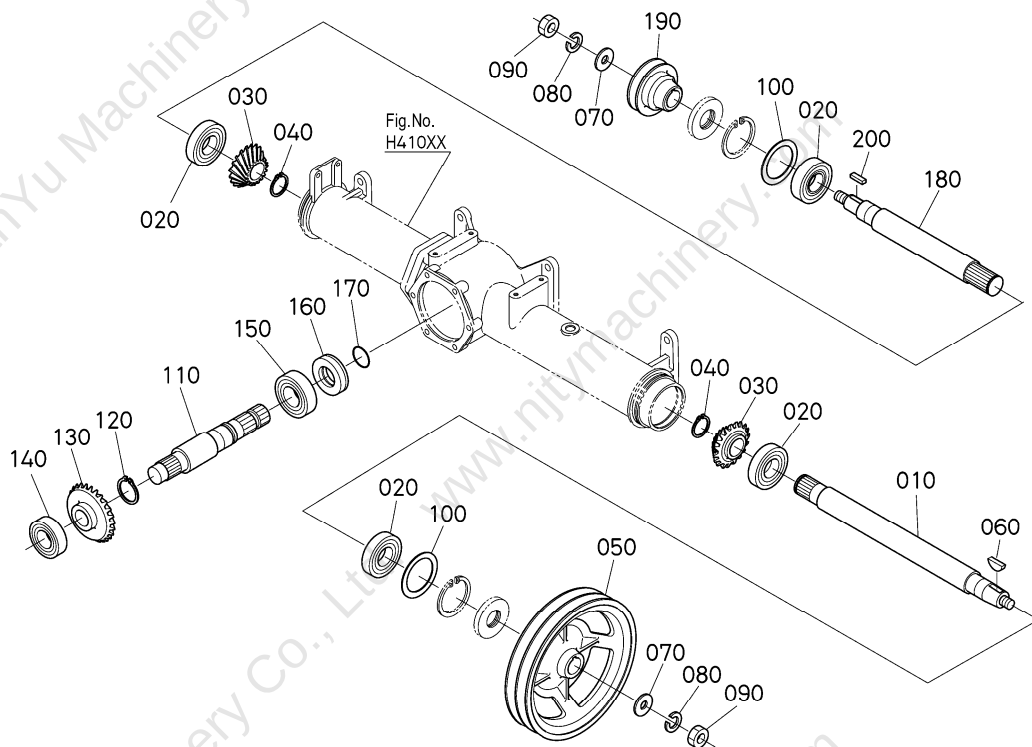 H41100 脱粒滚筒驱动轴 THRESHING CYLINDER DRIVE SHAFT



5T055-067-10


A:DC-68-THRESHING

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T051-6515-0	轴	SHAFT	1 ≤41136		
010	5T051-6515-2	轴	SHAFT	1 ≥41137	←	
020	TD030-1254-0	滚珠轴承	BEARING,BALL	4		
030	5T051-6521-0	锥齿轮	GEAR,BEVEL	2 ≤41363		19T
030	5T051-6521-2	锥齿轮	GEAR,BEVEL	2 ≥41364	←	19T
040	04612-00350	外卡环	CIR CLIP,EXTERNAL	2		
050	5T051-6517-0	V形皮带轮	V PULLEY	1		
060	5T020-1299-0	半圆键	KEY,WOODRUFF	1		
070	5H475-1226-2	平垫圈	WASHER,PLAIN	2		
080	04512-60160	弹簧垫圈	WASHER, SPRING	2		
090	02174-50160	螺帽	NUT	2		
100	5T051-6525-0	垫片 (648008)	SHIM	2		0.8mm
100	5T051-6524-0	垫片 (648010)	SHIM	2 ≤41589		1.0mm
100	5T051-6524-2	垫片	SHIM	2 ≥41590	←	1.0mm
100	5T051-6526-0	垫片 (648012)	SHIM	2		1.2mm
100	5T051-9113-0	垫片	SHIM	2		0.2mm
100	5T051-9127-0	垫片 (648001)	SHIM	2		0.1mm
110	5T051-6536-0	轴	SHAFT	1		
120	04612-00400	外卡环	CIR CLIP,EXTERNAL	1		
130	5T051-6522-0	锥齿轮	GEAR,BEVEL	1 ≤41363		29T
130	5T051-6522-2	锥齿轮	GEAR,BEVEL	1 ≥41364	←	29T
140	08101-06306	滚珠轴承	BEARING,BALL	1		
150	TC210-2628-0	滚珠轴承	BEARING,BALL	1		
160	09504-06211	油封	SEAL,OIL	1		
170	04816-50350	O型环	O RING	1		
180	5T051-5642-0	轴	SHAFT	1		
190	5T051-5643-0	V形皮带轮	V PULLEY	1		
200	05712-00730	导向键	KEY,FEATHER	1		

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

H42100

 THRESHING CYLINDER TENSION ARM



A: DC-68-THRESHING

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

H60000 脱粒机罩

 
THRESHING BOARD

015

040

030


035



A:DC-68-THRESHING


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 DUST CARRYING VALVE



$\longleftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

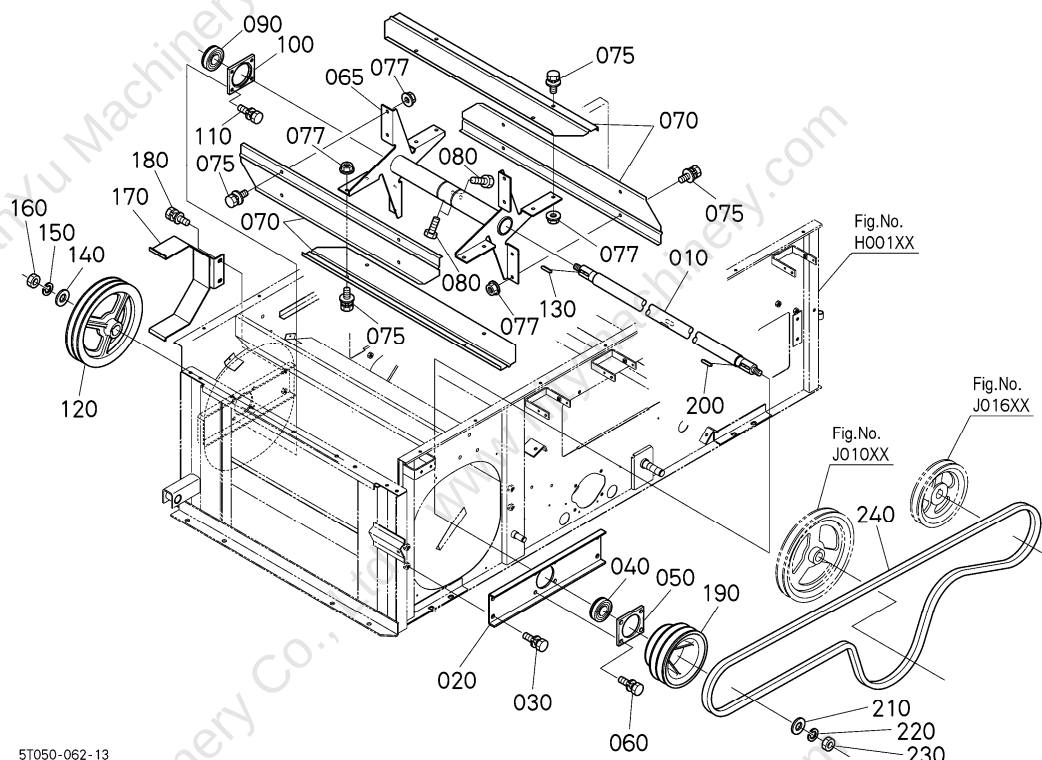 H80000 清选风机轴 WINNOWER SHAFT




5T050-062-13

A: DC-68-THRESHING

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T051-6611-2	轴	SHAFT	1		
020	5T051-6613-0	板. 清选风机	PLATE, WINNOWER	1		
030	01133-51020	螺栓	BOLT	4		
040	5T051-6621-0	轴承	BEARING	1		
050	5T051-6615-0	固定件	HOLDER	1		
060	01133-51025	螺栓	BOLT	4		
065	5T051-6623-0	臂. 清选风机	ARM, WINNOWER	1		
070	5T051-6619-3	刀片	BLADE	4		
075	01127-50820	螺栓	BOLT	16		
077	02751-50080	法兰螺母	NUT, FLANGE	16		
080	01173-51025	螺栓	BOLT	4		
090	5T051-6621-0	轴承	BEARING	1		
100	5T051-6622-0	固定件	HOLDER	1		
110	01133-51020	螺栓	BOLT	4		
120	5T051-6631-2	V形皮带轮	V PULLEY	1		
130	05712-00735	导向键	KEY, ENGINE PULLEY	1		
140	5H475-1226-2	平垫圈	WASHER, PLAIN	1		
150	04512-60160	弹簧垫圈	WASHER, SPRING	1		
160	02174-50160	螺帽	NUT	1		
170	5T051-6632-3	导向. 张紧器	GUIDE, THRESHER	1 <=41363		
170	5T051-6632-4	导向. 张紧器	GUIDE, THRESHER	1 >=41364	←	
180	01125-60820	螺栓	BOLT	2		
190	5T051-6633-0	V形皮带轮	V PULLEY	1 <=40255		新部件次序参见编号 190
190	5T051-6633-2	V形皮带轮	V PULLEY	1 >=40256	←	
191	05712-00735	导向键	KEY, ENGINE PULLEY	1		
200	5H475-1226-2	平垫圈	WASHER, PLAIN	1		
210	04512-60160	弹簧垫圈	WASHER, SPRING	1		
220	02174-50160	螺帽	NUT	1		
230	5T051-6635-0	V形皮带张紧轮	V BELT, THRESHER	1		SB104

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 摇轴(左)
ROCKING SHAFT (LEFT)




A: DC-68-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

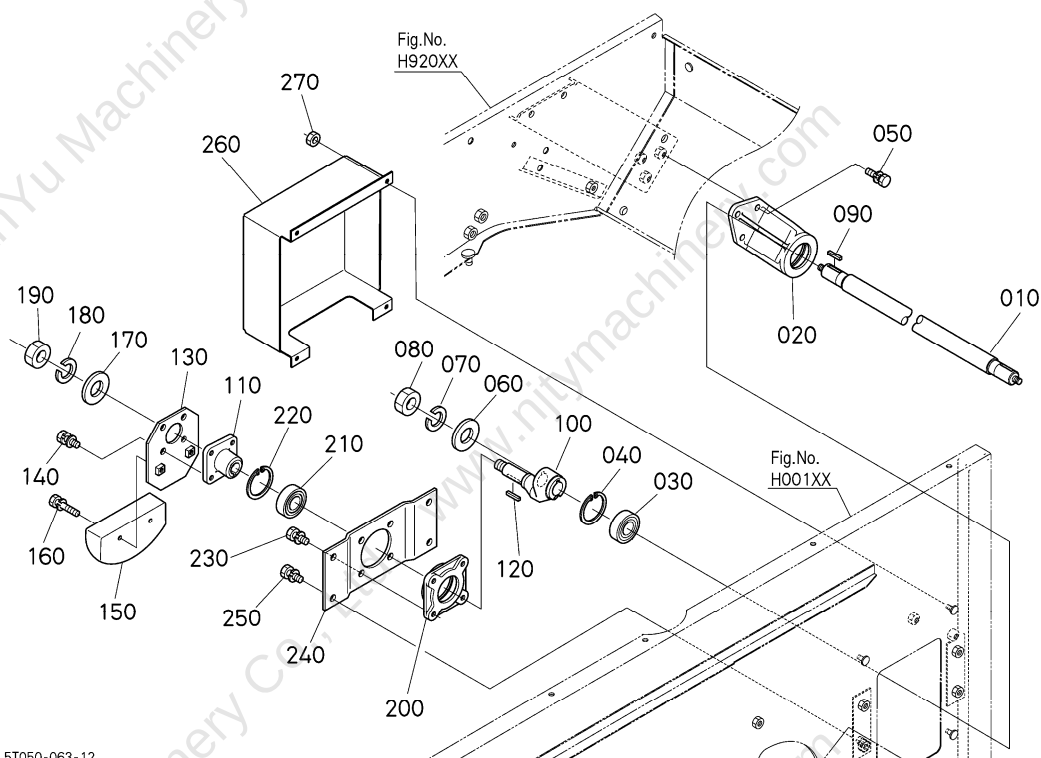 H80402 摇轴(右) ROCKING SHAFT (RIGHT)




5T050-063-12

A:DC-68-THRESHING

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T051-6911-0	摆动轴	SHAFT,ROCKING	1		
020	5T051-6919-0	臂, 摇动	ARM,ROCKING	1		
030	08141-06204	滚珠轴承	BEARING,BALL	1		
040	04611-00470	内卡环	CIR CLIP,INTERNAL	1		
050	01123-50825	螺栓	BOLT	3		
060	04015-60080	平垫圈	WASHER PLAIN	1		
070	04512-60080	弹簧垫圈	WASHER SPRING	1		
080	02114-50080	螺帽	NUT	1		
090	05712-00525	导向键	KEY,FEATHER	2		
100	5T051-6912-0	摆动轴	SHAFT,ROCKING	1		
110	5K101-2616-0	摆动皮带轮	BOSS,ROCKING PULLEY	1		
120	05712-00525	导向键	KEY,FEATHER	1		
130	5T051-6917-0	重量板	PLATE,WEIGHT	1		
140	01125-60820	螺栓	BOLT	4		
150	5T051-6918-0	平衡块	WEIGHT,SIEVE BALANCE	1		
160	01123-50845	螺栓	BOLT	2		
170	04013-60120	平垫圈	WASHER, PLAIN	1		
180	04512-60120	弹簧垫圈	WASHER, SPRING	1		
190	02174-50120	螺帽	NUT	1		
200	5T051-6915-0	轴承箱	CASE,BEARING	1		
210	08141-06303	滚珠轴承	BEARING,BALL	1		
220	04611-00470	内卡环	CIR CLIP,INTERNAL	1		
230	01123-50820	螺栓	BOLT	4		
240	5T051-6941-0	板(摆动)	PLATE,ROCKING	1		
250	01123-50820	螺栓	BOLT	4		
260	5T051-7243-0	摆动罩壳(右)	COVER,ROCKING RH	1		
270	02021-50060	螺帽	NUT	4		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 
ROCKING TENSION ARM



SB66

$\leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

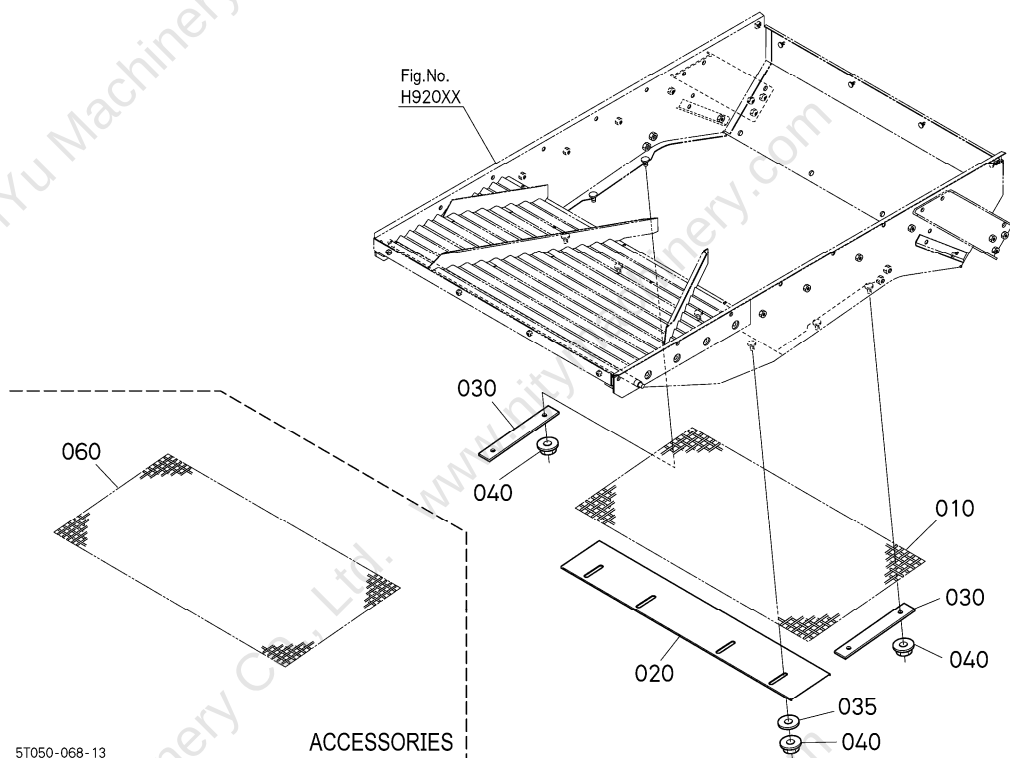 
H90300



A:DC-68-THRESHING

[illegible]

 篩箱
SIEVE CASE



A: DC-68-THRESHING

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

筛箱布
SIEVE CASE CLOTH



A: DC-68-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
FIRST HORIZONTAL AUGER SHAFT



A: DC-68-THRESHING

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

谷粒锥形齿轮箱
FIRST BEVEL GEAR CASE



A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

J01200

FIRST VERTICAL AUGER SHAFT


 


Fig.No.
H001XX

Fig.No.
J011XX

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

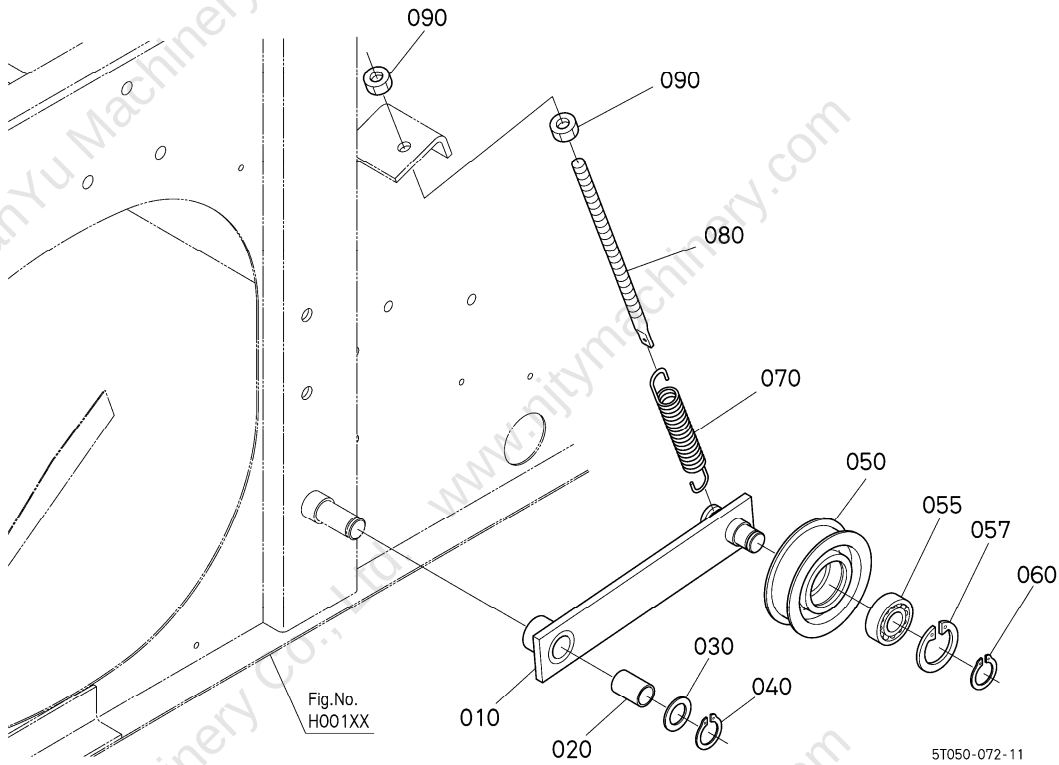 谷粒输送张紧臂
FIRST TENSION ARM




A:DC-68-THRESHING

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

 再筛选螺旋轴 SECOND HORIZONTAL AUGER SHAFT




A:DC-68-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 再筛选驱动链条箱 SECOND DRIVE CHAIN CASE



A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
再筛选驱动箱 SECOND CASE



A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


再筛选锥齿轮箱 SECOND BEVEL GEAR CASE



A: DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

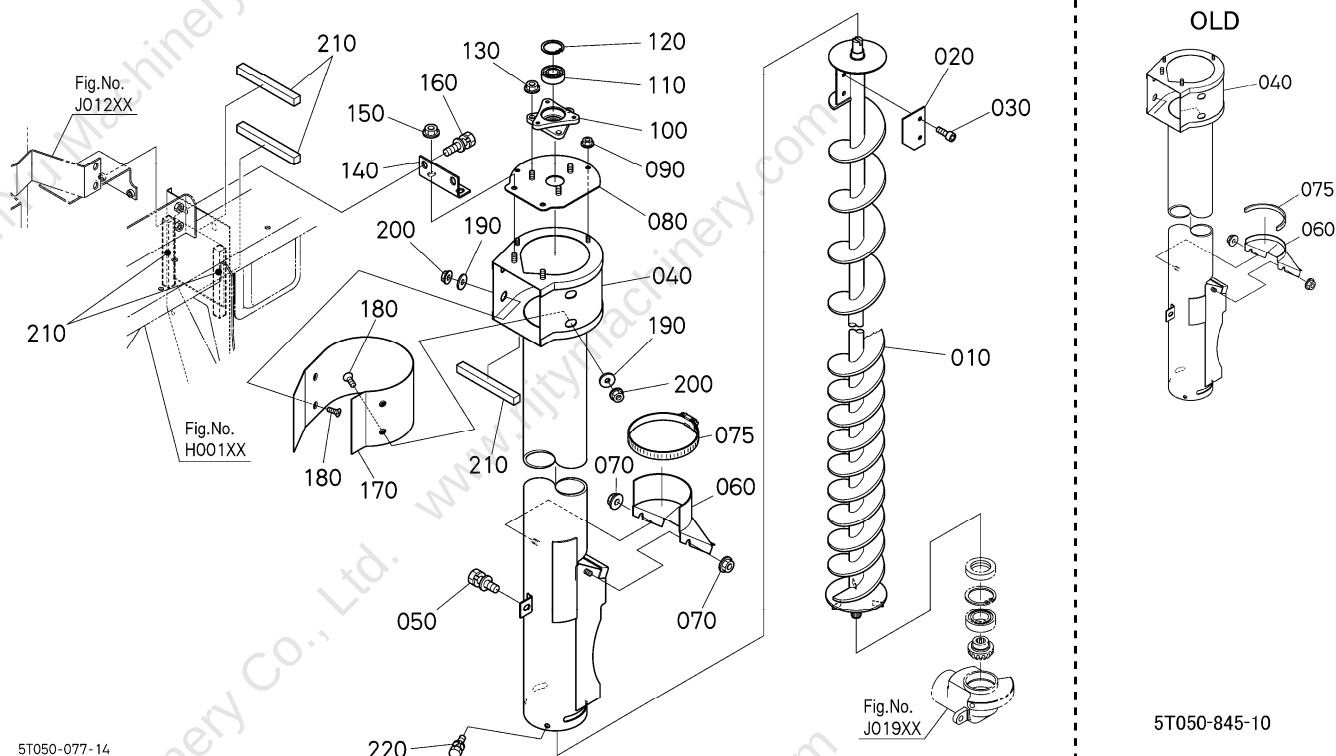 J02000 再筛选垂直螺旋杆 SECOND VERTICAL AUGER SHAFT



A: DC-68-THRESHING

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T051-6851-3	轴. 螺杆	SHAFT, SCREW	1		
020	5T051-6862-0	刀片	BLADE	1		
030	5K101-5113-0	内六角螺栓	BOLT, HEX-SOC-HD	2		
040	5T051-6852-2	垂直螺杆箱	CASE, VERTICAL SCREW	<=40291	←	
040	5T051-6852-4	垂直螺杆箱	CASE, VERTICAL SCREW	>=40292	←	
040	5T051-6852-5	垂直螺杆箱	CASE, VERTICAL SCREW	>=40552	←	
040	5T051-6852-6	垂直螺杆箱	CASE, VERTICAL SCREW	>=40865	←	新部件次序参见编号 040
040	5T051-6852-7	垂直螺杆箱	CASE, VERTICAL SCREW	>=41137	←	
050	01125-60820	螺栓	BOLT	1		
060	5T051-6858-2	垂直箱罩	COVER, VERTICAL CASE	<=40291		
060	5T051-6858-3	垂直箱罩	COVER, VERTICAL CASE	>=40292	←	
070	02121-50080	螺帽	NUT	2		
075	5T051-6866-2	垫片	GASKET	<=40291		
075	5T018-9136-0	软管夹	CLAMP, HOSE	>=40292	≠	
080	5T051-6853-0	板	PLATE	1		
090	02021-50060	螺帽	NUT	2		
100	5K101-3154-0	轴承支架	HOLDER, BEARING	1		
110	08141-06203	滚珠轴承	BEARING, BALL	1		
120	04611-00400	内卡环	CIR CLIP, INTERNAL	1		
130	02763-50080	法兰螺母	NUT, FLANGE	3		
140	5T051-6855-0	固定件	STAY	1		
150	02121-50080	螺帽	NUT	2		
160	01125-60820	螺栓	BOLT	2		
170	5T051-6865-0	衬垫	LINER	1		
180	03016-50616	CSK-HD 螺钉	SCREW, CSK-HEAD	4		
190	04015-60060	平垫圈	WASHER, PLAIN	4		
200	02021-50060	螺帽	NUT	4		
210	5K101-3191-0	垫片	GASKET	5		
220	01125-60816	螺栓	BOLT	3		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

开闭盖
OPEN-CLOSE COVER



A:DC-68-THRESHING

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\ncong$ 新旧部件不可替换; $\longleftarrow$ 新部件可替换旧部件; $\longrightarrow$ 旧部件可替换新部件

J20801

脱粒封面(前/后)
THRESHING COVER

机器序列号;A:<=41589



A:DC-68-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

J20802

脱粒封面(前/后)

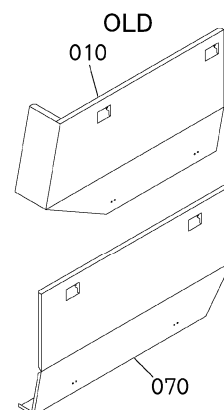 
机器序列号;A: >=41590



A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


脱粒封面(一侧)
THRESHING COVER (SIDE)



A: DC-68-THRESHING

$\Leftrightarrow$ 新旧部件可替换: $\nRightarrow$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

 J80000 标签(脱粒)
LABEL (THRESHER)



A:DC-68-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

K00300 净化管 CLEANING PORT

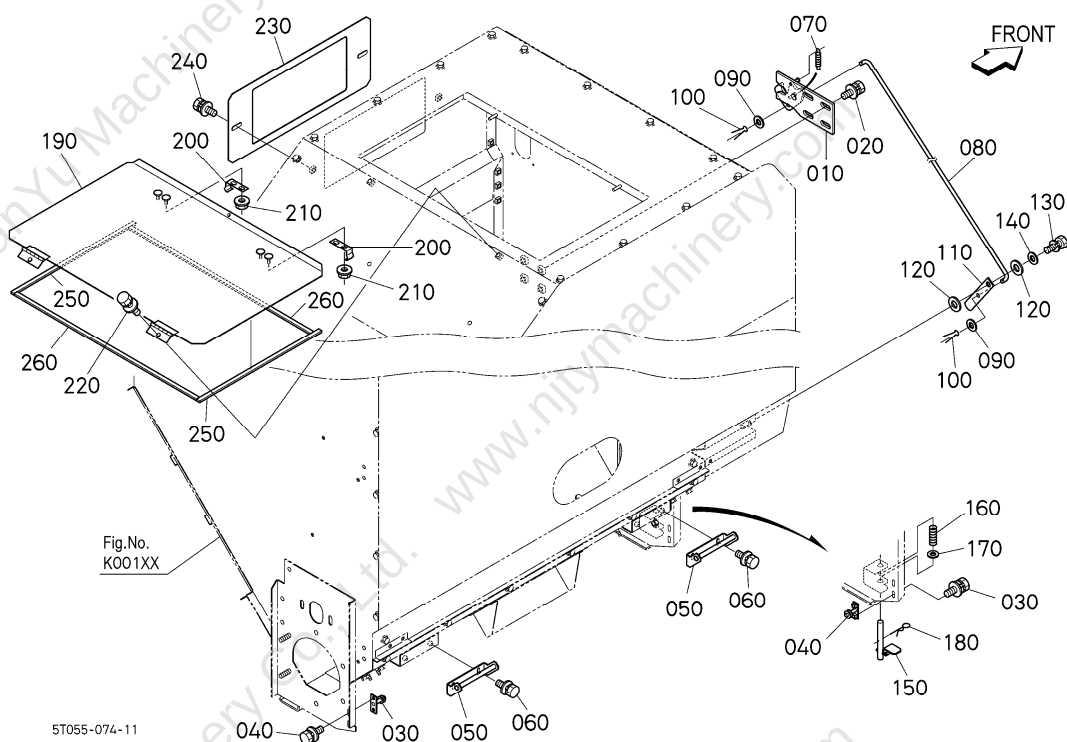 


Fig.No.
K001XX

A:DC-68-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

K00600 油罐锁 TANK LOCK




A:DC-68-GRAIN TANK

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T055-7825-2	固定夹 (粮箱开合)	CLAMP	1		
020	01135-61025	螺栓	BOLT	4		
030	5T055-7917-0	支架 (侧盖板, 1)	STAY,SIDE COVER	2		
040	01027-50616	螺栓	BOLT	4		
050	5T055-7918-0	侧盖板 2 支架	STAY,SIDE COVER	2		
060	01027-50616	螺栓	BOLT	4		
070	5T055-7879-0	弹簧 (箱开闭)	SPRING	1		
080	5T055-7827-0	杆	ROD,OPEN/CLOSE	1		
090	04012-50080	平垫圈	WASHER, PLAIN	2		
100	05511-50215	开口销	PIN, SPLIT	2		
110	5T055-7828-0	手柄 (箱打开)	LEVER,TANK OPEN	1		
120	04013-60120	平垫圈	WASHER, PLAIN	2		
130	01023-50614	螺栓	BOLT	1		
140	04015-60060	平垫圈	WASHER, PLAIN	1		
150	5T055-7887-0	销钉 (粮箱前)	PIN,TANK FRONT	1		
160	5T055-7888-0	弹簧 (压缩)	SPRING,COMPRESSION	1		
170	04013-60120	平垫圈	WASHER, PLAIN	1		
180	05525-51200	B 形销	PIN,SNAP	1		
190	5T055-7869-3	盖板 (箱上)	COVER,TANK UPPER	1		
200	5T055-7882-0	夹子 (开关盖板)	CLAMP	2		
210	02751-50060	法兰螺母	NUT,FLANGE	4		
220	01125-60816	螺栓	BOLT	2		
230	5T055-7875-2	侧板 (吐出口导板)	PLATE	1		
240	01125-60816	螺栓	BOLT	2		
250	5T055-8125-0	箱体前密封, 1	SEAL,TANK UPPER	2		
260	5T055-8126-0	密封 (2, 箱上)	SEAL,TANK UPPER	2		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 
罐(后板)
TANK COVER REAR



A:DC-68-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

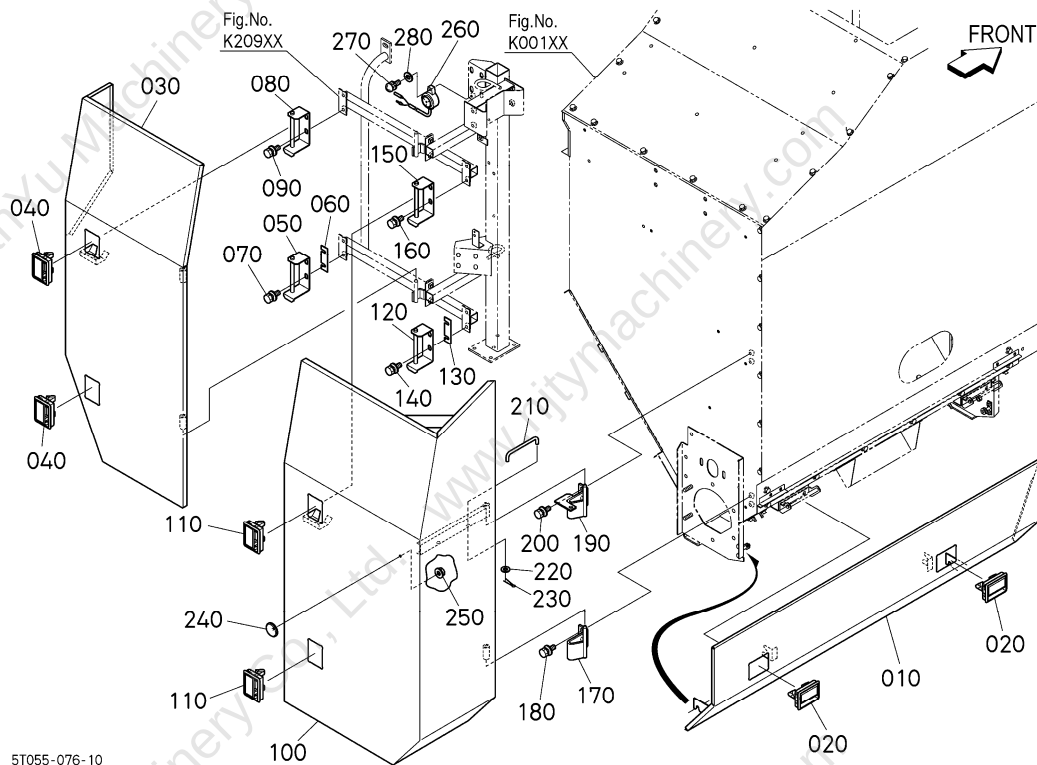 K10500 罐(下部) TANK COVER UNDER




A:DC-68-GRAIN TANK

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T055-7963-2	盖板(箱右下)	COVER,TANK RH	1		
020	5K005-6142-0	锁定手柄总成	ASSY HANDLE,LOCK	2		
030	5T055-7977-2	粮箱后盖板, 1	COVER,TANK REAR	1		
040	5K005-6142-0	锁定手柄总成	ASSY HANDLE,LOCK	2		
050	5T055-7983-3	盖板组装支架	STAY,COVER	1		
060	5T055-7988-0	垫片(盖板组装)	SHIM	1		
070	01127-50820	螺栓	BOLT	2		
080	5T055-7983-3	盖板组装支架	STAY,COVER	1		
090	01127-50820	螺栓	BOLT	2		
100	5T055-7981-3	后盖板粮箱, 2	COVER,TANK REAR	1		
110	5K005-6142-0	锁定手柄总成	ASSY HANDLE,LOCK	2		
120	5T055-7983-3	盖板组装支架	STAY,COVER	1		
130	5T055-7988-0	垫片(盖板组装)	SHIM	1		
140	01127-50820	螺栓	BOLT	2		
150	5T055-7983-3	盖板组装支架	STAY,COVER	1		
160	01127-50820	螺栓	BOLT	2		
170	5T055-7984-0	托架(铰链, 1)	BRACKET	1		
180	01125-60820	螺栓	BOLT	2		
190	5T055-7985-0	托架(铰链, 2)	BRACKET	1		
200	01125-60820	螺栓	BOLT	2		
210	5T055-7986-0	杆(R, 盖板)	ROD,COVER	1		
220	04012-50080	平垫圈	WASHER, PLAIN	1		
230	05511-51615	开口销	PIN,SPLIT	1		
240	5T051-7214-0	放射挡	REFLECTOR	1		
250	02021-50050	螺帽	NUT	1		
260	32751-9686-0	蜂鸣器	BUZZER,BACK	1		
270	03024-50525	带垫圈的螺钉	SCREW,WITH WASHER	1		
280	04013-60050	平垫圈	WASHER,PLAIN	1		

← 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 
罐(驱动器箱)
TANK DRIVE CASE



A:DC-68-GRAIN TANK

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

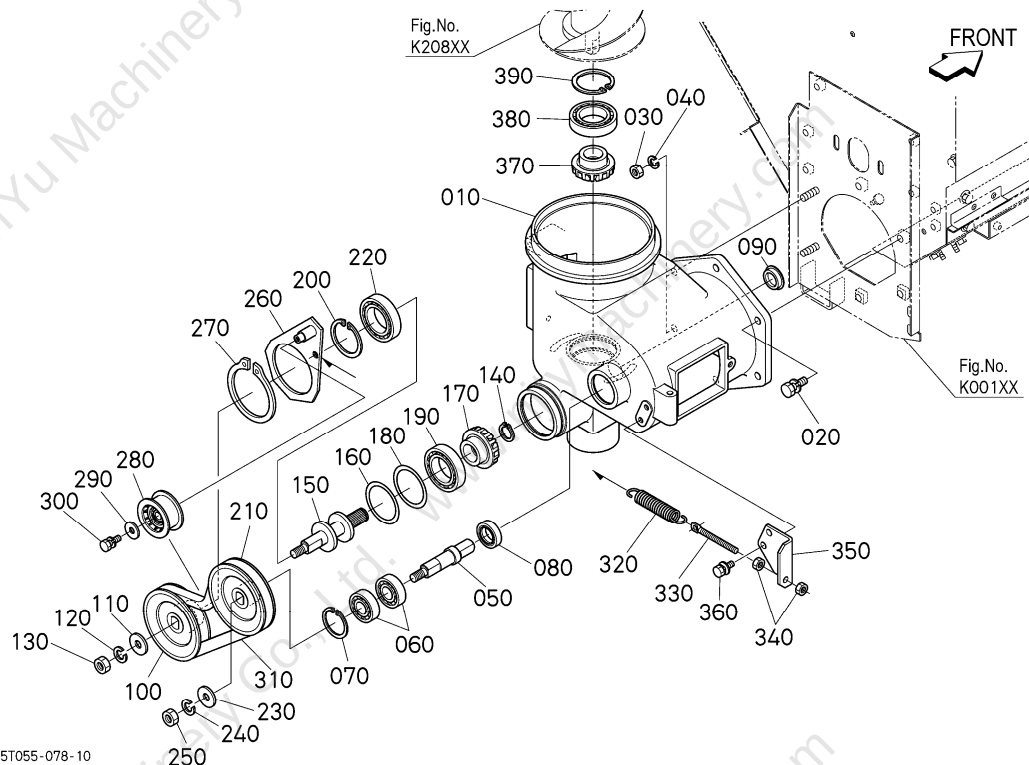 K20000 机(箱 1) UNLOADER CASE 1



A:DC-68-GRAIN TANK

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T055-7851-2	箱 (排粮管 1)	CASE,UNLOADER	1		
020	01133-51030	螺栓	BOLT	4		
030	02118-50100	螺帽	NUT	2		
040	04512-60100	弹簧垫圈	WASHER, SPRING	2		
050	5T055-7852-0	轴 (G, 底螺旋)	SHAFT,SCREW	1		
060	08141-06204	滚珠轴承	BEARING,BALL	2		
070	04611-00470	内卡环	CIR CLIP,INTERNAL	1		
080	09500-25407	油封	SEAL,OIL	1		
090	5H401-4828-0	盖 (30-7-36)	CAP	1		
100	5T055-7854-0	V 滑轮 (B113-1)	PULLEY,V	1		
110	04015-60120	平垫圈	WASHER,PLAIN	1		
120	04512-60120	弹簧垫圈	WASHER, SPRING	1		
130	02174-50120	螺帽	NUT	1		
140	04612-00200	外卡环	CIR CLIP,EXTERNAL	1		
150	5T055-7856-2	轴 (2, 伞齿轮)	SHAFT,BEVEL	1		
150	5T055-7856-3	伞齿轮轴 2	SHAFT	<=41073 >=41074	←	
160	5T055-7968-0	垫片	SHIM	1		
170	5T055-7924-0	伞齿轮	GEAR,BEVEL	1		15T
180	5T055-7969-0	垫片	SHIM	1		
190	PR001-1212-0	弹簧 (K, 6008-4)	BEARING	1		
200	04611-00680	内卡环	CIR CLIP,INTERNAL	1		
210	5T055-7871-0	V 滑轮 (B113-2)	PULLEY,V	1		
220	PR001-1212-0	弹簧 (K, 6008-4)	BEARING	1		
230	04015-60120	平垫圈	WASHER,PLAIN	1		
240	04512-60120	弹簧垫圈	WASHER, SPRING	1		
250	02174-50120	螺帽	NUT	1		
260	5T055-7863-0	张紧臂	ARM,BELT TENSION	1		
270	04612-00800	外部挡圈	CIR CLIP,EXTERNAL	1		
280	57783-3123-0	皮带轮	PULLEY,TENSION	1		
290	04015-60060	平垫圈	WASHER, PLAIN	1		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

机(箱 1)
UNLOADER CASE 1



A:DC-68-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

K20100 罐(螺丝轴) TANK SCREW SHAFT

Fig. No.
K200XX

010

0

5T055-079-10



FRONT



030

050

04/

030

010

020

Fig.No.
K180XX

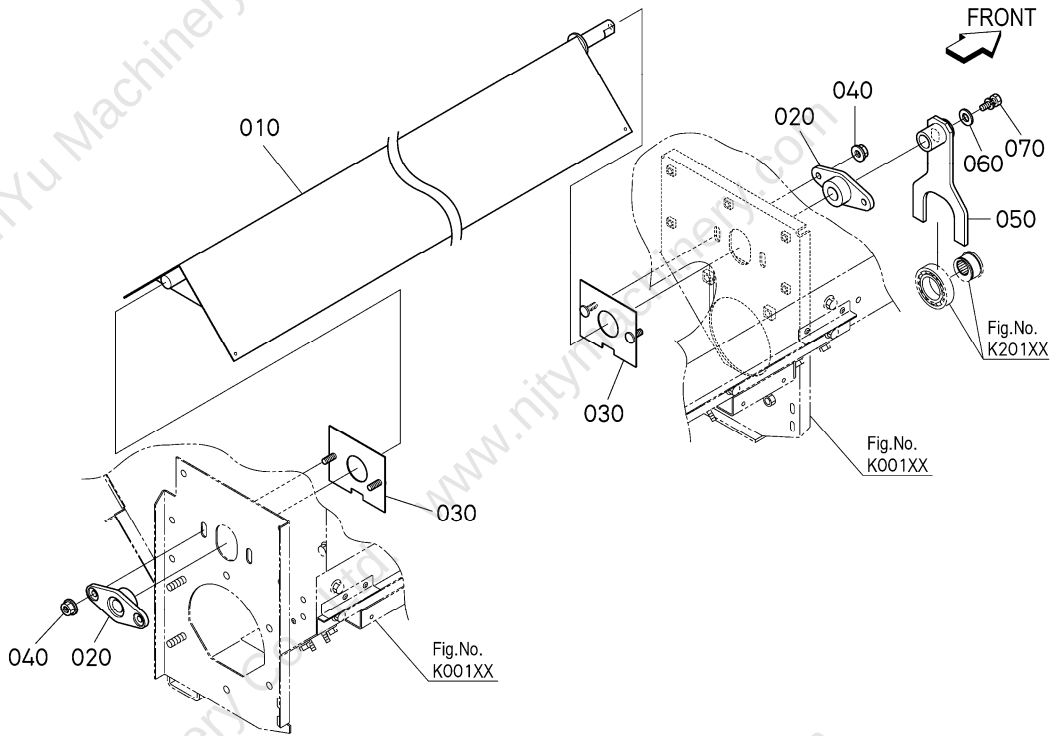 
5T055-079-10

A:DC-68-GRAIN TANK

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\nleftrightarrow$ 新旧部件不可替换; $\longleftarrow$ 新部件可替换旧部件; $\longrightarrow$ 旧部件可替换新部件

K20200 尾气快门
EXHAUST SHUTTER



5T055-080-10

A:DC-68-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

发动机
UNLOADER MOTOR



A:DC-68-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

K20700

UNLOADER COVER 1




Fig.No.
K200XX

互换
I.C.

[illegible]

167

 机 UNLOADER




A:DC-68-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


 
安装框架 MOUNTING FRAME



A:DC-68-GRAIN TANK

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

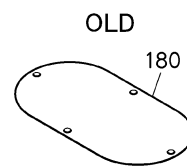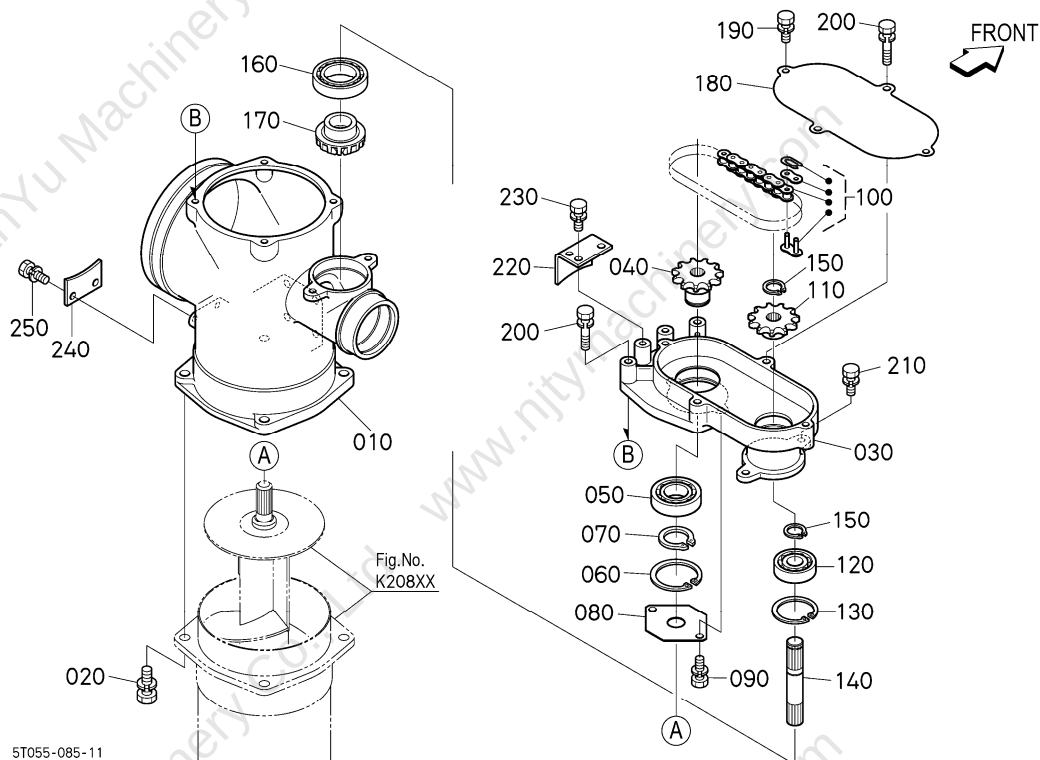  K23000 机(箱 2) UNLOADER CASE 2




5T055-808-10

A:DC-68-GRAIN TANK

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T055-7921-2	箱(排粮管 2)	CASE,UNLOADER	1		
020	01123-51230	螺栓	BOLT	4		
030	5T055-8171-0	箱(链条, 1)	CASE,CHAIN	1		
040	5T055-8172-0	链轮(11T, 1)	SPROCKET	1		
040	5T055-8172-2	链轮, 11T, 1	SPROCKET	≤40291 ≥40292	←	
050	PR001-1213-0	轴承	BEARING	1		
060	04611-00620	内卡环	CIR CLIP,INTERNAL	1		
070	04612-00300	外卡环	CIR CLIP,EXTERNAL	1		
080	5T055-7923-0	盖板(链条箱 1, 下)	COVER,CHAIN CASE	1		
090	01123-60816	螺栓	BOLT	2		
100	5T055-8173-0	链条(50X28 节)	CHAIN,LINK	1		
110	5T055-8174-0	链轮(11T, 2)	SPROCKET	≤40291		
110	5T055-8174-2	链轮, 11T, 2	SPROCKET	≥40292	←	
120	08141-06304	球轴承	BEARING,BALL	1		
130	04611-00520	内卡环	CIR CLIP,INTERNAL	1		
140	5T055-8177-0	轴(传达, 2)	SHAFT	1		
150	04612-00200	外卡环	CIR CLIP,EXTERNAL	2		
160	PR001-1212-0	弹簧(K, 6008-4)	BEARING	1		
170	5T055-7924-0	伞齿轮	GEAR,BEVEL	1		15T
180	5T055-8176-2	链条箱盖板, 1	COVER,CHAIN CASE	≤40255		
180	5T055-8176-3	盖板(链条箱 1)	COVER,CHAIN CASE	≥40256	←	
190	01123-60816	螺栓	BOLT	2		
200	01123-50855	螺栓	BOLT	4		
210	01123-50820	螺栓	BOLT	2		
220	5T055-7925-2	止动板, 1	PLATE,STOPPER	1		
230	01123-60816	螺栓	BOLT	2		
240	5T055-7933-0	板(止动块, 2)	PLATE,STOPPER	1		
250	01123-60816	螺栓	BOLT	2		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

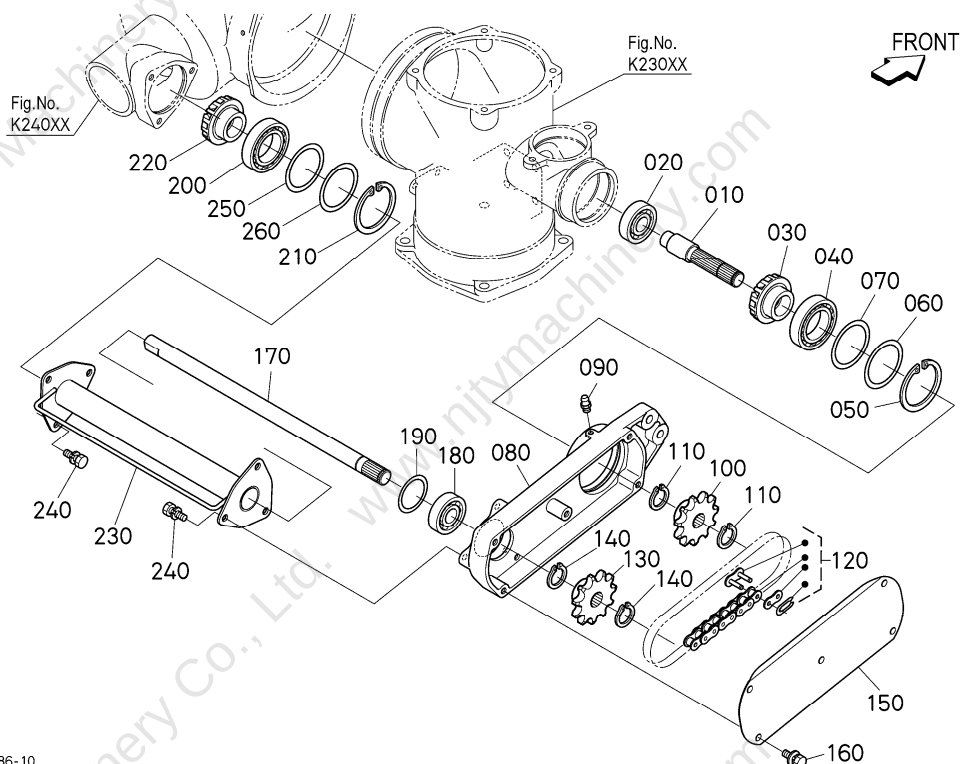 K23400 传动轴 TRANSMISSION SHAFT




5T055-086-10

A:DC-68-GRAIN TANK

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T055-8175-0	轴 (传达, 1)	SHAFT	1		
020	08141-06304	球轴承	BEARING,BALL	1		
030	5T055-7924-0	伞齿轮	GEAR,BEVEL	1	15T	
040	PR001-1212-0	弹簧 (K, 6008-4)	BEARING	1		
050	04611-00680	内卡环	CIR CLIP,INTERNAL	1		
060	5T055-7968-0	垫片	SHIM	1		
070	5T055-7969-0	垫片	SHIM	1		
080	5T055-8178-0	箱 (链条, 2)	CASE,CHAIN	1		
090	06613-10675	黄油嘴	NIPPLE,GREASE	1		
100	5T055-8174-0	链轮 (11T, 2)	SPROCKET	1		
100	5T055-8174-2	链轮, 11T, 2	SPROCKET	1	←	
110	04612-00200	外卡环	CIR CLIP,EXTERNAL	2		
120	5T055-8179-0	链条 (50X34 节)	CHAIN,LINK	1		
130	5T055-8174-0	链轮 (11T, 2)	SPROCKET	1		
130	5T055-8174-2	链轮, 11T, 2	SPROCKET	1	←	
140	04612-00200	外卡环	CIR CLIP,EXTERNAL	2		
150	5T055-8181-2	盖板 (链条箱 2)	COVER,CHAIN CASE	1		
160	01125-60820	螺栓	BOLT	5		
170	5T055-8182-2	轴 (传送, 3)	SHAFT	1		
180	08141-06304	球轴承	BEARING,BALL	1		
190	5T055-8186-0	垫片	SHIM	1		
200	PR001-1212-0	弹簧 (K, 6008-4)	BEARING	1		
210	04611-00680	内卡环	CIR CLIP,INTERNAL	1		
220	5T055-7858-0	伞齿轮 (15)	GEAR,BEVEL	1	15T	
230	5T055-8183-0	管	PIPE	1		
240	01123-50820	螺栓	BOLT	6		
250	5T055-7968-0	垫片	SHIM	1		
260	5T055-7969-0	垫片	SHIM	1		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 
机(箱 3) UNLOADER CASE 3



A:DC-68-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
机体 UNLOADER BODY



A:DC-68-GRAIN TANK

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件


 
K30300 机(固定件) UNLOADER STAY



A:DC-68-GRAIN TANK

$\leftrightarrow$ 新旧部件可替换; $\nleftrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

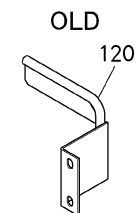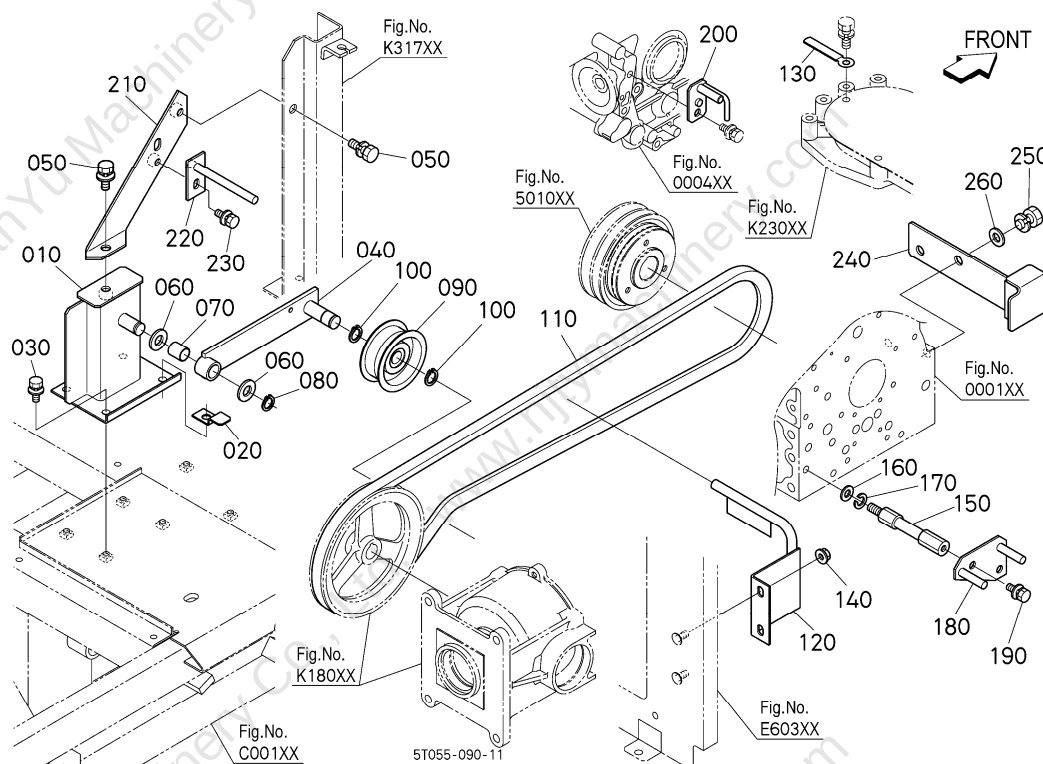  K31500 罐(驱动器) TANK DRIVE




5T055-809-10

A:DC-68-GRAIN TANK

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T055-8111-2	箱体前支架	STAY,TANK FRONT	1		
020	5T055-8119-0	金属块 (皮带压制)	RETAINER,BELT	1		
030	01125-60820	螺栓	BOLT	4		
040	5T055-8113-3	张紧臂 (箱)	ARM,TENSION	1		
050	01135-61020	螺栓	BOLT	2		
060	04011-60160	平垫圈	WASHER,PLAIN	2		
070	08511-01620	衬套	BUSH	1		
080	04612-00160	外卡环	CIR CLIP,EXTERNAL	1		
090	5H601-3312-0	张紧皮带轮	PULLEY,TENSION	1		
100	04612-00170	外卡环	CIR CLIP,EXTERNAL	2		
110	5T055-8117-0	V 皮带 (特, B70, G)	BELT,V	1		SB70
120	5T055-8121-2	定位架 (1, 离合器)	RETAINER,CLUTCH	1		
120	5T055-8121-3	定位架 (1, 离合器)	RETAINER,CLUTCH	1		
130	5H400-2591-0	线夹	CLAMP,CORD (1)	1		
140	02751-50080	法兰螺母	NUT,FLANGE	2		
150	5T055-8122-0	轴	SHAFT	2		
160	04013-60100	平垫圈	WASHER, PLAIN	2		
170	04512-60100	弹簧垫圈	WASHER, SPRING	2		
180	5T055-8123-0	定位架 (2, 离合器)	RETAINER,CLUTCH	1		
190	01125-60820	螺栓	BOLT	2		
200	5T055-8124-3	继电器 (3, 离合器)	RETAINER,CLUTCH	1		
210	5T055-8137-0	支架 (托架支撑)	STAY	1		
220	5T055-8132-0	定位架	RETAINER,CLUTCH	1		
230	01125-60816	螺栓	BOLT	1		
240	5T055-8139-2	护圈 (5, 侧离合器)	RETAINER,SIDE CLUTCH	1		
250	01133-51220	螺栓	BOLT	2		
260	04013-60120	平垫圈	WASHER, PLAIN	2		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

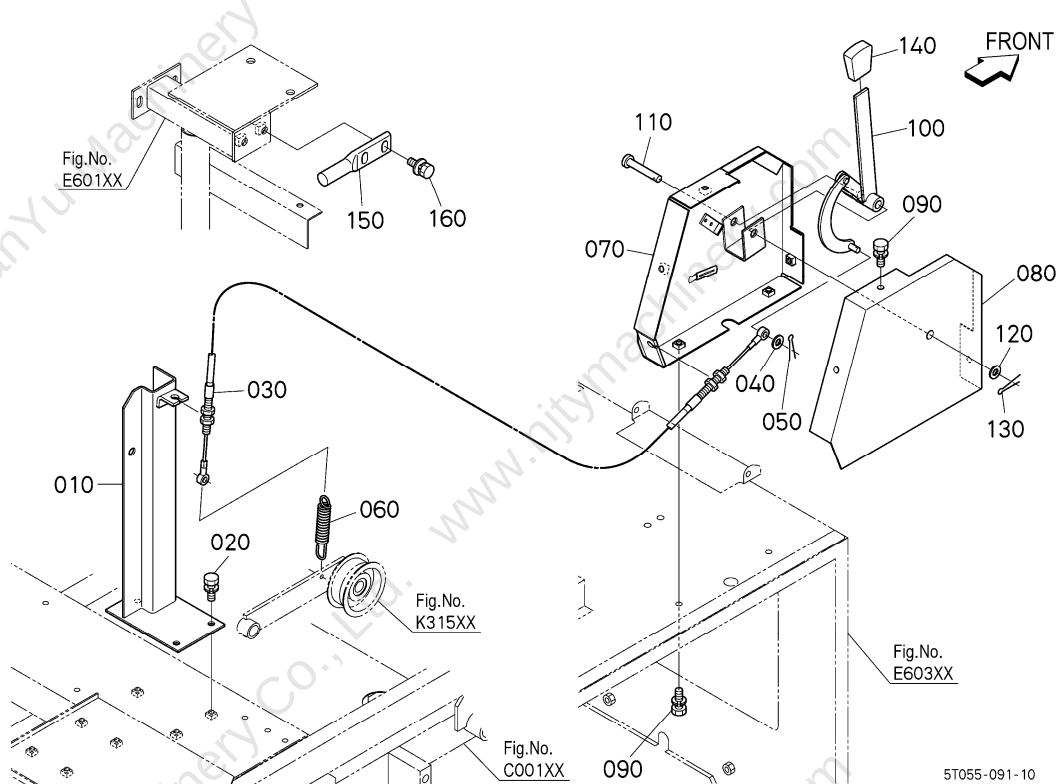 K31700 罐(离合器)
TANK CLUTCH




A:DC-68-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


K80000

 标签(储粮罐)



A:DC-68-GRAIN TANK

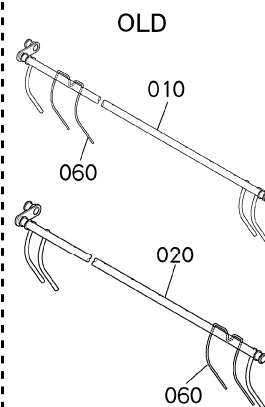 ↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件



5T050-136-14

Fig.No.
U004XX

[illegible]

盘(中心轴)
REEL CENTER SHAFT



A:DC-68-REEL/FEEDER

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\leftarrow$ 新部件可替换旧部件: $\rightarrow$ 旧部件可替换新部件

盘(调节器) REEL ADJUSTMENT



A:DC-68-REEL/FEEDER


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

U01200 盘(架) REEL FRAME

This technical drawing is an exploded view of a Reel Frame (U01200). It illustrates the assembly of various components, including structural beams (010, 020), rollers (040, 050), and fasteners (060, 070, 080). The diagram shows how these parts are joined to form the complete reel frame structure. Key features include a main horizontal beam (010) with a vertical support (040) and a roller (050) assembly. The roller assembly includes a roller body (050) and a mounting bracket (020). The fasteners (060, 070, 080) are shown in their respective positions relative to the components they secure.

Fig.No.
U200XX

 5T050-095-14

[illegible]

181

 
张紧臂
TENSION ARM



A: DC-68-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

丰收框架 HARVEST FRAME




A: DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 HARVEST FRAME COVER




A:DC-68-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

U21000 螺旋鼓
AUGER DRUM

 Fig.No.
U200XX



A:DC-68-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

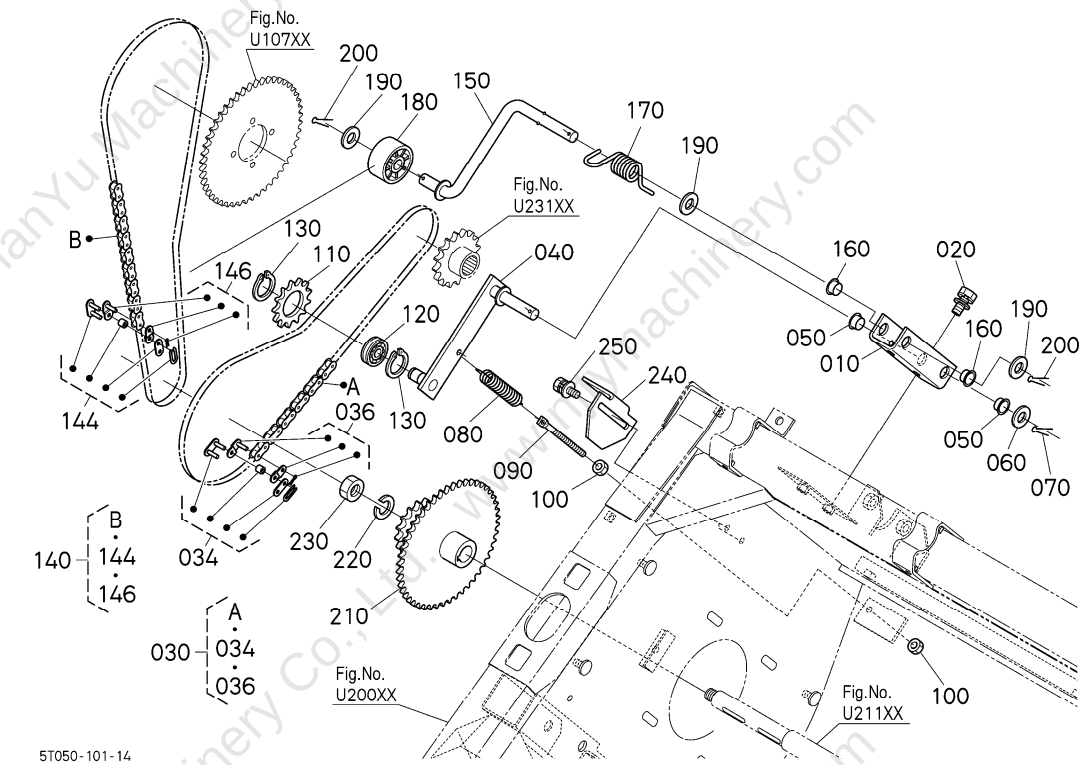 
U21100 螺旋滚筒轴
AUGER DRUM SHAFT



A:DC-68-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

U21200 螺旋鼓链
AUGER DRUM CHAIN



A: DC-68-REEL/FEEDER

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T051-4921-2	张紧基架	BASE,TENSION	1		
020	01135-61020	螺栓	BOLT	2		
030	5T051-4930-0	螺旋链条组件	ASSY CHAIN,AUGER	1		
034	5T051-4645-0	链条支架	HOLDER,CHAIN	1		
036	5T051-4931-0	过度接头	JOINT,CHAIN OFF SET	2		
040	5T051-4933-0	张紧组件. 螺旋	TENSION ARM,AUGER	1		
050	T2050-2416-0	衬套	BUSH	2		
060	04011-60160	平垫圈	WASHER,PLAIN	1		
070	05511-50430	开口销	PIN,SPLIT	1		
080	5T051-4642-0	弹簧	SPRING	1		
090	5K101-1635-0	调整螺栓	BOLT,TENSION	1		
100	02114-50080	螺帽	NUT	2		
110	5T055-4636-0	键轮. 张紧	SPROCKET,TENSION	1		
120	5T051-4637-0	轴承	BEARING	1		
130	04612-00170	外卡环	CIR CLIP,EXTERNAL	2		
140	5T051-4940-0	铰钻链条组件	ASSY CHAIN,COUNTER	1		
144	5T051-4941-0	链条支架	HOLDER,CHAIN	1		
146	5T051-4942-0	过度接头	JOINT,CHAIN OFF SET	1		
150	5T051-4943-0	张紧臂	ARM,TENSION	1		
160	T2050-2416-0	衬套	BUSH	2		
170	5T051-4944-0	弹簧. 铰钻	SPRING,COUNTER	1		
180	5T051-4935-0	张力滚筒	ROLLER,TENSION	1		
190	04011-60160	平垫圈	WASHER,PLAIN	3		
200	05511-50430	开口销	PIN,SPLIT	2		
210	5T051-5228-2	键轮	SPROCKET	1		
220	04512-60180	弹簧垫圈	WASHER,SPRING	1		
230	02172-50180	小型六角螺母	NUT	1		
240	5T051-4945-0	挡块	STOPPER	1		
250	01127-50820	螺栓	BOLT	2		

← 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

丰收传动轴 HARVEST DRIVE SHAFT



A:DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

切割机叶片臂 CUTTING BLADE DRIVE ARM

 


A:DC-68-REEL/FEEDER

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

切割机传动轴 CUTTING BLADE DRIVE SHAFT




A: DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

U40001 切刀 CUTTER

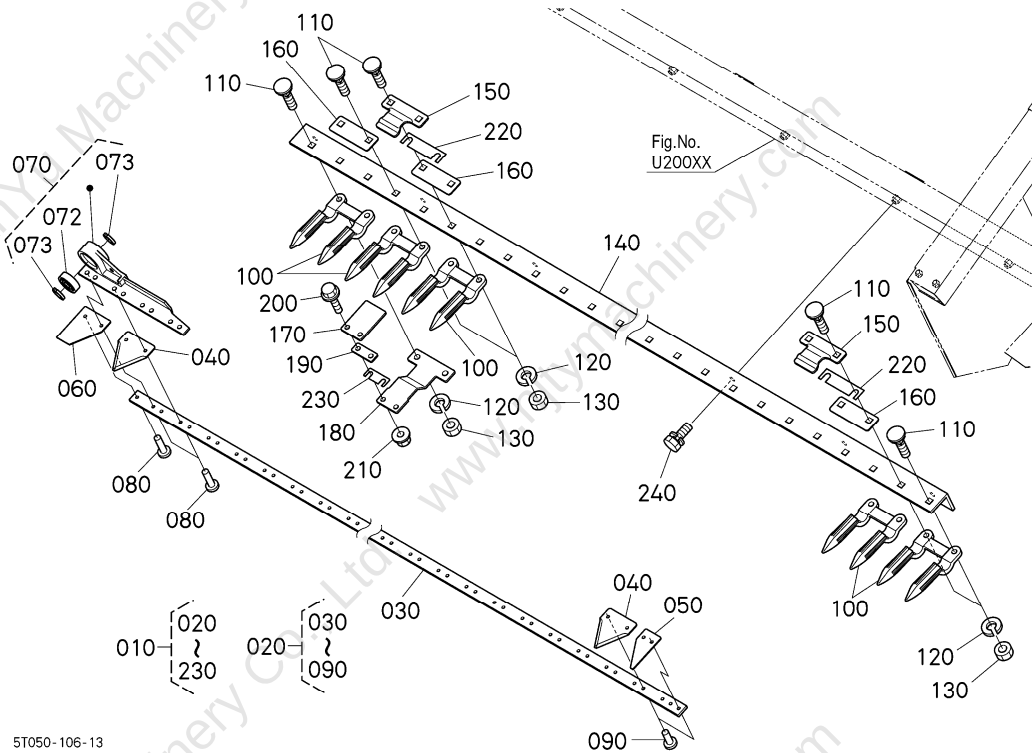 机器序列号:A:≤41145




A:DC-68-REEL/FEEDER

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T055-5130-0	割刀组件	ASSY CUTTING BLADE	1		新部件次序参见编号 图 U40002 参考 010
020	5T055-5131-0	割刀组件	COMP.CUTTING BLADE	1		
030	5T051-5132-0	定刀板	KNIFE BAR	1		
040	5T055-5133-0	刀片.切割	BLADE,CUTTING	25		
050	5T051-5134-0	板	PLATE	1		
060	5T051-5135-0	板	PLATE	1		
070	5T051-5136-2	刀尖	HEAD,KNIFE	1		
072	08141-06302	滚珠轴承	BEARING,BALL	1		
073	04611-00420	内卡环	RING, SNAP	2		
080	5T051-5137-0	钉	RIVET	8		
090	5T051-5138-0	钉	RIVET	46		
100	5T051-5141-0	刀横板保护装置	GUARD,KNIFE	14		
110	5T051-5142-0	弯颈.螺栓	BOLT,SQ.NECK	28		
120	04512-60100	弹簧垫圈	WASHER, SPRING	28		
130	02114-50100	螺母	NUT	28		
140	5T051-5143-0	底座	BASE	1		
150	5T051-5144-0	剪辑.刀	CLIP,KNIFE	5		
160	5T051-5145-0	指导.夹片	GUIDE,SLIDE	6		
170	5T051-5146-0	削刀板(右)	KNIFE CLIP,RH	1		
180	5T051-5147-0	支撑件	SUPPORT	1		
190	5T051-5148-0	隔片	SPACER	1		
200	01754-50825	凸缘螺栓	BOLT,FLANGE	2		
210	02751-50080	法兰螺母	NUT,FLANGE	2		
220	5T051-5149-0	垫片	SHIM	5		
230	5T051-5151-0	隔片	SPACER	1		
240	01133-51025	螺栓	BOLT	8		

← 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

U40002 切刀 CUTTER

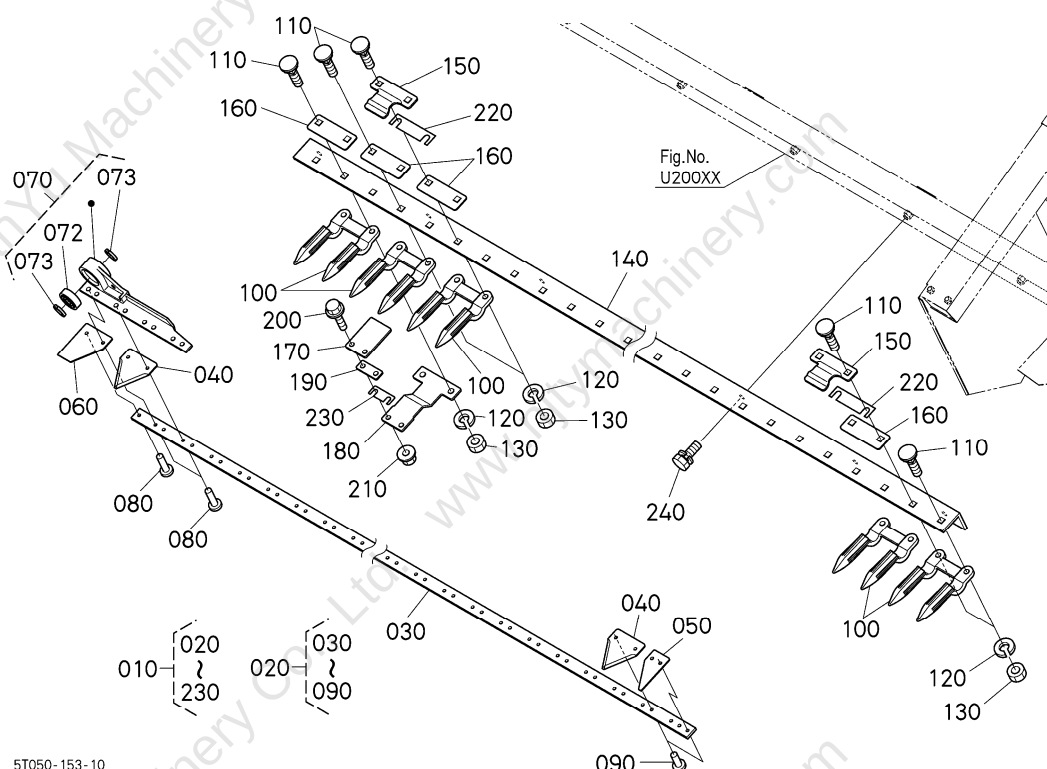 机器序列号:A: >=41146



5T050-153-10


A: DC-68-REEL/FEEDER

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	5T018-5130-0	割刀组件	ASSY CUTTING BLADE	1		
020	5T055-5131-0	割刀组件	COMP.CUTTING BLADE	1		
030	5T051-5132-0	定刀板	KNIFE BAR	1		
040	5T055-5133-0	刀片. 切割	BLADE,CUTTING	25		
050	5T051-5134-0	板	PLATE	1		
060	5T051-5135-0	板	PLATE	1		
070	5T051-5136-2	刀尖	HEAD,KNIFE	1		
072	08141-06302	滚珠轴承	BEARING,BALL	1		
073	04611-00420	内卡环	RING, SNAP	2		
080	5T051-5137-0	钉	RIVET	8		
090	5T051-5138-0	钉	RIVET	46		
100	5T051-5141-0	刀横板保护装置	GUARD,KNIFE	14		
110	5T051-5142-0	弯颈. 螺栓	BOLT,SQ.NECK	28		
120	04512-60100	弹簧垫圈	WASHER, SPRING	28		
130	02114-50100	螺母	NUT	28		
140	5T051-5143-0	底座	BASE	1		
150	5T051-5144-0	剪辑. 刀	CLIP,KNIFE	5		
160	5T051-5145-0	指导. 夹片	GUIDE,SLIDE	7		
170	5T051-5146-0	削刀板(右)	KNIFE CLIP,RH	1		
180	5T051-5147-0	支撑件	SUPPORT	1		
190	5T051-5148-0	隔片	SPACER	1		
200	01754-50825	凸缘螺栓	BOLT,FLANGE	2		
210	02751-50080	法兰螺母	NUT,FLANGE	2		
220	5T051-5149-0	垫片	SHIM	5		
230	5T051-5151-0	隔片	SPACER	1		
240	01133-51025	螺栓	BOLT	8		

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

**U40200 分压器(左)
DIVIDER (LEFT)**

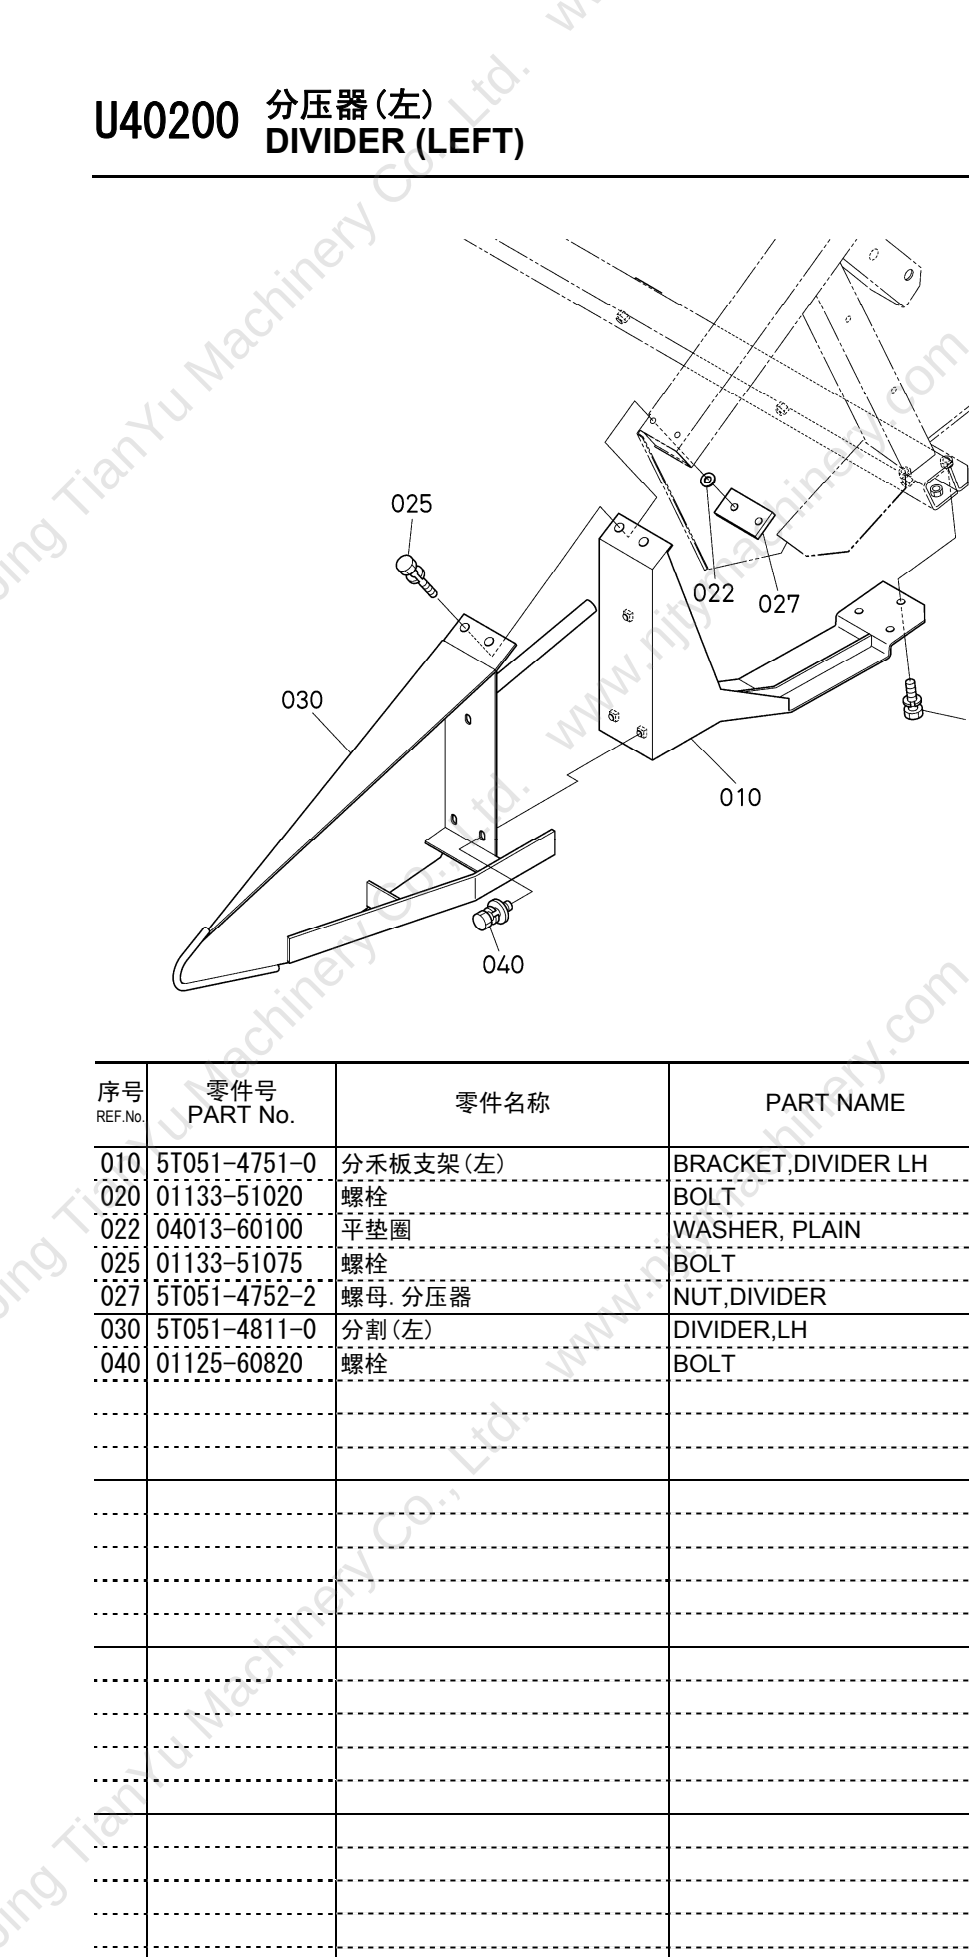 025



5T050-107-16


Fig.No.
U200XX

A:DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

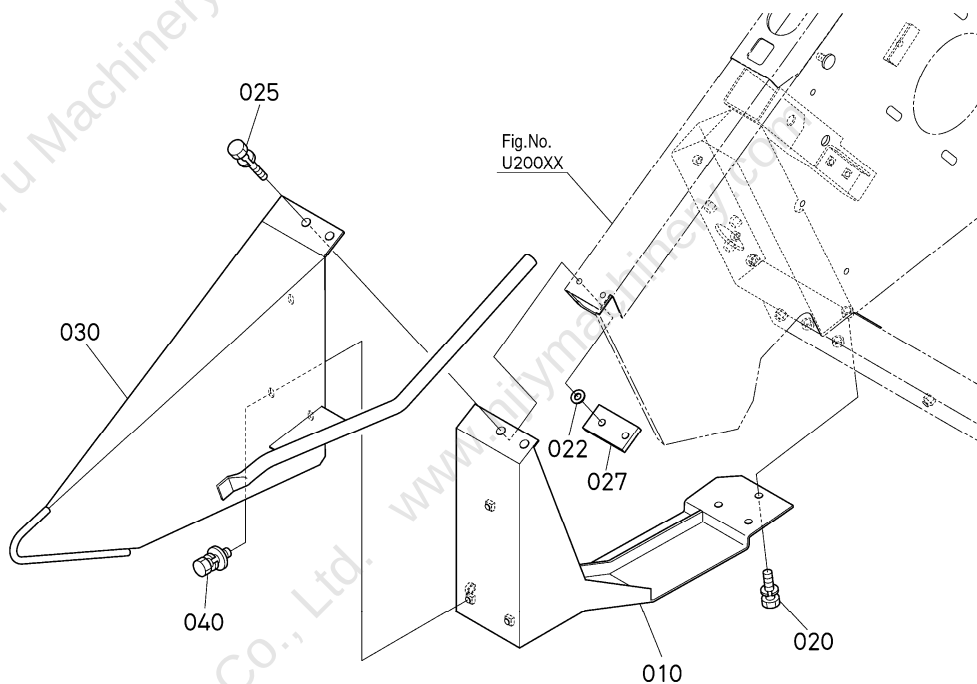 U40300 分压器(右)
DIVIDER (RIGHT)




5T050-108-15

A:DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 REEL ELEVATOR CYLINDER



A: DC-68-REEL/FEEDER

[illegible]


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

U75000 馈线框架 FEEDER FRAME

This technical diagram illustrates the exploded view of the U75000 Feeder Frame assembly. The main component is the Feeder Frame (010), which is shown in a perspective view. Various sub-components are labeled with part numbers and shown in their relative positions for assembly:

- 010**: The main Feeder Frame body.
- 040**: A bracket or support arm.
- 050**: A cylindrical component, likely a roller or guide.
- 060**: A small pin or screw.
- 070**: A larger bracket or support arm.
- 080**: A small pin or screw.
- 090**: A small pin or screw.

The diagram also shows a detailed view of the frame's corner structure, highlighting the assembly of components 040, 050, 060, 070, and 080. The background features a faint watermark reading 'lanYu Machinery Co., Ltd.' and 'www.lanyu.com'.

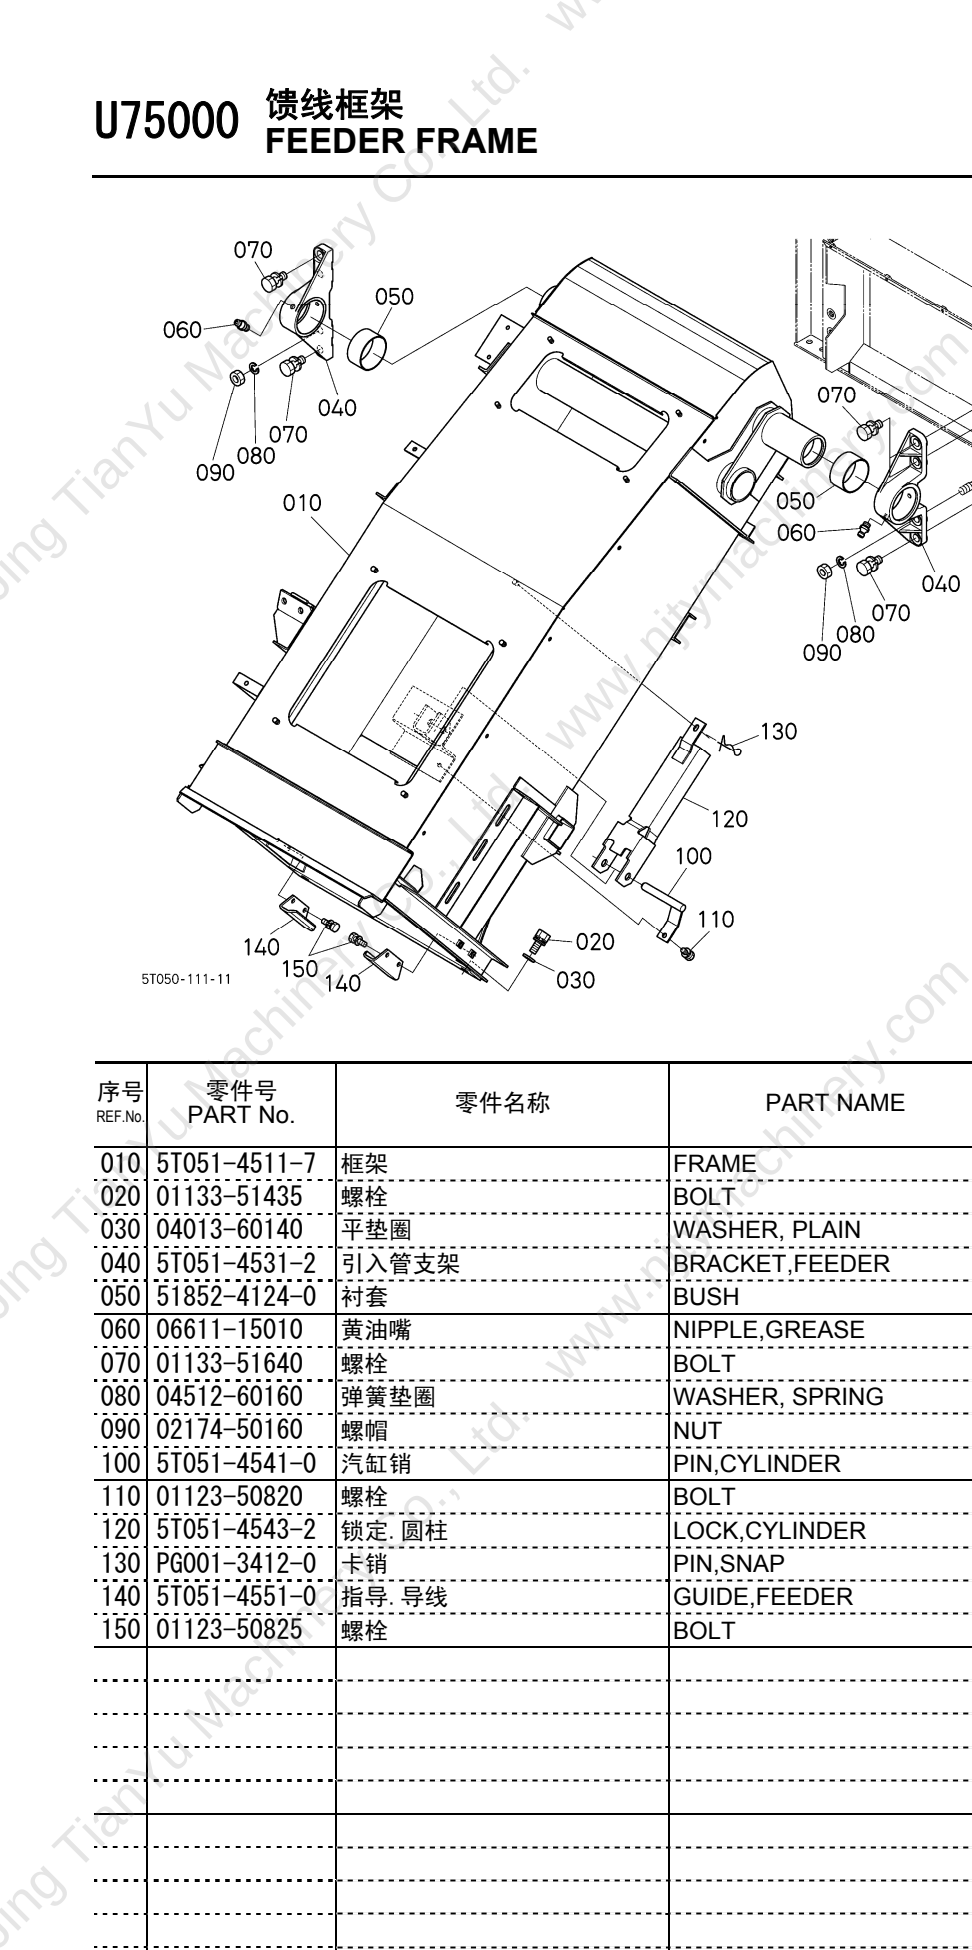 

A:DC-68-REEL/FEEDER

[illegible]


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

U75100 馈线罩 FEEDER COVER

This technical diagram illustrates the exploded view of the U75100 Feeder Cover assembly. The main components and their assembly points are as follows:

- 040**: A screw used to secure the **030** plate to the **020** bracket.
- 030**: A rectangular plate that fits into the **020** bracket.
- 020**: A bracket that houses the **010** component and is secured by a screw **020** (labeled with a circled 'A').
- 010**: A small rectangular component, possibly a switch or sensor, mounted on the bracket.
- 100**: A small plate or bracket that is secured to the main assembly with a screw **110**.
- 120**: A long, narrow cover plate that is secured to the main assembly with a screw **130**.

The diagram shows the relative positions and alignment of these parts for assembly. A watermark for 'lanYu Machinery Co., Ltd.' is visible across the image.

 [illegible]

198

馈线风扇罩 FEEDER FAN COVER



Fig.No.
U750XX


A:DC-68-REEL/FEEDER

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

U76000 馈线传动轴 FEEDER DRIVE

This exploded view diagram illustrates the components of the U76000 Feeder Drive. The assembly is shown in a disassembled state, revealing the following parts and their assembly sequence from right to left:

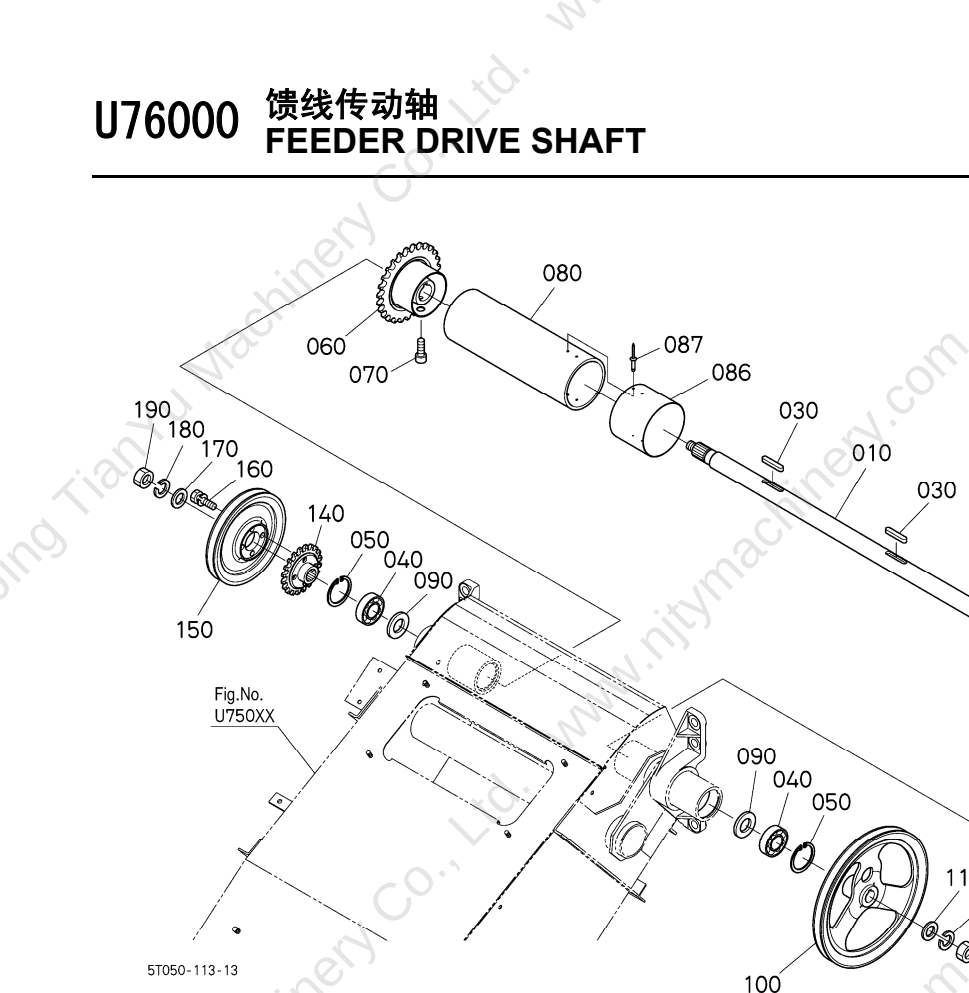 - 060**: A large gear mounted on a shaft, secured with a lock nut **070**.
- 140**: A smaller gear that meshes with the large gear (060).
- 050**: A spacer or bushing between the gears.
- 040**: A bushing or spacer.
- 090**: A bushing or spacer.
- 150**: A large pulley or wheel that receives the drive from the gear train.
- 160**: A bolt or screw used to secure the pulley.
- 170**: A washer or spacer.
- 180**: A bushing or spacer.
- 190**: A bolt or screw used to secure the pulley assembly.




A:DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

喂线传动链 FEEDER DRIVE CHAIN

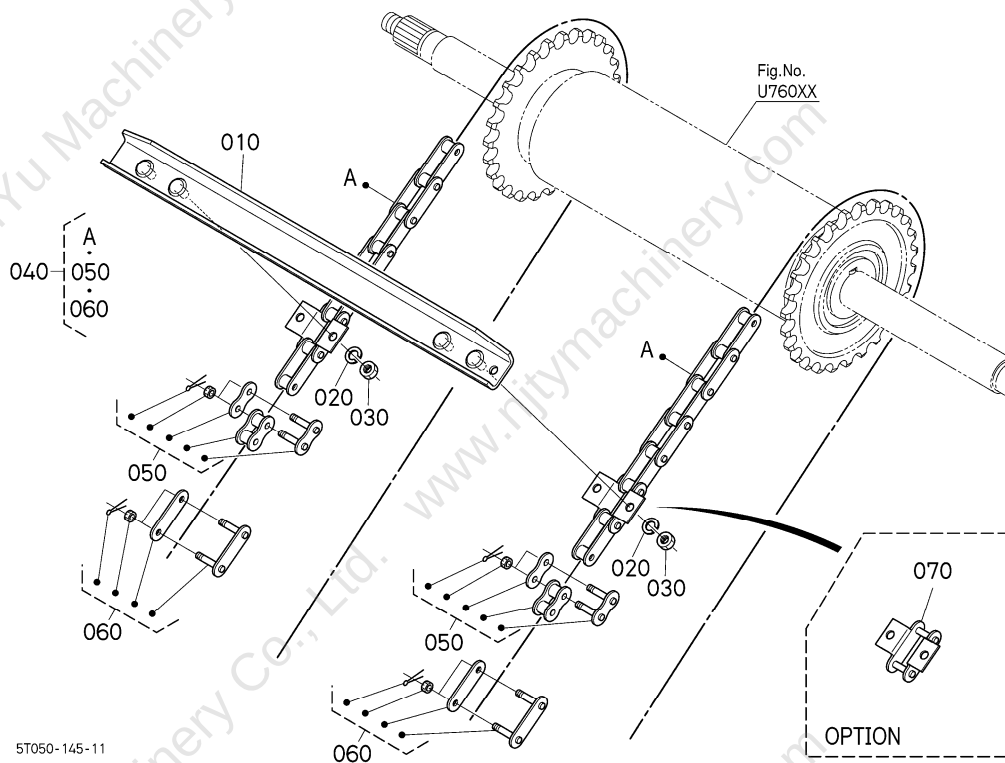 机器序列号:A:<=40098




A: DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

FEEDER DRIVE CHAIN

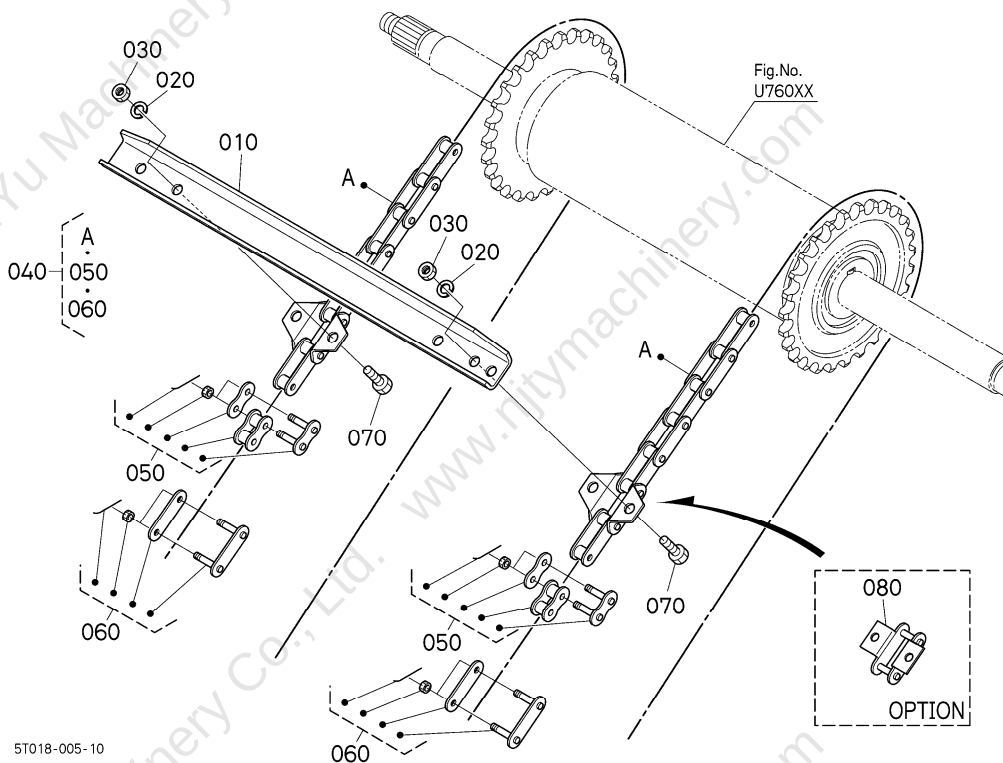 机器序列号:A:≥40099




A: DC-68-REEL/FEEDER

[illegible]

$\longleftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

喂线传动链 FEEDER DRIVE CHAIN

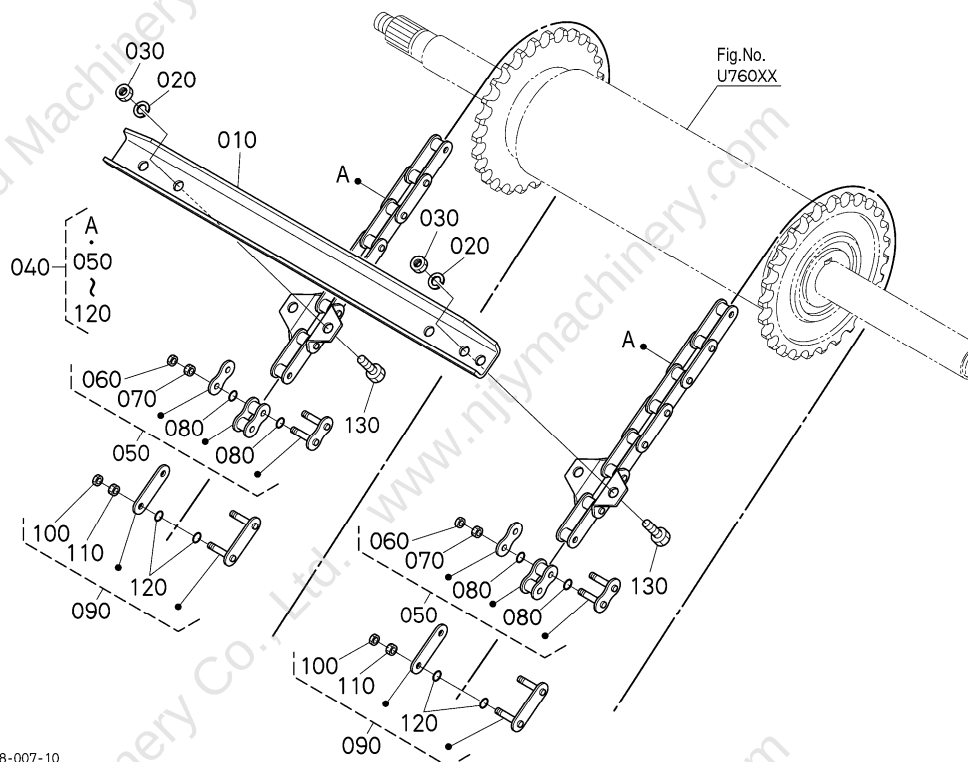 机器序列号:A:≥40256



5T018-007-10

A:DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

馈线链 FEEDER CHAIN



A: DC-68-REEL/FEEDER

$\Leftrightarrow$ 新旧部件可替换: $\neq$ 新旧部件不可替换: $\Leftarrow$ 新部件可替换旧部件: $\Rightarrow$ 旧部件可替换新部件

标签(盘/馈线)
LABEL (REEL/FEEDER)



A:DC-68-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
HH164-3243-0	6	010	01023-50618	1	170	01123-50822	5	035	01125-50818	134	050
HHTA0-5990-0	73	170		22	120		25	030	01125-50825	149	100
K7001-3962-0	72	120		67	090	01123-50825	9	070		152	060
K7561-1118-0	72	160	01023-50620	4	200		30	020		153	060
	73	100		15	150		136	040		169	020
K7561-3312-0	29	015		17	130		137	050		169	100
PG001-3411-0	109	030		22	150		143	020		183	015
	112	150	01023-50622	1	190		144	140	01125-50840	111	080
PG001-3412-0	101	070	01023-50630	106	100		186	210	01125-50845	75	040
	105	120	01023-60650	8	030		197	150	01125-50870	75	050
PG001-3412-0	197	130	01025-50612	46	020	01123-50828	9	080	01125-51030	176	160
PG001-6218-0	126	060		46	040		22	090	01125-60816	38	210
PG001-8134-0	165	060		100	130	01123-50830	27	110		39	130
PM808-6821-0	46	060		110	060	01123-50835	21	160		44	040
PP501-7529-0	81	040		140	040		67	110		55	090
PR001-1212-0	162	190		173	070		67	110		75	030
	162	220		173	220	01123-50840	67	180		110	090
	163	380	01025-50616	48	020	01123-50845	136	150		110	110
	170	160		111	160		137	160		112	070
	171	040		118	120	01123-50855	170	200		113	050
PR001-1212-0	171	200	01025-50616	119	120	01123-50860	178	050	01125-60816	123	020
	172	060		121	020		180	110		126	120
PR001-1213-0	170	050		121	040	01123-50870	33	020		134	080
RA238-5140-0	33	010		152	080	01123-51020	186	060		140	115
	34	010		153	080	01123-51025	78	040		143	140
T1060-3681-0	14	160		154	030		78	100		148	040
T1065-1561-0	41	120		154	060		130	060		150	220
T1065-1566-0	41	230		154	090	01123-51030	70	070		151	110
T1270-1568-2	40	010		154	120		130	120		152	020
	41	010		173	180	01123-51230	170	020		152	100
T1275-1563-0	41	130	01025-50616	173	200	01123-51230	173	020	01125-60816	156	030
T2050-2416-0	187	050	01025-50620	49	020	01123-51235	65	110		156	050
	187	160		49	050	01123-51245	190	020		158	220
T2250-8461-0	98	060		49	070	01123-60814	14	140		158	240
	99	060		118	150	01123-60816	3	020		159	020
TA043-6404-0	41	090	01025-50630	20	090		44	050		161	170
TC210-2628-0	131	150	01025-50640	115	060		58	070		163	360
TC220-5840-0	71	170	01027-50616	111	170		74	040		173	150
	72	070		158	040		95	330		175	230
TD030-1254-0	131	020		158	060		100	050		183	070
YW030-0010-0	74	010	01123-50818	10	080	01123-60816	140	060	01125-60816	184	026
YW038-0010-0	79	010		10	140		140	110		198	110
YW413-0010-2	75	010		97	090		141	040		198	130
01023-50610	19	070	01123-50820	21	060		141	110	01125-60820	31	100
	35	080		68	180		141	190		35	050
01023-50612	57	030		79	020		142	090		35	060
	59	060		103	100		142	110		38	230
	59	170		106	150		142	180		39	170
	141	070		136	190		146	070		51	020
	151	030		136	210		165	070		61	120
01023-50614	28	080	01123-50820	137	230	01123-60816	167	090	01125-60820	69	020
	74	060		137	250		170	090		76	040
	107	090		141	030		170	190		90	020
	108	090		165	070		170	230		90	060
	158	130		166	020		170	250		105	060
	163	300		170	210		172	170		105	140
	174	080		171	240		176	020		108	170
01023-50616	16	160		182	050		176	090		108	260
	47	150		185	150	01125-50616	55	080		110	020
	147	150		197	110	01125-50818	134	020		110	040

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
01125-60820	111	020	01127-50825	169	030	01155-50840	188	070	01952-00614	148	070
	111	050	01127-50830	40	040	01155-50855	185	080	01952-00825	141	080
	111	090	01133-51016	179	030		185	120	02012-60060	203	060
	111	190		179	080	01155-50870	31	110		203	100
	111	210	01133-51020	13	050		82	100	02014-50060	111	140
	112	020		135	030	01156-50818	202	070		203	070
	113	080		135	110	01173-51020	202	070		203	110
	115	170		179	060		203	130	02021-50050	151	060
	118	020		186	080	01173-51025	135	080		160	250
	118	070		194	020	01173-51260	96	020	02021-50060	113	130
01125-60820	118	126	01133-51020	195	020	01173-51260	96	060	02021-50060	123	080
	122	020	01133-51025	60	020	01173-51635	127	150		137	270
	122	050		93	080	01175-51055	188	020		144	120
	126	030		93	160	01176-61025	89	030		148	090
	126	100		94	070		118	030		150	090
	129	020		94	200	01222-50610	143	040		150	200
	133	020		97	140	01311-10812	189	100		159	050
	133	040		98	080	01311-10816	185	030		159	070
	135	180		98	160	01513-50820	27	030	02054-50050	59	230
	137	140		99	080		80	130	02056-50060	4	240
01125-60820	144	150	01133-51025	99	160	01513-50822	27	130	02056-50060	17	117
	150	050		135	060	01517-61640	118	050		40	050
	150	160		192	240	01518-50822	22	100	02114-50080	31	130
	151	110		193	240	01754-50618	20	040		39	030
	160	180	01133-51030	42	020	01754-50635	23	020		39	110
	160	200		161	200	01754-50660	21	030		42	040
	168	050		162	020	01754-50665	21	040		59	130
	169	045		173	090	01754-50800	81	030		61	030
	169	050		191	110	01754-50812	2	050		82	120
	169	160	01133-51035	127	170	01754-50820	14	200		103	050
01125-60820	169	180	01133-51035	200	160	01754-50820	16	100	02114-50080	106	140
	171	160	01133-51075	194	025	01754-50825	192	200		111	095
	174	020		195	025		193	200		132	110
	174	120	01133-51220	175	250	01754-50830	4	080		136	070
	175	030	01133-51230	39	070		20	080		137	080
	175	190		189	060	01754-50840	14	190		138	180
	178	065	01133-51235	205	040		80	140		145	090
	178	090		205	080	01754-50845	62	050		163	340
	183	090	01133-51240	39	060	01754-50855	24	110		185	090
	183	110		130	100		40	130		185	130
01125-60820	188	110	01133-51435	197	020	01754-50875	4	100	02114-50080	187	100
	194	040	01133-51640	180	030	01754-50885	4	120		201	030
	195	040		197	070	01754-50890	62	040		202	030
	198	020	01135-51030	119	020	01754-51040	73	030	02114-50100	192	130
01127-50816	125	027	01135-51040	78	130		73	110		193	130
	184	020	01135-51275	96	090	01754-51055	73	040	02116-50100	79	040
	184	040	01135-61020	169	080	01754-51070	40	030	02118-50100	105	040
01127-50820	38	070		175	050	01754-51235	62	160		105	090
	111	030		187	020	01754-51240	68	020		106	070
	113	020	01135-61025	90	040	01774-51225	91	050		162	030
01127-50820	135	075	01135-61025	127	030	01811-50812	118	090	02118-50100	169	120
	153	020		128	020		119	050		173	100
	153	100		158	020		119	070		180	080
	156	070		169	110		119	090		181	080
	160	070		181	060	01811-50815	167	050		182	130
	160	090		183	050		172	180		185	071
	160	140		186	170	01820-50615	153	085		185	111
	160	160	01138-51440	65	170	01820-50815	90	080		188	040
	169	050	01153-50812	24	160		123	040		202	030
	187	250		62	090	01820-50820	199	040		203	030

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
02118-50100	204	190	02751-50060	15	220	04011-50200	182	090	04013-60100	195	022
02121-50080	39	160		17	150		204	040		204	170
	52	030		49	030	04011-50220	124	060	04013-60120	39	080
	54	030		49	080		132	030		65	100
	112	120		158	210	04011-60160	61	070		91	090
	112	170	02751-50080	16	120		108	200		136	110
	112	210		22	110		108	230		137	170
	139	040		51	090		124	090		158	120
	141	090		53	030		175	060		158	170
	144	050		53	050		180	040		175	260
02121-50080	144	080	02751-50080	103	090	04011-60160	187	060	04013-60140	51	040
	147	020		111	060		187	190		102	020
	150	070		135	077		204	200		197	030
	150	150		175	140	04012-50060	100	150	04015-60060	57	040
	165	040		192	210		102	080		111	120
	178	100		193	210		109	020		140	125
	183	030	02761-50040	18	170	04012-50080	3	060		144	110
	185	160	02761-50050	57	050		74	080		148	080
	188	090	02761-50060	142	050		80	170		150	190
	196	100		157	050		102	150		158	140
02121-50080	198	040	02761-50060	174	100	04012-50080	107	130	04015-60060	162	290
	198	090	02763-50080	136	155		107	170		174	090
	199	120		150	130		108	130	04015-60080	39	090
02131-50100	128	040	02771-50100	42	030		112	130		106	160
	128	060		205	070		113	150		136	050
	185	070	02810-50060	120	040		158	090		137	060
	185	110		120	080		160	220		139	035
	199	020		140	130		167	030		165	060
02156-50080	3	040	02810-50080	148	020		167	070		166	030
	21	090	03004-50614	113	250		172	140	04015-60100	180	060
02156-50080	27	040	03004-50816	103	120	04012-50080	172	200	04015-60120	161	060
	80	150	03016-50616	144	100	04013-50080	24	140		162	110
02172-50140	51	060		148	060		31	120		162	230
	102	040		150	180		38	170		205	050
02172-50180	179	140	03024-50308	58	040		44	070	04015-60160	127	130
	186	140	03024-50508	50	030		59	150	04512-60050	59	030
	187	230	03024-50510	5	090		82	110	04512-60060	4	250
	200	130	03024-50520	18	140		101	080		20	070
	200	190	03024-50525	160	270		101	120		40	060
02174-50120	136	130	03024-50540	59	190		103	080		111	130
02174-50120	137	190	03024-60416	49	100	04013-50080	105	110	04512-60080	3	050
	142	160	03034-50406	116	140		111	093		21	100
	146	120	03034-50816	90	100		115	090		24	150
	161	080	03054-50310	114	290		120	020		27	050
	162	130	03054-50510	5	090		120	060		39	025
	162	250	03614-50410	113	100		176	040		39	100
02174-50140	190	110	04011-50100	101	040		185	095		42	050
	204	110		107	060		185	135		59	140
02174-50160	124	110		108	060		188	080		80	160
	131	090	04011-50120	96	040		199	060		106	130
02174-50160	135	160	04011-50120	96	080	04013-50080	199	100	04512-60080	136	060
	135	220		176	120	04013-60050	59	040		137	070
	197	090	04011-50140	65	160		59	240		167	060
02174-50200	104	080		100	020		160	280		172	190
02176-50120	70	060		145	030	04013-60060	113	260		185	040
	91	070	04011-50180	179	120	04013-60100	169	130		199	050
02354-50080	107	180		186	120		175	160		201	020
02552-50060	115	050		200	110		185	073		202	020
02552-50080	38	180		200	170		185	113	04512-60100	89	040
02751-50060	15	170	04011-50200	78	070		194	022		105	050

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
04512-60100	106	060	04611-00420	193	073	04612-00200	138	070	04816-00420	65	130
	118	040	04611-00450	71	130		162	140	04816-50350	131	170
	162	040	04611-00470	97	050		170	150	04817-00100	45	030
	169	140		136	030		171	110		71	050
	175	170		136	180		171	140	04817-00110	72	180
	180	070		137	040		182	030		80	090
	181	070		137	220	04612-00220	124	070	04817-00120	73	150
	185	072		138	050		132	040	04817-00140	80	070
	185	112		147	120	04612-00240	70	090		80	110
	188	030		149	050	04612-00250	14	180	04817-00160	2	060
04512-60100	192	120	04611-00470	149	090	04612-00250	73	180	04817-00180	72	200
	193	120		162	070		80	050	04817-00480	77	070
	202	020	04611-00520	68	080		147	110	04817-50300	5	130
	203	020		71	040		172	080		68	140
	204	180		72	030		186	240		82	030
04512-60120	70	050		98	100		189	040	05012-00408	1	080
	91	080		99	100	04612-00260	63	040	05012-00410	81	020
	96	030		142	080	04612-00280	67	140	05012-00609	1	090
	96	070		143	090	04612-00300	147	050	05012-00612	1	100
	136	120		146	060		170	070		4	060
04512-60120	137	180	04611-00520	170	130	04612-00300	186	220	05012-00818	62	060
	142	150		172	100	04612-00350	131	040	05012-01018	1	110
	146	110		173	050		164	050	05122-50614	102	070
	161	070		186	110	04612-00400	65	050	05122-50820	105	100
	162	120	04611-00550	161	130		131	120		107	140
	162	240	04611-00620	93	100		191	020		108	140
04512-60140	65	210		147	060	04612-00500	127	090	05122-50845	174	040
	190	100		161	180	04612-00680	64	070	05122-50865	112	220
04512-60160	124	100		170	060	04612-00800	162	270		167	020
	127	140		186	050	04612-01000	125	080		172	130
04512-60160	131	080	04611-00620	186	200	04612-01000	126	070	05122-51240	196	040
	135	150		200	050	04711-00060	143	030	05122-51260	176	110
	135	210	04611-00680	162	200	04717-00800	62	100	05122-51640	204	130
	197	080		163	390	04717-01000	36	070	05411-00414	72	130
04512-60180	179	130		171	050		68	120	05411-00420	15	120
	186	130		171	210		89	080		17	100
	187	220	04611-00720	71	110	04717-01200	62	080	05411-00528	24	120
	200	120		71	147		82	050	05411-00620	29	020
	200	180		94	130	04724-00100	130	070	05411-00625	66	090
04611-00170	73	140		95	260	04724-00140	15	060	05511-50215	101	110
04611-00220	68	040	04611-00800	65	070	04811-00710	31	070	05511-50215	107	150
	81	050		127	120	04811-06630	73	070		108	150
04611-00320	59	100		130	020	04811-10250	93	120		113	160
	66	150		191	050		98	120		115	100
	93	150	04612-00150	125	030		99	120		158	100
	98	150		126	050	04811-10300	11	160		176	050
	99	150		138	110		82	080	05511-50218	167	040
	191	080		138	150	04811-10500	80	120		172	150
04611-00350	71	180		145	040	04811-10850	14	170	05511-50315	103	070
	72	080		145	060	04811-50650	71	100	05511-50320	101	050
04611-00350	125	060	04612-00160	61	080	04811-50650	71	145	05511-50430	100	030
	138	107		175	080	04811-50900	130	130		108	190
	145	057	04612-00170	61	100	04811-51100	130	050		108	220
04611-00360	73	090		124	050	04814-00060	15	050		176	130
04611-00400	150	120		132	070	04814-00150	18	040		187	070
04611-00420	138	140		175	100	04814-06310	15	200		187	200
	147	080		187	130	04815-50650	62	150		204	140
	173	140		204	080	04816-00070	203	080	05511-50435	182	100
	190	040	04612-00180	107	020		203	120		204	050
	192	073		108	020	04816-00120	66	060	05511-50440	115	150

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
05511-50535	78	080	06613-10675	168	040	08141-06302	138	130	13961-8421-0	68	170
05511-50550	78	120		169	060		190	030	13963-9201-0	43	260
05511-51612	100	160		171	090		192	072	14111-4241-0	16	010
05511-51615	74	090		172	020		193	072	14182-9203-0	41	260
	160	230	07011-10030	117	060	08141-06303	97	040	14301-4275-0	16	030
05511-52520	102	160	07012-10810	117	020		136	170	14681-4201-0	16	020
	107	070	07012-11012	117	030		137	210	14911-4275-0	33	050
	108	070	07012-11214	117	040	08141-06304	68	070		33	080
05515-50600	102	090	07012-11417	117	050		142	070		33	110
05515-51600	95	310	07111-00100	117	090		143	070		33	200
05515-51600	196	030	07113-02100	117	100	08141-06304	146	050	14911-4275-0	62	190
05515-60800	112	230	07211-10150	117	110		170	120	14971-4275-0	19	060
	174	050	07715-00401	10	040		171	020		19	110
05515-61200	196	050		11	100		171	180	15021-1424-0	24	190
05525-50800	199	090	07715-00403	14	110		173	040	15021-3366-0	19	130
05525-51200	158	180	07715-01605	66	030	08141-06305	186	040	15101-3358-0	89	100
05525-61000	115	210	07715-03205	14	090		189	030	15108-4329-0	32	070
05712-00410	8	050	07715-03213	4	150	08141-06307	127	110	15108-4361-0	32	040
05712-00415	59	120	08101-06205	68	060	08143-06300	140	140	15108-4378-0	32	050
05712-00525	14	040		98	030	08241-05205	72	010	15221-0175-0	3	010
05712-00525	136	090	08101-06205	99	030	08241-05205	80	040	15221-0337-0	3	080
	137	090	08101-06305	93	030	08511-01525	145	020	15221-0338-0	1	060
	137	120	08101-06306	94	030	08511-01620	61	050	15221-0339-0	1	070
	146	090		94	160		175	070	15221-0349-0	3	090
	161	050		131	140	08511-02015	204	030	15221-1315-3	24	060
05712-00530	142	130	08101-06308	65	030	08511-02215	124	020	15221-1324-0	24	030
05712-00535	68	160	08141-06001	143	080		138	090	15221-1328-0	24	070
05712-00720	10	060	08141-06002	59	080	08511-02220	132	020	15221-1333-0	24	040
	40	080	08141-06004	138	020	09230-20426	190	060	15221-1398-0	24	050
05712-00730	11	130		173	130	09230-22345	97	120	15221-1431-0	24	100
05712-00730	131	200	08141-06005	147	100	09318-88085	31	040	15221-1435-3	24	090
05712-00735	135	130		149	080	09318-88150	5	020	15221-1443-0	24	130
	135	191	08141-06006	161	110	09318-88180	21	130	15221-1627-0	10	070
	186	160		164	020		29	040	15221-2336-0	11	170
05712-00740	179	110	08141-06201	59	090	09318-88200	28	110	15221-3365-0	1	120
05712-00745	200	020	08141-06202	125	070	09318-89016	36	060	15221-3568-2	8	060
05712-01055	200	030		138	105	09318-89020	36	050	15221-4317-0	32	020
06111-52023	74	020		145	055	09318-89045	36	030	15221-5547-0	14	070
	76	060	08141-06203	124	040	09318-89055	38	050	15221-5574-0	14	100
	87	050		132	060	09318-89076	38	060	15221-5623-0	20	050
06111-52023	196	080	08141-06203	144	070	09318-89087	38	100	15221-6382-0	13	020
06112-53033	80	060		150	110	09318-89115	38	090	15221-6641-0	20	060
06114-52023	87	040	08141-06204	136	020	09500-20477	63	060	15221-8821-0	4	230
06311-25020	72	170		137	030	09500-25407	162	080		15	160
06311-25040	72	190		138	040	09500-25428	147	070		15	210
06331-35010	68	110		149	040	09500-26528	143	060		17	140
06331-35012	62	070		161	030	09500-30478	149	020	15221-9153-0	16	110
06331-45010	36	080		162	060	09500-30528	143	050		21	070
	89	070		182	020	09502-55210	68	100		26	040
	130	080		205	030	09503-58011	130	030	15224-4301-0	30	010
06331-45012	82	040	08141-06205	172	090	09504-06211	131	160	15224-4301-0	32	010
06611-15010	76	030		186	100	09661-40030	19	030	15224-4320-0	32	030
	89	150	08141-06206	147	040	09661-40140	19	010	15224-8776-0	32	080
	93	130		186	190	09661-40150	19	100	15241-3695-0	4	130
	94	110		189	070	09661-40300	19	040	15241-6758-0	19	080
	95	240		191	100	11460-6311-0	43	100	15261-9601-0	3	100
	98	130		200	040	11460-6312-0	43	230	15272-7242-0	37	020
	99	130	08141-06208	65	060	11460-6327-0	43	110	15321-7326-0	21	140
	197	060		191	040	11460-6350-0	43	060	15321-7334-0	1	130
06613-10675	61	045	08141-06210	127	080	12581-5724-0	67	190	15331-5135-0	16	070

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
15331-9665-0...16...060			16429-9201-0...26...050			19222-4328-0...32...060			1A091-0558-0...5...030		
15331-9666-0...16...080			16433-0446-0...9...090			19223-2565-2...22...140			1A091-0709-3...9...010		
15425-6339-0...43...150			16483-1710-0...27...020			19830-1232-0...27...090			1A091-0709-5...9...010		
15425-6340-0...43...030			16483-1711-0...27...100			1A021-0543-0...5...080			1A091-1235-0...26...020		
15451-9540-0...10...120			16496-5132-0...16...050			1A021-1172-0...21...120			1A091-1236-0...26...030		
15461-7411-0...23...030			16652-6431-0...41...140			1A021-2131-0...11...030			1A091-1426-0...24...080		
15471-2331-2...11...140			16652-6477-0...41...110			1A021-2319-2...13...060			1A091-1450-2...5...040		
15471-7425-0...22...130			16652-6478-0...41...050			1A021-2411-0...11...120			1A091-1450-4...5...040		
15471-9153-0...3...030			16661-7305-0...22...050			1A021-2437-0...10...110			1A091-1511-0...10...020		
15471-9579-0...28...020			16661-7355-0...22...030			1A021-2498-0...10...100			1A091-1651-3...10...050		
15501-7247-0...37...060			16691-5798-0...15...110			1A021-3311-0...1...150			1A091-2347-0...11...180		
15511-9666-0...43...240			17111-1311-0...24...010			1A021-3515-0...8...020			1A091-2347-2...11...180		
15521-1423-0...24...180			17111-1312-0...24...020			1A021-5166-0...1...160			1A091-2348-0...9...120		
15521-2214-2...11...070			17111-1361-2...3...160			1A021-5412-0...17...020			9...120		
15521-3693-0...4...140			17111-1362-0...3...150			1A021-5416-0...15...010			9...150		
15521-7332-0...4...160			17111-9701-0...40...090			1A021-5435-0...17...010			9...180		
15521-7355-0...22...030			17123-6301-6...42...010			1A021-5602-0...17...070			12...190		
15521-7415-0...23...010			17123-6302-4...43...180			1A021-5613-3...20...020			1A091-2348-2...9...030		
15521-9602-0...1...020						1A021-5721-2...15...140			9...120		
15521-9603-0...1...030						17...120			9...150		
15531-7243-2...37...030			17123-6303-0...43...130			1A021-5739-0...17...115			1A091-2348-2...9...180		
15601-0456-0...9...190			17123-6304-0...43...070			1A021-5770-3...15...080			12...190		
15601-1555-0...10...010			17123-6307-0...43...040			1A021-5771-0...15...090			1A091-2353-0...12...200		
15601-1555-3...10...010			17123-6308-0...43...020			1A021-5772-0...15...100			1A091-2353-2...12...200		
15601-9201-2...17...030			17123-6314-0...43...170			1A021-5792-0...15...130			1A091-2354-0...12...210		
15601-9665-0...17...040			17123-6320-0...43...140			17...110			1A091-2354-2...12...210		
15611-5545-0...14...060			17123-6326-0...43...120			1A021-7292-0...21...050			1A091-2391-0...11...180		
15621-1403-0...24...170			17123-6332-0...43...210			1A021-7301-2...21...170			1A091-2392-0...11...180		
15748-6057-0...16...130			17123-6338-0...43...160			1A021-7333-2...4...190			1A091-2393-0...12...190		
15841-1462-0...17...050			17123-6350-0...43...050			1A021-7334-0...21...110			1A091-2394-0...12...190		
15841-5385-0...18...120			17123-9331-0...43...190			1A021-7351-0...22...040			1A091-2395-0...12...200		
15841-5386-0...18...130			17123-9332-0...43...200			1A021-7352-0...22...060			1A091-2396-0...12...200		
15841-9602-0...3...170			17214-7202-0...35...020			1A021-8721-0...45...040			1A091-2397-0...12...210		
15852-3314-0...5...120			17311-2231-0...11...080			1A021-9102-0...21...080			1A091-2398-0...12...210		
15881-6409-0...41...150			17311-2231-2...11...080			1A021-9103-0...4...090			1A091-2401-0...10...090		
15881-6415-0...41...280			17311-2297-0...11...080			1A021-9602-0...21...020			1A093-0150-0...2...010		
15881-6426-0...41...080			17311-2298-0...11...080			1A023-5641-6...20...120			1A093-0150-3...2...010		
15881-6433-0...41...160			17311-6328-0...43...080			1A024-3323-0...28...090			1A093-0551-0...5...010		
15881-6471-0...41...060			17321-1358-0...3...110			1A024-3352-0...28...120			1A093-4202-0...19...090		
15881-6480-0...41...100			17325-7244-0...37...040			1A024-3715-2...29...030			1A093-5136-0...19...120		
15881-9104-0...41...200			17331-7334-2...5...060			1A024-3901-0...45...010			1A094-0551-0...5...010		
15881-9105-0...41...220			17333-9101-3...2...030			1A051-7343-0...22...080			1C010-1356-0...3...120		
15881-9201-0...41...030			17355-7238-0...37...010			1A053-5700-5...17...060			1C010-9696-2...94...100		
15881-9202-0...41...250			17369-6757-0...41...270			1A053-5715-0...17...080			95...230		
15881-9301-0...41...070			17391-9616-0...1...040			1A053-5748-2...1...180			1C020-9581-0...18...025		
15881-9302-0...41...210			17456-3642-0...7...010			1A071-0704-2...9...100			1C020-9673-0...18...060		
15881-9303-0...41...180			17539-5203-0...16...140			1A071-0704-4...9...100			1C040-3367-0...28...070		
15881-9304-0...41...190			18510-6372-0...47...130			1A071-0705-2...9...130			1E013-3501-3...8...010		
16221-7327-0...21...150			19004-0462-0...13...040			1A071-0705-4...9...130			1E013-9149-2...26...060		
16241-1172-0...27...080			19013-0345-0...3...130			1A071-0706-2...9...160			1E090-6442-0...40...020		
16241-6490-0...41...240			19077-5209-2...16...090			1A071-0706-4...9...160			1G065-4236-0...19...050		
16241-7336-0...29...050			19077-5211-3...16...090			1A071-1176-0...25...010			1G279-2133-0...11...040		
29...070			19077-5212-3...16...090			1A072-7270-0...21...010			1G311-4310-0...34...030		
16241-7337-0...22...070			19202-0414-0...12...220			1A083-2501-2...13...010			1G311-4325-0...34...070		
16241-9602-0...4...020			19202-1658-0...71...020			1A091-0436-2...9...040			1G311-4334-0...34...020		
16271-9616-0...1...050			19202-2325-0...11...150			1A091-0454-0...9...020			1G311-4357-0...34...060		
16285-6357-0...43...250			19202-2328-0...11...110			9...110			1G311-4358-0...34...040		
16285-9201-0...43...270			19202-3566-0...8...040			9...140			1G311-8746-0...34...050		
16427-3314-2...1...140			19212-6310-0...43...090			9...170			1G513-3655-0...7...030		
16427-6411-0...41...020			19212-9713-0...43...220			1A091-0482-0...9...060			1G557-9665-0...28...030		

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
1G622-3708-0.....6...020			1G896-5220-0.....16...095			51601-1595-0.....97...060			54936-2615-0.....38...030		
1G622-3708-3.....6...020			1G896-9665-0.....16...060			51852-4124-0.....197...050			55314-2243-0.....63...060		
1G633-0101-0.....1...010			1G911-1452-3.....5...100			52000-3143-0.....104...070			55417-5252-0.....190...050		
1G633-0101-2.....1...010			1G911-4250-0.....18...010			52200-1513-2.....62...030			55611-1613-0.....63...120		
1G633-0101-3.....1...010			1G911-5344-0.....18...050			52200-1533-0.....62...110			56713-4122-0.....47...120		
1G633-1176-0.....25...010			1G911-5345-0.....18...070			52200-1553-0.....63...020			57325-7531-2.....166...050		
1G633-1231-0.....26...010			1G911-5410-0.....15...020			63...080			57783-3123-0.....162...280		
1G633-1265-0.....26...070			1G911-5427-0.....15...070			52200-1625-0.....64...060			58062-1137-0.....57...060		
1G633-7428-0.....40...070			1G911-5615-0.....20...030			52200-1628-0.....64...080			58511-1531-0.....62...120		
1G633-7429-0.....40...100			1G911-6551-0.....18...150			52200-1643-0.....65...040			58600-1532-0.....70...020		
1G633-7469-0.....40...120			1G911-9102-2.....5...110			52200-1711-0.....66...010			58700-1153-0.....73...160		
1G633-7493-0.....40...110			1G911-9201-0.....15...040			52200-1712-0.....66...020			58700-1153-2.....73...160		
1G701-0413-0.....4...070			1G916-2516-0.....13...030			52200-1713-0.....66...050			58813-1645-0.....65...090		
1G701-5770-0.....15...080			1G921-1619-0.....14...165			52200-1714-0.....66...070			59240-1584-0.....97...110		
1G730-3641-3.....7...020			1G922-5101-2.....16...040			52200-1734-0.....66...180			59700-1737-0.....66...210		
1G730-3641-4.....7...020			1G922-5101-4.....16...040			52200-1736-6.....66...200			59700-4225-0.....45...020		
1G730-3701-0.....29...010			1G923-9101-0.....27...120			52200-1756-3.....67...100			59700-4288-2.....47...070		
1G730-3709-0.....6...030			1G924-0543-0.....5...080			52200-1766-0.....67...130			59800-2611-0.....38...020		
1G730-3716-0.....29...060			1G924-1172-0.....27...070			52200-1767-0.....67...150			5F000-5265-0.....93...090		
1G730-5371-2.....18...080			1G924-1602-7.....14...010			52200-2516-0.....91...060			93...170		
1G730-5372-0.....18...090			1G924-1632-0.....14...130			52200-2676-0.....31...060			5F000-5265-0.....94...080		
1G730-7303-2.....22...010			1G924-2105-2.....11...020			52200-4123-0.....47...140			94...210		
1G730-7341-0.....22...020			1G924-2109-0.....11...020			52200-9951-0.....47...110			97...130		
1G742-0512-0.....5...070			1G924-2111-2.....11...010			52259-1621-0.....64...030			98...090		
1G751-5214-0.....16...150			1G924-2190-2.....11...010			52259-1623-0.....64...040			98...170		
1G751-8813-0.....4...220			1G924-2198-0.....11...060			52270-1733-0.....66...110			99...090		
1G770-1450-2.....5...040			1G924-2201-0.....11...050			52270-1737-0.....66...120			99...170		
1G777-9665-0.....28...050			1G924-2201-2.....11...050			52300-3413-0.....134...110			5G200-1113-0.....113...120		
1G780-0162-0.....2...020			1G924-2201-3.....11...050			52300-7517-0.....106...010			159...060		
1G790-0304-3.....3...070			1G924-2425-2.....10...130			52320-4288-3.....47...010			5G230-2119-0.....161...150		
1G790-0331-2.....3...140			1G924-3324-0.....28...100			52320-4288-3.....47...040			5G230-2119-0.....164...040		
1G790-0360-2.....3...140			1G924-5175-0.....14...020			52500-1115-2.....61...090			5H050-4162-0.....55...030		
1G790-0361-2.....3...140			1G924-5300-0.....18...020			52500-1532-0.....68...030			5H050-4163-0.....55...040		
1G790-0362-2.....3...140			1G924-5300-4.....18...020			52500-1781-0.....66...080			5H050-4164-0.....55...050		
1G790-0363-2.....3...140			1G924-9580-2.....28...040			52600-2738-0.....82...060			5H050-4165-0.....55...060		
1G790-1182-0.....25...020			1G934-1164-0.....27...060			52791-1544-0.....63...090			5H215-2579-0.....47...115		
1G790-5216-2.....16...090			1G934-1701-0.....27...010			52791-1545-0.....63...100			88...020		
1G790-5373-0.....18...100			1G934-3304-0.....28...010			52791-1546-0.....63...110			5H400-1143-0.....61...010		
1G790-5374-0.....18...110			1G934-3305-2.....28...060			52791-2116-0.....89...050			5H400-1246-0.....124...030		
1G791-1601-0.....10...030			1G934-5605-2.....20...010			52794-4242-0.....55...070			132...050		
1G796-5354-0.....18...025			1J416-7415-0.....23...010			52807-1102-0.....71...030			5H400-1516-0.....62...170		
1G796-5362-0.....18...030			1J700-2214-0.....11...070			72...020			5H400-1742-0.....70...040		
1G796-5642-2.....20...130			1J860-3314-0.....1...140			52807-1116-0.....72...100			5H400-1771-0.....79...030		
1G796-6556-0.....18...160			1K411-6402-0.....41...040			52807-1118-3.....73...020			5H400-2115-0.....51...005		
1G840-0402-6.....4...010			1K531-6460-2.....41...170			52807-1121-0.....73...120			5H400-2117-0.....112...260		
1G841-9101-0.....4...110			31351-3861-3.....14...150			52954-2156-0.....93...060			5H400-2119-0.....44...020		
1G850-3211-0.....2...040			32580-4436-0.....63...130			52996-3289-0.....107...050			89...180		
1G850-5115-0.....14...030			32751-9686-0.....160...260			53650-5381-0.....46...030			5H400-2122-0.....89...110		
1G851-0481-3.....9...050			33430-8276-0.....28...130			53650-6127-0.....199...150			89...160		
1G851-2301-7.....11...090			34150-1115-0.....94...050			199...170			112...250		
1G852-1311-0.....24...010			34150-1115-0.....94...180			53650-6127-0.....199...190			5H400-2122-0.....113...230		
1G852-1312-0.....24...020			35880-3033-0.....65...080			53961-3172-0.....66...160			5H400-2125-0.....89...090		
1G852-5345-0.....18...070			36880-4003-0.....64...050			53971-3139-5.....127...060			5H400-2151-0.....91...010		
1G856-5673-0.....15...180			37150-3466-0.....4...210			146...030			5H400-2152-0.....91...020		
1G856-6012-0.....15...190			38240-3241-0.....47...100			54511-8813-0.....117...070			5H400-2153-0.....91...030		
1G861-5569-2.....14...080			41071-4114-0.....73...080			54617-1212-0.....68...130			5H400-2154-5.....91...040		
1G861-9730-0.....14...120			41092-1441-0.....61...060			82...020			5H400-2591-0.....33...170		
1G896-1358-0.....3...110			41092-1463-0.....66...170			54711-4155-0.....46...050			37...070		
1G896-3709-0.....6...030			44366-6897-0.....196...110			54711-8513-0.....117...080			175...130		
1G896-5132-0.....16...050			44512-2364-0.....66...130			54821-1734-0.....68...090			5H400-2675-0.....31...050		

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
5H400-2732-0...	83...	020	5H471-3152-2...	100...	140	5K101-3149-0...	149...	015	5T051-1652-0...	65...	120
	85...	020	5H471-3355-2...	100...	110	5K101-3154-0...	150...	100	5T051-2118-0...	91...	100
	85...	040	5H471-3365-0...	100...	120	5K101-3157-0...	149...	070	5T051-2122-0...	112...	240
	85...	070	5H471-3561-0...	113...	200	5K101-3159-0...	147...	090	5T051-2123-0...	89...	120
	85...	100	5H473-1223-0...	39...	020	5K101-3167-0...	48...	030		89...	170
	85...	140	5H473-2394-0...	95...	290	5K101-3169-0...	149...	060	5T051-2136-0...	39...	150
5H400-2739-0...	85...	080	5H473-2556-0...	36...	010	5K101-3191-0...	150...	210	5T051-2217-0...	94...	060
5H400-2743-3...	85...	120	5H473-2557-0...	36...	020	5K101-5113-0...	142...	040		94...	190
5H400-2744-2...	85...	130	5H473-2658-0...	39...	050		144...	030	5T051-2310-0...	93...	005
5H400-3122-0...	106...	030	5H473-2995-0...	95...	280		150...	030	5T051-2311-0...	93...	010
5H400-3123-0...	106...	040	5H473-3239-0...	102...	110	5K190-5122-0...	143...	010	5T051-2311-0...	98...	010
5H400-3183-0...	107...	030	5H474-1561-0...	63...	070	5K200-7113-0...	48...	010		99...	010
	108...	030	5H474-3256-0...	106...	090	5T018-5130-0...	193...	010	5T051-2313-0...	93...	020
5H400-3184-0...	107...	040	5H475-1226-2...	131...	070	5T018-9136-0...	150...	075	5T051-2315-0...	93...	040
	108...	040		135...	140	5T019-4373-0...	155...	010	5T051-2316-0...	93...	070
5H400-3186-0...	107...	100		135...	200	5T019-4383-0...	177...	010	5T051-2341-2...	96...	010
	108...	100	5H475-2516-0...	91...	060	5T020-1299-0...	131...	060	5T051-2341-3...	96...	010
5H400-3187-0...	107...	110	5H483-1531-0...	68...	010	5T050-1752-0...	67...	030	5T051-2341-5...	96...	010
	108...	110	5H483-1534-0...	68...	050	5T050-1753-0...	67...	040	5T051-2342-3...	96...	050
5H400-3224-0...	111...	100	5H483-1735-2...	66...	190	5T050-1756-0...	67...	060	5T051-2342-4...	96...	050
5H400-3238-0...	104...	050	5H484-1535-0...	68...	150	5T050-1757-0...	67...	020	5T051-2342-6...	96...	050
5H400-3241-2...	104...	060	5H484-1536-0...	68...	105	5T050-2215-0...	95...	270	5T051-2345-0...	93...	050
5H400-3251-0...	101...	010	5H484-2391-0...	95...	320	5T050-2610-0...	38...	010		98...	050
5H400-3252-0...	101...	020	5H484-2392-0...	95...	340	5T050-2757-0...	77...	050		99...	050
5H400-3258-0...	103...	020	5H484-3188-0...	107...	120	5T050-2758-0...	77...	060	5T051-2360-2...	98...	005
5H400-3261-0...	103...	030	5H484-3189-0...	107...	160	5T050-3752-0...	112...	270	5T051-2360-3...	99...	005
5H400-3262-0...	103...	040	5H601-1648-0...	65...	200	5T050-3753-0...	112...	280	5T051-2361-2...	98...	020
5H400-3263-0...	103...	060	5H601-1713-0...	66...	040	5T050-3753-2...	112...	280	5T051-2361-3...	99...	020
5H400-3266-0...	51...	050	5H601-3312-0...	175...	090	5T050-3754-0...	112...	290	5T051-2362-0...	98...	070
	102...	030	5H607-4174-0...	49...	090	5T050-4650-2...	201...	040		99...	070
5H400-3292-0...	106...	050	5H630-1011-0...	71...	080	5T050-4650-2...	202...	040	5T051-2363-2...	98...	040
5H400-3294-0...	106...	080	5H630-1012-2...	71...	160	5T050-4650-3...	203...	040		99...	040
5H400-3296-0...	106...	110	5H630-1020-0...	71...	090	5T050-4651-0...	201...	050	5T051-2380-0...	94...	005
5H400-3297-0...	106...	120	5H630-1030-0...	71...	140		202...	050	5T051-2383-3...	94...	010
5H400-3312-0...	105...	080	5H630-1040-0...	71...	170	5T050-4651-3...	203...	050	5T051-2383-4...	94...	010
5H400-3556-0...	112...	190	5H630-1051-0...	72...	050	5T050-4652-0...	201...	060	5T051-2383-5...	94...	010
	113...	190	5H630-1060-0...	72...	070		202...	060	5T051-2387-2...	94...	020
5H400-4125-0...	50...	020	5H630-1070-0...	72...	090	5T050-4652-3...	203...	090		94...	150
5H400-4151-2...	50...	040	5H630-1072-0...	72...	140	5T050-5117-0...	191...	070	5T051-2387-3...	94...	020
5H400-8550-0...	117...	010	5H630-1073-0...	72...	150	5T050-5926-0...	59...	180		94...	150
5H400-8561-0...	117...	120	5H630-1080-0...	72...	210	5T050-5927-0...	59...	160	5T051-2388-0...	94...	040
5H400-8562-0...	117...	130	5H630-1090-3...	73...	050	5T050-5941-0...	58...	020		94...	170
5H400-8563-0...	117...	140	5H687-7530-0...	114...	270	5T050-5942-0...	58...	030	5T051-2389-3...	94...	140
5H400-8564-0...	117...	150	5H687-7530-2...	114...	270	5T050-6578-0...	125...	050	5T051-2389-4...	94...	140
5H401-4828-0...	162...	090	5K005-6142-0...	154...	040	5T050-9521-2...	202...	040	5T051-2389-5...	94...	140
5H401-5413-0...	163...	330		154...	100		203...	040	5T051-2390-0...	94...	135
5H470-1100-3...	70...	010		160...	020	5T051-1141-0...	61...	040	5T051-2391-2...	93...	110
	71...	010		160...	040	5T051-1141-3...	61...	040		98...	110
	72...	005		160...	110	5T051-1144-0...	61...	020		99...	110
	73...	010	5K021-6136-0...	151...	040	5T051-1157-0...	60...	040	5T051-2392-2...	94...	090
5H470-1542-2...	63...	030	5K021-6136-0...	152...	040	5T051-1212-0...	82...	090	5T051-2392-2...	94...	220
5H470-1543-0...	63...	050	5K101-1635-0...	187...	090	5T051-1213-0...	82...	130	5T051-2525-0...	35...	030
5H470-2520-0...	35...	010	5K101-2526-0...	142...	140	5T051-1216-0...	82...	070	5T051-2526-0...	35...	040
5H470-2710-3...	80...	010		146...	100	5T051-1218-0...	61...	110	5T051-2545-0...	38...	080
	81...	010	5K101-2616-0...	137...	110	5T051-1517-0...	62...	180	5T051-2546-3...	38...	040
5H470-3172-0...	46...	010	5K101-2634-0...	126...	040	5T051-1518-0...	62...	185	5T051-2554-0...	36...	040
5H470-4121-0...	50...	010		138...	100	5T051-1645-0...	65...	180	5T051-2571-0...	33...	030
5H471-2126-0...	89...	130	5K101-2656-0...	140...	090	5T051-1646-0...	65...	190	5T051-2572-2...	31...	080
	89...	190		141...	160	5T051-1647-2...	65...	150	5T051-2573-0...	33...	090
5H471-3152-0...	100...	140		141...	240	5T051-1648-0...	65...	140	5T051-2575-0...	33...	120

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
5T051-2579-0...33...060			5T051-3114-0...100...040			5T051-3563-0...113...210			5T051-4414-0...206...120		
5T051-2581-0...33...040			5T051-3117-0...100...190			5T051-3625-0...102...100			5T051-4511-7...197...010		
5T051-2582-0...33...070			116...050			5T051-4114-0...44...030			5T051-4514-0...198...010		
5T051-2583-0...33...100			5T051-3118-0...100...180			5T051-4116-0...44...080			5T051-4515-0...198...030		
5T051-2584-0...33...130			5T051-3119-0...100...070			5T051-4118-0...44...060			5T051-4521-0...198...070		
5T051-2585-0...33...190			5T051-3122-0...100...170			5T051-4126-0...33...160			5T051-4522-0...198...080		
5T051-2591-0...33...050			5T051-3124-0...109...010			51...100			5T051-4525-3...198...100		
33...080			5T051-3127-0...109...040			54...040			5T051-4525-4...198...100		
33...110			5T051-3128-0...102...050			76...070			5T051-4526-3...198...120		
33...200			105...020			84...030			5T051-4531-2...197...040		
5T051-2591-0...62...190			5T051-3128-0...109...050			5T051-4126-0...85...050			5T051-4541-0...197...100		
5T051-2592-0...33...140			115...120			102...120			5T051-4543-2...197...120		
5T051-2620-0...38...110			176...140			5T051-4128-0...112...040			5T051-4551-0...197...140		
5T051-2621-0...38...120			5T051-3134-0...110...030			112...090			5T051-4611-3...200...010		
5T051-2622-0...38...130			5T051-3137-2...110...050			157...040			5T051-4612-5...200...060		
5T051-2623-0...38...140			5T051-3138-0...51...070			5T051-4186-0...51...080			5T051-4613-2...200...070		
5T051-2624-0...38...150			52...010			52...020			5T051-4614-4...200...080		
5T051-2625-0...38...160			54...010			54...020			5T051-4615-0...200...090		
5T051-2626-0...38...190			5T051-3139-0...53...010			5T051-4187-0...53...020			5T051-4621-3...200...100		
5T051-2656-0...39...010			5T051-3191-0...51...030			5T051-4242-0...55...010			5T051-4622-2...189...080		
5T051-2656-2...39...010			5T051-3192-0...51...010			5T051-4247-0...58...010			5T051-4624-3...200...085		
5T051-2657-4...39...140			5T051-3226-0...111...110			5T051-4322-0...116...010			5T051-4625-0...200...086		
5T051-2659-0...39...040			5T051-3231-0...104...010			5T051-4325-0...45...050			5T051-4626-0...200...087		
5T051-2666-0...39...120			5T051-3232-0...104...020			5T051-4326-0...116...020			5T051-4633-0...201...010		
5T051-2670-2...31...010			5T051-3234-3...111...180			5T051-4327-0...116...030			5T051-4633-3...202...010		
5T051-2671-2...31...020			5T051-3235-2...104...030			5T051-4335-0...116...180			203...010		
5T051-2673-2...31...090			5T051-3236-0...101...100			5T051-4336-2...116...160			5T051-4634-0...201...070		
5T051-2676-0...31...030			5T051-3237-0...104...040			5T051-4337-0...116...060			202...080		
5T051-2691-0...33...180			5T051-3243-0...104...090			5T051-4338-0...116...070			5T051-4637-0...187...120		
5T051-2699-0...33...150			5T051-3253-3...101...030			5T051-4343-0...116...100			204...070		
5T051-2712-0...80...100			5T051-3254-3...101...060			5T051-4344-0...116...110			5T051-4638-0...204...220		
5T051-2713-0...80...030			5T051-3255-0...102...060			5T051-4348-0...116...120			5T051-4640-0...204...010		
5T051-2734-0...84...010			5T051-3257-0...103...010			5T051-4351-2...206...080			5T051-4642-0...187...080		
5T051-2734-2...84...010			5T051-3265-0...102...010			5T051-4352-0...206...010			204...090		
5T051-2738-0...69...010			5T051-3276-2...105...030			5T051-4353-0...206...020			5T051-4643-0...182...120		
5T051-2742-0...85...110			5T051-3282-0...111...150			5T051-4354-0...206...030			5T051-4643-2...182...120		
5T051-2752-2...76...010			5T051-3321-0...103...110			5T051-4355-0...206...050			5T051-4645-0...187...034		
77...010			5T051-3322-2...101...090			5T051-4361-0...155...080			204...012		
5T051-2752-3...76...010			145...070			177...040			5T051-4646-0...204...014		
77...010			5T051-3336-2...110...100			206...060			5T051-4655-2...205...010		
5T051-2753-2...77...020			5T051-3338-0...110...080			5T051-4362-0...155...050			5T051-4655-4...205...010		
5T051-2754-2...77...030			5T051-3511-0...113...010			177...050			5T051-4656-3...205...020		
5T051-2755-0...77...040			5T051-3513-0...113...030			5T051-4363-0...155...110			5T051-4658-2...205...060		
5T051-2757-0...77...050			5T051-3514-0...113...090			5T051-4364-0...155...100			5T051-4711-4...183...010		
5T051-2758-0...77...080			5T051-3516-0...113...040			5T051-4365-0...155...090			5T051-4721-0...183...020		
5T051-2759-0...77...090			5T051-3517-0...113...070			5T051-4366-0...155...060			5T051-4731-0...183...060		
5T051-2761-0...76...050			5T051-3533-0...112...110			5T051-4367-0...155...070			5T051-4741-2...183...080		
5T051-2762-0...83...010			5T051-3535-0...112...140			177...060			5T051-4742-2...183...100		
5T051-2766-0...85...090			5T051-3536-0...112...160			5T051-4368-0...155...040			5T051-4751-0...194...010		
5T051-2768-0...85...010			5T051-3537-0...112...180			177...030			5T051-4752-2...194...027		
5T051-2791-0...86...010			5T051-3538-0...112...200			5T051-4368-0...206...040			5T051-4752-2...195...027		
5T051-2843-2...76...020			5T051-3539-0...112...100			206...070			5T051-4761-2...195...010		
5T051-2991-0...95...350			5T051-3542-2...112...050			5T051-4369-0...155...120			5T051-4762-0...183...040		
5T051-2992-0...95...350			5T051-3543-0...112...030			5T051-4371-2...116...150			5T051-4811-0...194...030		
5T051-2993-0...95...350			5T051-3552-0...113...140			5T051-4372-0...116...130			5T051-4831-0...195...030		
5T051-2994-0...95...350			5T051-3552-3...113...140			5T051-4374-2...155...020			5T051-4861-3...184...010		
5T051-2995-0...95...350			5T051-3554-0...113...170			5T051-4374-3...155...020			5T051-4871-0...184...023		
5T051-2996-0...95...350			5T051-3555-2...113...180			5T051-4375-2...155...030			5T051-4881-2...184...030		
5T051-2997-0...95...350			5T051-3557-2...113...060			5T051-4382-0...155...140			5T051-4911-2...189...010		
5T051-2998-0...95...350			5T051-3559-0...113...220			5T051-4413-0...206...110			5T051-4913-0...189...050		

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
5T051-4921-2...	187	010	5T051-5225-3...	186	090	5T051-5636-0...	204	210	5T051-6218-0...	119	130
5T051-4930-0...	187	030	5T051-5228-2...	187	210	5T051-5637-0...	204	205	5T051-6219-2...	119	100
5T051-4931-0...	187	036	5T051-5229-0...	186	020	5T051-5638-0...	204	240	5T051-6221-0...	118	125
5T051-4933-0...	187	040	5T051-5231-0...	186	150	5T051-5642-0...	131	180	5T051-6310-5...	127	005
5T051-4935-0...	187	180	5T051-5232-0...	186	180	5T051-5643-0...	131	190		128	005
5T051-4940-0...	187	140	5T051-5234-3...	186	230	5T051-5644-2...	126	010	5T051-6311-5...	127	010
5T051-4941-0...	187	144	5T051-5241-0...	188	010	5T051-5645-2...	126	020	5T051-6312-3...	127	020
5T051-4942-0...	187	146	5T051-5243-0...	188	050	5T051-5646-2...	126	080	5T051-6313-0...	127	040
5T051-4943-0...	187	150	5T051-5244-2...	188	060	5T051-5647-0...	126	090	5T051-6314-2...	127	070
5T051-4944-0...	187	170	5T051-5245-0...	188	100	5T051-5648-3...	126	110	5T051-6315-0...	127	050
5T051-4945-0...	187	240	5T051-5411-3...	181	010	5T051-5649-0...	130	110	5T051-6317-0...	127	100
5T051-5111-3...	191	010	5T051-5411-4...	181	010	5T051-5911-0...	199	010	5T051-6318-0...	127	160
5T051-5112-0...	191	030	5T051-5412-0...	181	020	5T051-5911-2...	199	010	5T051-6318-2...	127	160
5T051-5115-3...	191	060	5T051-5413-0...	181	030	5T051-5912-2...	199	030	5T051-6322-4...	128	010
5T051-5116-0...	191	090	5T051-5413-3...	181	030	5T051-5913-0...	199	070	5T051-6324-0...	128	030
5T051-5121-0...	190	010	5T051-5414-0...	181	040	5T051-5914-0...	199	080	5T051-6325-0...	128	050
5T051-5125-0...	190	070	5T051-5415-0...	181	050	5T051-5915-2...	199	110	5T051-6345-2...	125	010
5T051-5126-0...	190	080	5T051-5421-2...	196	010	5T051-5915-3...	199	110	5T051-6347-0...	125	025
5T051-5127-0...	190	090	5T051-5422-0...	196	020	5T051-5921-0...	59	010	5T051-6348-2...	125	020
5T051-5132-0...	192	030	5T051-5425-0...	196	060	5T051-5922-0...	59	020		138	100
5T051-5132-0...	193	030	5T051-5426-0...	196	070	5T051-5923-0...	59	050	5T051-6348-2...	145	050
5T051-5134-0...	192	050	5T051-5427-3...	196	090	5T051-5924-2...	59	070	5T051-6387-0...	118	130
	193	050	5T051-5451-0...	182	010	5T051-5925-0...	59	110	5T051-6388-2...	118	140
5T051-5135-0...	192	060	5T051-5452-0...	182	040	5T051-5928-0...	59	155	5T051-6411-8...	133	010
	193	060	5T051-5455-0...	182	060	5T051-5931-0...	199	130	5T051-6413-0...	133	015
5T051-5136-2...	192	070	5T051-5463-2...	182	080	5T051-5932-0...	199	140	5T051-6413-2...	133	015
	193	070	5T051-5465-2...	182	070	5T051-5933-0...	199	160	5T051-6416-0...	133	050
5T051-5137-0...	192	080	5T051-5466-0...	182	110	5T051-5934-0...	199	180	5T051-6417-0...	133	060
	193	080	5T051-5511-0...	179	010	5T051-5939-0...	59	210	5T051-6418-3...	134	090
5T051-5138-0...	192	090	5T051-5521-3...	179	020	5T051-5941-0...	59	220	5T051-6420-0...	134	100
5T051-5138-0...	193	090	5T051-5522-0...	179	040	5T051-5943-0...	58	050	5T051-6421-0...	134	010
5T051-5141-0...	192	100		179	090	5T051-5944-0...	58	060	5T051-6426-0...	133	070
	193	100	5T051-5523-0...	179	050	5T051-5946-0...	59	250	5T051-6427-0...	133	080
5T051-5142-0...	192	110	5T051-5531-3...	179	070	5T051-5947-0...	59	260	5T051-6457-0...	138	190
	193	110	5T051-5535-0...	179	100	5T051-6101-0...	119	010	5T051-6465-0...	125	040
5T051-5143-0...	192	140	5T051-5541-0...	180	010	5T051-6102-0...	118	010	5T051-6465-2...	125	040
	193	140	5T051-5543-0...	180	020	5T051-6113-4...	119	030	5T051-6515-0...	131	010
5T051-5144-0...	192	150	5T051-5544-0...	180	050	5T051-6113-5...	119	030	5T051-6515-2...	131	010
	193	150	5T051-5551-2...	178	010	5T051-6114-3...	122	010	5T051-6517-0...	131	050
5T051-5145-0...	192	160	5T051-5552-2...	178	020	5T051-6114-4...	122	010	5T051-6521-0...	131	030
5T051-5145-0...	193	160	5T051-5553-0...	178	030	5T051-6115-3...	122	040	5T051-6521-2...	131	030
5T051-5146-0...	192	170		180	090	5T051-6117-2...	122	030	5T051-6522-0...	131	130
	193	170	5T051-5554-2...	178	040		122	060	5T051-6522-2...	131	130
5T051-5147-0...	192	180		180	100	5T051-6118-0...	119	045	5T051-6524-0...	131	100
	193	180	5T051-5561-0...	178	060	5T051-6119-3...	119	040	5T051-6524-2...	131	100
5T051-5148-0...	192	190	5T051-5571-0...	178	010	5T051-6119-4...	119	040	5T051-6525-0...	131	100
	193	190	5T051-5572-0...	178	020	5T051-6121-0...	120	010	5T051-6526-0...	131	100
5T051-5149-0...	192	220	5T051-5573-0...	178	060	5T051-6122-0...	120	050	5T051-6536-0...	131	110
	193	220	5T051-5581-0...	178	070	5T051-6123-0...	120	030	5T051-6551-0...	130	040
5T051-5151-0...	192	230	5T051-5582-0...	178	080		120	070	5T051-6571-3...	124	010
5T051-5151-0...	193	230	5T051-5613-2...	102	140	5T051-6163-0...	123	010	5T051-6572-0...	124	080
5T051-5211-3...	185	010	5T051-5614-0...	102	130	5T051-6191-0...	119	060	5T051-6578-3...	108	240
5T051-5212-2...	185	020	5T051-5621-0...	200	140	5T051-6192-0...	119	080	5T051-6581-0...	132	010
5T051-5213-0...	185	140	5T051-5622-0...	189	020	5T051-6193-0...	118	080	5T051-6585-0...	132	080
5T051-5215-2...	185	050	5T051-5623-0...	200	150	5T051-6194-0...	118	085	5T051-6586-0...	132	100
5T051-5216-2...	185	060	5T051-5631-0...	204	020	5T051-6211-0...	121	010	5T051-6588-0...	145	080
5T051-5217-3...	185	100	5T051-5632-2...	204	100	5T051-6212-0...	121	030	5T051-6589-2...	132	090
5T051-5221-2...	186	010	5T051-5633-0...	204	120	5T051-6213-0...	118	100	5T051-6611-2...	135	010
5T051-5222-2...	186	030	5T051-5634-2...	204	150	5T051-6214-2...	118	110	5T051-6613-0...	135	020
5T051-5224-2...	186	070	5T051-5635-0...	204	160	5T051-6217-0...	119	110	5T051-6615-0...	135	050

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
5T051-6619-3...	135	070	5T051-6866-2...	150	075	5T051-7222-2...	152	030	5T054-1761-3...	70	080
5T051-6621-0...	135	040	5T051-6911-0...	137	010	5T051-7223-2...	152	050	5T054-1761-4...	70	080
	135	090	5T051-6912-0...	136	080		153	050	5T054-1763-0...	67	120
5T051-6622-0...	135	100		137	100	5T051-7224-3...	154	050	5T054-1768-0...	67	160
5T051-6623-0...	135	065	5T051-6914-0...	136	100		154	110	5T054-1772-0...	67	170
5T051-6631-2...	135	120	5T051-6915-0...	136	160	5T051-7225-0...	152	070	5T054-7895-0...	166	010
5T051-6632-3...	135	170		137	200		153	070	5T054-8191-2...	49	060
5T051-6632-4...	135	170	5T051-6917-0...	137	130		154	050	5T054-8192-0...	49	010
5T051-6633-0...	135	190	5T051-6918-0...	136	140		154	110	5T054-8193-2...	49	040
5T051-6633-2...	135	190		137	150	5T051-7231-4...	154	010	5T055-1115-0...	60	010
5T051-6635-0...	135	230	5T051-6919-0...	136	010	5T051-7232-3...	154	070	5T055-1142-0...	60	030
5T051-6711-0...	142	010		137	020	5T051-7234-2...	154	020	5T055-1211-0...	82	010
5T051-6712-0...	142	060	5T051-6922-0...	138	010		154	080	5T055-1771-0...	108	160
	146	040	5T051-6924-0...	138	030	5T051-7241-0...	152	090	5T055-1773-0...	108	180
5T051-6713-0...	142	020	5T051-6926-0...	138	060	5T051-7241-2...	153	090	5T055-1774-0...	108	210
5T051-6714-0...	142	030	5T051-6931-0...	138	080	5T051-7242-2...	123	030	5T055-1776-0...	108	250
5T051-6715-2...	142	100	5T051-6933-0...	138	160	5T051-7243-0...	137	260	5T055-2112-2...	89	010
5T051-6718-0...	142	120	5T051-6934-0...	138	170	5T051-7244-0...	123	050	5T055-2112-5...	89	010
5T051-6721-0...	142	170	5T051-6936-0...	138	120	5T051-7247-0...	123	060	5T055-2115-0...	89	020
5T051-6723-0...	143	100	5T051-6941-0...	136	200	5T051-7248-0...	123	070	5T055-2131-0...	90	010
5T051-6724-0...	143	110	5T051-6941-0...	137	240	5T051-7625-0...	57	020	5T055-2143-2...	90	090
5T051-6725-0...	143	130	5T051-6951-0...	118	060	5T051-7793-0...	90	070	5T055-2159-2...	90	030
5T051-6729-0...	143	120	5T051-6951-2...	118	060	5T051-8511-3...	117	160	5T055-2161-0...	90	050
5T051-6741-0...	145	010	5T051-7110-2...	140	010	5T051-8511-4...	117	160	5T055-2161-2...	90	050
5T051-6751-0...	144	010	5T051-7111-5...	140	020	5T051-8811-0...	115	010	5T055-2312-0...	92	010
5T051-6752-0...	144	020	5T051-7111-7...	140	020	5T051-8812-0...	115	020	5T055-2325-0...	95	300
5T051-6753-2...	144	040	5T051-7111-8...	140	020	5T051-8813-0...	115	030	5T055-2325-2...	95	300
5T051-6754-0...	144	060	5T051-7114-0...	141	060	5T051-8814-0...	115	040	5T055-2350-0...	97	010
5T051-6761-0...	144	130	5T051-7115-0...	141	210	5T051-8861-0...	115	070	5T055-2351-0...	97	030
5T051-6766-0...	144	160	5T051-7116-0...	140	030	5T051-8862-0...	115	110	5T055-2353-0...	97	020
5T051-6767-2...	144	170	5T051-7122-0...	141	050	5T051-8863-0...	115	080	5T055-2355-0...	97	070
5T051-6768-0...	144	180	5T051-7124-0...	141	010	5T051-8871-0...	115	130	5T055-2356-0...	97	100
5T051-6811-0...	146	010	5T051-7125-0...	141	020	5T051-8911-0...	115	180	5T055-2357-0...	97	080
5T051-6811-2...	146	010	5T051-7126-0...	141	100	5T051-8921-0...	115	200	5T055-2549-2...	38	200
5T051-6812-0...	147	010	5T051-7127-0...	141	120	5T051-8931-0...	115	140	5T055-2549-3...	38	200
5T051-6814-0...	147	030	5T051-7132-0...	141	200	5T051-8941-0...	115	160	5T055-2551-0...	38	220
5T051-6815-0...	147	140	5T051-7136-0...	140	050	5T051-8983-2...	115	220	5T055-2553-2...	35	070
5T051-6817-0...	148	010	5T051-7137-0...	140	070	5T051-8985-0...	115	190	5T055-2735-0...	84	020
5T051-6817-2...	148	010	5T051-7138-0...	140	080	5T051-9113-0...	131	100	5T055-2735-2...	84	020
5T051-6818-0...	146	020	5T051-7141-3...	140	100	5T051-9127-0...	131	100	5T055-2737-0...	85	060
5T051-6827-2...	146	080	5T051-7142-4...	140	150	5T051-9312-0...	204	230	5T055-2751-0...	87	010
5T051-6831-3...	148	030	5T051-7144-2...	141	250	5T054-1511-0...	62	010	5T055-2753-0...	87	030
5T051-6831-4...	148	030	5T051-7145-4...	140	120	5T054-1512-0...	62	020	5T055-2754-0...	87	020
5T051-6832-2...	148	050	5T051-7152-0...	139	010	5T054-1514-0...	62	130	5T055-2773-2...	85	030
5T051-6833-0...	148	100	5T051-7153-0...	139	060	5T054-1515-0...	62	140	5T055-2795-0...	88	010
5T051-6851-3...	150	010	5T051-7154-0...	141	170	5T054-1541-0...	63	010	5T055-2872-0...	75	020
5T051-6852-2...	150	040	5T051-7155-0...	141	180	5T054-1541-2...	63	010	5T055-2891-0...	74	050
5T051-6852-4...	150	040	5T051-7156-0...	139	020	5T054-1610-0...	64	010	5T055-2892-0...	74	070
5T051-6852-5...	150	040	5T051-7157-0...	139	030	5T054-1613-2...	64	020	5T055-3111-2...	110	010
5T051-6852-6...	150	040	5T051-7167-0...	141	130	5T054-1641-0...	65	010	5T055-3111-3...	110	010
5T051-6852-7...	150	040	5T051-7168-0...	141	150	5T054-1642-0...	65	020	5T055-3113-3...	100	010
5T051-6853-0...	150	080	5T051-7169-0...	141	140	5T054-1735-0...	66	190	5T055-3115-0...	100	060
5T051-6854-2...	149	010	5T051-7211-5...	151	010	5T054-1736-0...	66	200	5T055-3181-0...	107	010
5T051-6855-0...	150	140	5T051-7212-3...	151	020	5T054-1739-0...	66	100	5T055-3181-2...	108	010
5T051-6856-0...	149	030	5T051-7213-0...	151	090	5T054-1741-0...	66	140	5T055-3185-2...	107	080
5T051-6858-2...	150	060	5T051-7214-0...	151	050	5T054-1751-2...	67	010		108	080
5T051-6858-3...	150	060		160	240	5T054-1754-0...	67	050	5T055-3188-0...	108	120
5T051-6861-0...	147	130	5T051-7215-0...	151	070	5T054-1758-0...	67	070	5T055-3221-2...	111	010
5T051-6862-0...	150	020	5T051-7216-3...	151	080	5T054-1759-0...	67	080	5T055-3221-3...	111	010
5T051-6865-0...	150	170	5T051-7217-3...	151	100	5T054-1761-0...	70	080	5T055-3222-0...	111	040

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
5T055-3222-2...111...040			5T055-7821-0...159...010			5T055-7923-0...170...080			5T055-8121-3...175...120		
5T055-3225-2...111...070			5T055-7822-0...156...060			5T055-7924-0...162...170			5T055-8122-0...175...150		
5T055-3275-0...105...010			5T055-7823-0...157...030			170...170			5T055-8123-0...175...180		
5T055-3277-0...105...130			5T055-7824-0...165...010			171...030			5T055-8124-3...175...200		
5T055-3285-0...111...200			5T055-7825-2...158...010			5T055-7925-2...170...220			5T055-8125-0...158...250		
5T055-3299-0...106...020			5T055-7827-0...158...080			5T055-7931-2...172...010			5T055-8126-0...158...260		
5T055-3311-0...105...070			5T055-7828-0...158...110			5T055-7932-0...173...030			5T055-8127-0...78...023		
5T055-3332-0...110...070			5T055-7829-0...165...020			5T055-7933-0...170...240			5T055-8128-0...78...025		
5T055-3352-0...100...090			5T055-7831-2...161...010			5T055-7934-3...173...010			5T055-8129-0...78...020		
5T055-3353-0...100...100			5T055-7832-0...161...020			5T055-7939-0...173...060			5T055-8131-2...176...010		
5T055-3354-0...100...080			5T055-7833-0...161...090			5T055-7941-0...173...110			5T055-8132-0...175...220		
5T055-3541-3...112...010			5T055-7834-0...161...140			5T055-7943-4...173...080			5T055-8133-0...176...030		
5T055-3546-0...112...060			5T055-7835-0...156...020			5T055-7945-0...173...120			5T055-8133-2...176...030		
5T055-3547-0...112...080			5T055-7838-0...156...040			5T055-7946-0...173...160			5T055-8134-2...176...070		
5T055-3551-2...113...110			5T055-7841-0...164...010			5T055-7947-0...173...170			5T055-8135-0...176...080		
5T055-3553-0...113...240			5T055-7842-0...164...030			5T055-7948-2...173...190			5T055-8136-0...176...100		
5T055-3558-0...113...195			5T055-7845-0...161...160			5T055-7949-2...173...210			5T055-8137-0...175...210		
5T055-4241-3...55...020			5T055-7846-0...165...050			5T055-7951-0...78...010			5T055-8139-2...175...240		
5T055-4241-4...55...020			5T055-7847-0...165...030			5T055-7953-0...78...030			5T055-8151-2...176...150		
5T055-4243-3...56...010			5T055-7851-2...162...010			5T055-7954-0...53...040			5T055-8163-0...163...310		
5T055-4245-2...57...010			5T055-7852-0...162...050			5T055-7955-0...78...090			5T055-8171-0...170...030		
5T055-4245-3...57...010			5T055-7854-0...162...100			5T055-7956-0...78...110			5T055-8172-0...170...040		
5T055-4246-0...55...100			5T055-7855-0...167...010			5T055-7957-0...78...060			5T055-8172-2...170...040		
5T055-4246-2...55...100			172...120			5T055-7961-0...159...040			5T055-8173-0...170...100		
5T055-4250-0...55...022			5T055-7856-2...162...150			5T055-7963-2...160...010			5T055-8174-0...170...110		
5T055-4251-0...55...023			5T055-7856-3...162...150			5T055-7966-0...161...100			171...100		
5T055-4252-0...55...024			5T055-7858-0...163...370			5T055-7967-0...161...120			171...130		
116...040			171...220			5T055-7968-0...162...160			5T055-8174-2...170...110		
5T055-4334-0...116...080			172...040			171...060			171...100		
5T055-4342-2...116...090			5T055-7861-0...167...080			171...250			171...130		
5T055-4373-0...155...010			5T055-7861-0...172...160			5T055-7969-0...162...180			5T055-8175-0...171...010		
5T055-4383-2...177...010			5T055-7863-0...162...260			171...070			5T055-8176-2...170...180		
5T055-4384-0...177...120			5T055-7867-0...163...320			171...260			5T055-8176-3...170...180		
5T055-4385-0...116...190			5T055-7869-3...158...190			5T055-7971-0...174...010			5T055-8177-0...170...140		
5T055-4386-2...177...020			5T055-7871-0...162...210			5T055-7971-3...174...010			5T055-8178-0...171...080		
5T055-4387-2...116...200			5T055-7872-0...159...030			5T055-7972-3...174...030			5T055-8179-0...171...120		
5T055-4388-2...177...070			5T055-7873-0...163...350			5T055-7973-0...174...110			5T055-8181-2...171...150		
5T055-4389-2...177...080			5T055-7875-2...158...230			5T055-7974-0...174...060			5T055-8182-2...171...170		
5T055-4393-2...177...090			5T055-7879-0...158...070			5T055-7975-0...174...070			5T055-8183-0...171...230		
5T055-4394-2...177...110			5T055-7882-0...158...200			5T055-7976-0...169...065			5T055-8184-0...172...070		
5T055-4395-2...116...210			5T055-7887-0...158...150			5T055-7977-2...160...030			5T055-8185-0...172...110		
5T055-4396-0...116...220			5T055-7888-0...158...160			5T055-7981-3...160...100			5T055-8186-0...171...190		
5T055-4636-0...187...110			5T055-7889-0...157...020			5T055-7983-3...160...050			5T057-1113-0...113...120		
204...060			5T055-7891-3...168...010			160...080			159...060		
5T055-5130-0...192...010			5T055-7891-5...168...010			160...120			5T057-6136-0...151...040		
5T055-5131-0...192...020			5T055-7892-0...168...060			160...150			153...040		
193...020			5T055-7893-3...168...020			5T055-7984-0...160...170			5T057-6142-0...154...040		
5T055-5133-0...192...040			5T055-7894-0...168...030			5T055-7985-0...160...190			154...100		
193...040			5T055-7894-4...168...030			5T055-7986-0...160...210			5T057-7222-2...153...030		
5T055-5641-0...130...010			5T055-7896-0...166...040			5T055-7988-0...160...060			5T057-7226-0...153...025		
5T055-6412-2...133...030			5T055-7899-0...161...190			5T055-7988-0...160...130			5T071-4388-0...155...030		
5T055-6415-0...133...035			5T055-7911-4...169...010			5T055-7994-0...78...050			5T071-5647-0...126...090		
5T055-6422-0...134...030			5T055-7913-0...169...040			5T055-7996-0...161...040			5T071-5648-0...126...110		
5T055-6423-0...134...070			5T055-7914-0...169...070			5T055-8111-2...175...010			5T071-6194-0...119...085		
5T055-6451-0...129...010			5T055-7916-0...169...090			5T055-8113-3...175...040			5T071-7221-0...153...010		
5T055-6451-2...129...010			5T055-7917-0...158...030			5T055-8116-0...176...060			5T071-7231-0...154...010		
5T055-6763-0...144...090			5T055-7918-0...158...050			5T055-8116-3...176...060			5T071-7232-0...154...070		
5T055-7221-2...152...010			5T055-7919-0...169...150			5T055-8117-0...175...110			62721-3212-0...130...090		
5T055-7810-0...156...010			5T055-7920-0...169...170			5T055-8119-0...175...020			66363-3924-0...71...190		
5T055-7819-0...157...010			5T055-7921-2...170...010			5T055-8121-2...175...120			72...072		

零件号索引 NUMERICAL INDEX

零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.	零件号 PART No.	页 PAGE	序号 REF.No.
66363-3925-0	71	200									
	72	075									
66363-3949-0	71	120									
66363-3971-0	73	130									
66415-8386-0	72	220									
67111-5583-0	47	020									
	47	050									
	47	080									
67111-5584-0	47	030									
	47	060									
67111-5584-0	47	090									
67950-9542-0	114	280									
68111-4239-0	37	050									
68171-6363-0	89	060									
68728-7615-0	80	080									
69191-6329-0	74	030									
6A000-3982-0	73	060									
6A110-3515-0	71	150									
	72	060									
6A610-3533-0	72	110									