

**Kubota**®

www.kubota.co.jp

Copyright © 2011 by Kubota Corporation. All rights reserved

 
DC-70G

图解零件表  
**ILLUSTRATED PARTS LIST**

**KUBOTA**

型号  
**MODEL DC-70G**

联合收割机  
**COMBINE**

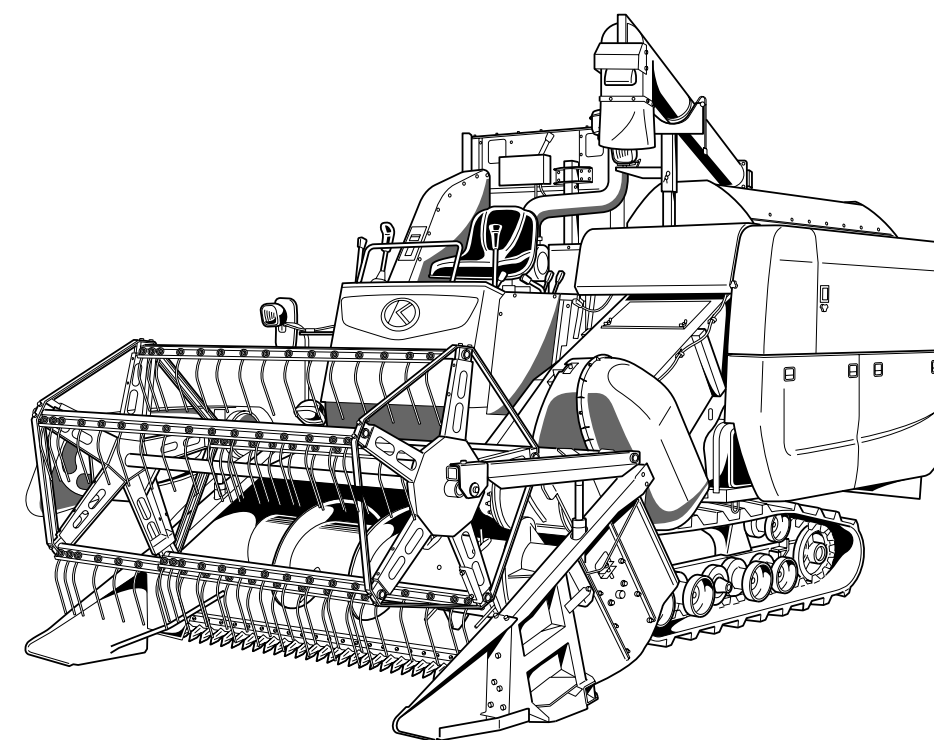

**Kubota**  
久保田农业机械(苏州)有限公司

97900-00950  
7月 2011  
JUL.

注意事项

使用本零件表时，请注意以下事项。

- 1. 订购零件时，请使用本零件表检查确认零件的数量和零件的名称。
- 2. 需要修理时，请参照本零件表中的插图。
- 3. 本零件表如有变更，恕不另行通知。

NOTICE

This Parts List is for the following purposes.

- 1. When ordering parts, check with this Parts List to confirm the part number and the name of parts.
- 2. When making repairs, refer to the illustrations in this Parts List.
- 3. This Parts List is subject to change without notice.

|            |              |                                     |
|------------|--------------|-------------------------------------|
| KALPIS.No. |              | CFK1000011                          |
| BLOCK No.  | LINE No.     | A(1)                                |
| 01         | 01<br>(ENG.) | 1G633-13000<br>V2403-M-DI-TE2-CSKC1 |
| 02         | 01           | 5T076-10009<br>DC-70G-JAPARTS       |
|            | 02           | 5T076-10020<br>DC-70G-T/M           |
|            | 03           | 5T078-00000<br>DC-70G               |

变更通知No.  
DESIGN CHANGE No.

1G700－1421

5T051－0935


5T078－0108

# 使用说明 INSTRUCTIONS

 ①  
**010200** 活塞 / 曲轴  
PISTON / CRANKSHAFT

②  
{B}  
{B}

⑩ → 机器序列号 ; A: ≤15000, B: 14000 至 15000

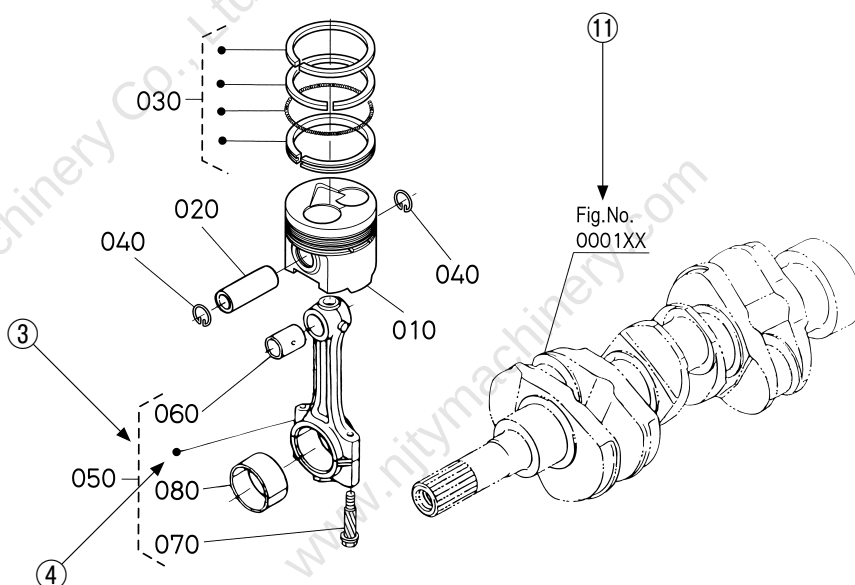

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称  | PART NAME        | 数量 / 机器序列号<br>Q'TY / S.No. |   | 互换<br>I.C. | 备注<br>REMARKS      |
|---------------|-----------------|-------|------------------|----------------------------|---|------------|--------------------|
|               |                 |       |                  | A                          | B |            |                    |
| 010           | 15800-0000-0    | 活塞    | PISTON           | 1<br>≤15000                | - | ↔          | 例-1<br>{Example-1} |
| 010           | 15800-0000-2    | 活塞    | PISTON           | 1<br>≥15001                | - | ↔          |                    |
| 020           | 15800-1000-0    | 活塞销   | PIN, PISTON      | 1<br>≤15000                | - | ↔          | 例-2<br>{Example-2} |
| 020           | 15800-1000-2    | 活塞销   | PIN, PISTON      | 1<br>≥15001                | - | ↔          |                    |
| 030           | 15800-2000-0    | 活塞环组件 | ASSY PISTON RING | 1<br>≤15000                | - | ↔          | 例-3<br>{Example-3} |
| 030           | 15830-2000-0    | 活塞环组件 | ASSY PISTON RING | 1<br>≥15001                | - | ↔          |                    |

- ① 图解号 ..... 表示与各图解名称相对应的代号。
- ② 有关姊妹型号的说明 ..... 表示姊妹型号的类型和标记，并提示这些姐妹样式在本书中的相关页码。
- ③ 组件 ..... 同一组装配组件，是以用虚线括号囊括起来识别。
- ④ 点 ..... 表示该零件不单独出售。购买时，须订购包含有该零件的整套组件(序号为 050)。
- ⑤ 序号 ..... 序号是指为零部件分解图上的零件所配定的代号。通过参照零件列表中的相同序号，即可确认这些零件代号并获取相关零件的信息。
- ⑥ 型号名 ..... 在此栏目中表示基本型号名。其他可适用的型号名则在“备注”栏目(⑨)中表示。
- ⑦ 机器序列号 ..... 表示一组体现设计变化的序列编号。

发动机序列号

7 J 0001

7 K A001

后4位以数字或以字母(A 到 Z)和数字的组合来表示(从 0001 至最大值 Z999)。  
倒数第 5 位 ..... 字母(生产月份)。

| 月份 | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  |
|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
|    | A,B | C,D | E,F | G,H | J,K | L,M | N,P | Q,R | S,T | U,V | W,X | Y,Z |

倒数第 6 位 ..... 字母或数字(生产年份)。

| 年份 | 1998 | 1999 | 2000 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 10 | 11 |
|----|------|------|------|----|----|----|----|----|----|----|----|----|----|----|
|    | W    | X    | Y    | 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | A  | B  |

- ⑧ 互换 ..... 表示在经过设计调整后新旧零件之间有无互换性。
- 例-1 ..... 记号“←”表示新零件可以替代旧零件使用，而相反则不可。  
零件号为 15800-0000-0 的零件适用于序列号为 15000 以下的机器。  
零件号为 15800-0000-2 的零件适用于所有序列号的机器。
- 例-2 ..... 记号“≠”表示新旧零件不可以相互替代使用。  
零件号为 15800-1000-0 的零件适用于序列号为 15000 以下的机器。  
零件号为 15800-1000-2 的零件适用于序列号为 15001 以上的机器。
- 例-3 ..... 记号“↔”表示新旧零件可以相互替代使用。  
零件号为 15800-2000-0 和 15830-2000-0 的零件均适用于所有序列号的机器。
- ⑨ 备注 1 ..... 在此栏目中，注明其他可适用的型号名，尺寸以及特定事项。下列记号和缩写形式在本书中通篇使用。  
29\*12.00-15 ... 轮胎尺寸    sq.m ... m<sup>2</sup>    sq.mm ... mm<sup>2</sup>  
cu.m ... m<sup>3</sup>    cu.mm ... mm<sup>3</sup>    D ... 直径    L ... 长度  
OLD ... 旧部件    Standard(STD) ... 标准    SET ... 组套    T ... 齿数  
SUITABILITY ... 适宜    ACCESSORIES ... 标准附件    OPTION ... 选择  
THRESHING ... 脱粒    HOPPER ... 粮箱    REEL/FEEDER ... 盘/馈线  
Y ... 油菜籽型    GRAIN TANK ... 粮箱    FRONT ... 前
- ⑩ 备注 2 ..... 下列表示方式在各图解的注释中使用。  
机器序列号的表示方式如下。  
≤15000(~15000) ..... 15000 以下的机器序列号。  
≥15001(15001~) ..... 15001 以上的机器序列号。  
14000 to 15000 ..... 从 14000 至 15000 之间的机器序列号。  
对于某些型号，上述表示方式也可使用于备注1(⑨)。
- ⑪ 虚像图号 ..... 表示以虚拟图像显示的零件的图号。带有“XX”的虚像图号，说明该零件具有两个或两个以上的形状。其形状取决于机器的姐妹机型的生产模式或地段。

- ① Fig. No. .... Represents No. corresponding to each group name.
- ② Specifications ..... The types and destinations of sister models are indicated. These indications are given to (for sister models) tell their relevant pages in this book.
- ③ Components ..... The components of an assembly are identified by a bracket of dotted lines.
- ④ Point ..... Indicates that the parts is not sold independently.  
The assembly (Ref.No.050) containing the part needs to be ordered.
- ⑤ REF. No. .... Reference numbers are assigned to parts in the illustration. The code number of a part in the illustration can be identified by referring to the same reference number in the parts list.
- ⑥ Model name ..... The name of the basic model is indicated in this column. Other applicable models are indicated on the "REMARKS" column ⑨.
- ⑦ S. No. .... Indicates a group of serial numbers to which a design change is applied.  
(serial No.)

Engine Serial No.

7 J 0001

7 K A001



Lower 4 digits in Numerals or Alphabetical letter (A to Z) and Numerals (start 0001 to max Z999).

5th digit ..... Alphabetical letter (Month of manufacture).

| Month | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  |
|-------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
|       | A,B | C,D | E,F | G,H | J,K | L,M | N,P | Q,R | S,T | U,V | W,X | Y,Z |

6th digit ..... Numerals or Alphabetical letter (Year of manufacture).

| Year | 1998 | 1999 | 2000 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 10 | 11 |
|------|------|------|------|----|----|----|----|----|----|----|----|----|----|----|
|      | W    | X    | Y    | 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | A  | B  |

- ⑧ I. C. .... Indicates the interchangeability of parts due to design change.  
(interchangeability)
- Example-1 ..... ← indicates that a new part can replace an old part, but not vice versa.  
15800-0000-0 is applicable to the first serial number to S. No. 15000.  
15800-0000-2 is applicable to the first serial number and above.
- Example-2 ..... ≠ indicates that the new and old parts are not interchangeable.  
15800-1000-0 is applicable to the first serial number to S. No. 15000.  
15800-1000-2 is applicable to S. No. 15001 and above.
- Example-3 ..... ↔ indicates that the new and old parts are interchangeable. Both 15800-2000-0 and 15830-2000-0 are applicable to the first serial number and above.
- ⑨ REMARKS 1 ..... In this column, enter other applicable model names, dimensions and other special items.  
The following symbols and abbreviations are used throughout this book.  
29\*12.00-15 ... Tire size    sq.m ... m<sup>2</sup>    sq.mm ... mm<sup>2</sup>  
cu.m ... m<sup>3</sup>    cu.mm ... mm<sup>3</sup>    D ... Diameter    L ... Length  
W/G No. ... Whole goods number.  
STD ... Standard / SET ... Set sale / T ... Teeth  
OLD ... Old parts, old shapes or old models  
NEW ... New parts, new shapes or new models  
Y ... RAPESEED TYPE

⑩ REMARKS 2 ..... The following expressions are used in NOTE for each group.

Machines' serial numbers are indicated as follows.

$\leq 15000$  ..... Serial number below 15000.

$\geq 15001$  ..... Serial number above 15001.

14000 to 15000 ..... Serial number 14000 to 15000.


For some models, the above expressions may also be used REMARKS 1 ⑨.

⑪ Fig. No. .... Indicates the numbers of figures for the parts that are shown in virtual images.  
(virtual images)

A figure numbers with XX means that there are two or more figures depending on the sister models or the production lots.


## 联合收割机序列编号

 如下所示，在联合收割机机身的相应位置标有联合收割机的型号，编号和发动机的号码。请注意，对于不同机型，其号码铭牌的位置也有可能不同。请确认您的联合收割机的机型。

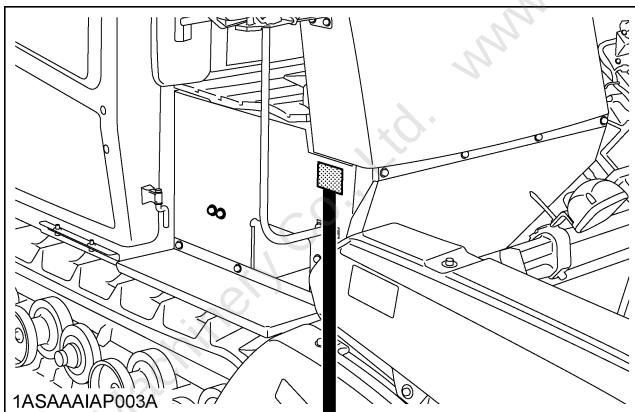


|                              |                      |
|------------------------------|----------------------|
| <b>KUBOTA</b>                |                      |
| <b>COMBINE</b>               | <b>HARVESTER</b>     |
| TYPE                         | <input type="text"/> |
| MODEL                        | <input type="text"/> |
| SERIAL NO.                   | <input type="text"/> |
| <b>MADE IN THAILAND</b>      |                      |
| SIAM KUBOTA TRACTOR CO., LTD |                      |

 1ASAAAHAP093A

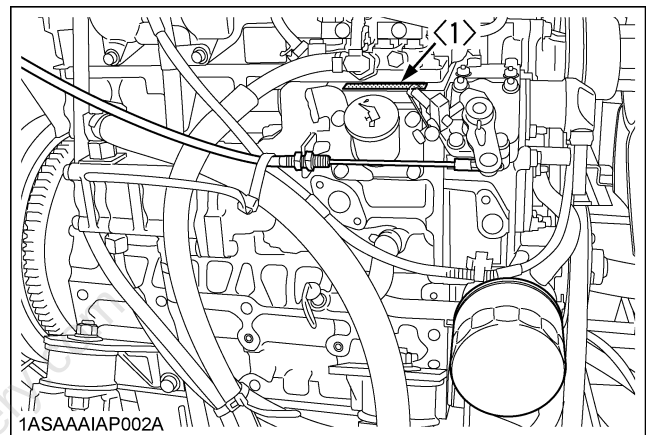

 (1) 发动机的号码

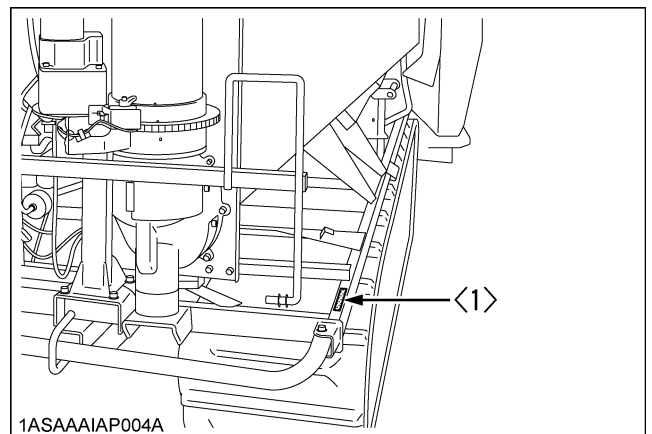


(1) 联合收割机序列编号

# SERIAL NUMBER

 
The model name, machine number and engine number of this product are described in their respective positions, as shown below. Note that their positions may be different depending on the specifications.

Check the specifications of the product.

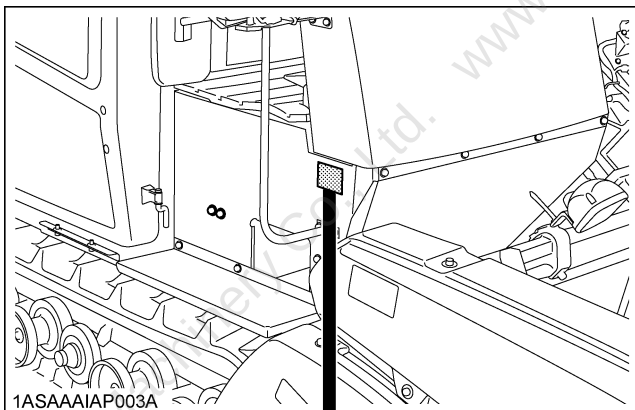


|                              |                      |
|------------------------------|----------------------|
| <b>KUBOTA</b>                |                      |
| <b>COMBINE</b>               | <b>HARVESTER</b>     |
| TYPE                         | <input type="text"/> |
| MODEL                        | <input type="text"/> |
| SERIAL NO.                   | <input type="text"/> |
| <b>MADE IN THAILAND</b>      |                      |
| SIAM KUBOTA TRACTOR CO., LTD |                      |

 1ASAAAHAP093A

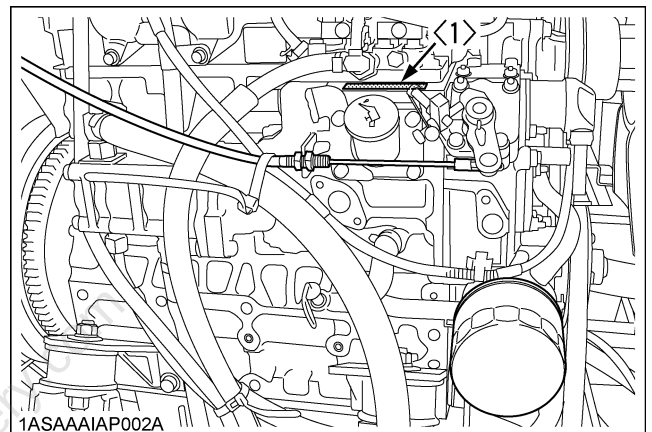

 (1) Engine serial number

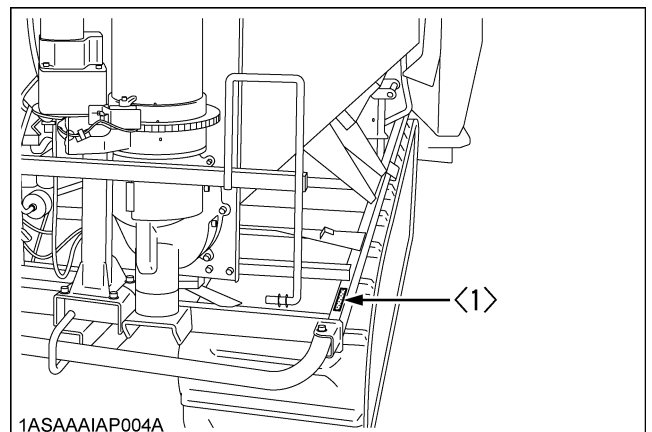

(1) Combine serial number

# 目 录

## [V2403-M-DI-TE2-CSKC1]

|                   |    |
|-------------------|----|
| 000100 曲轴箱        | 1  |
| 000200 机油盘        | 2  |
| 000300 油缸头        | 3  |
| 000400 齿轮箱        | 4  |
| 000500 顶盖         | 5  |
| 000600 机油滤清器      | 6  |
| 000700 油量表        | 7  |
| 000800 油泵         | 8  |
| 010000 主轴承箱       | 9  |
| 010100 凸轮轴和中间齿轮轴  | 10 |
| 010200 活塞和曲柄轴     | 11 |
| 010300 飞轮         | 13 |
| 010500 燃油凸轮轴和调速器轴 | 14 |
| 020000 怠速限制装置     | 15 |
| 020100 熄火电磁阀      | 16 |
| 020200 喷射泵        | 17 |
| 020500 调速板        | 18 |
| 020601 喷油嘴座       | 19 |
| 020602 超流管        | 20 |
| 021200 叉杆(调速器)    | 21 |
| 050000 进出水法兰和节温器  | 22 |
| 050100 水泵         | 23 |
| 050400 风扇         | 24 |
| 060000 气门和摇臂      | 25 |
| 060100 进气歧管       | 26 |
| 060200 排气歧管       | 27 |
| 060600 涡轮增压器      | 28 |
| 061000 油管(涡轮增压器)  | 29 |
| 070200 机油冷却器      | 30 |

## [DC-70G]

|                    |    |
|--------------------|----|
| 130400 燃油箱         | 31 |
| 130500 燃油滤清器[组成部分] | 32 |
| 130801 燃油管 1       | 33 |
| 130802 燃油管 2       | 34 |
| 130900 油水分离器[组成部分] | 35 |
| 150200 散热器         | 36 |
| 150300 水管          | 37 |
| 150500 储备蓄水箱       | 38 |
| 160300 空气滤清器       | 39 |
| 160500 消音器         | 40 |
| 162000 初滤器         | 41 |
| 501000 交流发电机       | 42 |
| 502000 交流发电机[组成部分] | 43 |
| 505000 起动机         | 44 |
| 506000 起动机[组成部分]   | 45 |
| 511000 蓄电池         | 46 |

## [V2403-M-DI-TE2-CSKC1]

|              |    |
|--------------|----|
| 521000 发动机开关 | 47 |
|--------------|----|

## [DC-70G]

|              |    |
|--------------|----|
| 522800 机体继电器 | 48 |
| 523000 驾驶舱开关 | 49 |

## [DC-70G-GRAIN TANK]

|                 |    |
|-----------------|----|
| 526000 开关(储粮罐)  | 50 |
| 526100 继电器(储粮罐) | 51 |

## [DC-70G]

|                |    |
|----------------|----|
| 531000 前面板     | 52 |
| 541001 工作灯(机体) | 53 |

## [DC-70G-THRESHING]

|                |    |
|----------------|----|
| 541002 工作灯(脱粒) | 54 |
|----------------|----|

## [DC-70G-GRAIN TANK]

|                   |    |
|-------------------|----|
| 541003 工作灯(储粮罐) 1 | 55 |
| 541004 工作灯(储粮罐) 2 | 56 |

## [DC-70G-REEL/FEEDER]

|                 |    |
|-----------------|----|
| 541005 工作灯(离合器) | 57 |
|-----------------|----|

## [DC-70G]

|                |    |
|----------------|----|
| 571000 电缆束(机体) | 58 |
|----------------|----|

## [DC-70G-THRESHING]

|                |    |
|----------------|----|
| 572000 电缆束(脱粒) | 59 |
|----------------|----|

## [DC-70G-GRAIN TANK]

|                 |    |
|-----------------|----|
| 573000 电缆束(储粮罐) | 60 |
|-----------------|----|

## [DC-70G-REEL/FEEDER]

|                  |    |
|------------------|----|
| 577000 电缆束(防尘风扇) | 61 |
|------------------|----|

## [DC-70G]

|            |    |
|------------|----|
| A01000 反滑轮 | 62 |
|------------|----|

|               |    |
|---------------|----|
| A01400 张紧(移动) | 63 |
|---------------|----|

|            |    |
|------------|----|
| A11000 传动箱 | 64 |
|------------|----|

|               |    |
|---------------|----|
| A11100 传动箱内 1 | 65 |
|---------------|----|

|               |    |
|---------------|----|
| A11200 传动箱内 2 | 66 |
|---------------|----|

|               |    |
|---------------|----|
| A11300 传动箱内 3 | 67 |
|---------------|----|

|               |    |
|---------------|----|
| A11400 传动箱内 4 | 68 |
|---------------|----|

|             |    |
|-------------|----|
| A20100 刹车内部 | 69 |
|-------------|----|

|                |    |
|----------------|----|
| A22000 HST 输入轴 | 70 |
|----------------|----|

|              |    |
|--------------|----|
| B10800 机油冷却器 | 71 |
|--------------|----|

|            |    |
|------------|----|
| B11000 HST | 72 |
|------------|----|

|                    |    |
|--------------------|----|
| B11100 HST[组成部分] 1 | 73 |
|--------------------|----|

|                    |    |
|--------------------|----|
| B11200 HST[组成部分] 2 | 74 |
|--------------------|----|

|                    |    |
|--------------------|----|
| B11300 HST[组成部分] 3 | 75 |
|--------------------|----|

|             |    |
|-------------|----|
| B23000 液压组件 | 76 |
|-------------|----|

|                    |    |
|--------------------|----|
| B23100 液压组件 [组成部分] | 77 |
|--------------------|----|

|                  |    |
|------------------|----|
| B23300 液压组件(储粮罐) | 78 |
|------------------|----|

|                        |    |
|------------------------|----|
| B23400 液压组件(储粮罐)[组成部分] | 79 |
|------------------------|----|

|            |    |
|------------|----|
| B24500 丰收缸 | 80 |
|------------|----|

|                  |    |
|------------------|----|
| B24600 丰收缸[组成部分] | 81 |
|------------------|----|

|             |    |
|-------------|----|
| B24700 机(筒) | 82 |
|-------------|----|

|                   |    |
|-------------------|----|
| B24800 卸料机汽缸 [零件] | 83 |
|-------------------|----|

|             |    |
|-------------|----|
| B26000 离合器缸 | 84 |
|-------------|----|

|                   |    |
|-------------------|----|
| B26100 离合器缸[组成部分] | 85 |
|-------------------|----|

|            |    |
|------------|----|
| B50400 液压泵 | 86 |
|------------|----|

# 目 录

|                        |     |                         |     |
|------------------------|-----|-------------------------|-----|
| B50500 液压泵[组成部分] ..... | 87  | H40000 脱粒滚筒轴 .....      | 136 |
| B50600 液压软管(罐) .....   | 88  | H40200 脱粒齿 .....        | 137 |
| B70000 油压软管 1 .....    | 89  | H40300 凹板筛 .....        | 138 |
| B70100 油压软管 2 .....    | 90  | H41000 脱粒滚筒驱动齿轮组件 ..... | 139 |
| B70200 油压软管 3 .....    | 91  | H41100 脱粒滚筒驱动轴 .....    | 140 |
| B70300 油压软管 4 .....    | 92  | H42100 脱粒滚筒拉力臂 .....    | 141 |
| B70400 油压软管 5 .....    | 93  | H60000 脱粒机罩 .....       | 142 |
| B70500 油压软管(机) .....   | 94  | H60200 粉尘载阀 .....       | 143 |
| B72000 排油管 .....       | 95  | H80000 清选风机轴 .....      | 144 |
| C00100 主框架 .....       | 96  | H80300 扬谷器箱 .....       | 145 |
| C00200 甲板 .....        | 97  | H80401 摇轴(左) .....      | 146 |
| C00500 发动机底座 .....     | 98  | H80402 摇轴(右) .....      | 147 |
| C01400 工具箱 .....       | 99  | H80700 摆动张力臂 .....      | 148 |
| C10000 履带 .....        | 100 | H90300 晶粒分子筛 .....      | 149 |
| C10101 左侧支重轮 .....     | 101 | H92001 筛箱 .....         | 150 |
| C10102 右侧支重轮 .....     | 102 | H92002 筛子 .....         | 151 |
| C10301 左侧张力框架 .....    | 103 | H92100 筛箱布 .....        | 152 |
| C10302 右侧张力框架 .....    | 104 | J01000 谷粒螺旋轴 .....      | 153 |
| C10401 左侧履带牵引装置 .....  | 105 | J01100 谷粒锥形齿轮箱 .....    | 154 |
| C10402 右侧履带牵引装置 .....  | 106 | J01200 谷粒垂直螺旋杆 .....    | 155 |
| C10501 左侧驱动辊 .....     | 107 | J01500 谷粒输送张紧臂 .....    | 156 |
| C10502 右侧驱动辊 .....     | 108 | J01600 再筛选螺旋轴 .....     | 157 |
| D60100 主变速杆 .....      | 109 | J01700 再筛选驱动链条箱 .....   | 158 |
| D60300 转向器 .....       | 110 | J01800 再筛选驱动箱 .....     | 159 |
| D60500 丰收离合器控制杆 .....  | 111 | J01900 再筛选锥齿轮箱 .....    | 160 |
| D60700 加速器杆 .....      | 112 | J02000 再筛选垂直螺旋杆 .....   | 161 |
| D60800 脱粒离合器控制板 .....  | 113 | J20700 开闭盖 .....        | 162 |
| D61000 主变速手柄 .....     | 114 | J20800 脱粒封面(前/后) .....  | 163 |
| D61100 副变速手柄 .....     | 115 | J20900 脱粒封面(一侧) .....   | 164 |
| D62000 刹车踏板 .....      | 116 | J80000 标签(脱粒) .....     | 165 |
| D63400 丰收移动臂 .....     | 117 | [DC-70G-GRAIN TANK]     |     |
| E60000 运行框架 .....      | 118 | K00100 储粮罐 .....        | 166 |
| E60100 操作面板 .....      | 119 | K00300 净化管 .....        | 167 |
| E60300 座椅 .....        | 120 | K00600 粮箱锁 .....        | 168 |
| E60400 防尘盖 1 .....     | 121 | K10100 储罐后盖 .....       | 169 |
| E60600 防尘盖 2 .....     | 122 | K10500 罐(下部) .....      | 170 |
| E60900 后视镜 .....       | 123 | K18000 粮箱(驱动器箱) .....   | 171 |
| E75000 顶篷 .....        | 124 | K20000 机(箱 1) .....     | 172 |
| G90100 标签(机体) .....    | 125 | K20100 罐(螺丝轴) .....     | 173 |
| G95000 标准附件 .....      | 126 | K20200 尾气快门 .....       | 174 |
| [DC-70G-THRESHING]     |     | K20500 纵向螺旋轴 .....      | 175 |
| H00101 脱粒框架(上) .....   | 127 | K20600 发动机 .....        | 176 |
| H00102 脱离框架(下) .....   | 128 | K20900 安装框架 .....       | 177 |
| H01000 清选风机板 .....     | 129 | K23000 机(箱 2) .....     | 178 |
| H01100 风向板 .....       | 130 | K23400 传动轴 .....        | 179 |
| H01200 进口板 .....       | 131 | K24000 机(箱 3) .....     | 180 |
| H02000 喷粉罩 .....       | 132 | K30000 机体 .....         | 181 |
| H30600 脱粒张力臂 .....     | 133 | K30300 机(固定件) .....     | 182 |
| H30700 丰收张力组件 .....    | 134 | K31500 粮箱(驱动器) .....    | 183 |
| H31300 丰收杆 .....       | 135 | K31700 罐(离合器) .....     | 184 |

## 目 录

|                         |     |
|-------------------------|-----|
| K80000 标签(储粮罐) .....    | 185 |
| [DC-70G-REEL/FEEDER]    |     |
| U00300 尖端 .....         | 186 |
| U00400 盘(中心轴) .....     | 187 |
| U01100 盘(调节器) .....     | 188 |
| U01200 盘(架) .....       | 189 |
| U10700 张紧臂 .....        | 190 |
| U20000 丰收框架 .....       | 191 |
| U20200 丰收框架罩 .....      | 192 |
| U21000 螺旋鼓 .....        | 193 |
| U21100 螺旋滚筒轴 .....      | 195 |
| U21200 螺旋鼓链 .....       | 196 |
| U21700 钩爪轴 .....        | 198 |
| U23100 丰收传动轴 .....      | 199 |
| U30100 割刀驱动臂 .....      | 200 |
| U30600 割刀驱动轴 .....      | 201 |
| U40000 割刀 .....         | 202 |
| U40200 分压器(左) .....     | 203 |
| U40300 分压器(右) .....     | 204 |
| U70300 盘(移动缸) .....     | 205 |
| U70500 盘移动缸[组成部分] ..... | 206 |
| U75000 馈线框架 .....       | 207 |
| U75100 馈线罩 .....        | 208 |
| U75300 馈线风扇罩 .....      | 209 |
| U76000 馈线传动轴 .....      | 210 |
| U76100 馈线传动链 .....      | 211 |
| U76300 馈线链 .....        | 212 |
| U76600 馈线滚筒 .....       | 213 |
| U90100 标签(盘/馈线) .....   | 214 |
| ■ 零件号索引 .....           | 215 |

# CONTENTS

|                                                  |    |                                                               |    |
|--------------------------------------------------|----|---------------------------------------------------------------|----|
| [V2403-M-DI-TE2-CSKC1]                           |    | [DC-70G]                                                      |    |
| 000100 CRANK CASE .....                          | 1  | 522800 BODY RELAY .....                                       | 48 |
| 000200 OIL PAN .....                             | 2  | 523000 COCKPIT SWITCH .....                                   | 49 |
| 000300 CYLINDER HEAD .....                       | 3  | [DC-70G-GRAIN TANK]                                           |    |
| 000400 GEAR CASE .....                           | 4  | 526000 SWITCH (GRAIN TANK) .....                              | 50 |
| 000500 HEAD COVER .....                          | 5  | 526100 RELAY (GRAIN TANK) .....                               | 51 |
| 000600 OIL FILTER .....                          | 6  | [DC-70G]                                                      |    |
| 000700 DIPSTICK AND GUIDE .....                  | 7  | 531000 FRONT PANEL .....                                      | 52 |
| 000800 OIL PUMP .....                            | 8  | 541001 WORK LIGHT (BODY) .....                                | 53 |
| 010000 MAIN BEARING CASE .....                   | 9  | [DC-70G-THRESHING]                                            |    |
| 010100 CAMSHAFT AND IDLE GEAR SHAFT .....        | 10 | 541002 WORK LIGHT (THRESHING) .....                           | 54 |
| 010200 PISTON AND CRANKSHAFT .....               | 11 | [DC-70G-GRAIN TANK]                                           |    |
| 010300 FLYWHEEL .....                            | 13 | 541003 WORK LIGHT (GRAIN TANK) 1 .....                        | 55 |
| 010500 FUEL CAMSHAFT AND GOVERNOR<br>SHAFT ..... | 14 | 541004 WORK LIGHT (GRAIN TANK) 2 .....                        | 56 |
| 020000 IDLE APPARATUS .....                      | 15 | [DC-70G-REEL/FEEDER]                                          |    |
| 020100 STOP SOLENOID .....                       | 16 | 541005 WORK LIGHT (HARVEST) .....                             | 57 |
| 020200 INJECTION PUMP .....                      | 17 | [DC-70G]                                                      |    |
| 020500 SPEED CONTROL PLATE .....                 | 18 | 571000 WIRE HARNESS (BODY) .....                              | 58 |
| 020601 NOZZLE HOLDER .....                       | 19 | [DC-70G-THRESHING]                                            |    |
| 020602 OVER FLOW PIPE .....                      | 20 | 572000 WIRE HARNESS (THRESHING) .....                         | 59 |
| 021200 FORK LEVER (GOVERNOR) .....               | 21 | [DC-70G-GRAIN TANK]                                           |    |
| 050000 WATER FLANGE AND THERMOSTAT .....         | 22 | 573000 WIRE HARNESS (GRAIN TANK) .....                        | 60 |
| 050100 WATER PUMP .....                          | 23 | [DC-70G-REEL/FEEDER]                                          |    |
| 050400 COOLER FAN .....                          | 24 | 577000 WIRE HARNESS (DUSTPROOF FAN) .....                     | 61 |
| 060000 VALVE AND ROCKER ARM .....                | 25 | [DC-70G]                                                      |    |
| 060100 INLET MANIFOLD .....                      | 26 | A01000 COUNTER PULLEY .....                                   | 62 |
| 060200 EXHAUST MANIFOLD .....                    | 27 | A01400 TENSION (TRAVEL) .....                                 | 63 |
| 060600 TURBO CHARGER .....                       | 28 | A11000 TRANSMISSION CASE .....                                | 64 |
| 061000 OIL PIPE (TURBO CHARGER) .....            | 29 | A11100 TRANSMISSION CASE INSIDE 1 .....                       | 65 |
| 070200 OIL COOLER .....                          | 30 | A11200 TRANSMISSION CASE INSIDE 2 .....                       | 66 |
| [DC-70G]                                         |    | A11300 TRANSMISSION CASE INSIDE 3 .....                       | 67 |
| 130400 FUEL TANK .....                           | 31 | A11400 TRANSMISSION CASE INSIDE 4 .....                       | 68 |
| 130500 FUEL FILTER [COMPONENT PARTS] .....       | 32 | A20100 BRAKE INSIDE .....                                     | 69 |
| 130801 FUEL PIPE 1 .....                         | 33 | A22000 HST INPUT SHAFT .....                                  | 70 |
| 130802 FUEL PIPE 2 .....                         | 34 | B10800 OIL COOLER .....                                       | 71 |
| 130900 SEPARATOR [COMPONENT PARTS] .....         | 35 | B11000 HST .....                                              | 72 |
| 150200 RADIATOR .....                            | 36 | B11100 HST [COMPONENT PARTS] 1 .....                          | 73 |
| 150300 WATER PIPE .....                          | 37 | B11200 HST [COMPONENT PARTS] 2 .....                          | 74 |
| 150500 RESERVE TANK .....                        | 38 | B11300 HST [COMPONENT PARTS] 3 .....                          | 75 |
| 160300 AIR CLEANER .....                         | 39 | B23000 HYDRAULIC UNIT .....                                   | 76 |
| 160500 MUFFLER .....                             | 40 | B23100 HYDRAULIC UNIT<br>[COMPONENT PARTS] .....              | 77 |
| 162000 PRE-CLEANER .....                         | 41 | B23300 HYDRAULIC UNIT (GRAIN TANK) .....                      | 78 |
| 501000 ALTERNATOR .....                          | 42 | B23400 HYDRAULIC UNIT<br>(GRAIN TANK) [COMPONENT PARTS] ..... | 79 |
| 502000 ALTERNATOR [COMPONENT PARTS] .....        | 43 | B24500 HARVEST CYLINDER .....                                 | 80 |
| 505000 STARTER .....                             | 44 | B24600 HARVEST CYLINDER<br>[COMPONENT PARTS] .....            | 81 |
| 506000 STARTER [COMPONENT PARTS] .....           | 45 | B24700 UNLOADER CYLINDER .....                                | 82 |
| 511000 BATTERY .....                             | 46 |                                                               |    |
| [V2403-M-DI-TE2-CSKC1]                           |    |                                                               |    |
| 521000 ENGINE SWITCH .....                       | 47 |                                                               |    |

# CONTENTS

 
|                    |                                               |     |                     |                                      |     |
|--------------------|-----------------------------------------------|-----|---------------------|--------------------------------------|-----|
| B24800             | UNLOADER CYLINDER<br>[COMPONENT PARTS] .....  | 83  | H00102              | THRESHING FRAME(LOWER) .....         | 128 |
| B26000             | CLUTCH CYLINDER .....                         | 84  | H01000              | WINNOWER PLATE .....                 | 129 |
| B26100             | CLUTCH CYLINDER<br>[COMPONENT PARTS] .....    | 85  | H01100              | WIND DIRECTION PLATE .....           | 130 |
| B50400             | HYDRAULIC PUMP .....                          | 86  | H01200              | INLET PLATE .....                    | 131 |
| B50500             | HYDRAULIC PUMP<br>[COMPONENT PARTS] .....     | 87  | H02000              | DUSTING COVER .....                  | 132 |
| B50600             | HYDRAULIC TANK .....                          | 88  | H30600              | THRESHING TENSION ARM .....          | 133 |
| B70000             | HYDRAULIC HOSE 1 .....                        | 89  | H30700              | HARVEST TENSION ARM .....            | 134 |
| B70100             | HYDRAULIC HOSE 2 .....                        | 90  | H31300              | HARVEST REVERSAL LEVER .....         | 135 |
| B70200             | HYDRAULIC HOSE 3 .....                        | 91  | H40000              | THRESHING CYLINDER SHAFT .....       | 136 |
| B70300             | HYDRAULIC HOSE 4 .....                        | 92  | H40200              | THRESHING CYLINDER TOOTH .....       | 137 |
| B70400             | HYDRAULIC HOSE 5 .....                        | 93  | H40300              | CONCAVE .....                        | 138 |
| B70500             | HYDRAULIC HOSE (UNLOADER) .....               | 94  | H41000              | THRESHING CYLINDER DRIVE CASE .....  | 139 |
| B72000             | OIL DRAIN HOSE .....                          | 95  | H41100              | THRESHING CYLINDER DRIVE SHAFT ..... | 140 |
| C00100             | MAIN FRAME .....                              | 96  | H42100              | THRESHING CYLINDER TENSION ARM ..... | 141 |
| C00200             | DECK .....                                    | 97  | H60000              | THRESHING BONNET .....               | 142 |
| C00500             | ENGINE BASE .....                             | 98  | H60200              | DUST CARRYING VALVE .....            | 143 |
| C01400             | TOOL BOX .....                                | 99  | H80000              | WINNOWER SHAFT .....                 | 144 |
| C10000             | CRAWLER .....                                 | 100 | H80300              | WINNOWER CASE .....                  | 145 |
| C10101             | TRACK ROLLER LH .....                         | 101 | H80401              | ROCKING SHAFT(LEFT) .....            | 146 |
| C10102             | TRACK ROLLER RH .....                         | 102 | H80402              | ROCKING SHAFT(RIGHT) .....           | 147 |
| C10301             | TENSION FRAME LH .....                        | 103 | H80700              | ROCKING TENSION ARM .....            | 148 |
| C10302             | TENSION FRAME RH .....                        | 104 | H90300              | GRAIN SIEVE .....                    | 149 |
| C10401             | CRAWLER GUIDE LH .....                        | 105 | H92001              | SIEVE CASE .....                     | 150 |
| C10402             | CRAWLER GUIDE RH .....                        | 106 | H92002              | SIEVE .....                          | 151 |
| C10501             | DRIVE ROLLER LH .....                         | 107 | H92100              | SIEVE CASE CLOTH .....               | 152 |
| C10502             | DRIVE ROLLER RH .....                         | 108 | J01000              | FIRST HORIZONTAL AUGER SHAFT .....   | 153 |
| D60100             | MAIN SHIFT LEVER (HST ROD) .....              | 109 | J01100              | FIRST BEVEL GEAR CASE .....          | 154 |
| D60300             | STEERING .....                                | 110 | J01200              | FIRST VERTICAL AUGER SHAFT .....     | 155 |
| D60500             | HARVEST CLUTCH LEVER .....                    | 111 | J01500              | FIRST TENSION ARM .....              | 156 |
| D60700             | ACCELERATOR LEVER .....                       | 112 | J01600              | SECOND HORIZONTAL AUGER SHAFT .....  | 157 |
| D60800             | THRESHING CLUTCH LEVER .....                  | 113 | J01700              | SECOND DRIVE CHAIN CASE .....        | 158 |
| D61000             | MAIN SP-CHANGE LEVER/RESTRAINT<br>LEVER ..... | 114 | J01800              | SECOND CASE .....                    | 159 |
| D61100             | RANGE GEAR SHIFT LEVER .....                  | 115 | J01900              | SECOND BEVEL GEAR CASE .....         | 160 |
| D62000             | BRAKE PEDAL .....                             | 116 | J02000              | SECOND VERTICAL AUGER SHAFT .....    | 161 |
| D63400             | HARVEST ELEVATOR ARM .....                    | 117 | J20700              | OPEN-CLOSE COVER .....               | 162 |
| E60000             | OPERATION FRAME .....                         | 118 | J20800              | THRESHING COVER(FRONT/BACK) .....    | 163 |
| E60100             | OPERATION PANEL .....                         | 119 | J20900              | THRESHING COVER(SIDE) .....          | 164 |
| E60300             | SEAT .....                                    | 120 | J80000              | LABEL(THRESHING) .....               | 165 |
| E60400             | DUSTPROOF COVER 1 .....                       | 121 | [DC-70G-GRAIN TANK] |                                      |     |
| E60600             | DUSTPROOF COVER 2 .....                       | 122 | K00100              | GRAIN TANK .....                     | 166 |
| E60900             | REARVIEW MIRROR .....                         | 123 | K00300              | CLEANING PORT .....                  | 167 |
| E75000             | CANOPY .....                                  | 124 | K00600              | TANK LOCK .....                      | 168 |
| G90100             | LABEL(BODY) .....                             | 125 | K10100              | TANK COVER REAR .....                | 169 |
| G95000             | ACCESSORIES .....                             | 126 | K10500              | TANK COVER UNDER .....               | 170 |
| [DC-70G-THRESHING] |                                               |     | K18000              | TANK DRIVE CASE .....                | 171 |
| H00101             | THRESHING FRAME(UPPER) .....                  | 127 | K20000              | UNLOADER CASE 1 .....                | 172 |
|                    |                                               |     | K20100              | TANK SCREW SHAFT .....               | 173 |
|                    |                                               |     | K20200              | EXHAUST SHUTTER .....                | 174 |
|                    |                                               |     | K20500              | VERTICAL AUGER SHAFT .....           | 175 |
|                    |                                               |     | K20600              | UNLOADER MOTOR .....                 | 176 |

# CONTENTS

---

|                      |                                                   |     |
|----------------------|---------------------------------------------------|-----|
| K20900               | MOUNTING FRAME .....                              | 177 |
| K23000               | UNLOADER CASE 2 .....                             | 178 |
| K23400               | TRANSMISSION SHAFT .....                          | 179 |
| K24000               | UNLOADER CASE 3 .....                             | 180 |
| K30000               | UNLOADER .....                                    | 181 |
| K30300               | UNLOADER STAY .....                               | 182 |
| K31500               | TANK DRIVE .....                                  | 183 |
| K31700               | TANK CLUTCH .....                                 | 184 |
| K80000               | LABEL (GRAIN TANK) .....                          | 185 |
| [DC-70G-REEL/FEEDER] |                                                   |     |
| U00300               | TINE .....                                        | 186 |
| U00400               | REEL CENTER SHAFT .....                           | 187 |
| U01100               | REEL ADJUSTMENT .....                             | 188 |
| U01200               | REEL FRAME .....                                  | 189 |
| U10700               | TENSION ARM .....                                 | 190 |
| U20000               | HARVEST FRAME .....                               | 191 |
| U20200               | HARVEST FRAME COVER .....                         | 192 |
| U21000               | AUGER DRUM .....                                  | 193 |
| U21100               | AUGER DRUM SHAFT .....                            | 195 |
| U21200               | AUGER DRUM CHAIN .....                            | 196 |
| U21700               | FINGER SHAFT .....                                | 198 |
| U23100               | HARVEST DRIVE SHAFT .....                         | 199 |
| U30100               | CUTTING BLADE DRIVE ARM .....                     | 200 |
| U30600               | CUTTING BLADE DRIVE SHAFT .....                   | 201 |
| U40000               | CUTTING BLADE .....                               | 202 |
| U40200               | DIVIDER(LEFT) .....                               | 203 |
| U40300               | DIVIDER(RIGHT) .....                              | 204 |
| U70300               | REEL ELEVATOR CYLINDER .....                      | 205 |
| U70500               | REEL ELEVATOR CYLINDER<br>[COMPONENT PARTS] ..... | 206 |
| U75000               | FEEDER FRAME .....                                | 207 |
| U75100               | FEEDER COVER .....                                | 208 |
| U75300               | FEEDER FAN COVER .....                            | 209 |
| U76000               | FEEDER DRIVE SHAFT .....                          | 210 |
| U76100               | FEEDER DRIVE CHAIN .....                          | 211 |
| U76300               | FEEDER CHAIN .....                                | 212 |
| U76600               | FEEDER DRUM .....                                 | 213 |
| U90100               | LABEL(REEL/FEEDER) .....                          | 214 |
| ■                    | NUMERICAL INDEX .....                             | 215 |


# 按功能划分的目录

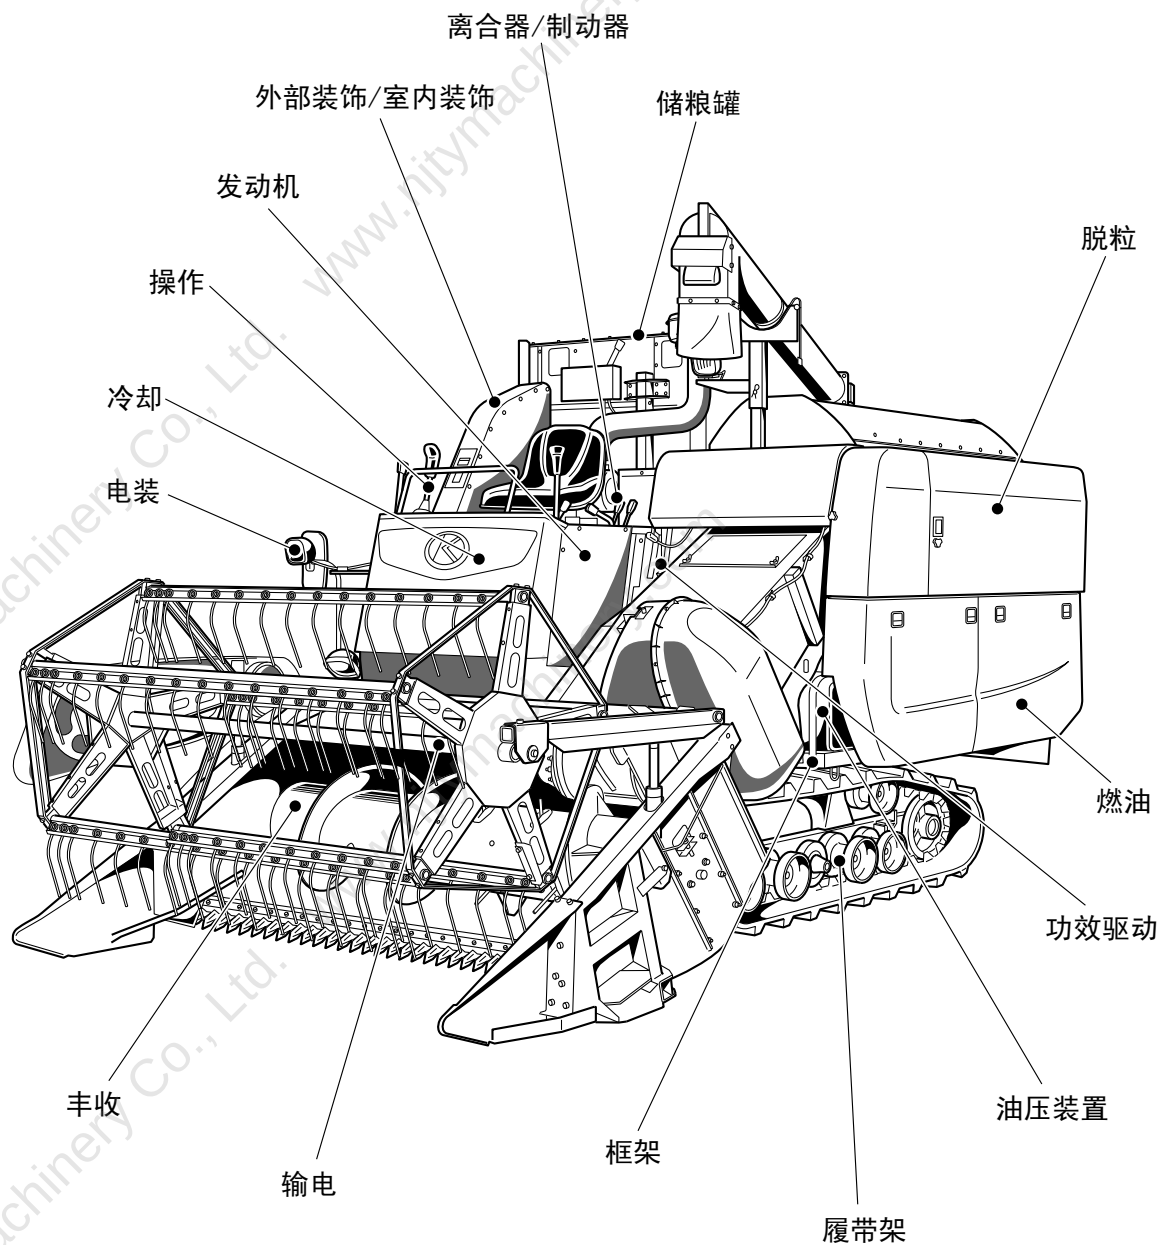

标签

标准附件

# SECTION CONTENTS



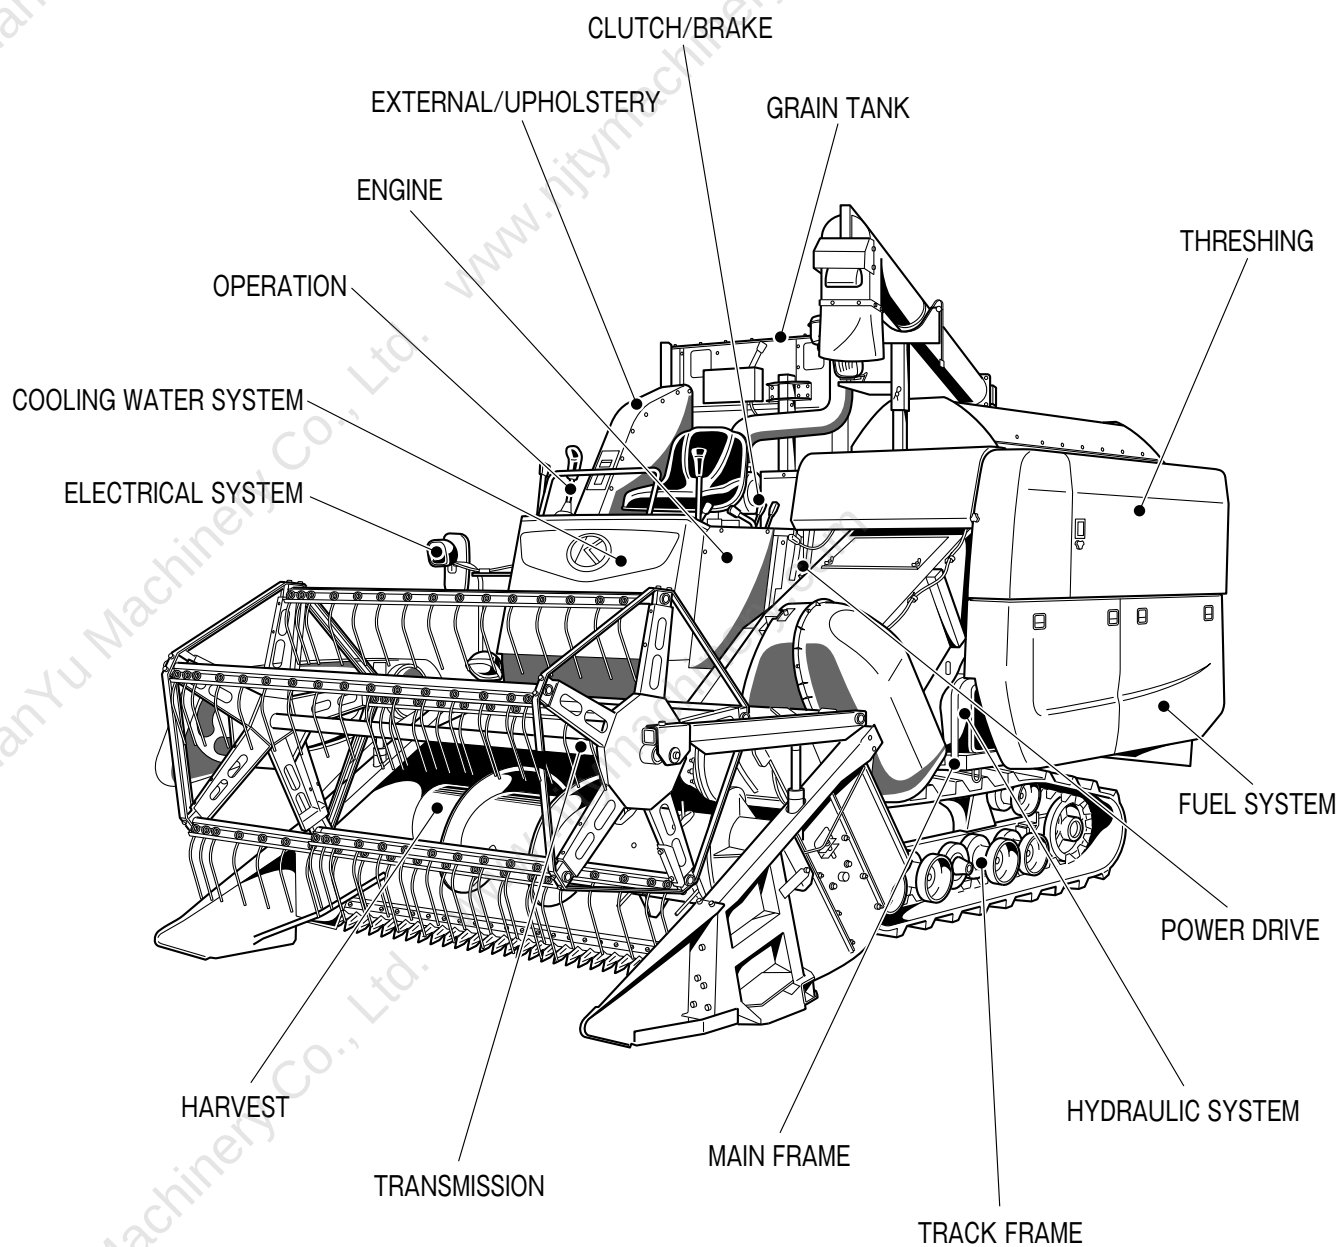 


LABELS

ACCESSORIES

## [ 带图解目录的阅读方法 ]
   
### 图解示例
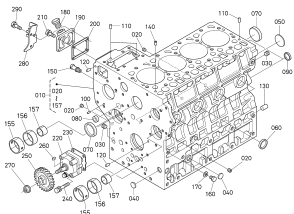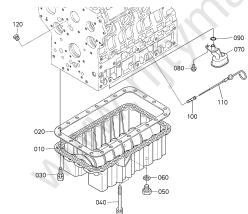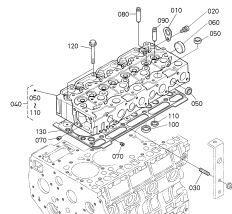
|                                                                                                                               |                                                                                                           |                                                                                                             |                                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div style="display: flex; justify-content: space-between; align-items: center;"> <span>发动机</span> <span>← 步骤 1</span> </div> |                                                                                                           |                                                                                                             |                                                                                                                                                                   |
| Fig.No. 000100<br>曲轴箱<br>                    | Fig.No. 000200<br>油盘<br> | Fig.No. 000300<br>汽缸头<br> | <div style="display: flex; flex-direction: column; align-items: center;"> <div>← 步骤 2</div> <div>← 步骤 3</div> <div style="margin-top: 100px;">← 步骤 4</div> </div> |
| Fig.No. 000500<br>汽缸头盖                                                                                                        | Fig.No. 010000<br>主轴承箱                                                                                    | Fig.No. 010100<br>凸轮轴和中间齿轮轴                                                                                 | Fig.No. 010200<br>活塞和曲柄轴                                                                                                                                          |

步骤 1：表示“按功能划分的目录”中的项目名。

步骤 2：表示在本文中所配定的图解号。

（图解号 ... 000300）

步骤 3：表示相应的图解名称。




步骤 4：表示相应的图解内容。

如何检索：

在目录部分选择您要查找的项目。在步骤1中找到相同的项目。在步骤4中找到要查找的部件。在步骤2和步骤3中，参阅组件的页码并检索相应的部件号。

## [How to read contents with illustrations]

   Illustration example
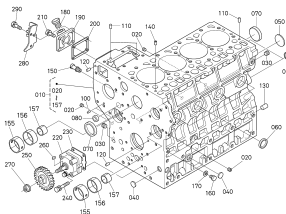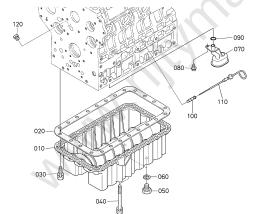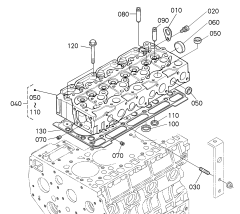
| ENGINE ← <b>STEP1</b>                                                                                            |                                                                                                                |                                                                                                                       |                                                        |
|------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| Fig.No. 000100<br>CRANKCASE<br> | Fig.No. 000200<br>OIL PAN<br> | Fig.No. 000300<br>CYLINDER HEAD<br> | ← <b>STEP2</b><br>← <b>STEP3</b><br><br>← <b>STEP4</b> |
| Fig.No. 000500<br>HEAD COVER                                                                                     | Fig.No. 010000<br>MAIN BEARING CASE                                                                            | Fig.No. 010100<br>CAMSHAFT AND IDLE GEAR SHAFT                                                                        | Fig.No. 010200<br>PISTON AND CRANKSHAFT                |

STEP1: This indicates the items listed in SECTION CONTENTS.

STEP2: These indicate the figure number given in the text.

(Fig. No...000300)

















STEP3: This indicates the group name in the text.

















STEP4: This indicates the illustrations of the group in the text.

How to retrieve:

Look at SECTION CONTENTS to select an item you are looking for. In STEP1, find the same item. In STEP4, find the part you are searching. In STEP2 and STEP3, refer to the page of the group and retrieve the part number.

# 发动机 ENGINE
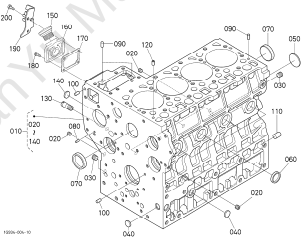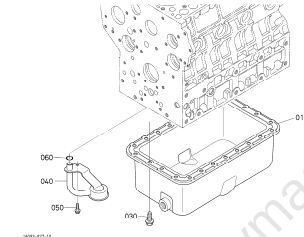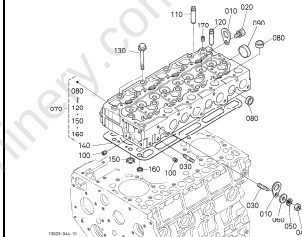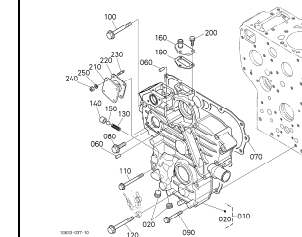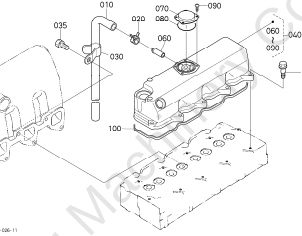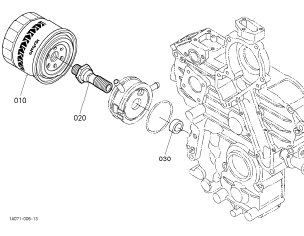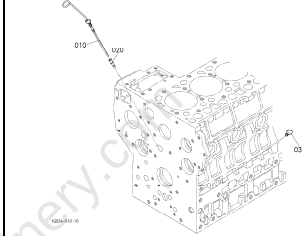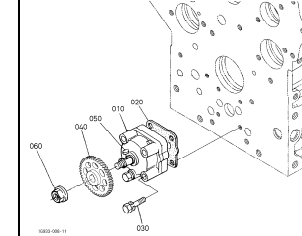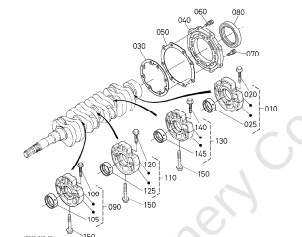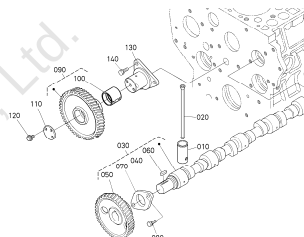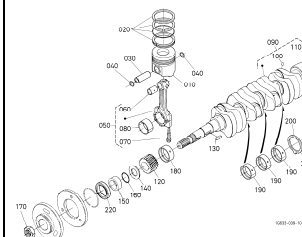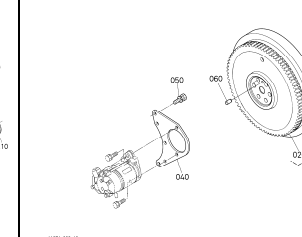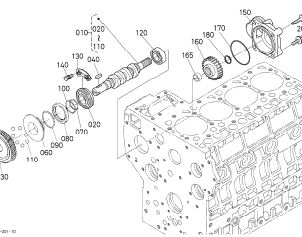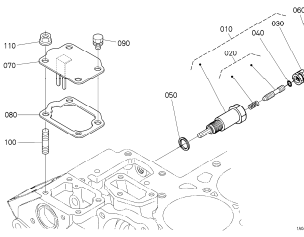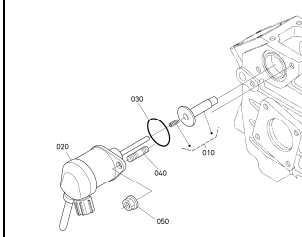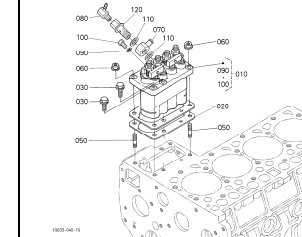                
|                                                                                                                                                                     |                                                                                                                                                                |                                                                                                                                                       |                                                                                                                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. 000100</p> <p>曲轴箱</p> <p>CRANK CASE</p>                                 | <p>Fig.No. 000200</p> <p>机油盘</p> <p>OIL PAN</p>                               | <p>Fig.No. 000300</p> <p>油缸头</p> <p>CYLINDER HEAD</p>               | <p>Fig.No. 000400</p> <p>齿轮箱</p> <p>GEAR CASE</p>         |
| <p>Fig.No. 000500</p> <p>顶盖</p> <p>HEAD COVER</p>                                 | <p>Fig.No. 000600</p> <p>机油滤清器</p> <p>OIL FILTER</p>                         | <p>Fig.No. 000700</p> <p>油量计</p> <p>DIPSTICK AND GUIDE</p>         | <p>Fig.No. 000800</p> <p>油泵</p> <p>OIL PUMP</p>          |
| <p>Fig.No. 010000</p> <p>主轴承箱</p> <p>MAIN BEARING CASE</p>                       | <p>Fig.No. 010100</p> <p>凸轮轴和中间齿轮轴</p> <p>CAMSHAFT AND IDLE GEAR SHAFT</p>  | <p>Fig.No. 010200</p> <p>活塞和曲柄轴</p> <p>PISTON AND CRANKSHAFT</p>  | <p>Fig.No. 010300</p> <p>飞轮</p> <p>FLYWHEEL</p>         |
| <p>Fig.No. 010500</p> <p>燃油凸轮轴和调速器轴</p> <p>FUEL CAMSHAFT AND GOVERNOR SHAFT</p>  | <p>Fig.No. 020000</p> <p>怠速限制装置</p> <p>IDLE APPARATUS</p>                   | <p>Fig.No. 020100</p> <p>熄火电磁阀</p> <p>STOP SOLENOID</p>           | <p>Fig.No. 020200</p> <p>喷射泵</p> <p>INJECTION PUMP</p>  |
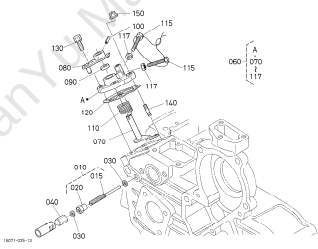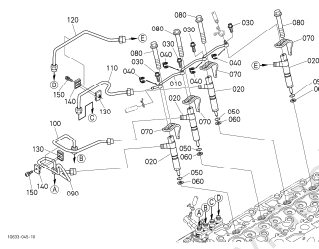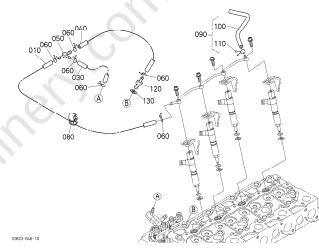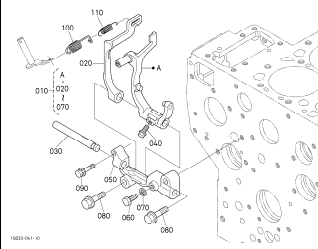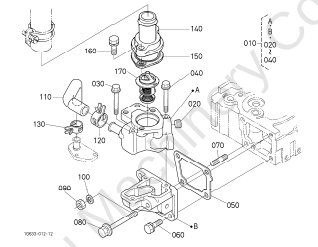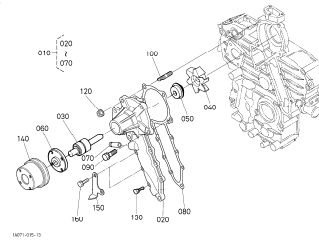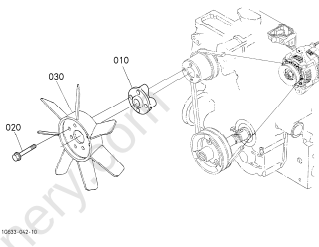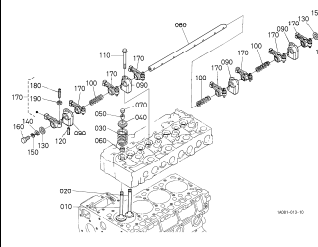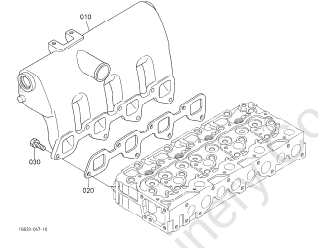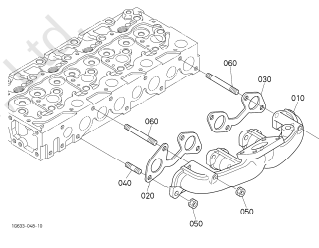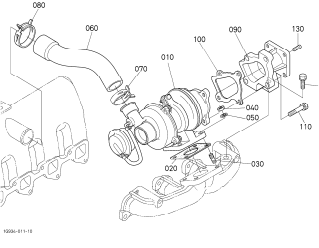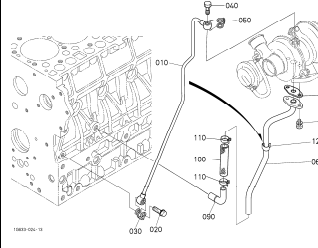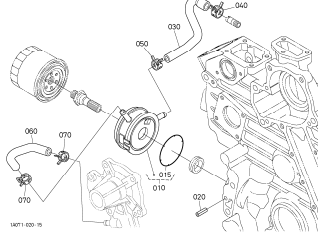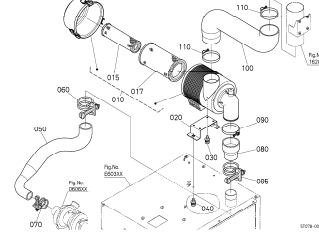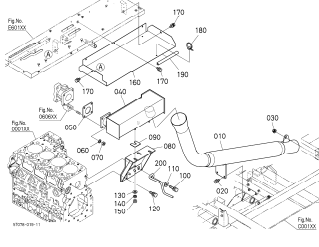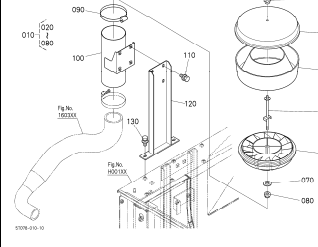                
|                                                                                                                                                                     |                                                                                                                                                      |                                                                                                                                                     |                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>020500</b></p> <p>调速板</p> <p>SPEED CONTROL PLATE</p>                 | <p>Fig.No. <b>020601</b></p> <p>喷油嘴座</p> <p>NOZZLE HOLDER</p>       | <p>Fig.No. <b>020602</b></p> <p>超流管</p> <p>OVER FLOW PIPE</p>     | <p>Fig.No. <b>021200</b></p> <p>叉杆 (调速器)</p> <p>FORK LEVER(GOVERNOR)</p>         |
| <p>Fig.No. <b>050000</b></p> <p>进出水法兰和节温器</p> <p>WATER FLANGE AND THERMOSTAT</p>  | <p>Fig.No. <b>050100</b></p> <p>水泵</p> <p>WATER PUMP</p>           | <p>Fig.No. <b>050400</b></p> <p>风扇</p> <p>COOLER FAN</p>         | <p>Fig.No. <b>060000</b></p> <p>气门和摇臂</p> <p>VALVE AND ROCKER ARM</p>           |
| <p>Fig.No. <b>060100</b></p> <p>进气歧管</p> <p>INLET MANIFOLD</p>                   | <p>Fig.No. <b>060200</b></p> <p>排气歧管</p> <p>EXHAUST MANIFOLD</p>  | <p>Fig.No. <b>060600</b></p> <p>涡轮增压器</p> <p>TURBO CHARGER</p>  | <p>Fig.No. <b>061000</b></p> <p>油管 (涡轮增压器)</p> <p>OIL PIPE(TURBO CHARGER)</p>  |
| <p>Fig.No. <b>070200</b></p> <p>机油冷却器</p> <p>OIL COOLER</p>                      | <p>Fig.No. <b>160300</b></p> <p>空气滤清器</p> <p>AIR CLEANER</p>      | <p>Fig.No. <b>160500</b></p> <p>消音器</p> <p>MUFFLER</p>          | <p>Fig.No. <b>162000</b></p> <p>初滤器</p> <p>PRE-CLEANER</p>                     |

## 燃油 FUEL SYSTEM


 
 
 
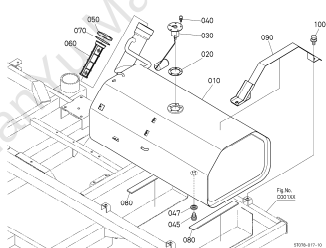 
|                                                                                                                                     |                                                                                                                                                                 |                                                                                                                                          |                                                                                                                                           |
|-------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. 130400</p> <p>燃油箱</p> <p>FUEL TANK</p>  | <p>Fig.No. 130500</p> <p>燃油滤清器[组成部分]</p> <p>FUEL FILTER [COMPONENT PARTS]</p>  | <p>Fig.No. 130801</p> <p>燃油管 1</p> <p>FUEL PIPE 1</p>  | <p>Fig.No. 130802</p> <p>燃油管 2</p> <p>FUEL PIPE 2</p>  |
|-------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|




Fig.No. 130900

油水分离器[组成部分]




 
SEPARATOR [COMPONENT PARTS]

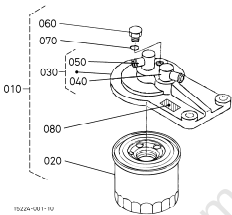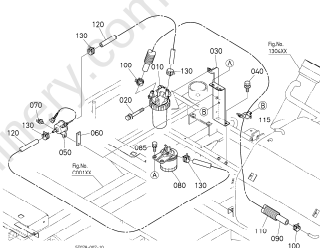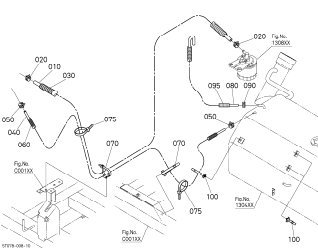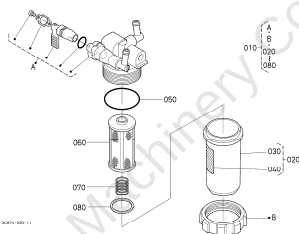

## 冷却 COOLING WATER SYSTEM
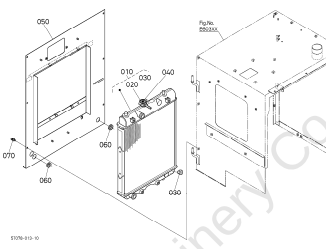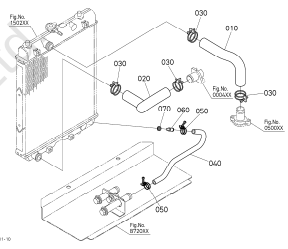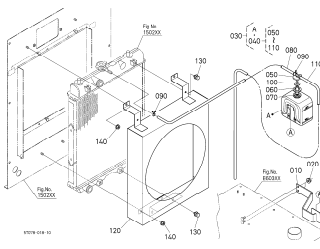   
|                                                                                                                                      |                                                                                                                                       |                                                                                                                                            |  |
|--------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|--|
| <p>Fig.No. 150200</p> <p>散热器</p> <p>RADIATOR</p>  | <p>Fig.No. 150300</p> <p>水管</p> <p>WATER PIPE</p>  | <p>Fig.No. 150500</p> <p>储备水箱</p> <p>RESERVE TANK</p>  |  |
|--------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|--|

## 电装 ELECTRICAL SYSTEM
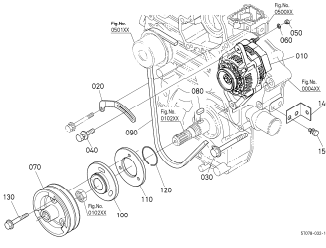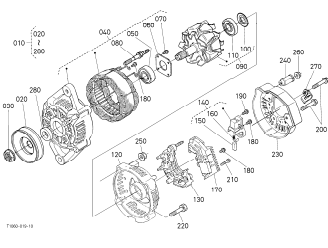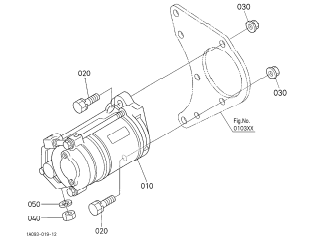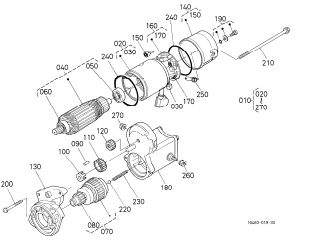    
|                                                                                                                                          |                                                                                                                                                                  |                                                                                                                                      |                                                                                                                                                               |
|------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. 501000</p> <p>交流发电机</p> <p>ALTERNATOR</p>  | <p>Fig.No. 502000</p> <p>交流发电机[组成部分]</p> <p>ALTERNATOR [COMPONENT PARTS]</p>  | <p>Fig.No. 505000</p> <p>起动机</p> <p>STARTER</p>  | <p>Fig.No. 506000</p> <p>起动机[组成部分]</p> <p>STARTER [COMPONENT PARTS]</p>  |
|------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|



## 功效驱动 POWER DRIVE

Fig.No. **A01000**

反滑轮

COUNTER PULLEY


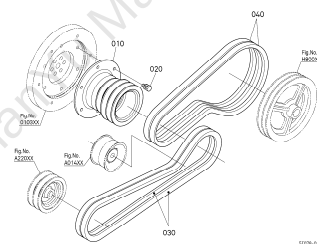 


Fig.No. **A01400**

张紧(移动)

 TENSION(TRAVEL)

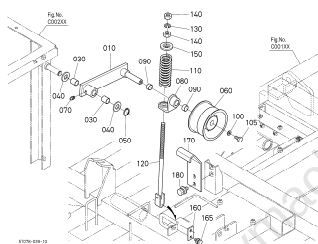

## 输电 TRANSMISSION

Fig.No. **A11000**

传动箱

TRANSMISSION CASE

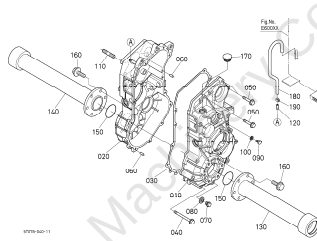 


Fig.No. **A11100**

传动箱内 1

TRANSMISSION CASE INSIDE 1

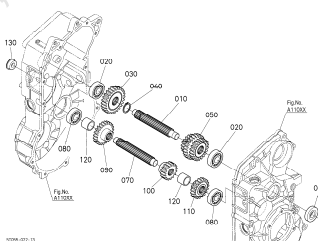 


Fig.No. **A11200**

传动箱内 2

TRANSMISSION CASE INSIDE 2

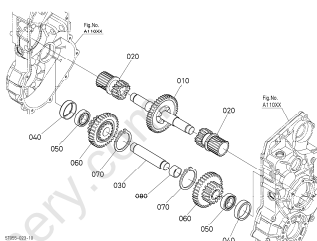 


Fig.No. **A11300**

传动箱内 3

TRANSMISSION CASE INSIDE 3


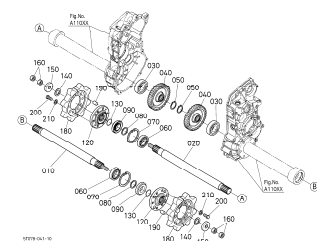 


Fig.No. **A11400**

传动箱内 4

 TRANSMISSION CASE INSIDE 4

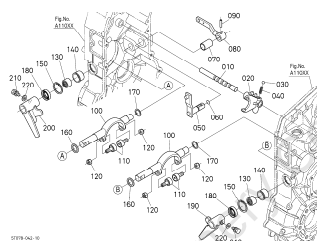

## 离合器/制动器 CLUTCH/BRAKE

Fig.No. **A20100**

刹车内部

BRAKE INSIDE

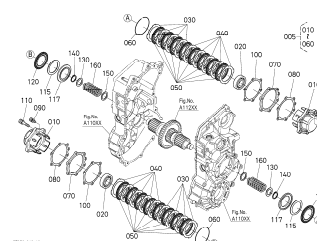 


Fig.No. **D60500**

丰收离合器控制杆

HARVEST CLUTCH LEVER

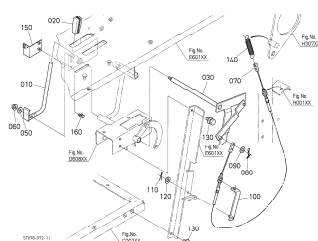 


Fig.No. **D60800**

脱粒离合器控制板

THRESHING CLUTCH LEVER


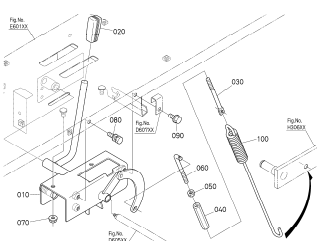 


















Fig.No. **D62000**















刹车踏板

 BRAKE PEDAL




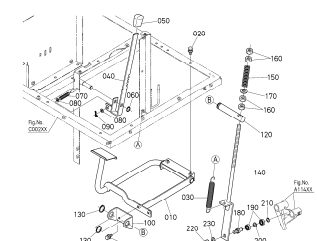






# 油压装置 HYDRAULIC SYSTEM

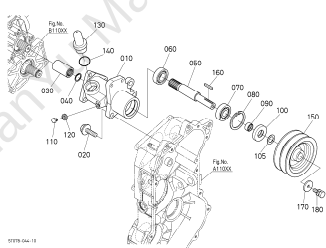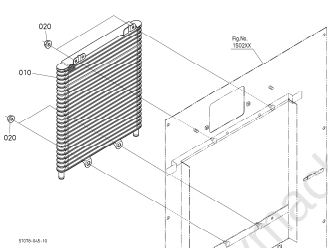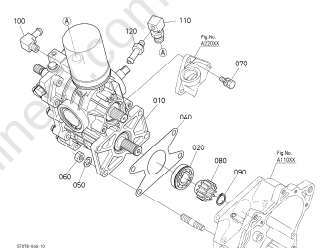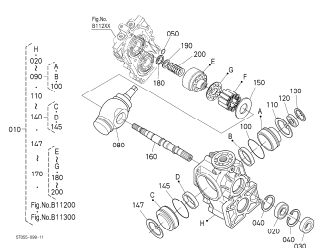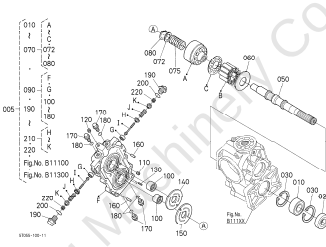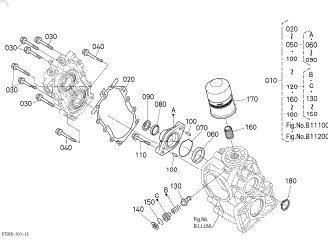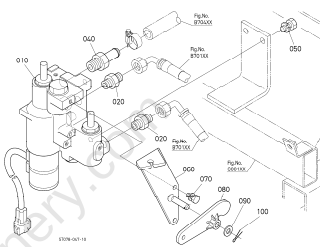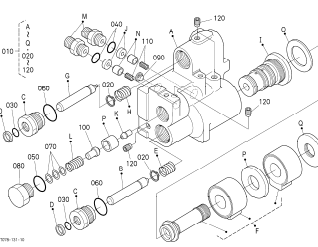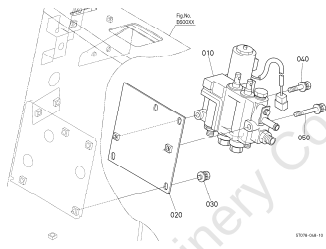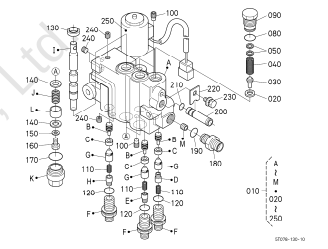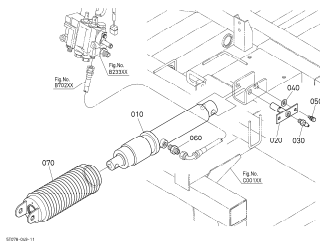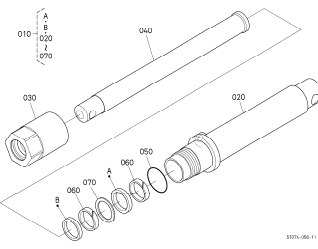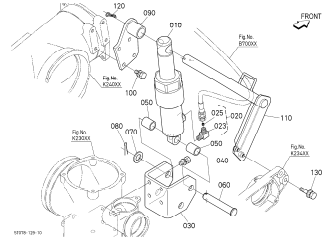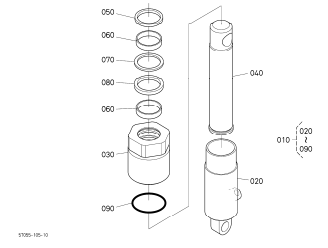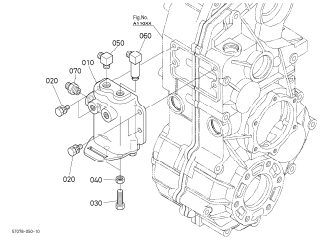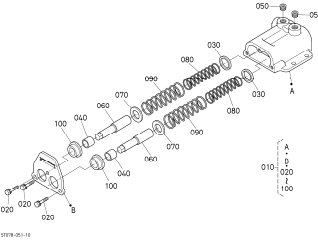                
|                                                                                                                                                                      |                                                                                                                                                                                               |                                                                                                                                                      |                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>A22000</b></p> <p>HST 输入轴</p> <p>HST INPUT SHAFT</p>                  | <p>Fig.No. <b>B10800</b></p> <p>机油冷却器</p> <p>OIL COOLER</p>                                                  | <p>Fig.No. <b>B11000</b></p> <p>HST</p> <p>HST</p>                 | <p>Fig.No. <b>B11100</b></p> <p>HST [组成部分] 1</p> <p>HST [COMPONENT PARTS] 1</p>             |
| <p>Fig.No. <b>B11200</b></p> <p>HST [组成部分] 2</p> <p>HST [COMPONENT PARTS] 2</p>    | <p>Fig.No. <b>B11300</b></p> <p>HST [组成部分] 3</p> <p>HST [COMPONENT PARTS] 3</p>                             | <p>Fig.No. <b>B23000</b></p> <p>液压组件</p> <p>HYDRAULIC UNIT</p>    | <p>Fig.No. <b>B23100</b></p> <p>液压组件 [组成部分]</p> <p>HYDRAULIC UNIT [COMPONENT PARTS]</p>    |
| <p>Fig.No. <b>B23300</b></p> <p>液压组件(储粮罐)</p> <p>HYDRAULIC UNIT (GRAIN TANK)</p>  | <p>Fig.No. <b>B23400</b></p> <p>液压组件(储粮罐) [组成部分]</p> <p>HYDRAULIC UNIT (GRAIN TANK) [COMPONENT PARTS]</p>  | <p>Fig.No. <b>B24500</b></p> <p>丰收缸</p> <p>HARVEST CYLINDER</p>  | <p>Fig.No. <b>B24600</b></p> <p>丰收缸 [组成部分]</p> <p>HARVEST CYLINDER [COMPONENT PARTS]</p>  |
| <p>Fig.No. <b>B24700</b></p> <p>机(筒)</p> <p>UNLOADER CYLINDER</p>                 | <p>Fig.No. <b>B24800</b></p> <p>卸料机汽缸 [零件]</p> <p>UNLOADER CYLINDER [COMPONENT PARTS]</p>                  | <p>Fig.No. <b>B26000</b></p> <p>离合器缸</p> <p>CLUTCH CYLINDER</p>  | <p>Fig.No. <b>B26100</b></p> <p>离合器缸 [组成部分]</p> <p>CLUTCH CYLINDER [COMPONENT PARTS]</p>  |
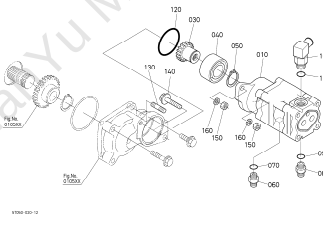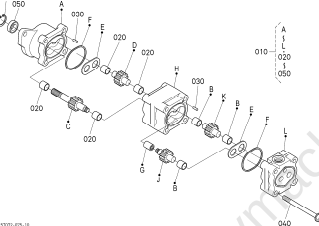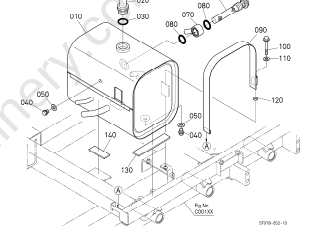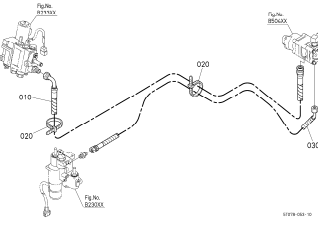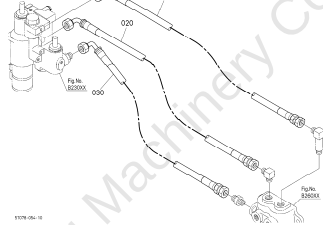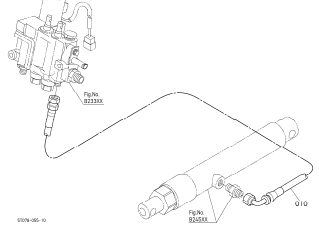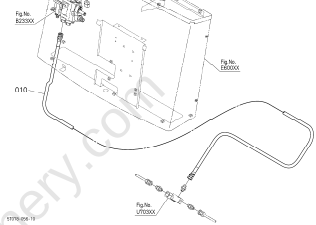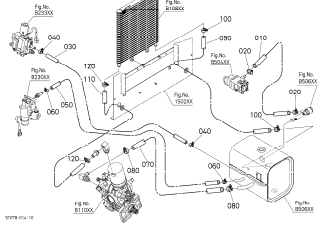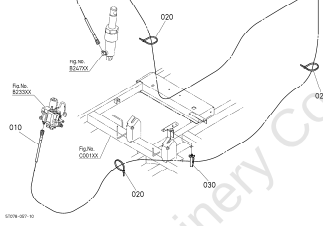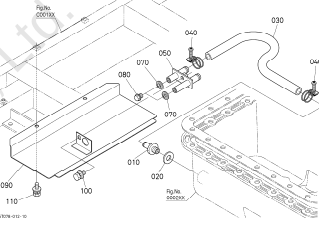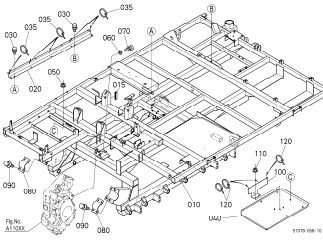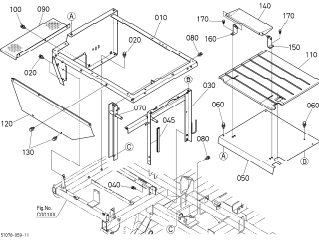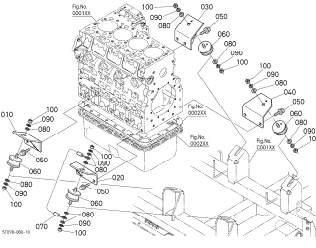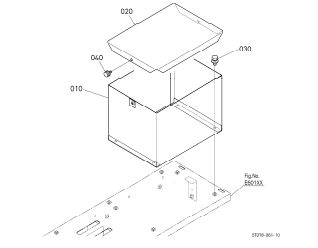              
|                                                                                                                                                                   |                                                                                                                                                                          |                                                                                                                                                     |                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>B50400</b></p> <p>液压泵<br/>HYDRAULIC PUMP</p>                       | <p>Fig.No. <b>B50500</b></p> <p>液压泵[组成部分]<br/>HYDRAULIC PUMP<br/>[COMPONENT PARTS]</p>  | <p>Fig.No. <b>B50600</b></p> <p>液压软管(罐)<br/>HYDRAULIC TANK</p>    | <p>Fig.No. <b>B70000</b></p> <p>油压软管 1<br/>HYDRAULIC HOSE 1</p>   |
| <p>Fig.No. <b>B70100</b></p> <p>油压软管 2<br/>HYDRAULIC HOSE 2</p>                 | <p>Fig.No. <b>B70200</b></p> <p>油压软管 3<br/>HYDRAULIC HOSE 3</p>                        | <p>Fig.No. <b>B70300</b></p> <p>油压软管 4<br/>HYDRAULIC HOSE 4</p>  | <p>Fig.No. <b>B70400</b></p> <p>油压软管 5<br/>HYDRAULIC HOSE 5</p>  |
| <p>Fig.No. <b>B70500</b></p> <p>油压软管(机)<br/>HYDRAULIC HOSE<br/>(UNLOADER)</p>  | <p>Fig.No. <b>B72000</b></p> <p>排油管<br/>OIL DRAIN HOSE</p>                            |                                                                                                                                                     |                                                                                                                                                      |
| <p>框架<br/>MAIN FRAME</p>                                                                                                                                          |                                                                                                                                                                          |                                                                                                                                                     |                                                                                                                                                      |
| <p>Fig.No. <b>C00100</b></p> <p>主框架<br/>MAIN FRAME</p>                         | <p>Fig.No. <b>C00200</b></p> <p>甲板<br/>DECK</p>                                       | <p>Fig.No. <b>C00500</b></p> <p>发动机底座<br/>ENGINE BASE</p>       | <p>Fig.No. <b>C01400</b></p> <p>工具箱<br/>TOOL BOX</p>            |





# 履带架 TRACK FRAME










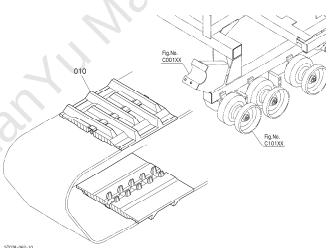 
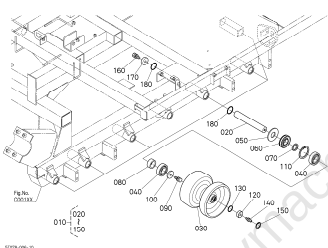 
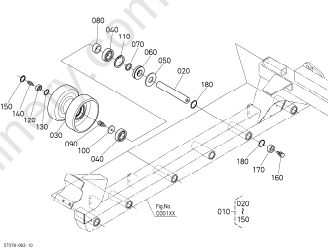 
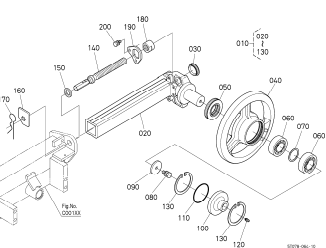 
|                                                                                                                                      |                                                                                                                                                 |                                                                                                                                                  |                                                                                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>C10000</b></p> <p>履带<br/>CRAWLER</p>  | <p>Fig.No. <b>C10101</b></p> <p>左侧支重轮<br/>TRACK ROLLER LH</p>  | <p>Fig.No. <b>C10102</b></p> <p>右侧支重轮<br/>TRACK ROLLER RH</p>  | <p>Fig.No. <b>C10301</b></p> <p>左侧张力框架<br/>TENSION FRAME LH</p>  |
|--------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
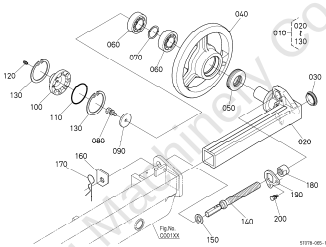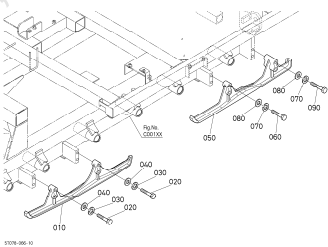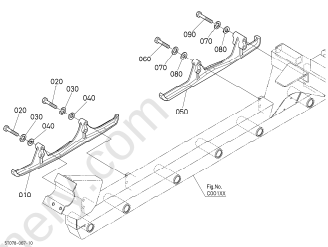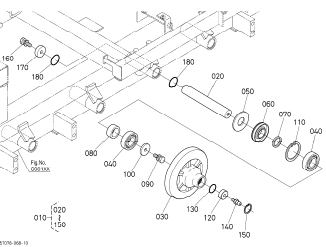    
|                                                                                                                                                    |                                                                                                                                                      |                                                                                                                                                       |                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>C10302</b></p> <p>右侧张力框架<br/>TENSION FRAME RH</p>  | <p>Fig.No. <b>C10401</b></p> <p>左侧履带牵引装置<br/>CRAWLER GUIDE LH</p>  | <p>Fig.No. <b>C10402</b></p> <p>右侧履带牵引装置<br/>CRAWLER GUIDE RH</p>  | <p>Fig.No. <b>C10501</b></p> <p>左侧驱动辊<br/>DRIVE ROLLER LH</p>  |
|----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
















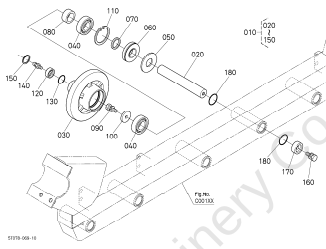 
|                                                                                                                                                   |  |  |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| <p>Fig.No. <b>C10502</b></p> <p>右侧驱动辊<br/>DRIVE ROLLER RH</p>  |  |  |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|















# 操作 OPERATION
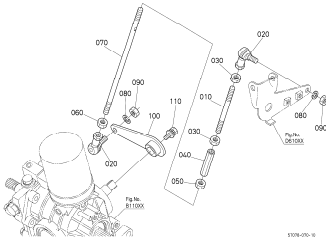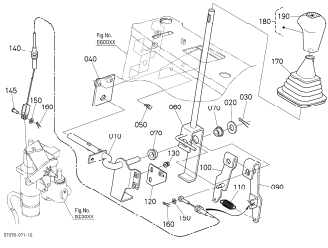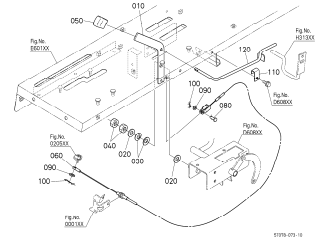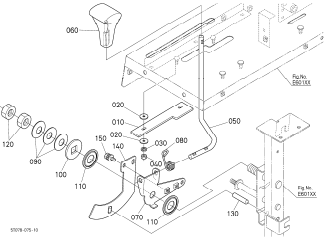    
|                                                                                                                                                             |                                                                                                                                          |                                                                                                                                                     |                                                                                                                                                                          |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>D60100</b></p> <p>主变速杆<br/>MAIN SHIFT LEVER (HST ROD)</p>  | <p>Fig.No. <b>D60300</b></p> <p>转向器<br/>STEERING</p>  | <p>Fig.No. <b>D60700</b></p> <p>加速器杆<br/>ACCELERATOR LEVER</p>  | <p>Fig.No. <b>D61000</b></p> <p>主变速手柄<br/>MAIN SP-CHANGE LEVER/RESTRAINT LEVER</p>  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
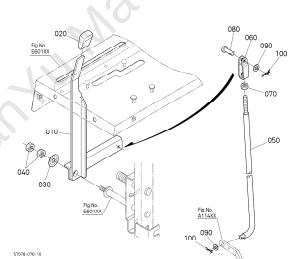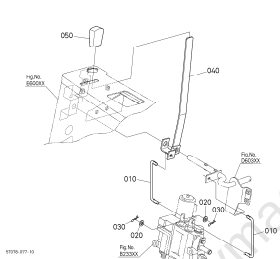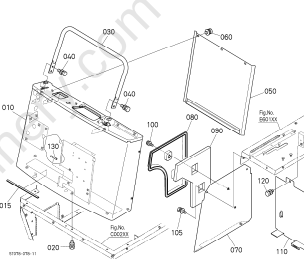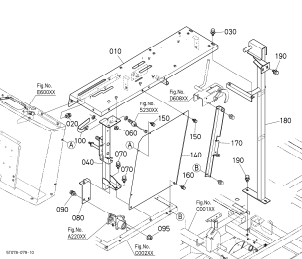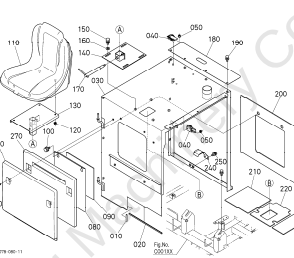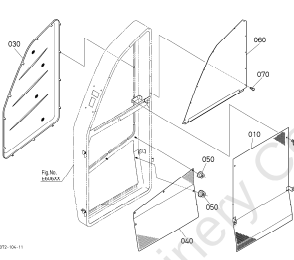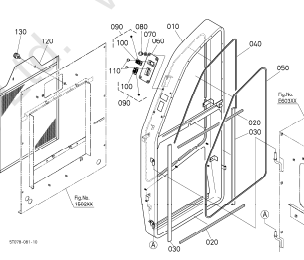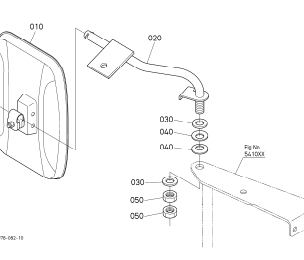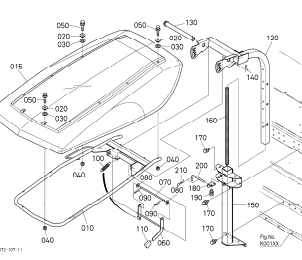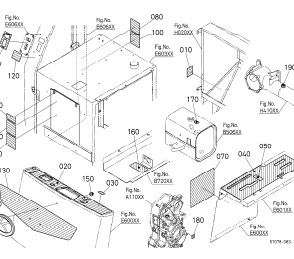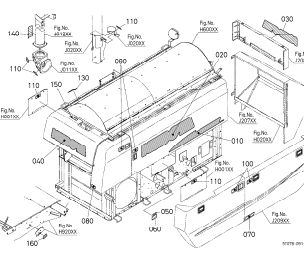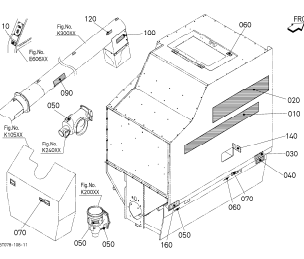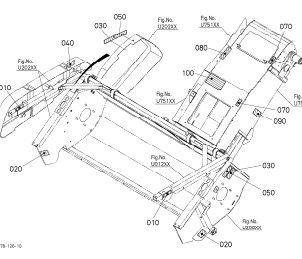             
|                                                                                                                                                        |                                                                                                                                                      |                                                                                                                                                         |                                                                                                                                                           |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>D61100</b></p> <p>副变速手柄<br/>RANGE GEAR SHIFT LEVER</p>  | <p>Fig.No. <b>D63400</b></p> <p>丰收移动臂<br/>HARVEST ELEVATOR ARM</p>  | <p>Fig.No. <b>E60000</b></p> <p>运行框架<br/>OPERATION FRAME</p>          | <p>Fig.No. <b>E60100</b></p> <p>操作面板<br/>OPERATION PANEL</p>           |
| <p>Fig.No. <b>E60300</b></p> <p>座椅<br/>SEAT</p>                      |                                                                                                                                                      |                                                                                                                                                         |                                                                                                                                                           |
| <p>外部装饰/室内装饰<br/>EXTERNAL/UPHOLSTERY</p>                                                                                                               |                                                                                                                                                      |                                                                                                                                                         |                                                                                                                                                           |
| <p>Fig.No. <b>E60400</b></p> <p>防尘盖 1<br/>DUSTPROOF COVER 1</p>     | <p>Fig.No. <b>E60600</b></p> <p>防尘盖 2<br/>DUSTPROOF COVER 2</p>   | <p>Fig.No. <b>E60900</b></p> <p>后视镜<br/>REARVIEW MIRROR</p>         | <p>Fig.No. <b>E75000</b></p> <p>顶篷<br/>CANOPY</p>                    |
| <p>标签<br/>LABELS</p>                                                                                                                                   |                                                                                                                                                      |                                                                                                                                                         |                                                                                                                                                           |
| <p>Fig.No. <b>G90100</b></p> <p>标签(机体)<br/>LABEL(BODY)</p>          | <p>Fig.No. <b>J80000</b></p> <p>标签(脱粒)<br/>LABEL(THRESHING)</p>   | <p>Fig.No. <b>K80000</b></p> <p>标签(储粮罐)<br/>LABEL (GRAIN TANK)</p>  | <p>Fig.No. <b>U90100</b></p> <p>标签(盘/馈线)<br/>LABEL(REEL/FEEDER)</p>  |

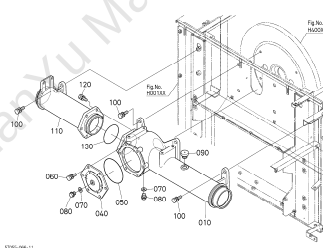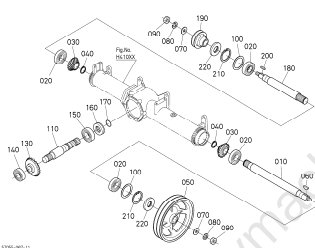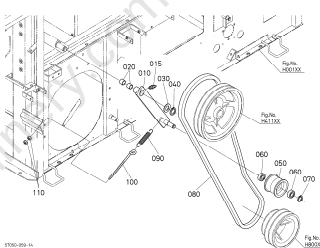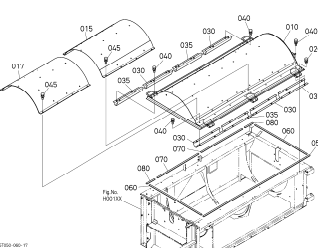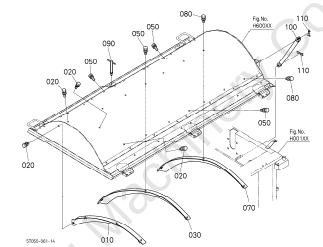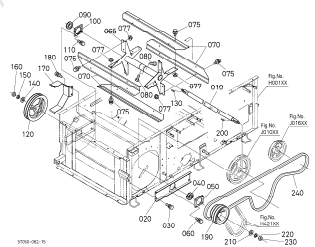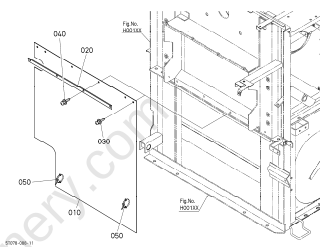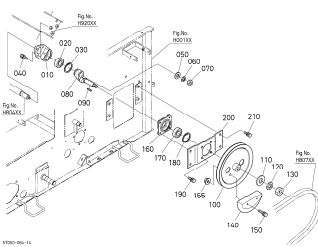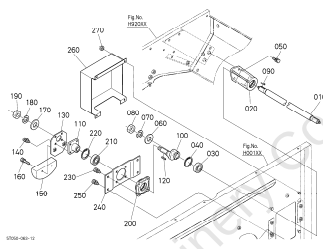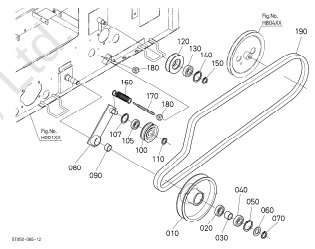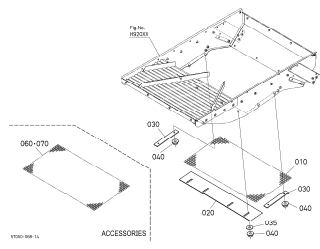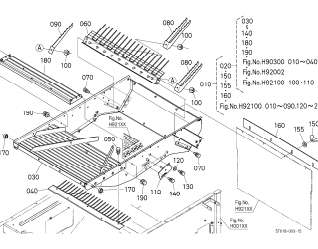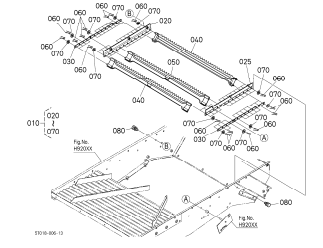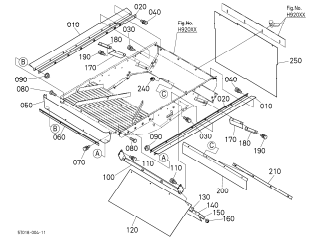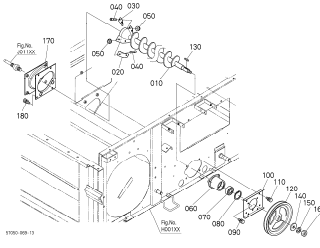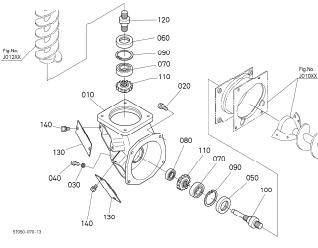                

|                                                                                                                                                                        |                                                                                                                                                                      |                                                                                                                                                                       |                                                                                                                                                             |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>H41000</b></p> <p>脱粒滚筒驱动齿轮组件<br/>THRESHING CYLINDER<br/>DRIVE CASE</p>  | <p>Fig.No. <b>H41100</b></p> <p>脱粒滚筒驱动轴<br/>THRESHING CYLINDER<br/>DRIVE SHAFT</p>  | <p>Fig.No. <b>H42100</b></p> <p>脱粒滚筒拉力臂<br/>THRESHING CYLINDER<br/>TENSION ARM</p>  | <p>Fig.No. <b>H60000</b></p> <p>脱粒机罩<br/>THRESHING BONNET</p>            |
| <p>Fig.No. <b>H60200</b></p> <p>粉尘载阀<br/>DUST CARRYING VALVE</p>                     | <p>Fig.No. <b>H80000</b></p> <p>清选风机轴<br/>WINNOWER SHAFT</p>                       | <p>Fig.No. <b>H80300</b></p> <p>扬谷器箱<br/>WINNOWER CASE</p>                         | <p>Fig.No. <b>H80401</b></p> <p>摇轴(左)<br/>ROCKING SHAFT(LEFT)</p>       |
| <p>Fig.No. <b>H80402</b></p> <p>摇轴(右)<br/>ROCKING SHAFT(RIGHT)</p>                  | <p>Fig.No. <b>H80700</b></p> <p>摆动张力臂<br/>ROCKING TENSION ARM</p>                 | <p>Fig.No. <b>H90300</b></p> <p>晶粒分子筛<br/>GRAIN SIEVE</p>                         | <p>Fig.No. <b>H92001</b></p> <p>筛箱<br/>SIEVE CASE</p>                  |
| <p>Fig.No. <b>H92002</b></p> <p>筛子<br/>SIEVE</p>                                    | <p>Fig.No. <b>H92100</b></p> <p>筛箱布<br/>SIEVE CASE CLOTH</p>                      | <p>Fig.No. <b>J01000</b></p> <p>谷粒螺旋轴<br/>FIRST HORIZONTAL AUGER<br/>SHAFT</p>    | <p>Fig.No. <b>J01100</b></p> <p>谷粒锥形齿轮箱<br/>FIRST BEVEL GEAR CASE</p>  |
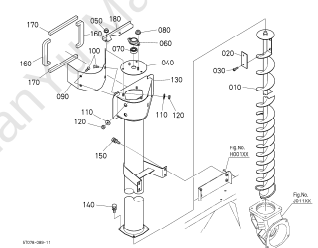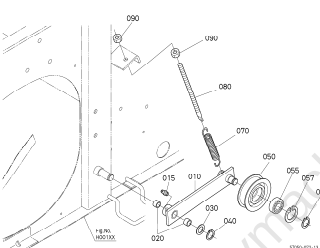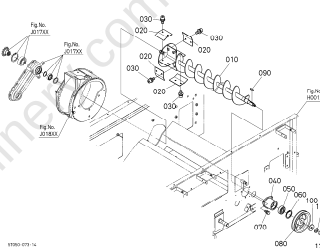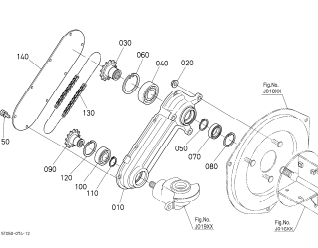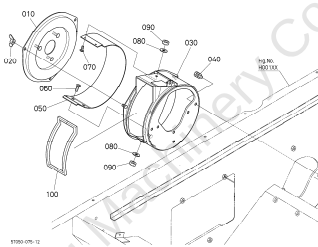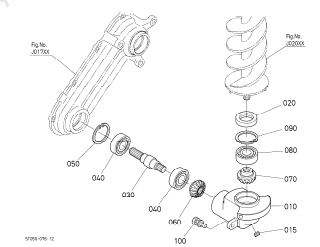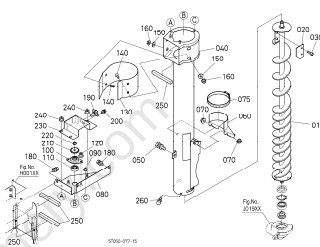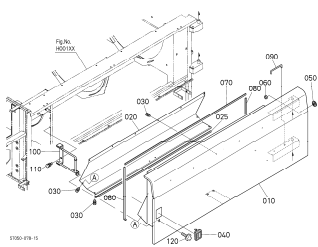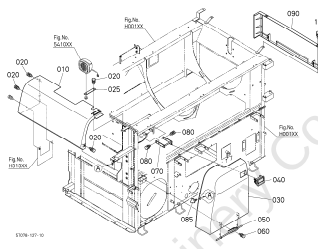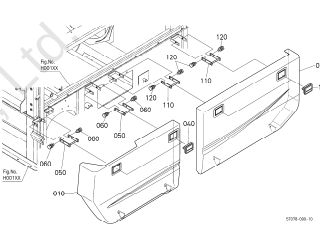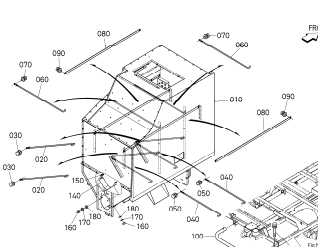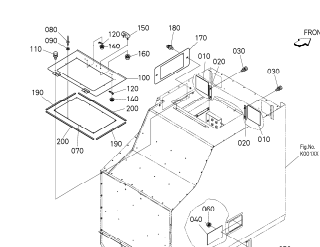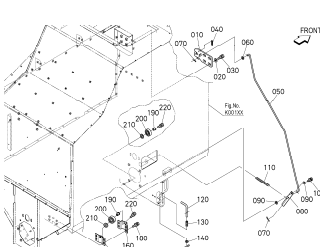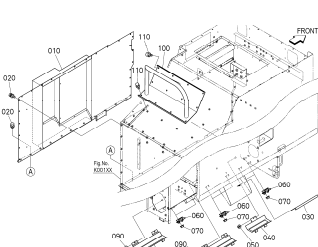              
|                                                                                                                                                                   |                                                                                                                                                            |                                                                                                                                                                  |                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Fig.No. <b>J01200</b></p> <p>谷粒垂直螺旋杆<br/>FIRST VERTICAL AUGER SHAFT</p>       | <p>Fig.No. <b>J01500</b></p> <p>谷粒输送张紧臂<br/>FIRST TENSION ARM</p>         | <p>Fig.No. <b>J01600</b></p> <p>再筛选螺旋轴<br/>SECOND HORIZONTAL AUGER SHAFT</p>   | <p>Fig.No. <b>J01700</b></p> <p>再筛选驱动链条箱<br/>SECOND DRIVE CHAIN CASE</p>  |
| <p>Fig.No. <b>J01800</b></p> <p>再筛选驱动箱<br/>SECOND CASE</p>                      | <p>Fig.No. <b>J01900</b></p> <p>再筛选锥齿轮箱<br/>SECOND BEVEL GEAR CASE</p>   | <p>Fig.No. <b>J02000</b></p> <p>再筛选垂直螺旋杆<br/>SECOND VERTICAL AUGER SHAFT</p>  | <p>Fig.No. <b>J20700</b></p> <p>开闭盖<br/>OPEN-CLOSE COVER</p>             |
| <p>Fig.No. <b>J20800</b></p> <p>脱粒封面(前/后)<br/>THRESHING COVER(FRONT/BACK)</p>  | <p>Fig.No. <b>J20900</b></p> <p>脱粒封面(一侧)<br/>THRESHING COVER(SIDE)</p>  |                                                                                                                                                                  |                                                                                                                                                              |
| <p><b>储粮罐</b><br/><b>GRAIN TANK</b></p>                                                                                                                           |                                                                                                                                                            |                                                                                                                                                                  |                                                                                                                                                              |
| <p>Fig.No. <b>K00100</b></p> <p>储粮罐<br/>GRAIN TANK</p>                         | <p>Fig.No. <b>K00300</b></p> <p>净化管<br/>CLEANING PORT</p>               | <p>Fig.No. <b>K00600</b></p> <p>粮箱锁<br/>TANK LOCK</p>                        | <p>Fig.No. <b>K10100</b></p> <p>储罐后盖<br/>TANK COVER REAR</p>            |



# 丰收 HARVEST

|                                                                       |                                                                         |                                                                   |                                                                   |
|-----------------------------------------------------------------------|-------------------------------------------------------------------------|-------------------------------------------------------------------|-------------------------------------------------------------------|
| <p>Fig.No. <b>U00300</b></p> <p>尖端<br/>TINE</p>                       | <p>Fig.No. <b>U00400</b></p> <p>盘 (中心轴)<br/>REEL CENTER SHAFT</p>       | <p>Fig.No. <b>U01100</b></p> <p>盘 (调节器)<br/>REEL ADJUSTMENT</p>   | <p>Fig.No. <b>U01200</b></p> <p>盘 (架)<br/>REEL FRAME</p>          |
| <p>Fig.No. <b>U10700</b></p> <p>张紧臂<br/>TENSION ARM</p>               | <p>Fig.No. <b>U20000</b></p> <p>丰收框架<br/>HARVEST FRAME</p>              | <p>Fig.No. <b>U20200</b></p> <p>丰收框架罩<br/>HARVEST FRAME COVER</p> | <p>Fig.No. <b>U21000</b></p> <p>螺旋鼓<br/>AUGER DRUM</p>            |
| <p>Fig.No. <b>U21100</b></p> <p>螺旋滚筒轴<br/>AUGER DRUM SHAFT</p>        | <p>Fig.No. <b>U21200</b></p> <p>螺旋鼓链<br/>AUGER DRUM CHAIN</p>           | <p>Fig.No. <b>U21700</b></p> <p>钩爪轴<br/>FINGER SHAFT</p>          | <p>Fig.No. <b>U23100</b></p> <p>丰收传动轴<br/>HARVEST DRIVE SHAFT</p> |
| <p>Fig.No. <b>U30100</b></p> <p>割刀驱动臂<br/>CUTTING BLADE DRIVE ARM</p> | <p>Fig.No. <b>U30600</b></p> <p>割刀驱动轴<br/>CUTTING BLADE DRIVE SHAFT</p> | <p>Fig.No. <b>U40000</b></p> <p>割刀<br/>CUTTING BLADE</p>          | <p>Fig.No. <b>U40200</b></p> <p>分压器 (左)<br/>DIVIDER(LEFT)</p>     |



## 曲轴箱 CRANK CASE



A:V2403-M-DI-TE2-CSKC1

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件



**油缸头**  
**CYLINDER HEAD**

 


A:V2403-M-DI-TE2-CSKC1

[illegible]

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

# 000400 齿轮箱 GEAR CASE

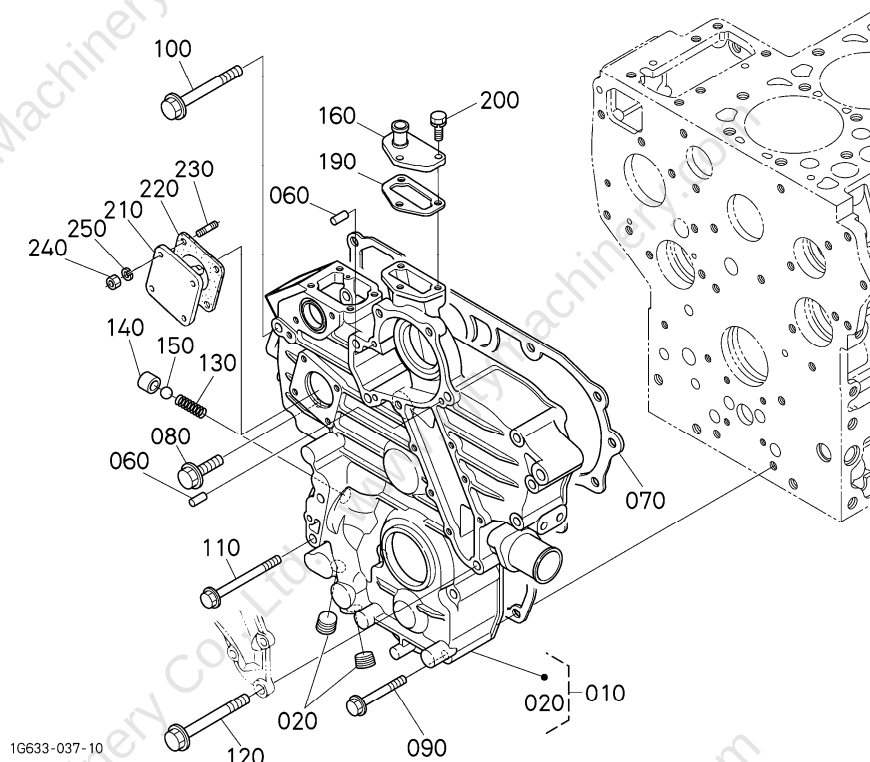


A: V2403-M-D1-TE2-CSKC1

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称    | PART NAME            | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|---------|----------------------|------------------------|------------|---------------|
|               |                 |         |                      | A                      |            |               |
| 010           | 1G840-0402-6    | 齿轮箱组件   | COMP.CASE,GEAR       | 1                      |            |               |
| 020           | 16241-9602-0    | 塞       | PLUG                 | 2                      |            |               |
| 030           | ----            | 无       | BLANK                | -                      |            |               |
| 040           | ----            | 无       | BLANK                | -                      |            |               |
| 050           | ----            | 无       | BLANK                | -                      |            |               |
| 060           | 05012-00612     | 平行销     | PIN, STRAIGHT        | 2                      |            |               |
| 070           | 1G701-0413-0    | 齿轮箱垫片   | GASKET,GEAR CASE     | 1                      |            |               |
| 080           | 01754-50830     | 法兰螺栓    | BOLT,FLANGE          | 1                      |            |               |
| 090           | 1A021-9103-0    | 法兰螺栓    | BOLT,FLANGE          | 7                      |            |               |
| 100           | 01754-50875     | 法兰螺栓    | BOLT,FLANGE          | 1                      |            |               |
| 110           | 1G841-9101-0    | 法兰螺栓    | BOLT,FLANGE          | 2                      |            |               |
| 120           | 01754-50885     | 法兰螺栓    | BOLT,FLANGE          | 4                      |            |               |
| 130           | 15241-3695-0    | 弹簧      | SPRING               | 1                      |            |               |
| 140           | 15521-3693-0    | 旁通阀座    | SEAT,VALVE           | 1                      |            |               |
| 150           | 07715-03213     | 钢珠      | BALL                 | 1                      |            |               |
| 160           | 15521-7332-0    | 回水管法兰   | FLANGE,WATER RETURN  | 1                      |            |               |
| 170           | ----            | 无       | BLANK                | -                      |            |               |
| 180           | ----            | 无       | BLANK                | -                      |            |               |
| 190           | 1A021-7333-2    | 回水管法兰垫片 | GASKET,RETURN FLANGE | 1                      |            |               |
| 200           | 01023-50620     | 螺栓      | BOLT,SEMS            | 3                      |            |               |
| 210           | 15223-8334-0    | 盖       | COVER                | 1                      |            |               |
| 220           | 1G751-8813-0    | 小时表垫片   | GASKET,HOUR METER    | 1                      |            |               |
| 230           | 15221-8821-0    | 双头螺栓    | STUD                 | 4                      |            |               |
| 240           | 02056-50060     | 螺帽      | HEX.NUT              | 4                      |            |               |
| 250           | 04512-60060     | 弹簧垫圈    | WASHER, SPRING       | 4                      |            |               |
|               |                 |         |                      |                        |            |               |
|               |                 |         |                      |                        |            |               |
|               |                 |         |                      |                        |            |               |
|               |                 |         |                      |                        |            |               |
|               |                 |         |                      |                        |            |               |

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

 顶盖  
HEAD COVER



A:V2403-M-DI-TE2-CSKC1

[illegible]


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

000600 机油滤清器  
OIL FILTER

This diagram illustrates the assembly of an oil filter. It features three main components: a cylindrical oil filter (010), a connecting adapter (020), and a circular base plate. The filter (010) is shown with a pleated internal filter element and a top cap. The adapter (020) is a short, threaded metal piece with a hexagonal base. The base plate is a circular component with a central hole and a locking mechanism. The components are shown in an exploded view, with lines indicating their relative positions and assembly sequence. The filter (010) is positioned at the top, the adapter (020) is in the middle, and the base plate is at the bottom. The filter (010) has a label with a chevron pattern and the text '000600'.

010

 020




---

[illegible]

 6



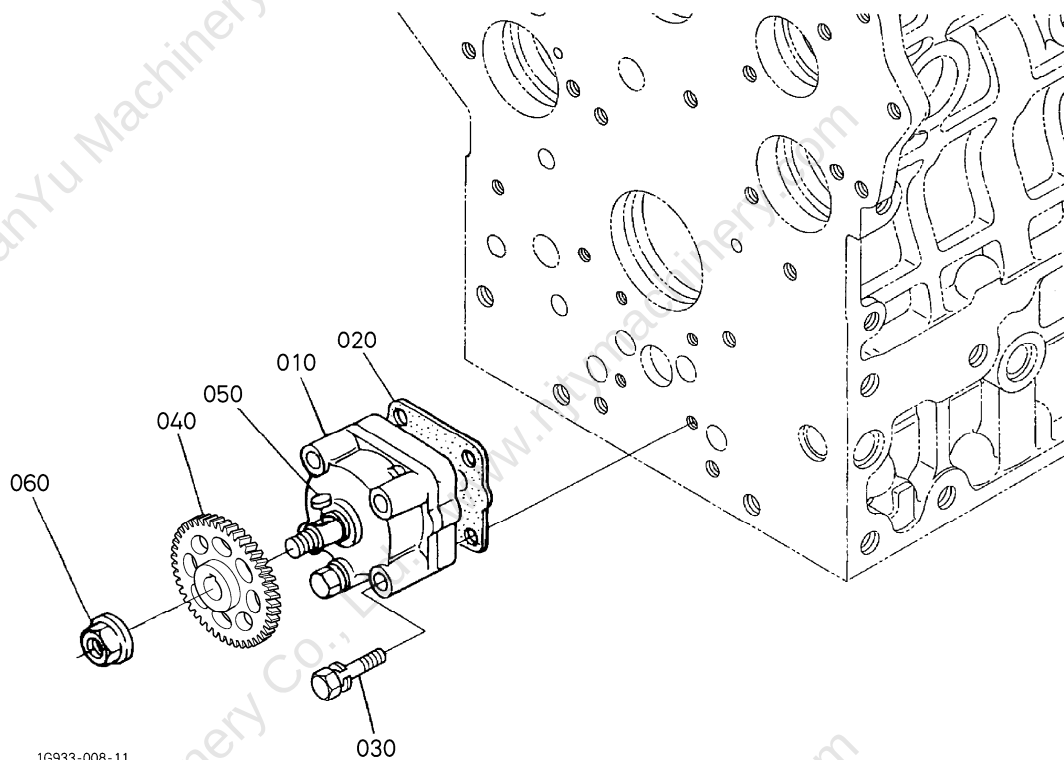


1G933-008-11

A:V2403-M-DI-TE2-CSKC1

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 主轴承箱 MAIN BEARING CASE

 

A:V2403-M-DI-TE2-CSKC1

[illegible]

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\Leftarrow$  新部件可替换旧部件:  $\Rightarrow$  旧部件可替换新部件

010100




A:V2403-M-DI-TE2-CSKC1

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# 010200 活塞和曲柄轴 PISTON AND CRANKSHAFT

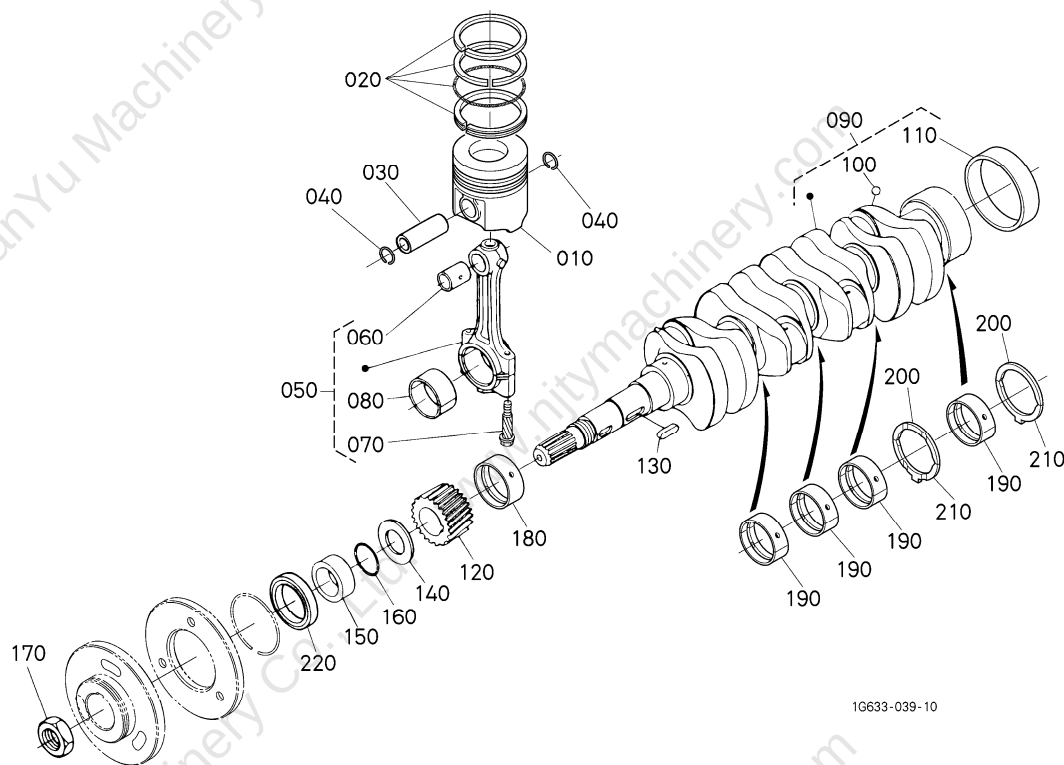 


A: V2403-M-D1-TE2-CSKC1

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称   | PART NAME           | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS  |
|---------------|-----------------|--------|---------------------|------------------------|------------|----------------|
|               |                 |        |                     | A                      |            |                |
| 010           | 1G924-2111-2    | 活塞     | PISTON              | 4                      |            | (H05) 标准       |
| 010           | 1G924-2190-2    | 活塞     | PISTON              | 4                      |            | (H05) +0. 25mm |
| 020           | 1J860-2105-0    | 活塞环组件  | ASSY PISTON RING    | 4                      |            | 标准             |
| 020           | 1J860-2109-0    | 活塞环组件  | ASSY PISTON RING    | 4                      |            | +0. 25mm       |
| 030           | 1A021-2131-0    | 活塞销    | PIN,PISTON          | 4                      |            |                |
| 040           | 1G279-2133-0    | 卡环     | CIR CLIP,INTERNAL   | 8                      |            |                |
| 050           | 1G924-2201-4    | 连杆总成   | ROD,CONNECTING,ASSY | 4                      |            |                |
| 060           | 1G924-2198-0    | 活塞销轴套  | BUSH,PISTON PIN     | 4                      |            |                |
| 070           | 1J700-2214-0    | 连杆螺栓   | BOLT,CONNECTING ROD | 8                      |            |                |
| 080           | 17311-2231-2    | 金属曲柄销  | METAL,CRANKPIN      | 4                      |            | 标准/组套          |
| 080           | 17311-2297-0    | 连杆瓦    | METAL,CRANKPIN      | 4                      |            | -0. 20mm/组套    |
| 080           | 17311-2298-0    | 连杆瓦    | METAL,CRANKPIN      | 4                      |            | -0. 40mm/组套    |
| 090           | 1G851-2302-0    | 曲轴组件   | COMP.CRANKSHAFT     | 1                      |            |                |
| 100           | 07715-00401     | 钢珠     | BALL 1/4            | 4                      |            |                |
| 110           | 19202-2328-0    | 曲轴衬套   | BUSH,CRANKSHAFT     | 1                      |            |                |
| 120           | 1A021-2411-0    | 曲轴齿轮   | GEAR,CRANKSHAFT     | 1                      |            |                |
| 130           | 05712-00730     | 导向键    | FEATHER KEY         | 1                      |            |                |
| 140           | 15471-2331-2    | 挡油环    | OIL SLINGER         | 1                      |            |                |
| 150           | 19202-2325-0    | 曲轴套环   | COLLAR,CRANKSHAFT   | 1                      |            |                |
| 160           | 04811-10300     | O型密封圈  | O RING              | 1                      |            |                |
| 170           | 15221-2336-0    | 曲轴螺母   | NUT,CRANKSHAFT      | 1                      |            |                |
| 180           | 1A091-2347-2    | 曲柄轴金属件 | METAL,CRANKSHAFT    | 1                      |            | 标准             |
| 180           | 1A091-2391-0    | 曲柄轴金属件 | METAL,CRANKSHAFT    | 1                      |            | -0. 20mm       |
| 180           | 1A091-2392-0    | 曲柄轴金属件 | METAL,CRANKSHAFT    | 1                      |            | -0. 40mm       |
| 190           | 1A091-2348-2    | 曲柄轴金属件 | METAL,CRANKSHAFT    | 4                      |            | 标准/组套          |
| 190           | 1A091-2393-0    | 曲柄轴金属件 | METAL,CRANKSHAFT    | 4                      |            | -0. 20mm/组套    |
| 190           | 1A091-2394-0    | 曲柄轴金属件 | METAL,CRANKSHAFT    | 4                      |            | -0. 40mm/组套    |
| 200           | 1A091-2353-2    | 止推瓦    | METAL, SIDE         | 2                      |            | 标准             |
| 200           | 1A091-2395-0    | 止推瓦    | METAL, SIDE         | 2                      |            | +0. 20mm       |
| 200           | 1A091-2396-0    | 止推瓦    | METAL, SIDE         | 2                      |            | +0. 40mm       |

 ↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件






A:V2403-M-DI-TE2-CSKC1

[illegible]


## FUEL CAMSHAFT AND GOVERNOR SHAFT

 

A:V2403-M-DI-TE2-CSKC1

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件


# 怠速限制装置 IDLE APPARATUS

 

A: V2403-M-DI-TE2-CSKC1

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

 **熄火电磁阀**  
**STOP SOLENOID**



A:V2403-M-DI-TE2-CSKC1

[illegible]


# 020200 喷射泵 INJECTION PUMP

This technical diagram illustrates the exploded view of an injection pump assembly. The components are labeled with numbers as follows:

- 080: Fuel line connector
- 120: Fuel line
- 110: Fuel line nut
- 070: Fuel line elbow
- 110: Fuel line nut
- 060: Fuel line nut
- 090: Fuel line nut
- 010: Fuel line nut
- 100: Fuel line nut
- 060: Fuel line nut
- 030: Fuel line nut
- 030: Fuel line nut
- 050: Fuel line nut
- 020: Fuel line nut
- 050: Fuel line nut


The diagram shows the pump assembly being installed onto a cylinder head. The pump assembly consists of a main body (020) and a base (050). The base is secured to the cylinder head with four bolts (050). The main body is secured with four nuts (060) and four washers (030). The fuel line (120) is connected to the pump body via a series of fittings (080, 110, 070, 110, 060, 090, 010, 100).

 1G633-040-10

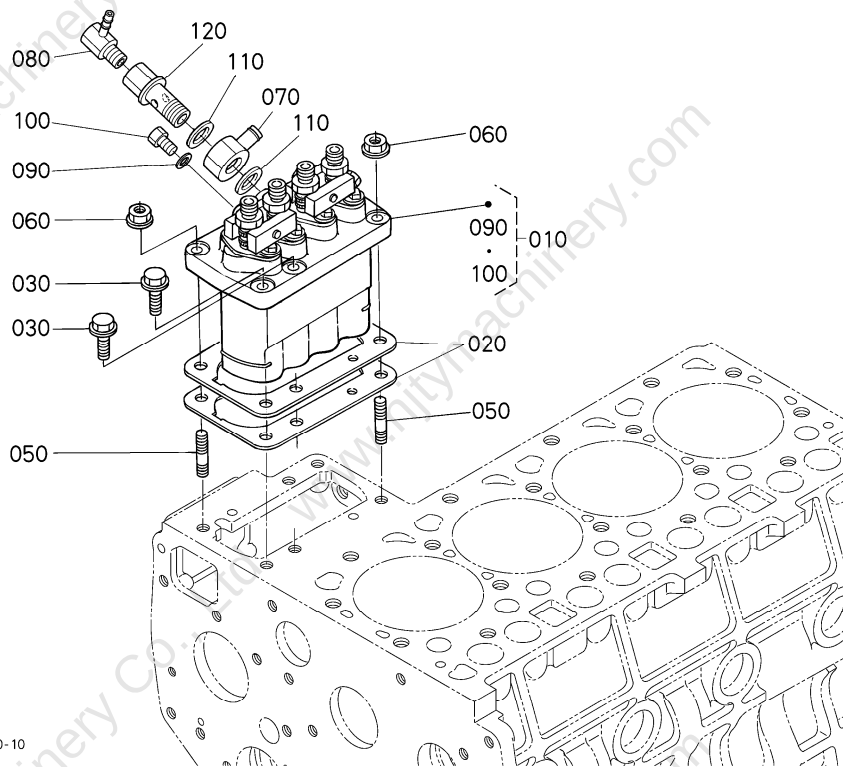[illegible]

17

**SPEED CONTROL PLATE**

 

A:V2403-M-DI-TE2-CSKC1

[illegible]

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

020601 噴油嘴座  
NOZZLE HOLDER



A:V2403-M-DI-TE2-CSKC1

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**超流管**  
**OVER FLOW PIPE**




A:V2403-M-DI-TE2-CSKC1

[illegible]

$\leftrightarrow$  新旧部件可替换;  $\ncong$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

021200

## 叉杆（调速器）

 


A:V2403-M-DI-TE2-CSKC1

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 050000



A:V2403-M-DI-TE2-CSKC1

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\Leftarrow$  新部件可替换旧部件:  $\Rightarrow$  旧部件可替换新部件

050100 水泵  
WATER PUMP



A:V2403-M-DI-TE2-CSKC1

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

风扇  
COOLER FAN



A:V2403-M-DI-TE2-CSKC1

[illegible]

# 060000 气门和摇臂 VALVE AND RO

 


A:V2403-M-DI-TE2-CSKC1

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**060100**

## INLET MANIFOLD




A:V2403-M-DI-TE2-CSKC1

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **060200 排气歧管**  
**EXHAUST MANIFOLD**



A:V2403-M-DI-TE2-CSKC1

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\longleftarrow$  新部件可替换旧部件;  $\longrightarrow$  旧部件可替换新部件

060600 涡轮增压器  
TURBO CHARGER

This technical diagram illustrates the exploded view of a turbocharger assembly. The components are labeled with the following numbers:

- 080: A metal clamp or ring at the top left.
- 060: A flexible exhaust manifold pipe connecting to the turbine housing.
- 070: A clamp or bracket on the turbine housing.
- 010: The central turbine and compressor housing assembly.
- 100: A mounting bracket or flange for the turbine housing.
- 090: A separate mounting flange or bracket.
- 040 and 050: Small fasteners or pins used for assembly.
- 020: A mounting bracket or flange for the compressor housing.
- 030: The main compressor housing assembly.

 
1G934-011-10

A:V2403-M-DI-TE2-CSKC1

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

061000

油管（涡轮增压器）




A:V2403-M-DI-TE2-CSKC1

[illegible]

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

**070200**

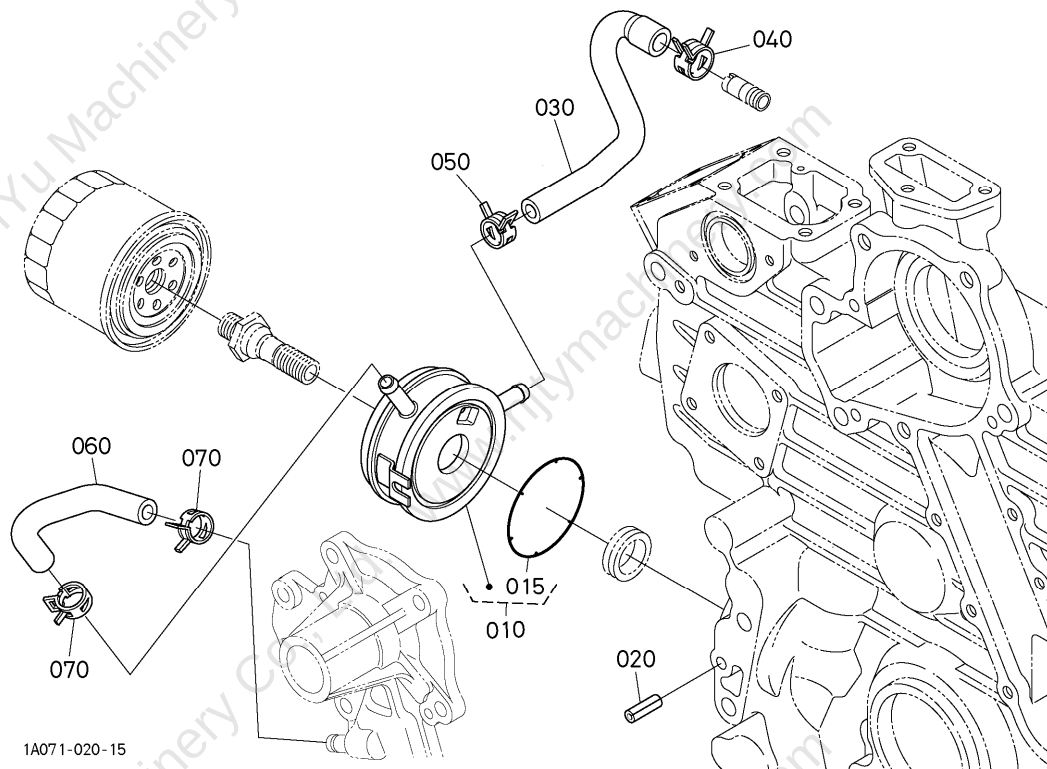 [illegible]

**燃油箱**  
**FUEL TANK**


 


Fig.No.  
C001XX

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

130500


## FUEL FILTER [COMPONENT PARTS]

 

A: DC-70G

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

 燃油管 1  
FUEL PIPE 1




A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **燃油管 2**  
**FUEL PIPE 2**




A: DC-70G


[illegible]

$\leftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

 130900

[illegible]

 150200

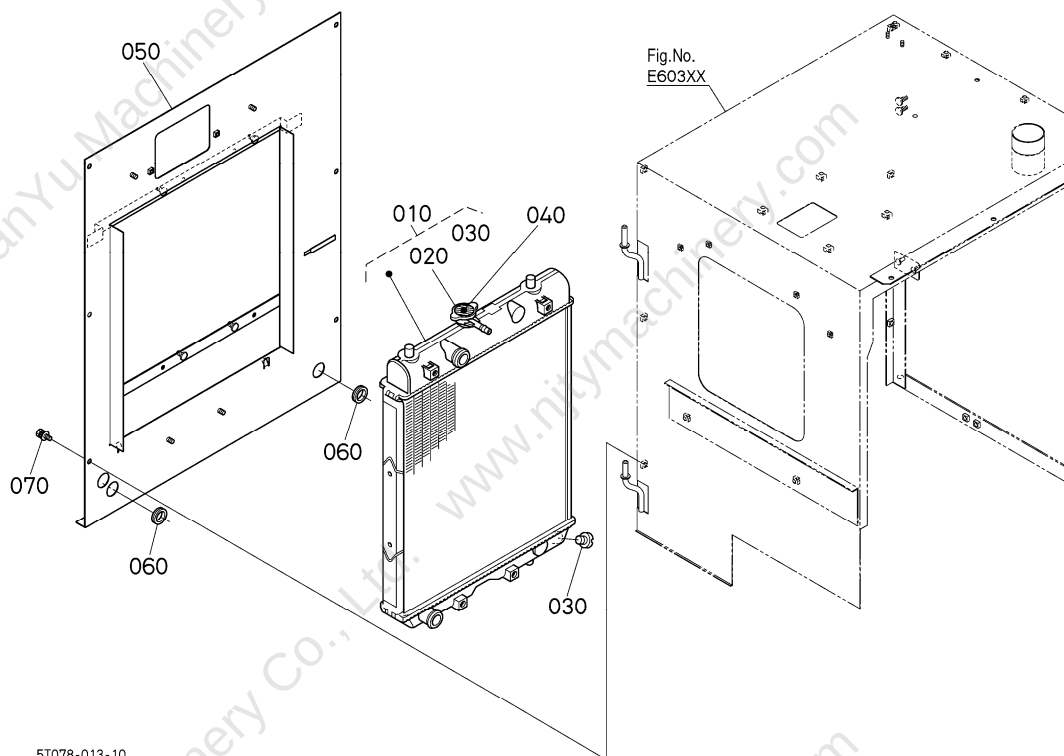


5T078-013-10

A: DC-70G

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

 150300

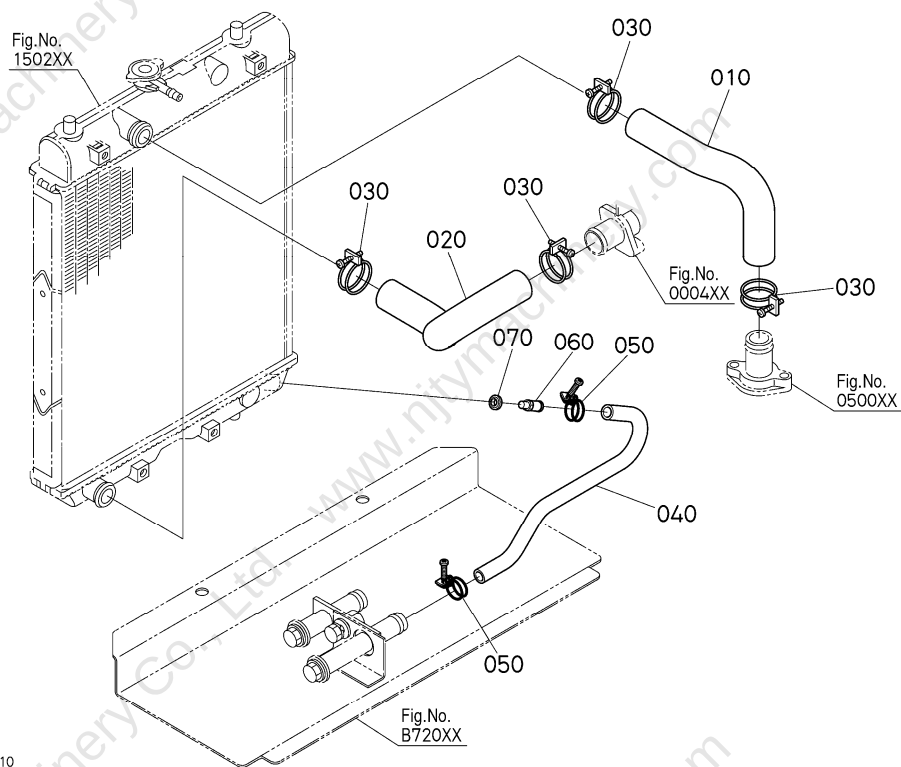

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 储备蓄水箱 RESERVE TANK

 


A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

160300

## 空气滤清器



A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


# 160500 消音器 MUFFLER

The diagram illustrates the assembly of a muffler. It features a main rectangular housing with a flange on one end. Various components are shown in their relative positions, indicated by dashed lines and leader lines. Key parts include: a long, narrow internal component (Fig. No. E601XX), a circular flange (Fig. No. 170), a small circular gasket or seal (Fig. No. 040), and several smaller bolts and nuts. The assembly is shown in a perspective view, highlighting the internal structure and the connection points for the flange and gasket.

Fig.No.  
E601XX

Fig. No. 170

 040

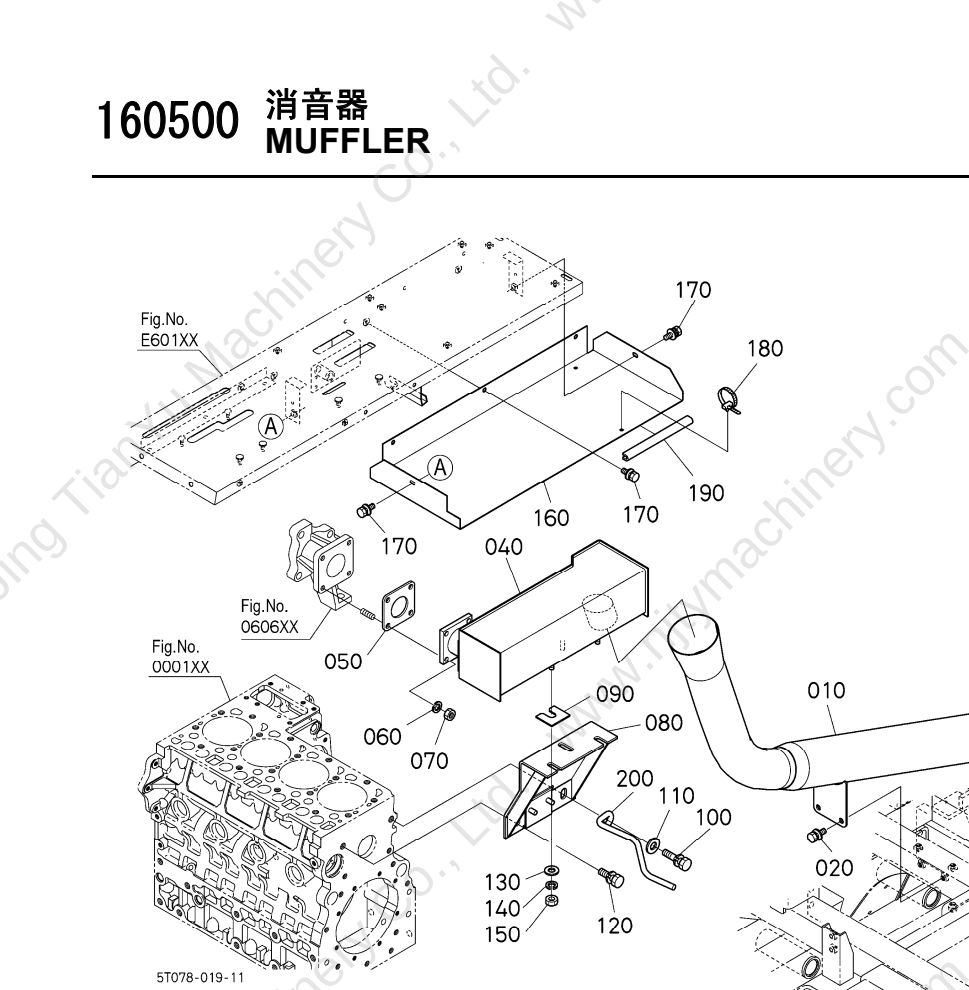


A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **初濾器**  
**PRE-CLEANER**




A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# 交流发电机 ALTERNATOR

 


A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 502000 交流发电机[组成部分]  
ALTERNATOR [COMPONENT PARTS]

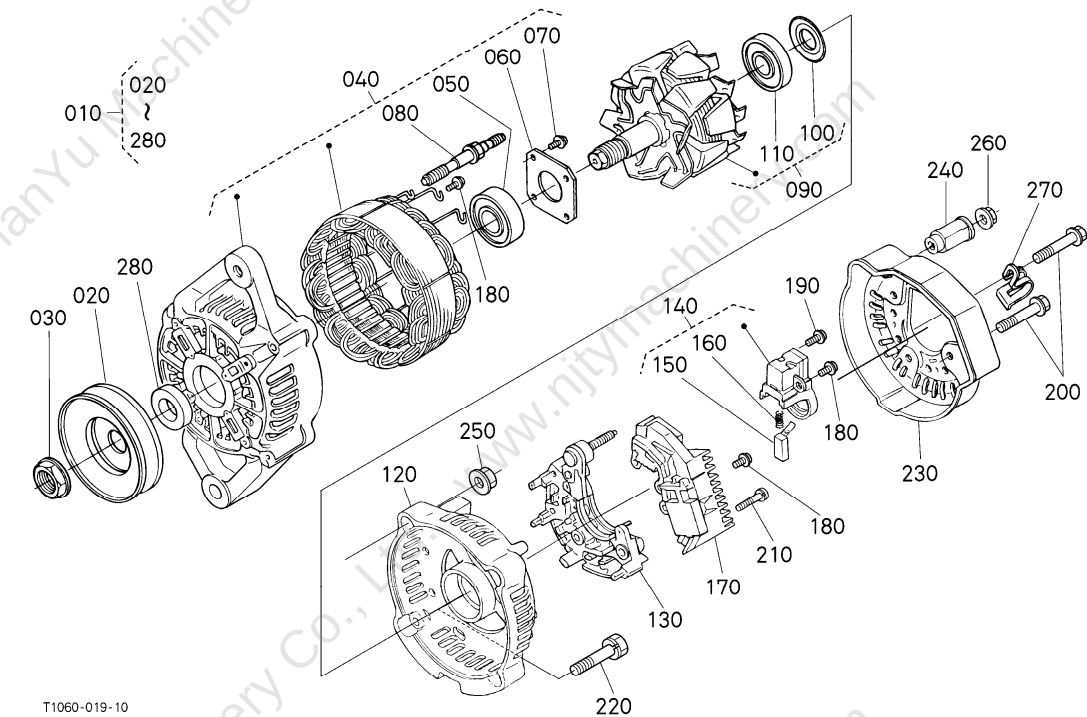

A:DC-70G

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称     | PART NAME            | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|----------|----------------------|------------------------|------------|---------------|
|               |                 |          |                      | A                      |            |               |
| 010           | 5H669-4250-0    | 交流发电机总成  | ASSY ALTERNATOR      | 1                      | 60A        |               |
| 020           | 5H730-4251-0    | 交流发电机皮带轮 | PULLEY,ALTERNATOR    | 1                      |            |               |
| 030           | 15881-9201-0    | 螺母       | NUT                  | 1                      |            |               |
| 040           | 1K411-6402-0    | 驱动框架总成   | ASSY FRAME,DRIVE END | 1                      |            |               |
| 050           | 16652-6478-0    | 球轴承      | BEARING,BALL         | 1                      |            |               |
| 060           | 15881-6471-0    | 定位板      | PLATE,RETAINER       | 1                      |            |               |
| 070           | 15881-9301-0    | 半圆头螺钉    | SCREW,ROUND HEAD     | 4                      |            |               |
| 080           | 15881-6426-0    | 贯穿螺栓     | BOLT,THROUGH         | 2                      |            |               |
| 090           | TA043-6404-0    | 转子       | ROTOR                | 1                      |            |               |
| 100           | 15881-6480-0    | 轴承盖      | COVER,BEARING        | 1                      |            |               |
| 110           | 16652-6477-0    | 球轴承      | BEARING,BALL         | 1                      |            |               |
| 120           | T1065-1561-0    | 后端架      | FRAME,END REAR       | 1                      |            |               |
| 130           | T1275-1563-0    | 固定件      | HOLDER               | 1                      |            |               |
| 140           | 16652-6431-0    | 电刷支架     | HOLDER,BRUSH         | 1                      |            |               |
| 150           | 15881-6409-0    | 电刷       | BRUSH                | 2                      |            |               |
| 160           | 15881-6433-0    | 电刷弹簧     | SPRING,BRUSH         | 2                      |            |               |
| 170           | 1K531-6460-2    | 调节器组件    | ASSY REGULATOR       | 1                      |            |               |
| 180           | 15881-9303-0    | 半圆头螺钉    | SCREW,ROUND HEAD     | 6                      |            |               |
| 190           | 15881-9304-0    | 半圆头螺钉    | SCREW,ROUND HEAD     | 1                      |            |               |
| 200           | 15881-9104-0    | 螺栓       | BOLT                 | 3                      |            |               |
| 210           | 15881-9302-0    | 半圆头螺钉    | SCREW,ROUND HEAD     | 2                      |            |               |
| 220           | 15881-9105-0    | 螺栓       | BOLT                 | 2                      |            |               |
| 230           | T1065-1566-0    | 后端盖      | COVER,END REAR       | 1                      |            |               |
| 240           | 16241-6490-0    | 绝缘衬套     | BUSH,INSULATION      | 1                      |            |               |
| 250           | 15881-9202-0    | 螺母       | NUT                  | 2                      |            |               |
| 260           | 14182-9203-0    | 螺母       | NUT                  | 1                      |            |               |
| 270           | 17369-6757-0    | 线夹       | CLAMP,CORD           | 1                      |            |               |
| 280           | 15881-6415-0    | 轴环       | COLLAR               | 1                      |            |               |

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

[illegible][illegible]

## STARTER [COMPONENT PARTS]



A: DC-70G

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称   | PART NAME            | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|--------|----------------------|------------------------|------------|---------------|
|               |                 |        |                      | A                      |            |               |
| 010           | 17123-6301-6    | 启动马达组件 | ASSY STARTER         | 1                      |            |               |
| 020           | 17123-6308-0    | 电磁线圈   | YOKE                 | 1                      |            |               |
| 030           | 15425-6340-0    | 电刷套件   | KIT BRUSH            | 2                      |            |               |
| 040           | 17123-6307-0    | 电枢     | ARMATURE             | 1                      |            |               |
| 050           | 17123-6350-0    | 轴承     | BEARING              | 1                      |            |               |
| 060           | 11460-6350-0    | 轴承     | BEARING              | 1                      |            |               |
| 070           | 17123-6304-0    | 过速离合器  | CLUTCH,OVER RUNNING  | 1                      |            |               |
| 080           | 17311-6328-0    | 小齿轮    | GEAR,PINION          | 1                      |            |               |
| 090           | 19212-6310-0    | 滚轴     | ROLLER               | 5                      |            |               |
| 100           | 11460-6311-0    | 定位器    | RETAINER             | 1                      |            |               |
| 110           | 11460-6327-0    | 齿轮     | GEAR                 | 1                      |            |               |
| 120           | 17123-6326-0    | 齿轮     | GEAR                 | 1                      |            |               |
| 130           | 17123-6303-0    | 驱动端框架  | FRAME,DRIVE END      | 1                      |            |               |
| 140           | 17123-6320-0    | 后端架    | FRAME,END            | 1                      |            |               |
| 150           | 15425-6339-0    | 电刷弹簧   | SPRING,BRUSH         | 4                      |            |               |
| 160           | 17123-6338-0    | 电刷支架   | HOLDER,BRUSH         | 1                      |            |               |
| 170           | 17123-6314-0    | 弹簧     | SPRING               | 4                      |            |               |
| 180           | 17123-6302-4    | 电磁开关组件 | ASSY SWITCH,MAGNETIC | 1                      |            |               |
| 190           | 17123-9331-0    | 螺钉     | SCREW                | 2                      |            |               |
| 200           | 17123-9332-0    | 螺钉     | SCREW                | 2                      |            |               |
| 210           | 17123-6332-0    | 贯穿螺栓   | BOLT,THROUGH         | 2                      |            |               |
| 220           | 19212-9713-0    | 钢珠     | BALL                 | 1                      |            |               |
| 230           | 11460-6312-0    | 弹簧     | SPRING               | 1                      |            |               |
| 240           | 15511-9666-0    | O 型环   | O RING               | 2                      |            |               |
| 250           | 16285-6357-0    | 线缆管    | PIPE,DRAIN           | 1                      |            |               |
| 260           | 13963-9201-0    | 六角螺母   | NUT,HEXAGON          | 1                      |            |               |
| 270           | 16285-9201-0    | 六角螺母   | NUT,HEXAGON          | 1                      |            |               |
|               |                 |        |                      |                        |            |               |
|               |                 |        |                      |                        |            |               |
|               |                 |        |                      |                        |            |               |

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

# 511000 蓄电池 BATTERY


The diagram illustrates the assembly of a battery unit into a chassis. Key components and their callouts are as follows:

- Fig.No. C002XX**: Points to the upper chassis rail.
- 050**: A screw used to secure the upper rail.
- 040**: A bracket or support piece for the battery.
- 060**: A cable with a connector for the positive terminal.
- 090**: A cable with a connector for the negative terminal.
- 010**: Points to the battery unit.
- 020**: Points to the battery terminals.
- 030**: A metal plate or bracket at the bottom of the assembly.
- 100**: A cable with a connector, likely for a sensor or additional power.
- Fig.No. C001XX**: Points to the lower chassis rail.
- 080**: A screw used to secure the lower rail.

Fig.No.  
5050XX

[illegible]
 
# 521000 发动机开关 ENGINE SWITCH



A:V2403-M-DI-TE2-CSKC1

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件



## 驾驶舱开关 COCKPIT SWITCH



A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**开关(储粮罐)**  
**SWITCH (GRAIN TANK)**



A:DC-70G-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

526100

## 继电器(储粮罐)



Fig.No.  
K209XX

5T078-025-10

 
 
A:DC-70G-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# 531000 前面板 FRONT PANEL

---

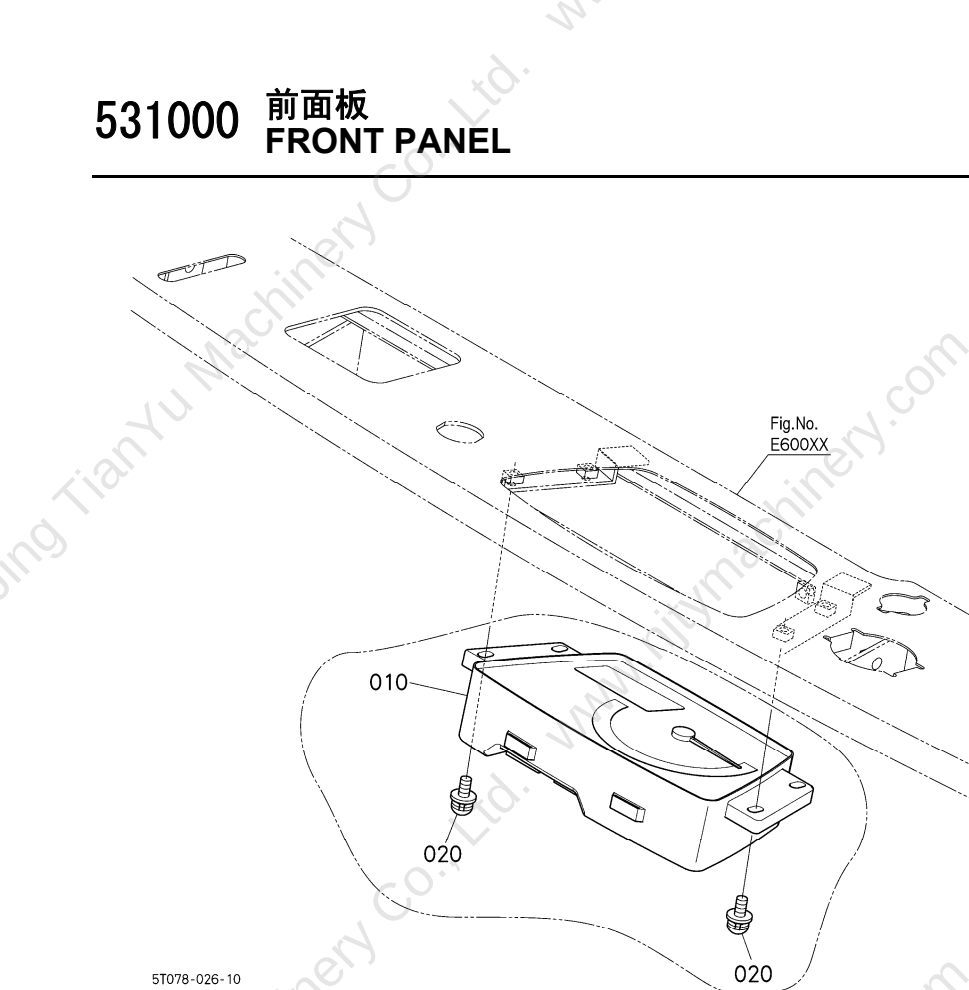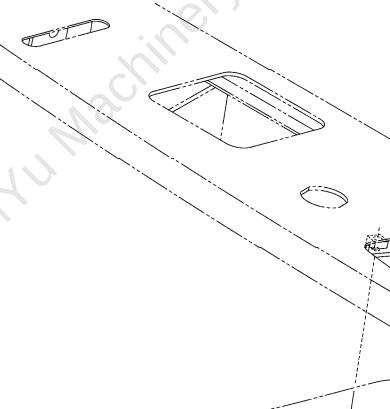


A: DC-70G

[illegible]

541001

 **工作灯(机体)**  
**WORK LIGHT(BODY)**



A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

541002

## WORK LIGHT(THRESHING)



5T078-028-10

A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**541003**

**WORK LIGHT (GRAIN TANK) 1**

 


A:DC-70G-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

541004

**WORK LIGHT (GRAIN TANK) 2**

[illegible]

541005

**WORK LIGHT(HARVEST)**

 



Fig.No.  
U012XX

A: DC-70G-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 571000 电缆束(机体)  
WIRE HARNESS(BODY)

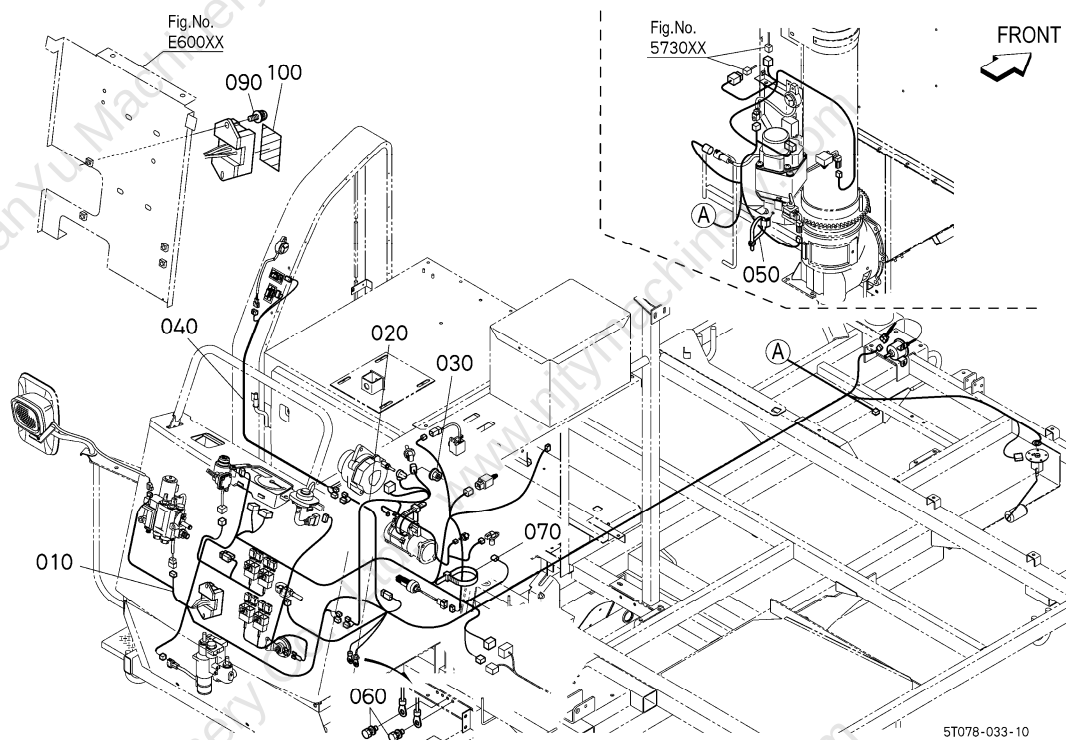


A: DC-70G

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\longleftarrow$  新部件可替换旧部件;  $\longrightarrow$  旧部件可替换新部件

 572000 电缆束(脱粒)  
WIRE HARNESS(THRESHING)

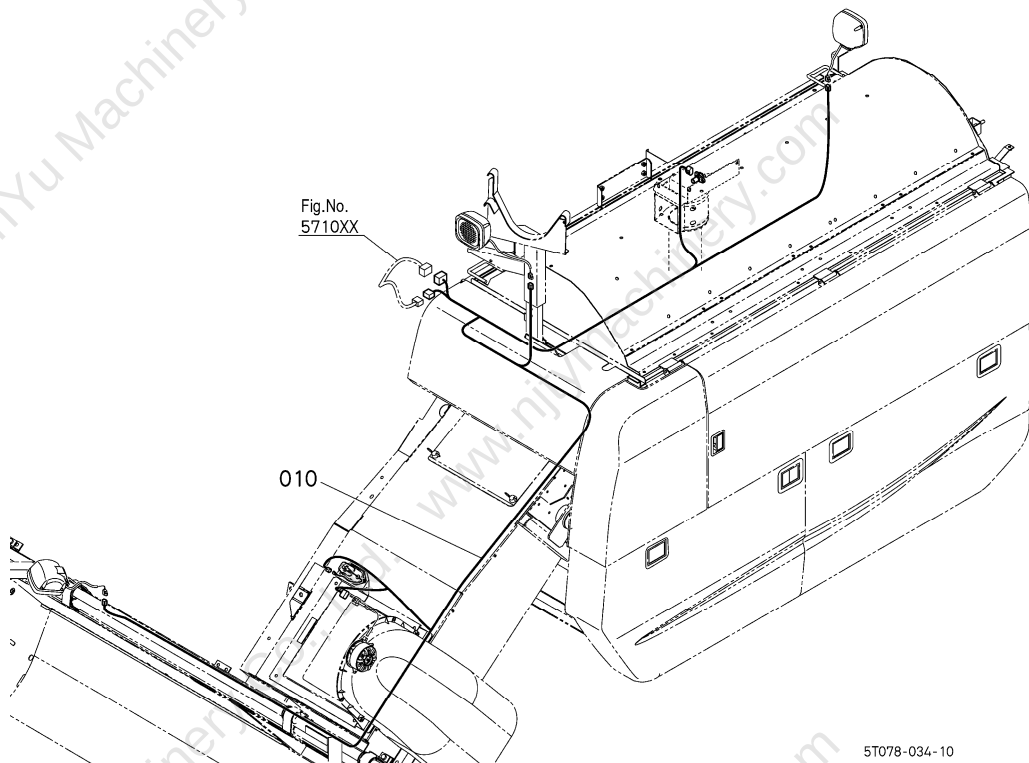

5T078-034-10

A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

573000

## WIRE HARNESS (GRAIN TANK)



Fig.No.  
5710XX

5T078-035-10

A:DC-70G-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


577000



Fig.No.  
U753XX

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **A01000 反滑轮**  
**COUNTER PULLEY**

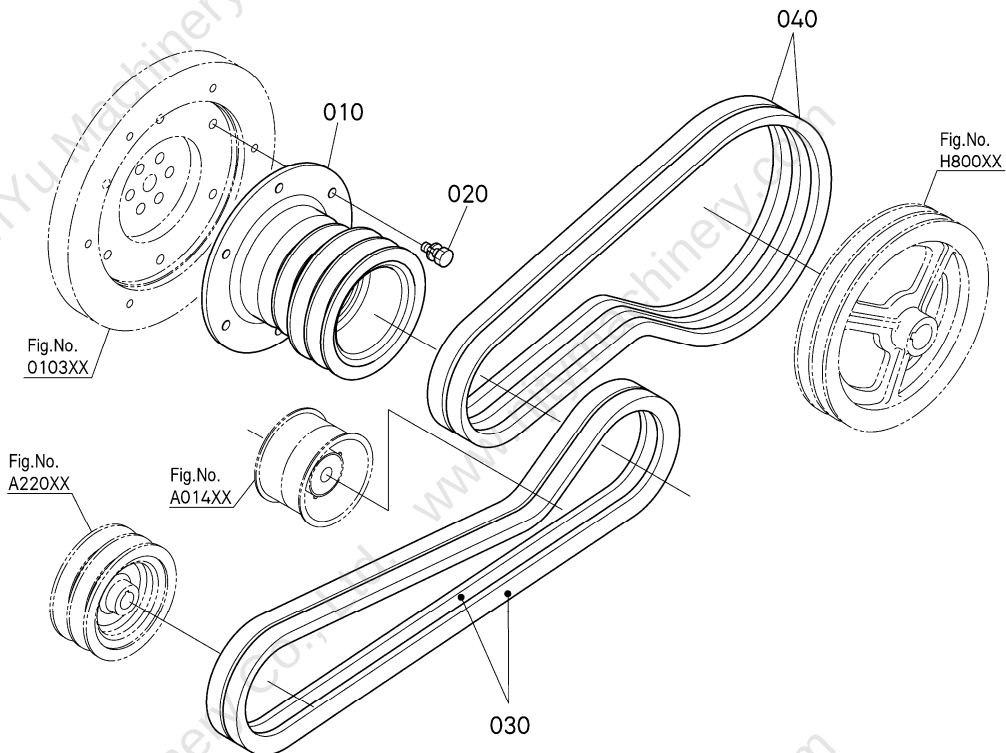


5T078-038-10

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 张紧(移动)  
TENSION(TRAVEL)



A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


## 传动箱 TRANSMISSION CASE



A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **传动箱内 1**  
**TRANSMISSION CASE INSIDE 1**



A:DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# A11200

 
## TRANSMISSION CASE INSIDE 2



A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


### 传动箱内 3 TRANSMISSION CASE INSIDE 3



A:DC-70G

$\Leftrightarrow$  新旧部件可替换:  $\nRightarrow$  新旧部件不可替换:  $\Leftarrow$  新部件可替换旧部件:  $\Rightarrow$  旧部件可替换新部件

 **传动箱内 4**  
**TRANSMISSION CASE INSIDE 4**



A: DC-70G

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\Leftarrow$  新部件可替换旧部件:  $\Rightarrow$  旧部件可替换新部件

# A20100 刹车内部 BRAKE INSIDE

This exploded view diagram illustrates the internal components of the A20100 brake assembly. The central component is the brake housing, shown in two views: Fig. No. A110XX (left) and Fig. No. A112XX (right). The assembly sequence is indicated by letters A and B. Key components include the brake disc (010), brake pads (080, 070, 100), brake shoes (020, 030), brake springs (040, 050, 060), and various seals and O-rings (110, 090, 120, 115, 117, 130, 140, 150, 160). The diagram also shows the brake lever (100) and the brake cable (160). The assembly is shown in a disassembled state to facilitate identification of parts and their relative positions.

Fig. No. A110XX

Fig. No. A112XX

Fig. No. A110XX

5T078-043-10

A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# A22000 HST 输入轴 HST INPUT SHAFT

Fig.No. B110XX

Fig.No. A110XX

 
030 040 060 050 160 070 080 105 110 120 130 140 150 020

51078-044-10

A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**B10800**

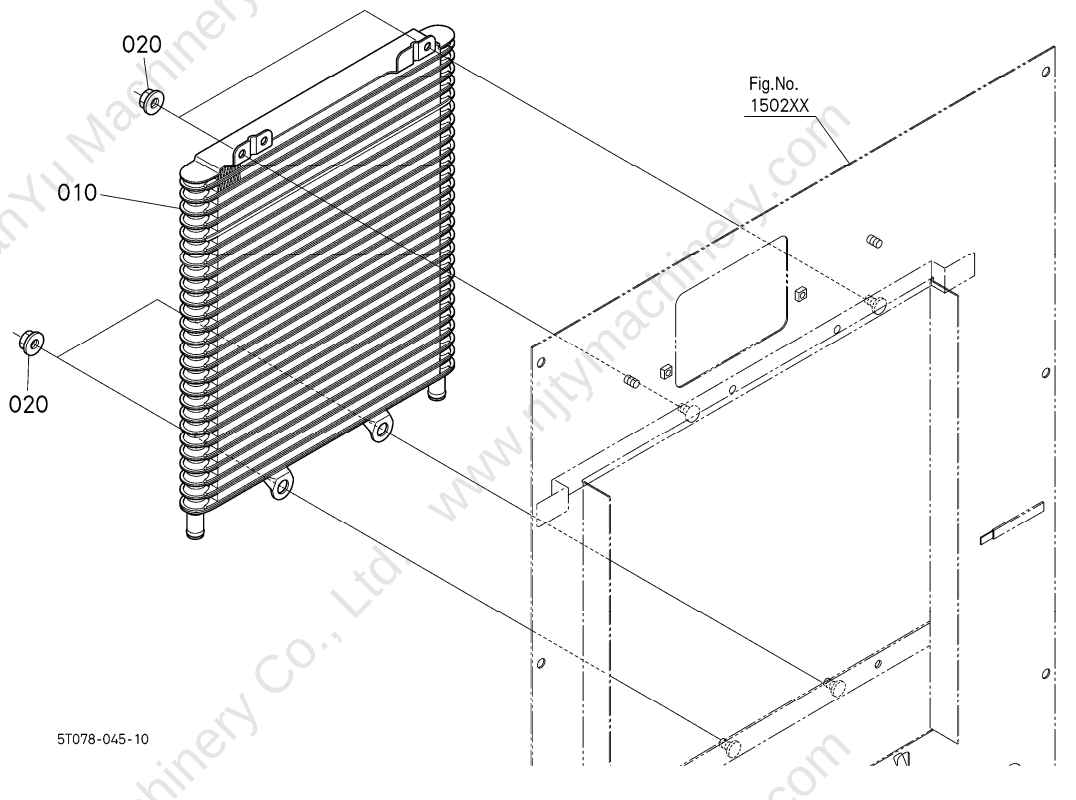

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

Fig.No.  
A110XX

[illegible]

## HST [COMPONENT PARTS] 1



A: DC-70G

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\Leftarrow$  新部件可替换旧部件:  $\Rightarrow$  旧部件可替换新部件

## HST [COMPONENT PARTS] 2



A: DC-70G

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称    | PART NAME           | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|---------|---------------------|------------------------|------------|---------------|
|               |                 |         |                     | A                      |            |               |
| 005           | 5H470-1100-5    | HST 总成  | ASSY HST            | 1                      |            |               |
| 010           | 08241-05205     | 轴承      | BEARING,BALL        | 1                      |            |               |
| 020           | 52807-1102-0    | 油封      | SEAL,OIL            | 1                      |            |               |
| 030           | 04611-00520     | 内卡环     | CIR-CLIP,INTERNAL   | 2                      |            |               |
| 040           | -----           | 无       | BLANK               | -                      |            |               |
| 050           | 5H630-1051-0    | 轴       | SHAFT               | 1                      |            |               |
| 060           | 6A110-3515-0    | 轴环      | COLLAR,THRUST       | 1                      |            |               |
| 070           | TC220-5840-0    | 旋耕机组件   | ASSY ROTARY         | 1                      |            |               |
| 072           | 66363-3924-0    | 弹簧支架    | HOLDER,SPRING       | 1                      |            |               |
| 075           | 66363-3925-0    | 弹簧      | SPRING              | 1                      |            |               |
| 080           | 04611-00350     | 内卡环     | CIR-CLIP,INTERNAL   | 1                      |            |               |
| 090           | 5H630-1070-2    | 盖总成.阻塞孔 | ASSY COVER,PORBLOCK | 1                      |            |               |
| 100           | 52807-1116-0    | 轴承      | BEARING,NEEDELE     | 2                      |            |               |
| 110           | 6A610-3533-0    | 塞子      | PLUG                | 2                      |            |               |
| 120           | K7001-3962-0    | 塞子      | PLUG                | 1                      |            |               |
| 130           | 05411-00414     | 弹簧销     | PIN,SPRING          | 2                      |            |               |
| 140           | 5H630-1072-2    | 阀门板     | PLATE,VALVE         | 1                      |            |               |
| 150           | TC420-5897-0    | 阀门板     | PLATE,VALVE         | 1                      |            |               |
| 160           | K7561-1118-0    | 硝.罐     | PIN,STRAIGHT        | 2                      |            |               |
| 170           | 06311-25020     | 塞子      | PLUG                | 4                      |            |               |
| 180           | 04817-00110     | O型密封圈   | O RING              | 4                      |            |               |
| 190           | 06311-25040     | 塞子      | PLUG                | 2                      |            |               |
| 200           | 04817-00180     | O型密封圈   | O RING              | 2                      |            |               |
| 210           | 5H630-1080-0    | 阀组件     | ASSY VALVE          | 2                      |            |               |
| 220           | 66415-8386-0    | 弹簧      | SPRING              | 2                      |            |               |
|               |                 |         |                     |                        |            |               |
|               |                 |         |                     |                        |            |               |
|               |                 |         |                     |                        |            |               |
|               |                 |         |                     |                        |            |               |

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

### HST [COMPONENT PARTS] 3



A: DC-70G

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

[illegible][illegible]

76

**B23100**

## HYDRAULIC UNIT [COMPONENT PARTS]



A: DC-70G

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

# B23300

## HYDRAULIC UNIT (GRAIN TANK)



 
5T078-048-10

A: DC-70G

[illegible]


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## HYDRAULIC UNIT (GRAIN TANK) [COMPONENT PARTS]



$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

## 丰收缸 HARVEST CYLINDER

 

A: DC-70G

$\leftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

# B24600

## 丰收缸[组成部分]

## HARVEST CYLINDER [COMPONENT PARTS]

[illegible]

机(筒)  
UNLOADER CYLINDER



 
A : DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**B24800**

## UNLOADER CYLINDER [COMPONENT PARTS]



A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**B26000 离合器缸**  
**CLUTCH CYLINDER**




A: DC-70G

[illegible]

$\leftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

# B26100

 
$$010 \left\{ \begin{array}{l} A \\ \cdot \\ B \\ \cdot \\ 020 \\ \cdot \\ 100 \end{array} \right.$$

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# B50400 液压泵 HYDRAULIC PUMP

Fig.No.  
0105XX

Fig.No.  
0105XX

120

030

040

050

01

130

140

150

160

160

150

 
150

5T050-020-12

[illegible]

86

## HYDRAULIC PUMP [COMPONENT PARTS]



A: DC-70G

[illegible]

**B50600**

## 液压软管(罐)



 
5T078-052-10

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**B70000**




A: DC-70G

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

# B70100 油压软管 2 HYDRAULIC HOSE 2

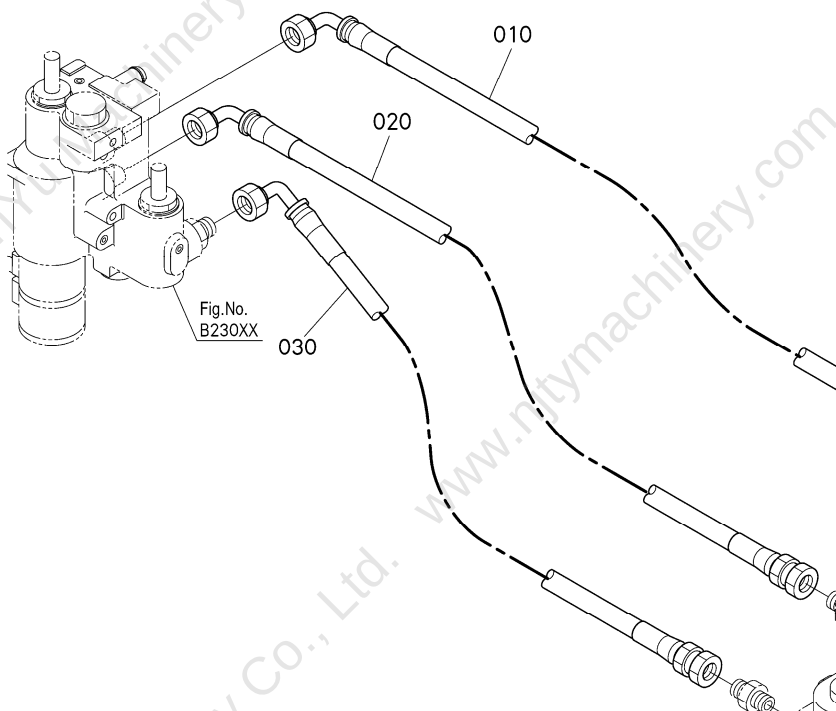 

The diagram illustrates the assembly of hydraulic hose B70100. It features a hydraulic valve assembly on the left, labeled 'Fig. No. B230XX'. Three hoses are connected to the valve: hose 010 (top), hose 020 (middle), and hose 030 (bottom). Each hose is shown with its specific fittings and connectors. The hoses are depicted with solid lines for the rigid sections and dashed lines for the flexible sections. The assembly is shown in a perspective view, highlighting the connection points and the layout of the hoses.

Fig. No. B230XX

010

020

030

5T078-054-10


A:DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件






**B70400**

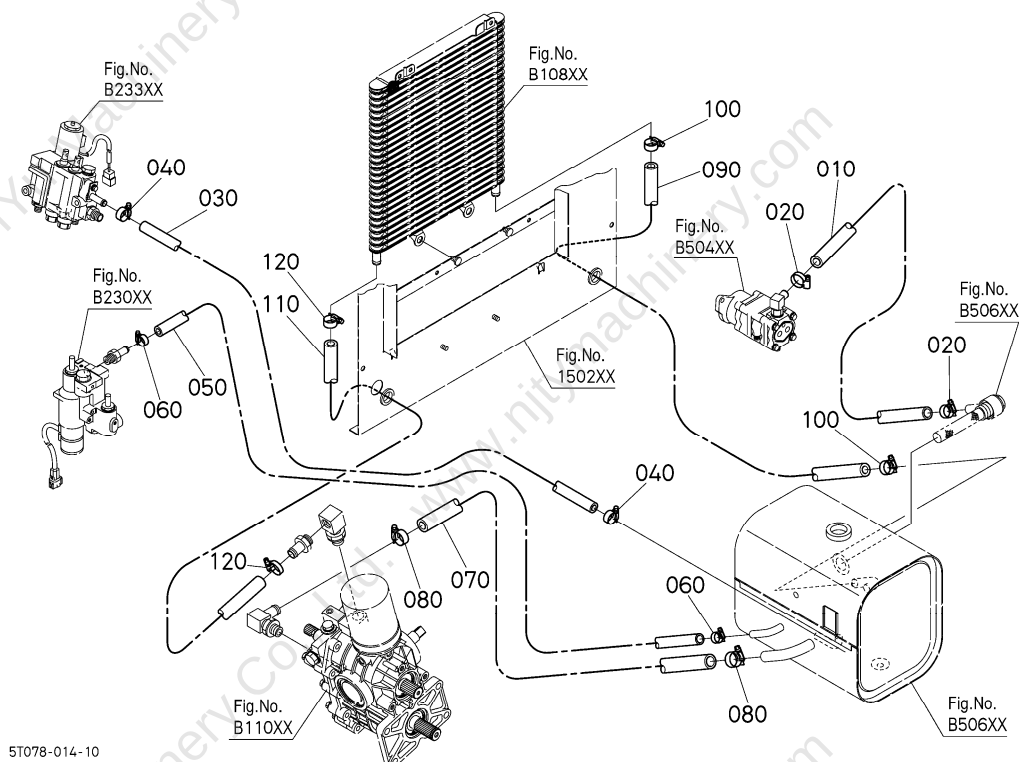 [illegible]

## 油压软管(机) HYDRAULIC HOSE (UNLOADER)

 

A: DC-70G

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nabla$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

# B72000 排油管 OIL DRAIN HOSE

Fig.No.  
C001XX

040

050

070

080

090

100

110

010

020


Fig.No.  
0002XX

5T078-012-10

[illegible]

95

 **C00100 主框架**  
**MAIN FRAME**

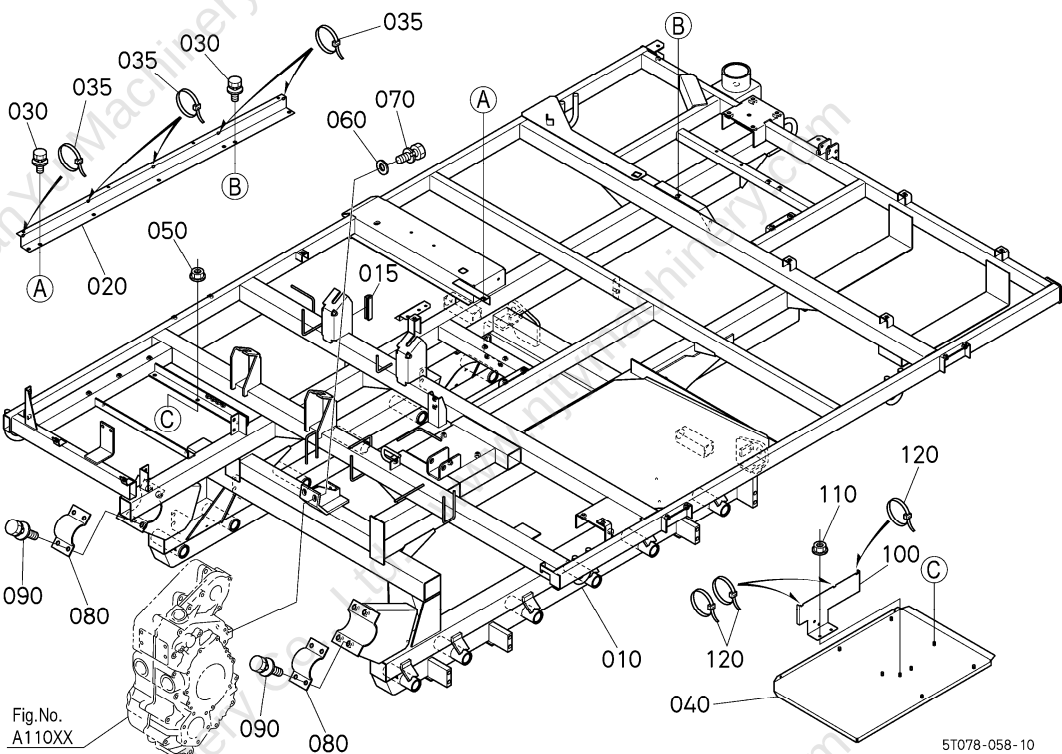

A: DC-70G


[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**C00200 甲板 DECK**

100 090 (A) 020 120 130 040

 Fig.No. C001XX



A:DC-70G

[illegible]

**发动机底座**  
**ENGINE BASE**



A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 工具箱 TOOL BOX



 
A:DC-70G

[illegible]


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# C10000 履带 CRAWLER

---

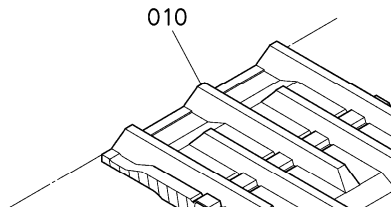


010

 

A: DC-70G

[illegible]

 **C10101 左侧支重轮**  
**TRACK ROLLER LH**

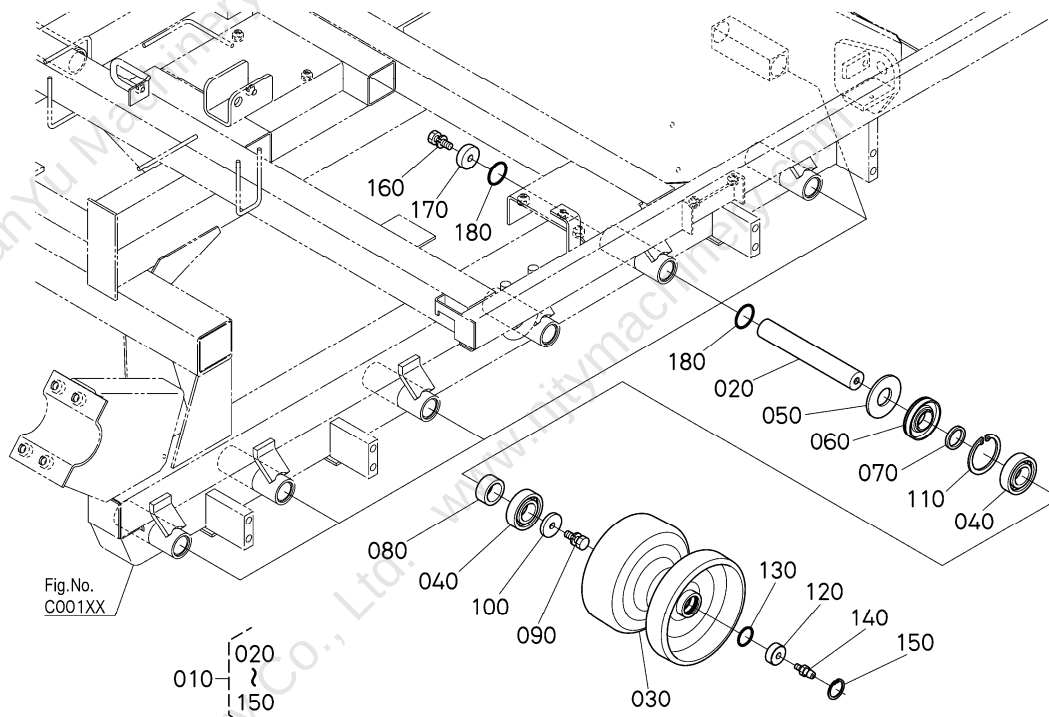


5T078-006-10

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **C10102 右侧支重轮**  
**TRACK ROLLER RH**




A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
左侧张力框架  
TENSION FRAME LH



A: DC-70G

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

 **C10302 右侧张力框架**  
**TENSION FRAME RH**

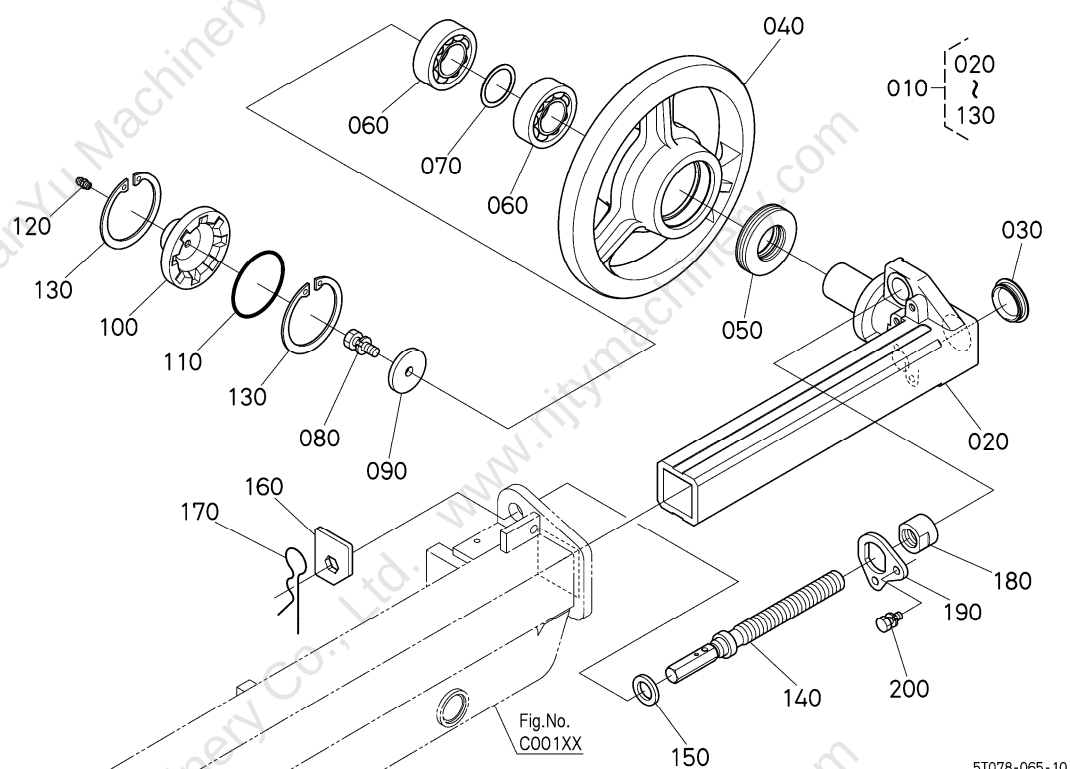


5T078-065-10

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **C10401 左側履帶牽引裝置**  
**CRAWLER GUIDE LH**

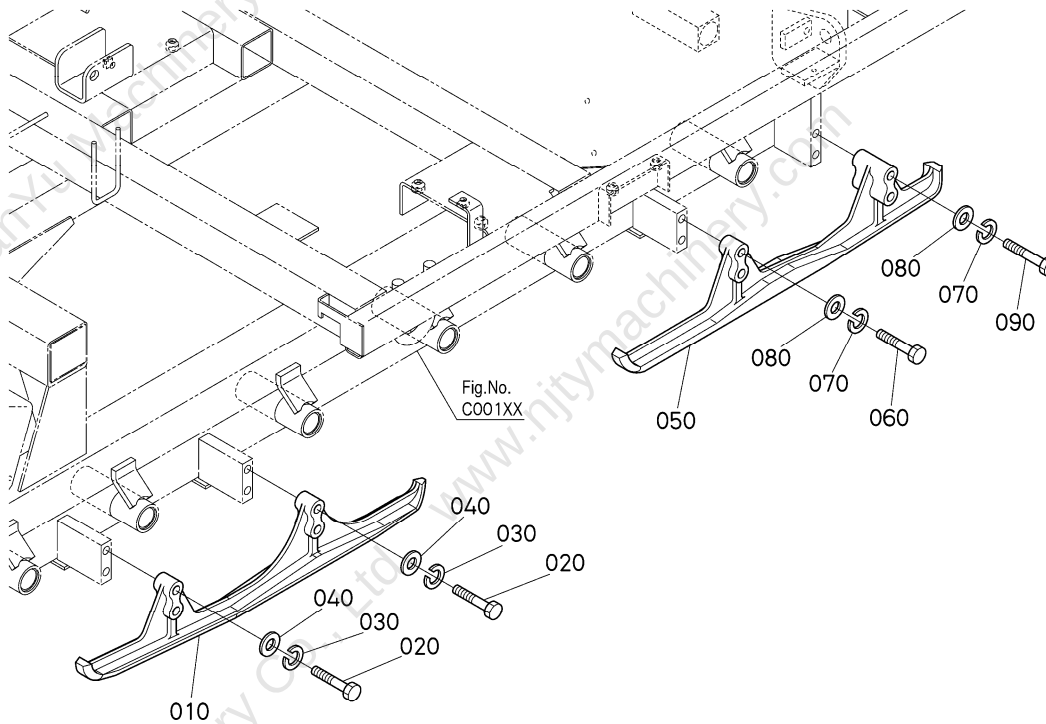


5T078-066-10

A: DC-70G

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

 **C10402 右侧履带牵引装置**  
**CRAWLER GUIDE RH**

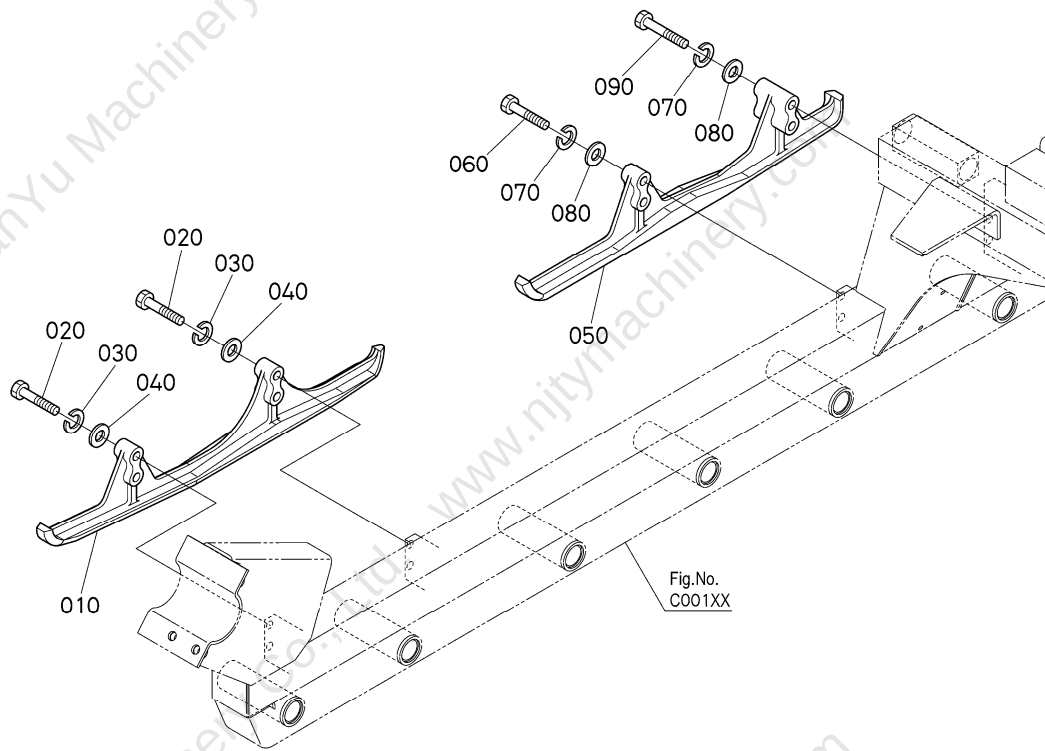

5T078-067-10

Fig.No.  
C001XX

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# C10501 左侧驱动辊 DRIVE ROLLER LH

Fig.No. C001XX

010 { 020 }  
150

030 040 050 080 090 100 120 130 140 150 160 170 180 180

5T078-068-10

A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**C10502**

### DRIVE ROLLER RH

 


Fig.No.  
C001XX

A: DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# D60100

## MAIN SHIFT LEVER (HST ROD)



A: DC-70G

$\longleftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

# D60300 转向器 STEERING

Fig.No. E600XX

Fig.No. B230XX

5T078-071-10

 


A: DC-70G

[illegible]

110

# D60500

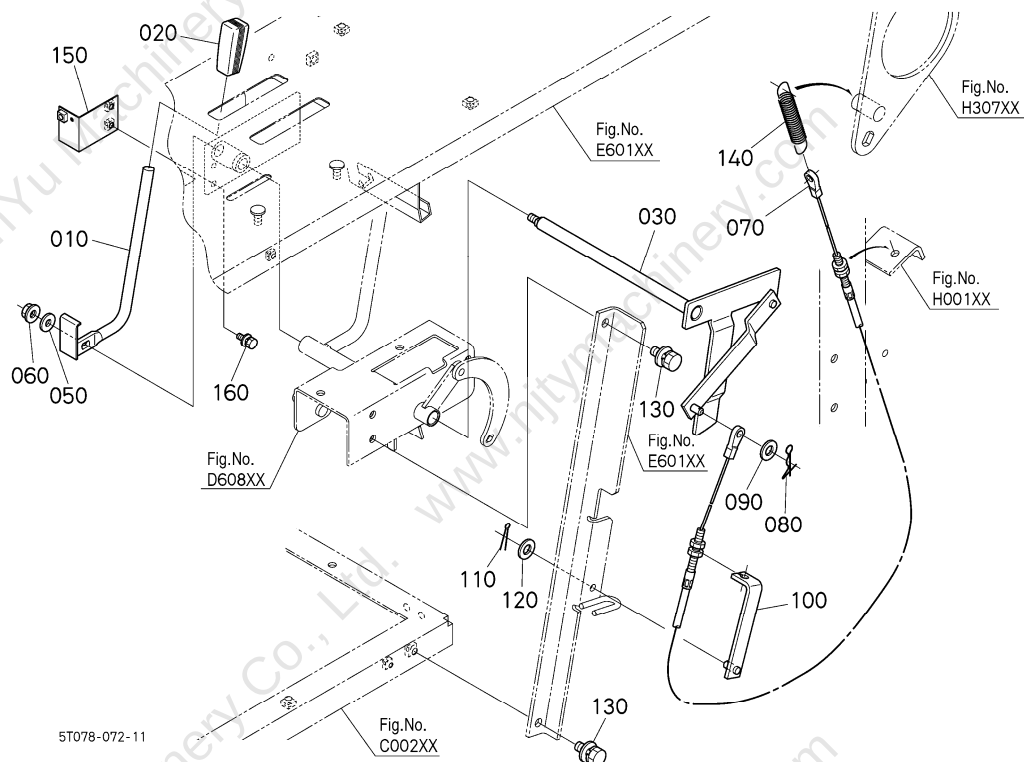


A:DC-70G

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\longleftarrow$  新部件可替换旧部件;  $\longrightarrow$  旧部件可替换新部件

 **加速器杆**  
**ACCELERATOR LEVER**



A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# D60800

## 脱粒离合器控制板



A:DC-70G

[illegible]

$\leftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

**主变速手柄**  
**MAIN SP-CHANGE LEVER/RESTRAINT LEVER**



A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**副变速手柄**  
**RANGE GEAR SHIFT LEVER**



A : DC-70G


[illegible]

$\leftrightarrow$  新旧部件可替换;  $\neq$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

Technical drawing of a brake pedal assembly (Fig. No. C002XX). The drawing shows the pedal, lever, and various components labeled with numbers:

- 070: Spring
- 080: Lever
- 090: Pin
- 130: Nut
- 110: Bolt

 The drawing is labeled "Fig.No. C002XX" and "5T078-005-11".

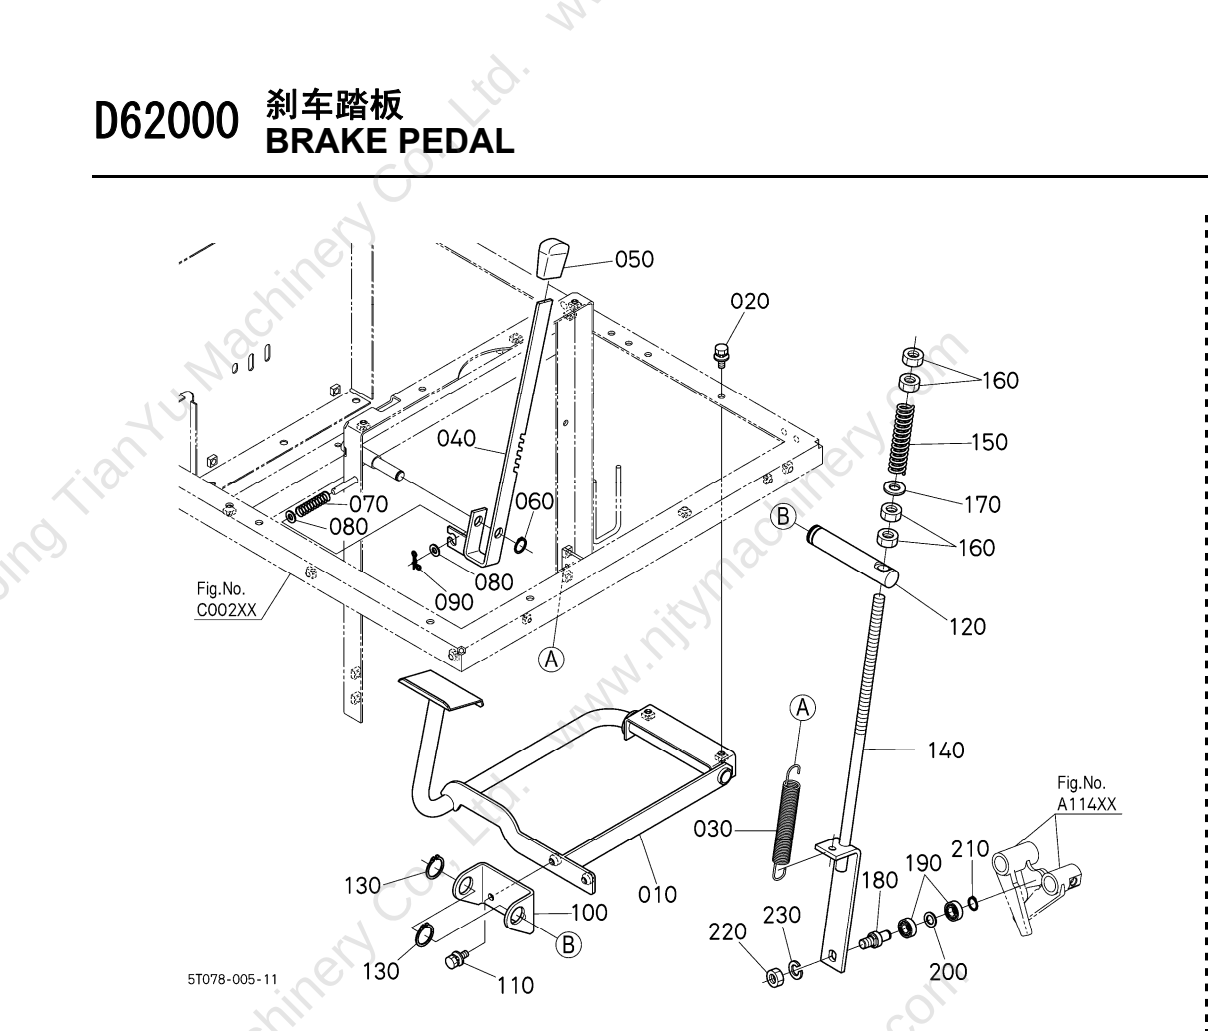

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# D63400

## HARVEST ELEVATOR ARM




5T078-077-10

Fig.No.  
D603XX

Fig.No.  
B233XX

[illegible]
 
## 运行框架 OPERATION FRAME

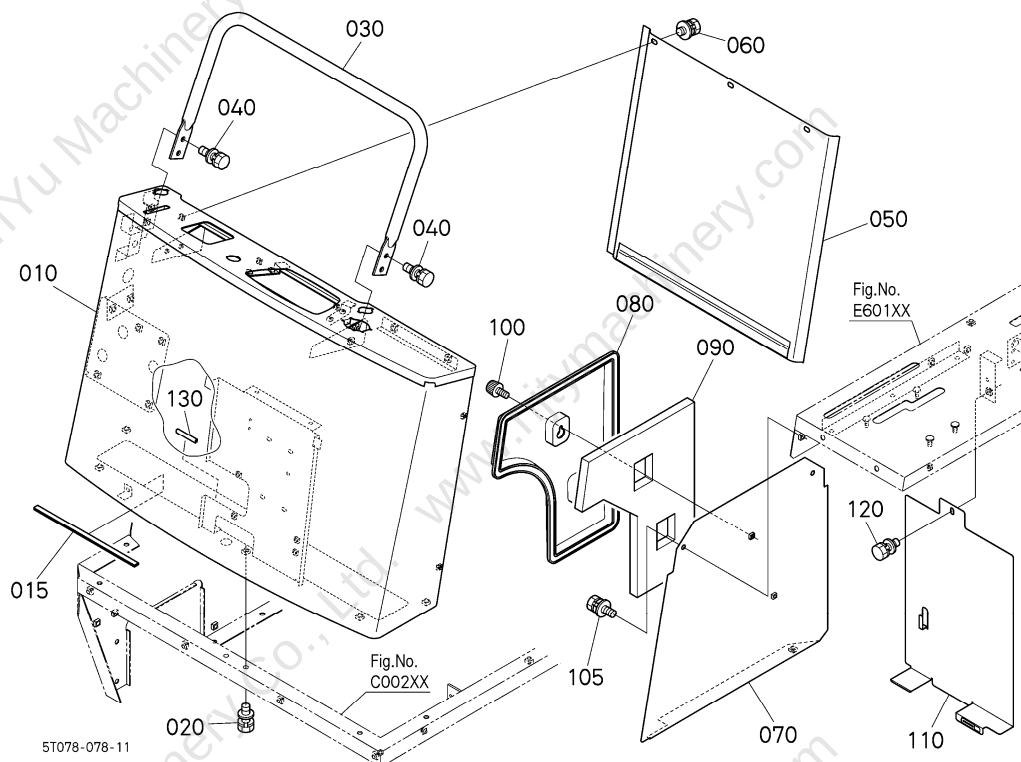

A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## E60100 操作面板 OPERATION PANEL

 


A: DC-70G

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# E60300 座椅 SEAT

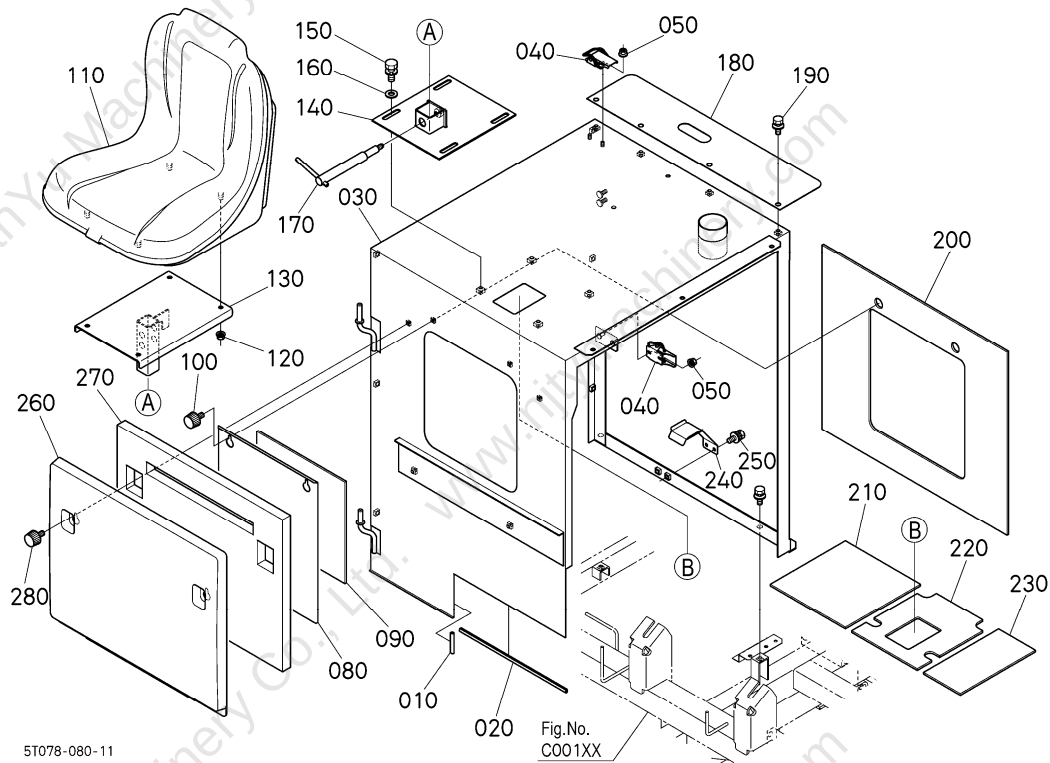

A:DC-70G

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称    | PART NAME             | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|---------|-----------------------|------------------------|------------|---------------|
|               |                 |         |                       | A                      |            |               |
| 010           | 5T072-3548-0    | 平衡调节片   | TRIM                  | 1                      |            |               |
| 020           | 5T072-3549-0    | 平衡调节片   | TRIM                  | 1                      |            |               |
| 030           | 5T078-3541-0    | 车架, 保险杆 | FRAME, SEAT           | 1                      |            |               |
| 040           | 5G200-1113-0    | 固定夹     | CLAMP                 | 2                      |            |               |
| 050           | 02021-50060     | 螺帽      | NUT                   | 4                      |            |               |
| 060           | ----            | 无       | BLANK                 | -                      |            |               |
| 070           | ----            | 无       | BLANK                 | -                      |            |               |
| 080           | 5T078-3543-0    | 罩, 框架座  | COVER, SEAT FRAME     | 1                      |            |               |
| 090           | 5T078-3751-0    | 隔热板     | INSULATION, HEAT      | 1                      |            |               |
| 100           | 53415-4128-0    | 树脂螺栓    | PLASTIC BOLT          | 2                      |            |               |
| 110           | 5H492-3539-0    | 座椅      | SEAT                  | 1                      |            |               |
| 120           | 02121-50080     | 螺帽      | NUT                   | 4                      |            |               |
| 130           | 5T078-3561-2    | 底座固定器   | STAY(1, SEAT)         | 1                      |            |               |
| 140           | 5T078-3562-2    | 底座固定器   | STAY(2, SEAT)         | 1                      |            |               |
| 150           | 01133-51020     | 螺栓      | BOLT, SEMS            | 4                      |            |               |
| 160           | 04015-60100     | 平垫圈     | WASHER, PLAIN         | 4                      |            |               |
| 170           | 5T078-3563-0    | 螺栓, 螺旋  | BOLT, JAKI            | 1                      |            |               |
| 180           | 5T078-3544-0    | 后方防尘薄片  | SEAT, DUST PROOF      | 1                      |            |               |
| 190           | 01127-50816     | 螺栓      | BOLT, W SEMS(LARGE WA | 4                      |            |               |
| 200           | 5T078-3752-0    | 隔热板     | HEAT INSULATOR(FR)    | 1                      |            |               |
| 210           | 5T078-3755-0    | 隔热板     | INSULATION, HEAT      | 1                      |            |               |
| 220           | 5T078-3756-0    | 隔热板     | INSULATION, HEAT      | 1                      |            |               |
| 230           | 5T078-3757-0    | 隔热板     | INSULATION, HEAT      | 1                      |            |               |
| 240           | 5T072-3546-0    | 板       | PLATE                 | 1                      |            |               |
| 250           | 01125-60820     | 螺栓      | BOLT                  | 2                      |            |               |
| 260           | 5T078-3591-0    | 盖       | COVER                 | 1                      |            |               |
| 270           | 5T078-3592-0    | 封       | SEAL                  | 1                      |            |               |
| 280           | 53415-4128-0    | 树脂螺栓    | PLASTIC BOLT          | 2                      |            |               |

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

**防尘盖 1**  
**DUSTPROOF COVER 1**



A:DC-70G

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


**防尘盖 2**  
**DUSTPROOF COVER 2**



Fig.No.  
E603X

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **E60900 后视镜**  
**REARVIEW MIRROR**



A:DC-70G

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\longleftarrow$  新部件可替换旧部件;  $\longrightarrow$  旧部件可替换新部件

# E75000 顶篷 CANOPY

The diagram illustrates the assembly of the E75000 canopy. It shows the main canopy frame (015) and the base frame (010). The canopy frame is secured with screws (050) and washers (020, 030). The base frame is secured with screws (040) and a pin (100). The assembly is shown in an exploded view, indicating the sequence of parts to be installed.

015

050

020

030

050

020

030

040

100

010

040

5T072-107-11

 


Fig.No.  
K001XX


A: DC-70G

$\leftrightarrow$  新旧部件可替换;  $\neq$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

**G90100 标签(机体)**  
**LABEL(BODY)**

This technical drawing is an exploded view of the G90100 Label Body assembly. It includes the following components and callouts:

 
- Fig.No. E606XX**: Points to a small rectangular component (110) and a larger rectangular component (120) located at the top left.
- 090**: Points to a vertical rectangular plate with horizontal hatching.
- 080**: Points to a horizontal rectangular plate with horizontal hatching.
- 100**: Points to the bottom edge of the vertical plate (090).
- 130**: Points to a long, narrow rectangular plate with diagonal hatching.
- 020**: Points to a small rectangular component on the long plate (130).
- 150**: Points to a small circular component on the long plate (130).
- 03**: Points to a small rectangular component on the long plate (130).
- 140**: Points to a circular component with a stylized 'K' logo, shown in a separate view at the bottom left.



A: DC-70G

125

# G95000 标准附件 ACCESSORIES

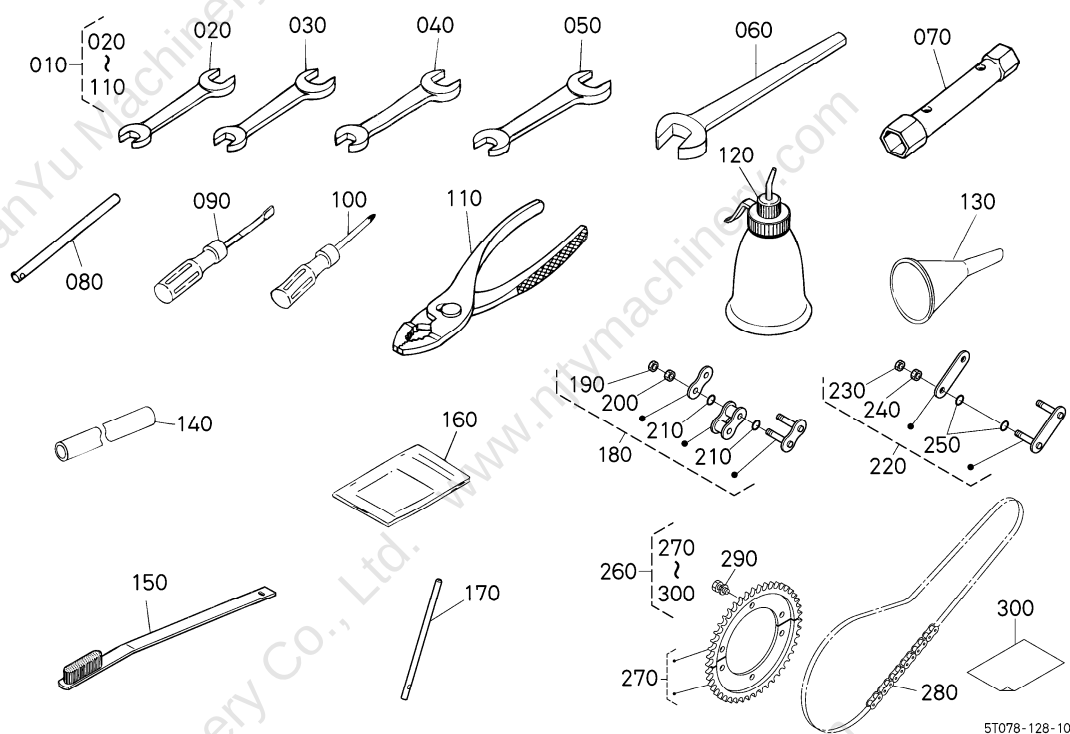 

5T078-128-10


A:DC-70G

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称     | PART NAME          | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|----------|--------------------|------------------------|------------|---------------|
|               |                 |          |                    | A                      |            |               |
| 010           | 5H400-8550-0    | 工具组件     | ASSY TOOLS         | 1                      |            |               |
| 020           | 07012-10810     | 扳手       | SPANNER            | 1                      |            |               |
| 030           | 07012-11012     | 扳手       | SPANNER, 10-12     | 1                      |            |               |
| 040           | 07012-11214     | 扳手       | SPANNER            | 1                      |            |               |
| 050           | 07012-11417     | 扳手       | SPANNER, 14-17     | 1                      |            |               |
| 060           | 07011-10030     | 扳手       | SPANNER            | 1                      |            |               |
| 070           | 54511-8813-0    | 扳手盒      | SPANNER,BOX        | 1                      |            |               |
| 080           | 54711-8513-0    | 方向盘      | HANDLE             | 1                      |            |               |
| 090           | 07111-00100     | 螺丝刀      | DRIVER,SCREW       | 1                      |            |               |
| 100           | 07113-02100     | 螺丝刀      | DRIVER,SCREW       | 1                      |            |               |
| 110           | 07211-10150     | 手钳       | PLIERS             | 1                      |            |               |
| 120           | 5H400-8561-0    | 加油器      | FEEDER,OIL         | 1                      |            |               |
| 130           | 5H400-8562-0    | 漏斗       | FUNNEL             | 1                      |            |               |
| 140           | 5H400-8563-0    | 加油管      | PIPE,OIL FILLER    | 1                      |            |               |
| 150           | 5H400-8564-0    | 电刷       | BRUSH              | 1                      |            |               |
| 160           | 5T078-8511-0    | 使用说明书    | MANUAL,INSTRUCTION | 1                      |            |               |
| 170           | 5T072-5244-0    | 销, 轴角    | SHAFT,FINGER       | 2                      |            |               |
| 180           | 5T050-4651-3    | 链条支架     | HOLDER,CHAIN       | 2                      |            |               |
| 190           | 02012-60060     | 螺帽       | NUT                | 4                      |            |               |
| 200           | 02014-50060     | 螺帽       | HEX.NUT            | 4                      |            |               |
| 210           | 04816-00070     | O 型密封圈   | O RING             | 8                      |            |               |
| 220           | 5T050-4652-3    | 链条支架     | HOLDER,CHAIN       | 1                      |            |               |
| 230           | 02012-60060     | 螺帽       | NUT                | 2                      |            |               |
| 240           | 02014-50060     | 螺帽       | HEX.NUT            | 2                      |            |               |
| 250           | 04816-00070     | O 型密封圈   | O RING             | 4                      |            |               |
| 260           | 5T072-9520-0    | 链轮总成     | ASSY SPROCKET      | 1                      |            |               |
| 270           | 5T072-9521-0    | 链轮       | SPROCKET           | 1                      |            |               |
| 280           | 5T070-9522-0    | 链条总成, 接头 | JOINT,CHAIN        | 1                      |            |               |
| 290           | 01133-51020     | 螺栓       | BOLT,SEMS          | 6                      |            |               |
| 300           | ----            | 要领书      | MANUAL,INSTRUCTION | 1                      |            |               |

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

# H00101 脱粒框架(上) THRESHING FR

This diagram illustrates the assembly of the upper threshing frame. The components are labeled with part numbers: 090 (a pin), 080 (a rectangular plate), 085 (a vertical support bar), 030 (a pin), 040 (a pin), 130 (a pin), 140 (a pin), and 150 (a pin). The diagram shows how these parts are assembled onto a main frame structure.

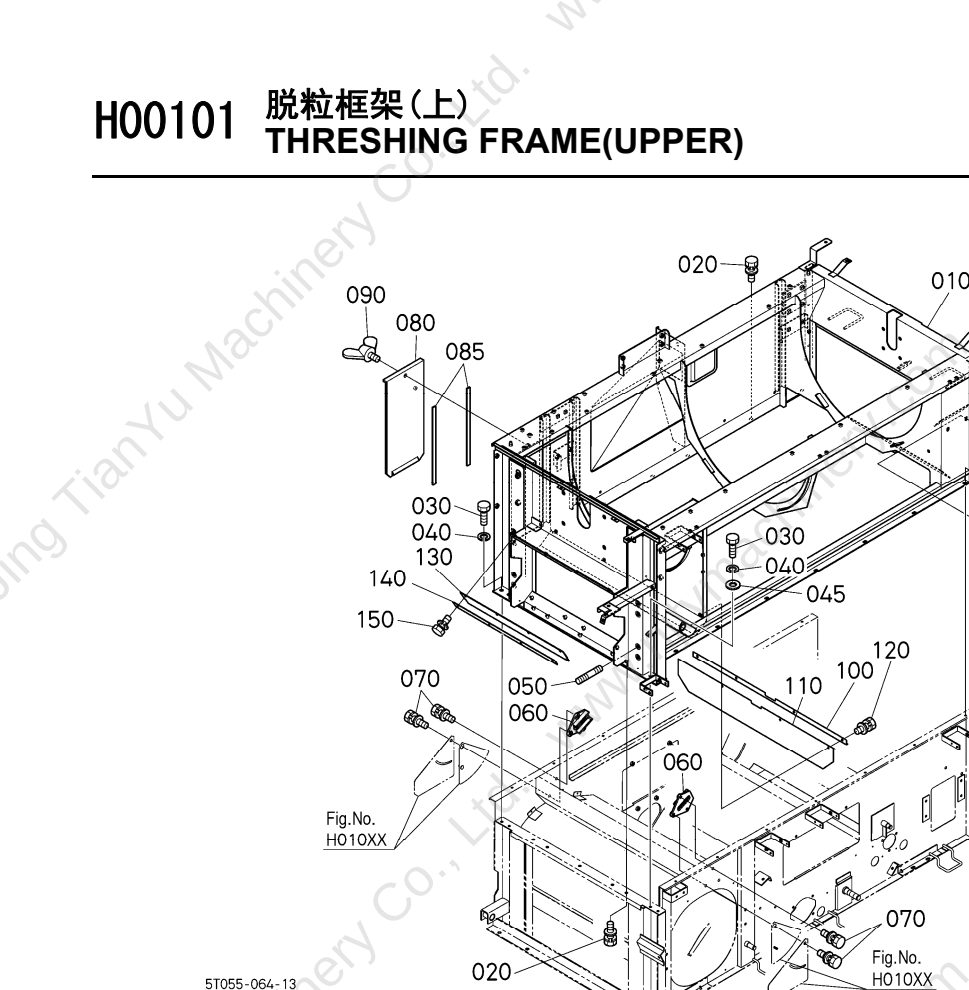 

5T055-064-13

A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


**脱离框架(下)**  
**THRESHING FRAME(LOWER)**



Fig.No.  
C001XX

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## H01000 清洗风机板 WINNOWER PLATE

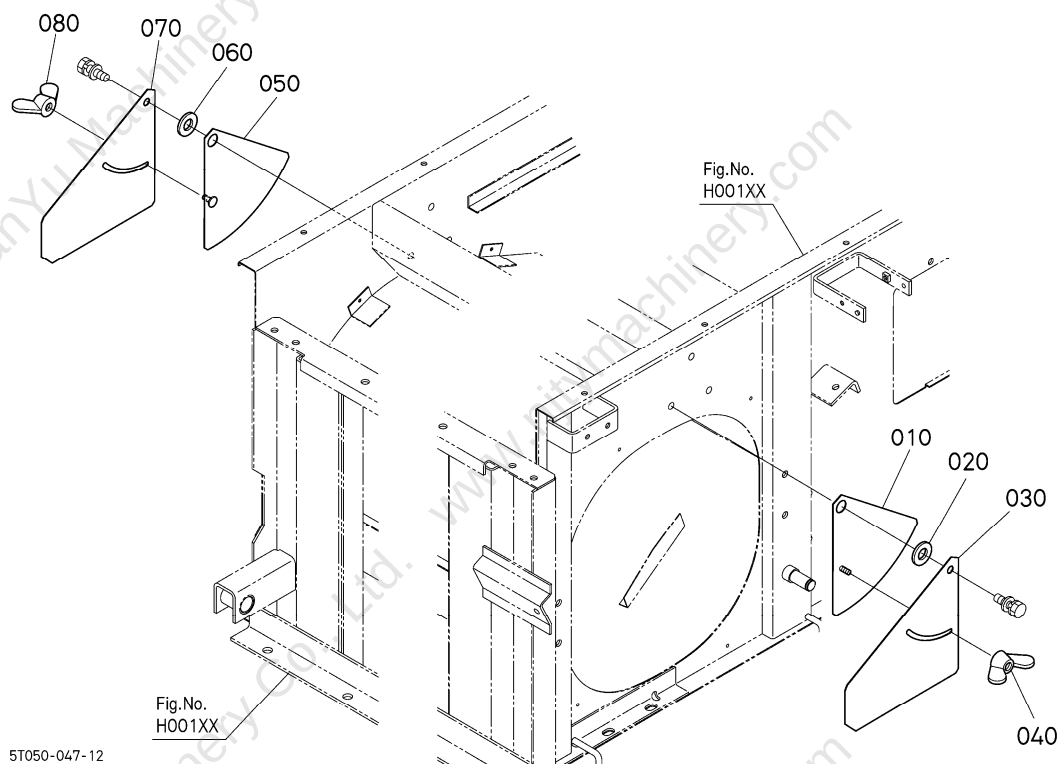 


A:DC-70G-THRESHING

[illegible]

$\leftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

## WIND DIRECTION PLATE

 

A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
**进口板**  
**INLET PLATE**



A:DC-70G-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**噴粉罩**  
**DUSTING COVER**



A:DC-70G-THRESHING

[illegible]

$\leftrightarrow$  新旧部件可替换;  $\nRightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

## H30600

## THRESHING TENSION ARM


 


Fig.No.  
H001XX

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# H30700

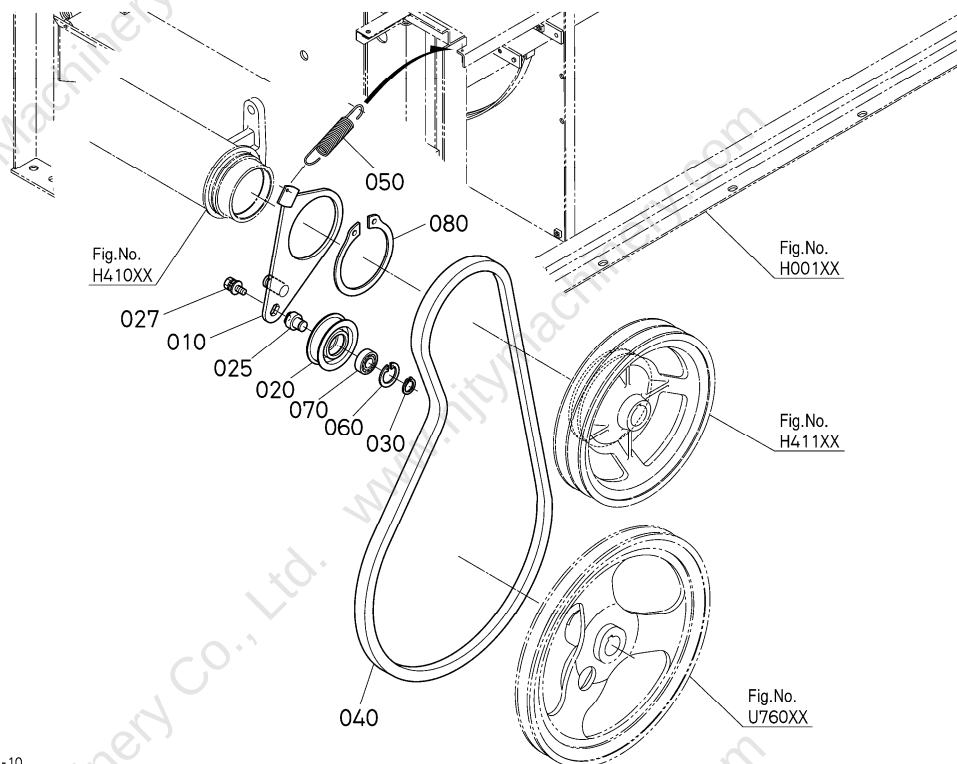 


5T078-086-10

A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 丰收杆 HARVEST REVERSAL LEVER

 

A: DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## THRESHING CYLINDER SHAFT



Fig.No.  
H001XX

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

## THRESHING CYLINDER TOOTH

 


A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**H40300 凹板筛**  
**CONCAVE**

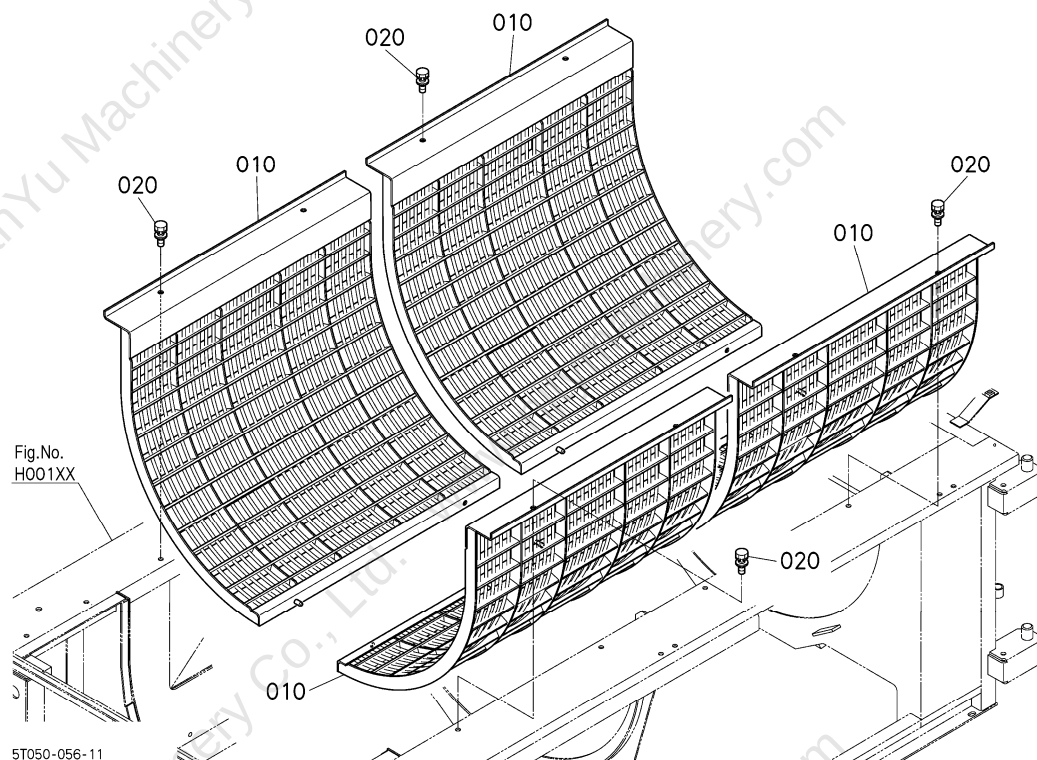


A:DC-70G-THRESHING

[illegible]

$\leftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

# H41000

 
## THRESHING CYLINDER DRIVE CASE



A: DC-70G-THRESHING

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

# H41100 脱粒滚筒驱动轴 THRESHING CYLINDER DRIVE SHAFT

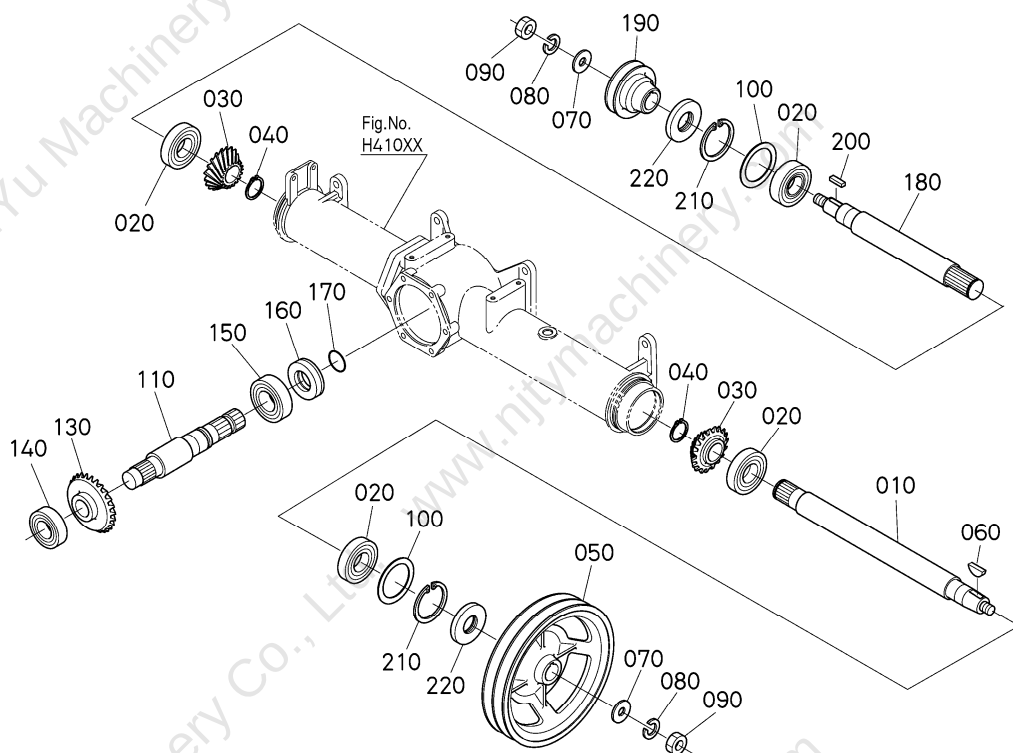 

5T055-067-11


A:DC-70G-THRESHING

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称        | PART NAME         | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|-------------|-------------------|------------------------|------------|---------------|
|               |                 |             |                   | A                      |            |               |
| 010           | 5T051-6515-2    | 轴           | SHAFT             | 1                      |            |               |
| 020           | TD030-1254-0    | 滚珠轴承        | BEARING,BALL      | 4                      |            |               |
| 030           | 5T051-6521-2    | 锥齿轮         | GEAR,BEVEL        | 2                      |            | 19T           |
| 040           | 04612-00350     | 外卡环         | CIR-CLIP,EXTERNAL | 2                      |            |               |
| 050           | 5T051-6517-0    | V形皮带轮       | V PULLEY          | 1                      |            |               |
| 060           | 5T057-6518-0    | 半圆键         | KEY,WOODRUFF      | 1                      |            |               |
| 070           | 5H475-1226-2    | 平垫圈         | WASHER,PLAIN      | 2                      |            |               |
| 080           | 04512-60160     | 弹簧垫圈        | WASHER, SPRING    | 2                      |            |               |
| 090           | 02174-50160     | 螺帽          | HEX.NUT           | 2                      |            |               |
| 100           | 5T051-6525-0    | 垫片 (648008) | SHIM              | 2                      |            | 0.8mm         |
| 100           | 5T051-6524-2    | 垫片          | SHIM              | 2                      |            | 1.0mm         |
| 100           | 5T051-6526-0    | 垫片 (648012) | SHIM              | 2                      |            | 1.2mm 适宜      |
| 100           | 5T051-9113-2    | 薄垫片         | SHIM              | 2                      |            | 0.2mm         |
| 100           | 5T051-9127-2    | 薄垫片         | SHIM              | 2                      |            | 0.1mm         |
| 110           | 5T051-6536-0    | 轴           | SHAFT             | 1                      |            |               |
| 120           | ---             | 无           | BLANK             | -                      |            |               |
| 130           | 5T051-6522-2    | 锥齿轮         | GEAR,BEVEL        | 1                      |            | 29T           |
| 140           | 08101-06306     | 滚珠轴承        | BEARING,BALL      | 1                      |            |               |
| 150           | TC210-2628-0    | 滚珠轴承        | BEARING,BALL      | 1                      |            |               |
| 160           | 09504-06211     | 油封          | SEAL,OIL          | 1                      |            |               |
| 170           | 04816-50350     | O型密封圈       | O RING            | 1                      |            |               |
| 180           | 5T051-5642-0    | 轴           | SHAFT             | 1                      |            |               |
| 190           | 5T051-5643-0    | V形皮带轮       | V PULLEY          | 1                      |            |               |
| 200           | 05712-00730     | 导向键         | FEATHER KEY       | 1                      |            |               |
| 210           | 04611-00800     | 内卡环         | CIR-CLIP,INTERNAL | 2                      |            |               |
| 220           | 09503-58011     | 油封          | SEAL,OIL          | 2                      |            |               |

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

# H42100

 
## THRESHING CYLINDER TENSION ARM



A:DC-70G-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **脱粒机罩**  
**THRESHING BONNET**




A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## DUST CARRYING VALVE

 


A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# H80000 清选风机轴 WINNOWER SHAFT

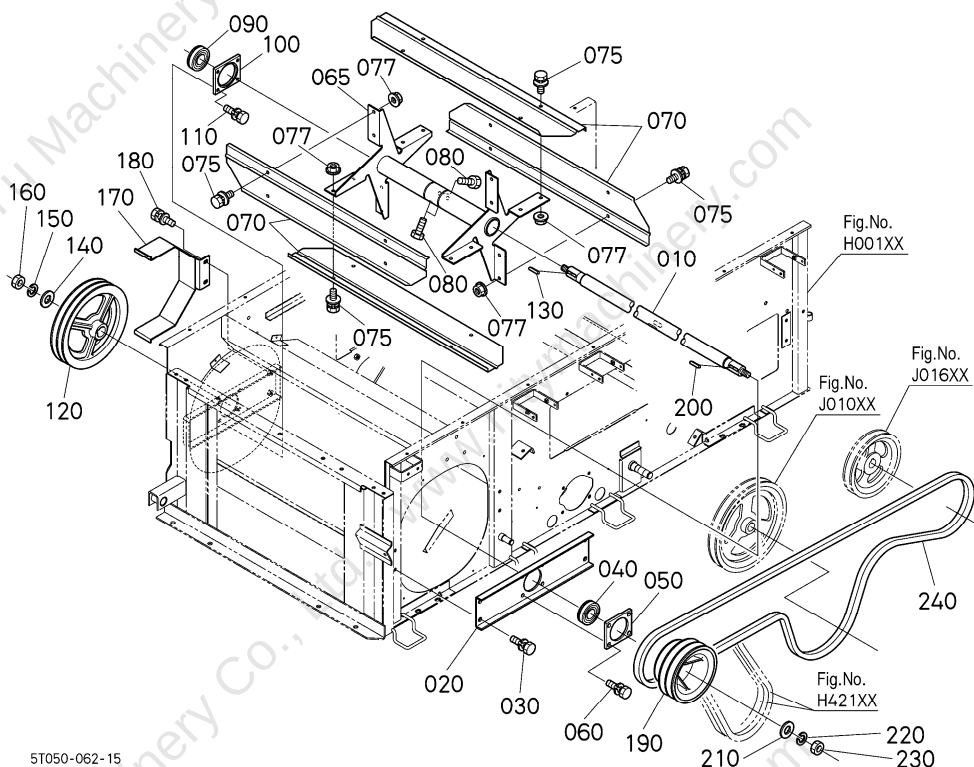 

5T050-062-15

A:DC-70G-THRESHING

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称    | PART NAME                 | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|---------|---------------------------|------------------------|------------|---------------|
|               |                 |         |                           | A                      |            |               |
| 010           | 5T051-6611-2    | 轴       | SHAFT                     | 1                      |            |               |
| 020           | 5T051-6613-0    | 板. 清选风机 | PLATE,WINNOWER            | 1                      |            |               |
| 030           | 01133-51020     | 螺栓      | BOLT,SEMS                 | 4                      |            |               |
| 040           | 5T050-6621-0    | 轴承      | BEARING                   | 1                      |            |               |
| 050           | 5T051-6615-0    | 固定件     | HOLDER                    | 1                      |            |               |
| 060           | 01133-51025     | 螺栓      | BOLT,SEMS                 | 4                      |            |               |
| 065           | 5T051-6623-0    | 臂. 清选风机 | ARM,WINNOWER              | 1                      |            |               |
| 070           | 5T051-6619-3    | 刀片      | BLADE                     | 4                      |            |               |
| 075           | 01127-50820     | 螺栓      | BOLT,W SEMS(LARGE WASHER) | 16                     |            |               |
| 077           | 02751-50080     | 法兰螺母    | NUT,FLANGE                | 16                     |            |               |
| 080           | 01173-51025     | 螺栓      | HEX.BOLT                  | 4                      |            |               |
| 090           | 5T050-6621-0    | 轴承      | BEARING                   | 1                      |            |               |
| 100           | 5T051-6622-0    | 固定件     | HOLDER                    | 1                      |            |               |
| 110           | 01133-51020     | 螺栓      | BOLT,SEMS                 | 4                      |            |               |
| 120           | 5T051-6631-2    | V形皮带轮   | PULLEY,V                  | 1                      |            |               |
| 130           | 05712-00735     | 导向键     | KEY,FEATHER               | 1                      |            |               |
| 140           | 5H475-1226-2    | 平垫圈     | WASHER,PLAIN              | 1                      |            |               |
| 150           | 04512-60160     | 弹簧垫圈    | WASHER, SPRING            | 1                      |            |               |
| 160           | 02174-50160     | 螺帽      | HEX.NUT                   | 1                      |            |               |
| 170           | 5T051-6632-4    | 导向. 张紧器 | GUIDE,THRESHER            | 1                      |            |               |
| 180           | 01125-60820     | 螺栓      | BOLT                      | 2                      |            |               |
| 190           | 5T051-6633-2    | V形皮带轮   | V PULLEY,C177-B136        | 1                      |            |               |
| 200           | 05712-00735     | 导向键     | KEY,FEATHER               | 1                      |            |               |
| 210           | 5H475-1226-2    | 平垫圈     | WASHER,PLAIN              | 1                      |            |               |
| 220           | 04512-60160     | 弹簧垫圈    | WASHER, SPRING            | 1                      |            |               |
| 230           | 02174-50160     | 螺帽      | HEX.NUT                   | 1                      |            |               |
| 240           | 5T051-6635-0    | V形皮带张紧轮 | V BELT,THRESHER           | 1                      |            |               |

← 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

**H80300 扬谷器箱**  
**WINNOWER CASE**

 


A:DC-70G-THRESHING

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

摇轴(左)  
ROCKING SHAFT(LEFT)




A:DC-70G-THRESHING

[illegible]

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

# H80402 摇轴(右) ROCKING SHAFT(RIGHT)

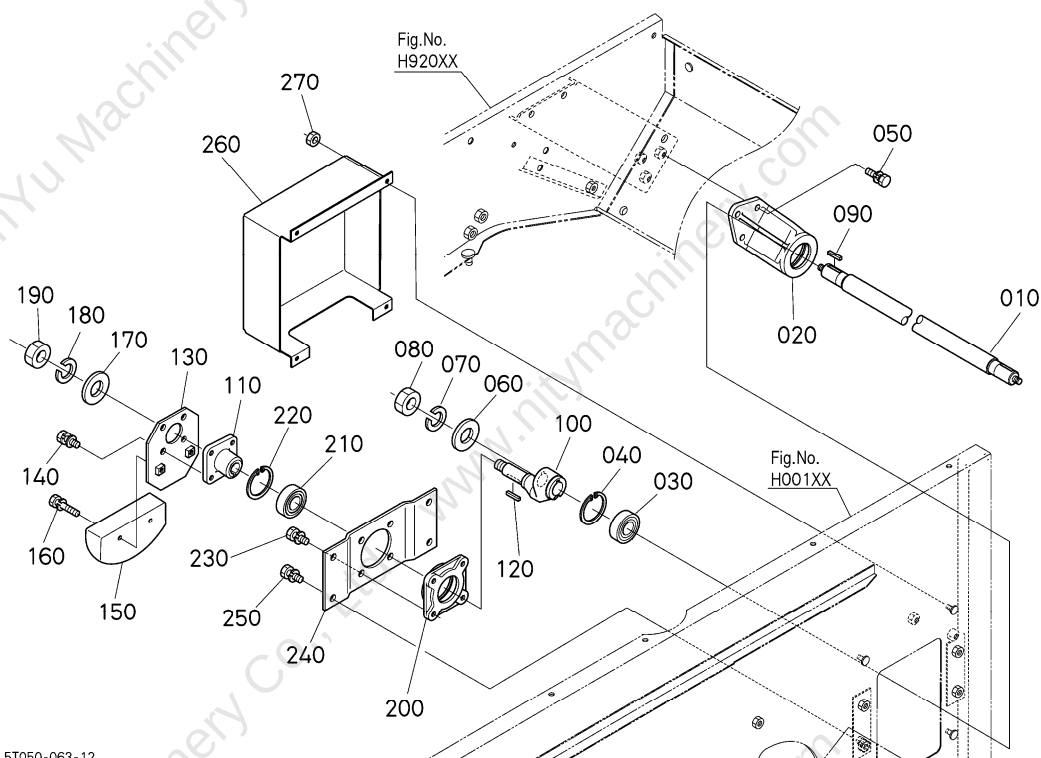 


5T050-063-12

A:DC-70G-THRESHING

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称    | PART NAME            | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|---------|----------------------|------------------------|------------|---------------|
|               |                 |         |                      | A                      |            |               |
| 010           | 5T051-6911-0    | 摆动轴     | SHAFT,ROCKING        | 1                      |            |               |
| 020           | 5T051-6919-0    | 臂, 摇动   | ARM,ROCKING          | 1                      |            |               |
| 030           | 08141-06204     | 滚珠轴承    | BEARING,BALL         | 1                      |            |               |
| 040           | 04611-00470     | 内卡环     | CIR-CLIP,INTERNAL    | 1                      |            |               |
| 050           | 01123-50825     | 螺栓      | BOLT,SEMS            | 3                      |            |               |
| 060           | 04015-60080     | 平垫圈     | WASHER,PLAIN         | 1                      |            |               |
| 070           | 04512-60080     | 弹簧垫圈    | WASHER SPRING        | 1                      |            |               |
| 080           | 02114-50080     | 螺帽      | HEX.NUT              | 1                      |            |               |
| 090           | 05712-00525     | 导向键     | FEATHER KEY          | 2                      |            |               |
| 100           | 5T051-6912-0    | 摆动轴     | SHAFT,ROCKING        | 1                      |            |               |
| 110           | 5K101-2616-0    | 摆动皮带轮   | BOSS,ROCKING PULLEY  | 1                      |            |               |
| 120           | 05712-00525     | 导向键     | FEATHER KEY          | 1                      |            |               |
| 130           | 5T051-6917-0    | 重量板     | PLATE,WEIGHT         | 1                      |            |               |
| 140           | 01125-60820     | 螺栓      | BOLT                 | 4                      |            |               |
| 150           | 5T051-6918-0    | 平衡块     | WEIGHT,SIEVE BALANCE | 1                      |            |               |
| 160           | 01123-50845     | 螺栓      | BOLT,SEMS            | 2                      |            |               |
| 170           | 04013-60120     | 平垫圈     | WASHER, PLAIN        | 1                      |            |               |
| 180           | 04512-60120     | 弹簧垫圈    | WASHER, SPRING       | 1                      |            |               |
| 190           | 02174-50120     | 螺帽      | HEX.NUT              | 1                      |            |               |
| 200           | 5T051-6915-0    | 轴承箱     | CASE,BEARING         | 1                      |            |               |
| 210           | 08141-06303     | 滚珠轴承    | BEARING,BALL         | 1                      |            |               |
| 220           | 04611-00470     | 内卡环     | CIR-CLIP,INTERNAL    | 1                      |            |               |
| 230           | 01123-50820     | 螺栓      | BOLT,SEMS            | 4                      |            |               |
| 240           | 5T051-6941-0    | 板(摆动)   | PLATE,ROCKING        | 1                      |            |               |
| 250           | 01123-50820     | 螺栓      | BOLT,SEMS            | 4                      |            |               |
| 260           | 5T051-7243-0    | 摆动罩壳(右) | COVER,ROCKING RH     | 1                      |            |               |
| 270           | 02021-50060     | 螺帽      | NUT                  | 4                      |            |               |

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件


## 摆动张力臂 ROCKING TENSION ARM

 

A:DC-70G-THRESHING

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\Leftarrow$  新部件可替换旧部件:  $\Rightarrow$  旧部件可替换新部件


# 晶粒分子筛 GRAIN SIEVE

 

A: DC-70G-THRESHING


↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **筛箱**  
**SIEVE CASE**



$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

 **筛子**  
**SIEVE**




A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# H92100 筛箱布 SIEVE CASE CLOTH

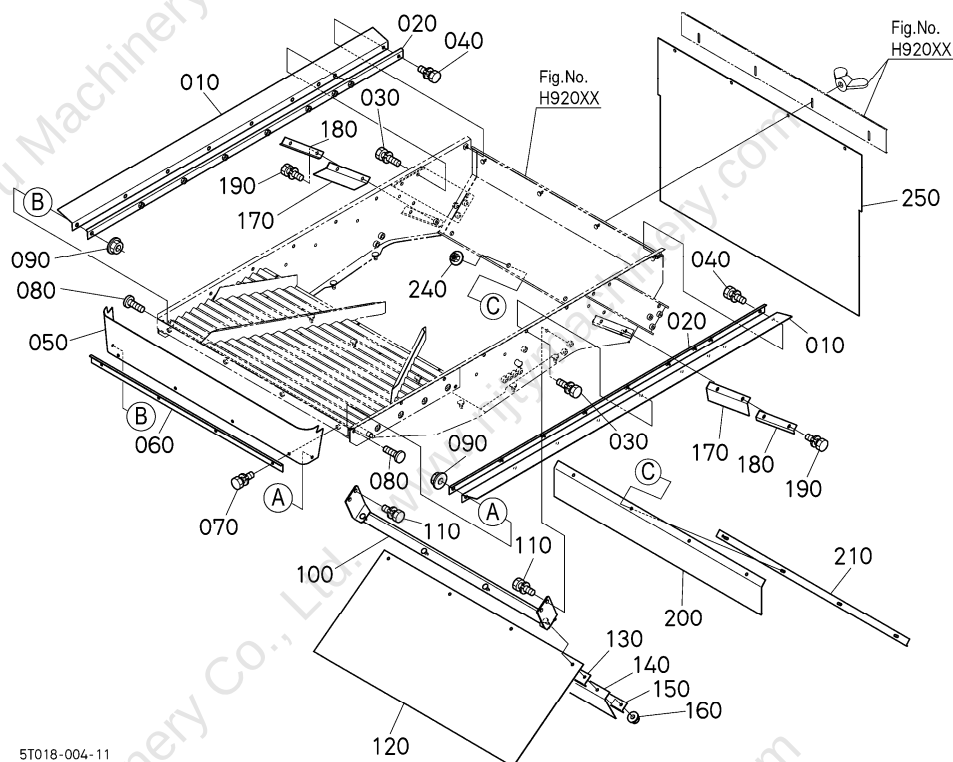 


5T018-004-11

A:DC-70G-THRESHING

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称   | PART NAME            | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|--------|----------------------|------------------------|------------|---------------|
|               |                 |        |                      | A                      |            |               |
| 010           | 5T051-7124-0    | 帆布. 筛箱 | CLOTH,SIEVE CASE     | 2                      |            |               |
| 020           | 5T051-7125-0    | 筛板     | PLATE,SIEVE          | 2                      |            |               |
| 030           | 01123-50820     | 螺栓     | BOLT,SEMS            | 16                     |            |               |
| 040           | 01123-60816     | 螺栓     | BOLT                 | 2                      |            |               |
| 050           | 5T057-7122-0    | 帆布. 筛箱 | CLOTH,SIEVE CASE FR. | 1                      |            |               |
| 060           | 5T051-7114-0    | 压板. 筛布 | RETAINER,SIEVE CLOTH | 1                      |            |               |
| 070           | 01023-50612     | 螺栓     | BOLT,SEMS            | 4                      |            |               |
| 080           | 01952-00825     | 螺栓. 焊接 | BOLT,WELD            | 2                      |            |               |
| 090           | 02121-50080     | 螺帽     | NUT                  | 2                      |            |               |
| 100           | 5T051-7126-0    | 板      | PLATE                | 1                      |            |               |
| 110           | 01123-60816     | 螺栓     | BOLT                 | 4                      |            |               |
| 120           | 5T051-7127-0    | 帆布     | CLOTH                | 1                      |            |               |
| 130           | 5T051-7167-0    | 压板. 筛布 | RETAINER,SIEVE CLOTH | 1                      |            |               |
| 140           | 5T051-7169-0    | 帆布. 挡板 | CLOTH,FRONT          | 1                      |            |               |
| 150           | 5T051-7168-0    | 压板. 筛布 | RETAINER,SIEVE CLOTH | 1                      |            |               |
| 160           | 5K101-2656-0    | 法兰螺母   | NUT,FLANGE           | 4                      |            |               |
| 170           | 5T051-7154-0    | 帆布. 筛箱 | CLOTH,SIEVE CASE     | 2                      |            |               |
| 180           | 5T051-7155-0    | 筛板     | PLATE,SIEVE          | 2                      |            |               |
| 190           | 01123-60816     | 螺栓     | BOLT                 | 2                      |            |               |
| 200           | 5T057-7132-0    | 帆布. 筛箱 | CLOTH,SIEVE CASE     | 1                      |            |               |
| 210           | 5T051-7115-0    | 压板. 筛布 | RETAINER,SIEVE CLOTH | 1                      |            |               |
| 220           | ----            | 无      | BLANK                | -                      |            |               |
| 230           | ----            | 无      | BLANK                | -                      |            |               |
| 240           | 5K101-2656-0    | 法兰螺母   | NUT,FLANGE           | 4                      |            |               |
| 250           | 5T051-7144-2    | 橡胶摆动板  | RUBBER SHEET,ROCKING | 1                      |            |               |
|               |                 |        |                      |                        |            |               |
|               |                 |        |                      |                        |            |               |
|               |                 |        |                      |                        |            |               |
|               |                 |        |                      |                        |            |               |
|               |                 |        |                      |                        |            |               |

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件


## FIRST HORIZONTAL AUGER SHAFT

 

A:DC-70G-THRESHING

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

 **谷粒锥形齿轮箱**  
**FIRST BEVEL GEAR CASE**



A:DC-70G-THRESHING

$\leftrightarrow$  新旧部件可替换;  $\neq$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

**谷粒垂直螺旋杆**  
**FIRST VERTICAL AUGER SHAFT**

 


A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


谷粒输送张紧臂  
FIRST TENSION ARM



A: DC-70G-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 再筛选螺旋轴 SECOND HORIZONTAL AUGER SHAFT

 


A: DC-70G-THRESHING

[illegible]

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

## 再筛选驱动链条箱 SECOND DRIVE CHAIN CASE

 

A:DC-70G-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 再筛选驱动箱 SECOND CASE

 



Fig.No.  
H001XX

A:DC-70G-THRESHING

[illegible]

$\leftrightarrow$  新旧部件可替换;  $\nleftrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

## 再筛选锥齿轮箱 SECOND BEVEL GEAR CASE

 


A:DC-70G-THRESHING

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# J02000 再筛选垂直螺旋杆 SECOND VERTICAL AUGER SHAFT

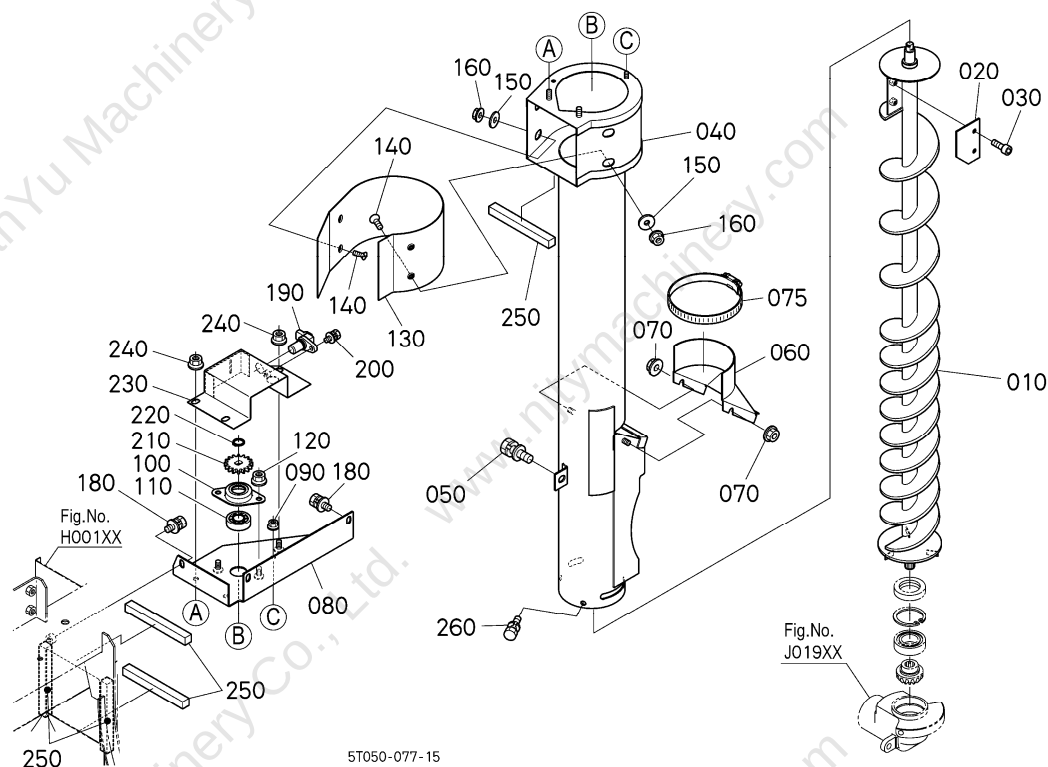 

A: DC-70G-THRESHING

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称   | PART NAME              | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|--------|------------------------|------------------------|------------|---------------|
|               |                 |        |                        | A                      |            |               |
| 010           | 5T051-6851-4    | 螺丝轴    | SHAFT, SCREW           | 1                      |            |               |
| 020           | 5T051-6862-0    | 刀片     | BLADE                  | 1                      |            |               |
| 030           | 5K101-5113-0    | 内六角螺栓  | BOLT, HEX-SOC-HD       | 2                      |            |               |
| 040           | 5T051-6852-8    | 垂直螺杆箱  | CASE, TAILING AUGER V  | 1                      |            |               |
| 050           | 01125-60820     | 螺栓     | BOLT                   | 1                      |            |               |
| 060           | 5T051-6858-3    | 垂直箱罩   | COVER, TAIRING AUGER   | 1                      |            |               |
| 070           | 02121-50080     | 螺帽     | NUT                    | 2                      |            |               |
| 075           | 5T018-9136-0    | 软管夹    | CLAMP, HOSE            | 1                      |            |               |
| 080           | 5T051-6853-2    | 板      | PLATE                  | 1                      |            |               |
| 090           | 02021-50060     | 螺帽     | NUT                    | 2                      |            |               |
| 100           | 5T057-6867-0    | 轴承支架   | HOLDER, BEARING        | 1                      |            |               |
| 110           | 08141-06203     | 滚珠轴承   | BEARING, BALL          | 1                      |            |               |
| 120           | 02121-50080     | 螺帽     | NUT                    | 2                      |            |               |
| 130           | 5T051-6865-0    | 衬垫     | LINER                  | 1                      |            |               |
| 140           | 03016-50616     | 螺钉     | SCREW, FLAT HEAD (PHIL | 4                      |            |               |
| 150           | 04015-60060     | 平垫圈    | WASHER, PLAIN          | 4                      |            |               |
| 160           | 02021-50060     | 螺帽     | NUT                    | 4                      |            |               |
| 170           | —               | 无      | BLANK                  | —                      |            |               |
| 180           | 01125-60820     | 螺栓     | BOLT                   | 3                      |            |               |
| 190           | T1060-3227-0    | 旋转传感器  | SENSOR, REVOLUTION     | 1                      |            |               |
| 200           | 01025-50616     | 螺栓     | BOLT                   | 1                      |            |               |
| 210           | 5T057-6868-0    | 齿轮传感器  | GEAR, SENSOR           | 1                      |            |               |
| 220           | 04612-00120     | 卡环     | CIR-CLIP EXTERNAL      | 1                      |            |               |
| 230           | 5T057-6869-2    | 盖, 传感器 | COVER, SENSOR          | 1                      |            |               |
| 240           | 02121-50080     | 螺帽     | NUT                    | 3                      |            |               |
| 250           | 5K101-3191-0    | 垫片     | GASKET                 | 5                      |            |               |
| 260           | 01123-60814     | 螺栓     | BOLT                   | 3                      |            |               |

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## OPEN-CLOSE COVER



A: DC-70G-THRESHING

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\Leftarrow$  新部件可替换旧部件:  $\Rightarrow$  旧部件可替换新部件

# J20800

## THRESHING COVER(FRONT/BACK)



A:DC-70G-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**脱粒封面(一侧)**  
**THRESHING COVER(SIDE)**



A:DC-70G-THRESHING

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

 
**J80000 标签(脱粒)**  
**LABEL(THRESHING)**



A:DC-70G-THRESHING

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**储粮罐**  
**GRAIN TANK**

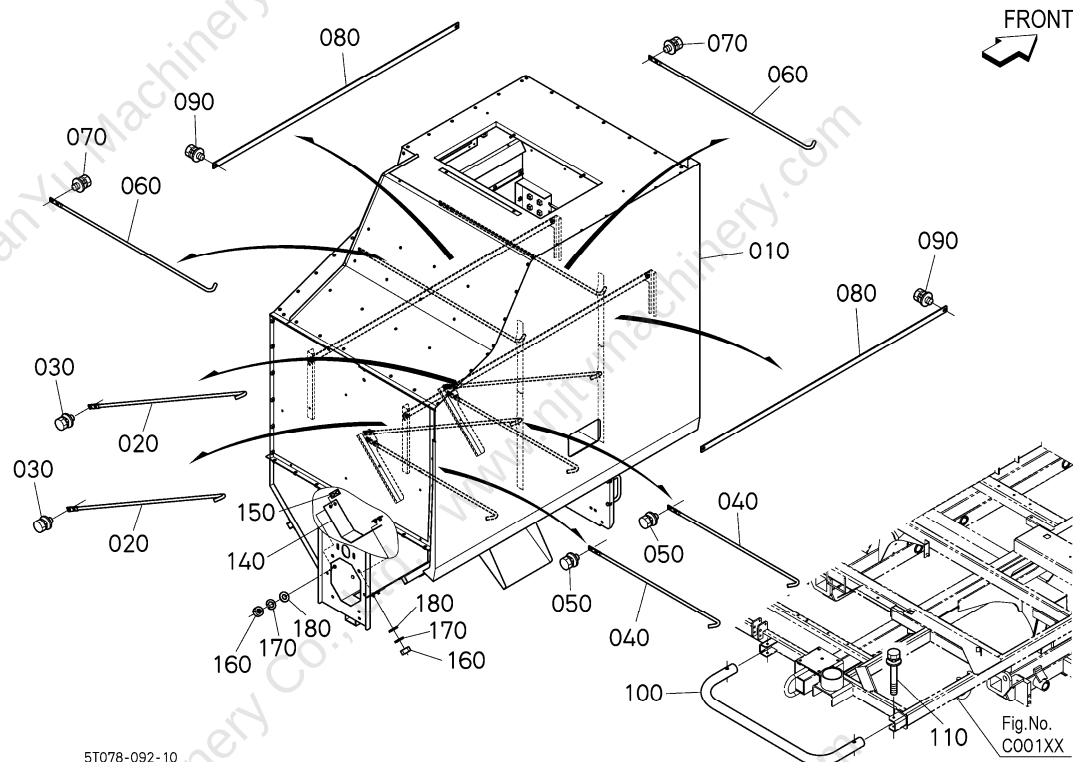

5T078-092-10

A:DC-70G-GRAIN TANK


[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# K00300 净化管 CLEANING PORT

This exploded view diagram illustrates the components of the K00300 Cleaning Port. The main assembly consists of a rectangular frame (190) with a central opening (070). A gasket (200) is positioned between the frame and the panel. The panel (100) features a central rectangular opening and is secured by four screws (110). A cleaning port (120) is attached to the panel, secured by a nut (140) and a washer (150). A separate view shows the port (120) being inserted into the panel (100) through the central opening. The diagram is labeled with part numbers: 080, 090, 110, 120, 140, 150, 160, 190, 200, and 070.

 51078-093-10




A:DC-70G-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# K00600 粮箱锁 TANK LOCK


This technical diagram illustrates the exploded view of the K00600 Tank Lock assembly. The components are shown in their relative positions as they would be assembled. The main body is a rectangular frame with a central locking mechanism. The assembly includes various bolts, nuts, and washers, which are labeled with small numbers (1 through 15) for identification. The diagram is presented in a perspective view, showing the top and side of the assembly. A large, faint watermark reading 'Jianhu Machinery Co., Ltd.' is visible across the background of the diagram.

 

A:DC-70G-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
**K10100 储罐后盖**  
**TANK COVER REAR**



A:DC-70G-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 **K10500 罐(下部)**  
**TANK COVER UNDER**



A:DC-70G-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**粮箱(驱动器箱)**  
**TANK DRIVE CASE**



A:DC-70G-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# K20000 机(箱 1) UNLOADER CASE 1

Fig.No. K205XX

Fig.No. K001XX

Fig.No. K201XX

060

040

110

100

090

020

030

080

035

070

090

010

015

017

013

 
130

120

140

050

5T078-098-11

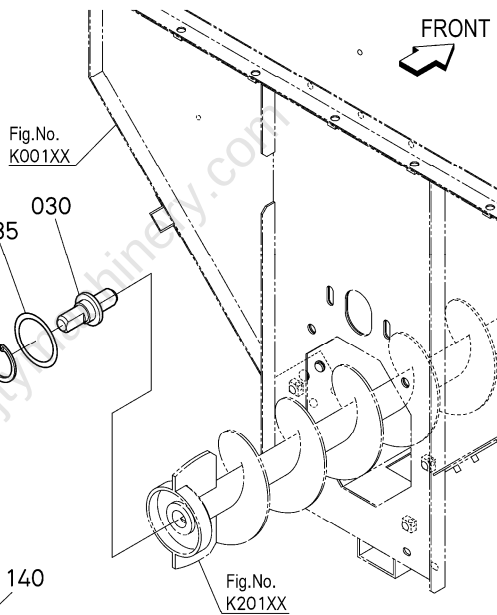[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

罐(螺丝轴)  
TANK SCREW SHAFT



A:DC-70G-GRAIN TANK

[illegible]

## 尾气快门 EXHAUST SHUTTER

 


A:DC-70G-GRAIN TANK

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件


## 纵向螺旋轴 VERTICAL AUGER SHAFT



A:DC-70G-GRAIN TANK

[illegible]

 **发动机**  
**UNLOADER MOTOR**

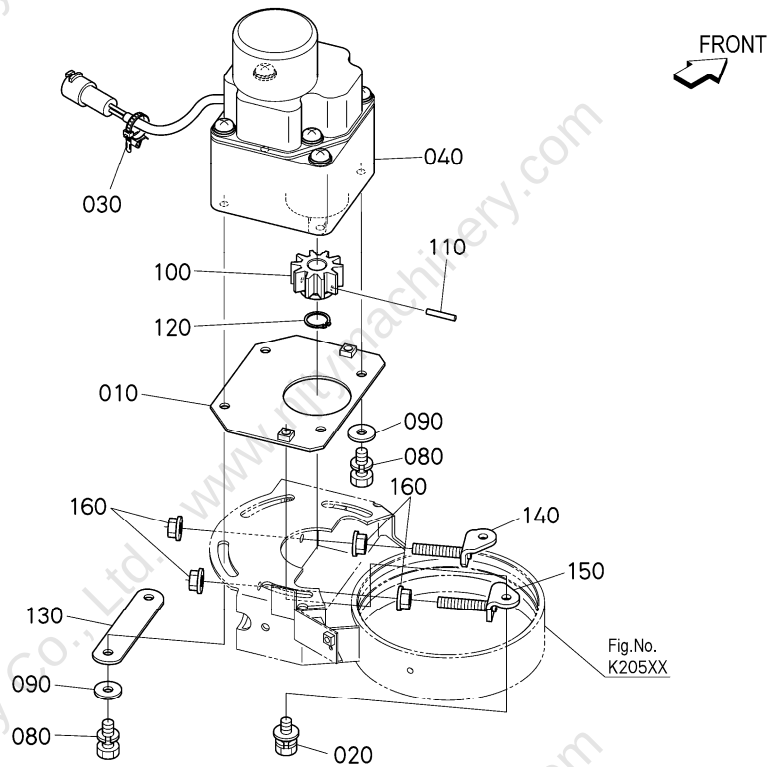


A:DC-70G-GRAIN TANK

[illegible]

176


## 安装框架 MOUNTING FRAME

 

A:DC-70G-GRAIN TANK

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

## 机(箱 2) UNLOADER CASE 2

 

A:DC-70G-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## TRANSMISSION SHAFT



A:DC-70G-GRAIN TANK

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

## 机(箱 3) UNLOADER CASE 3



A:DC-70G-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
# 机体 UNLOADER



A:DC-70G-GRAIN TANK

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

**K30300 机(固定件)**  
**UNLOADER STAY**

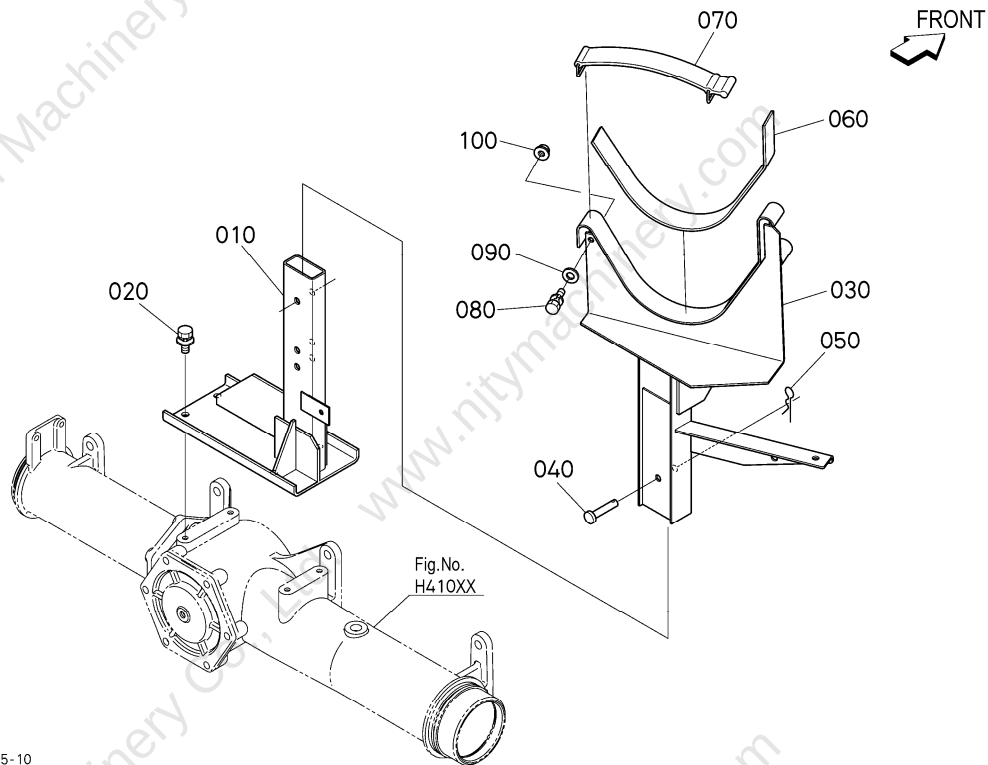


A:DC-70G-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
**粮箱(驱动器)**  
**TANK DRIVE**



A:DC-70G-GRAIN TANK

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 罐(离合器)  
TANK CLUTCH




A:DC-70G-GRAIN TANK

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

 
**标签(储粮罐)**  
**LABEL (GRAIN TANK)**

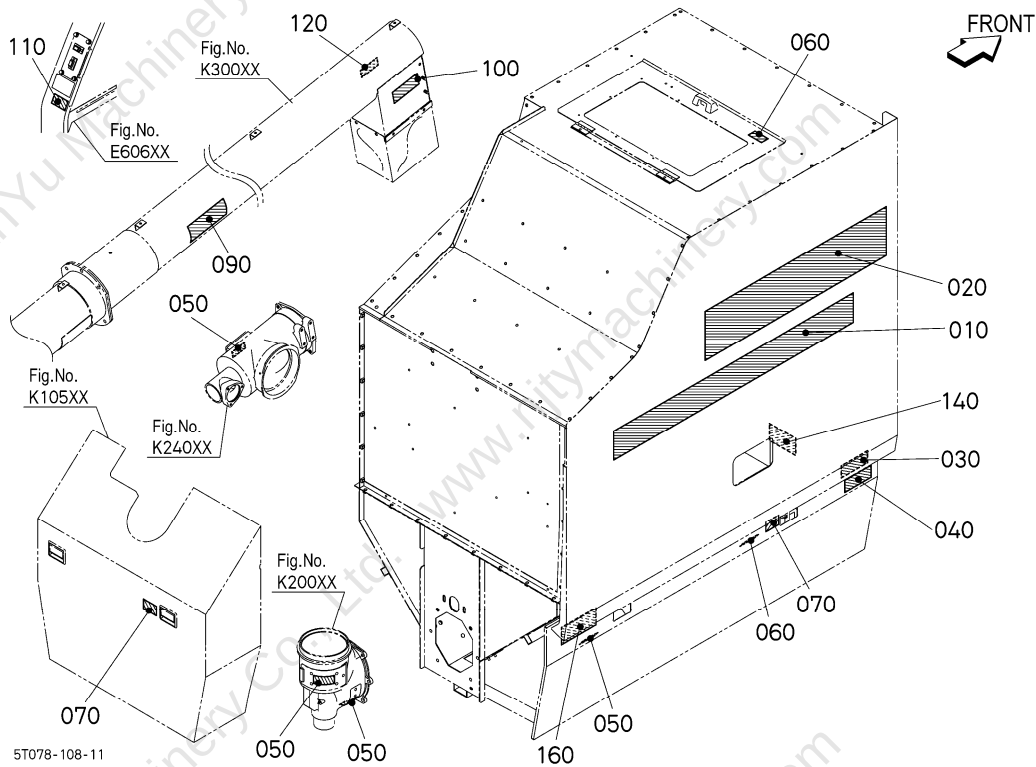

A:DC-70G-GRAIN TANK

[illegible]

 ↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

[illegible]

盘(中心轴)  
REEL CENTER SHAFT



A: DC-70G-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**U01100 盘(调节器)**  
**REEL ADJUSTMENT**



A:DC-70G-REEL/FEEDER

[illegible]

$\longleftrightarrow$  新旧部件可替换;  $\nabla$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

**U01200 盘(架)  
REEL FRAME**

---



A: DC-70G-REEL/FEEDER

[illegible]

189


张紧臂  
TENSION ARM



A:DC-70G-REEL/FEEDER

$\leftrightarrow$  新旧部件可替换;  $\neq$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

# 丰收框架 HARVEST FRAME

 


A: DC-70G-REEL/FEEDER

[illegible]

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件


## HARVEST FRAME COVER

 

A: DC-70G-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# U21000 螺旋鼓 AUGER DRUM

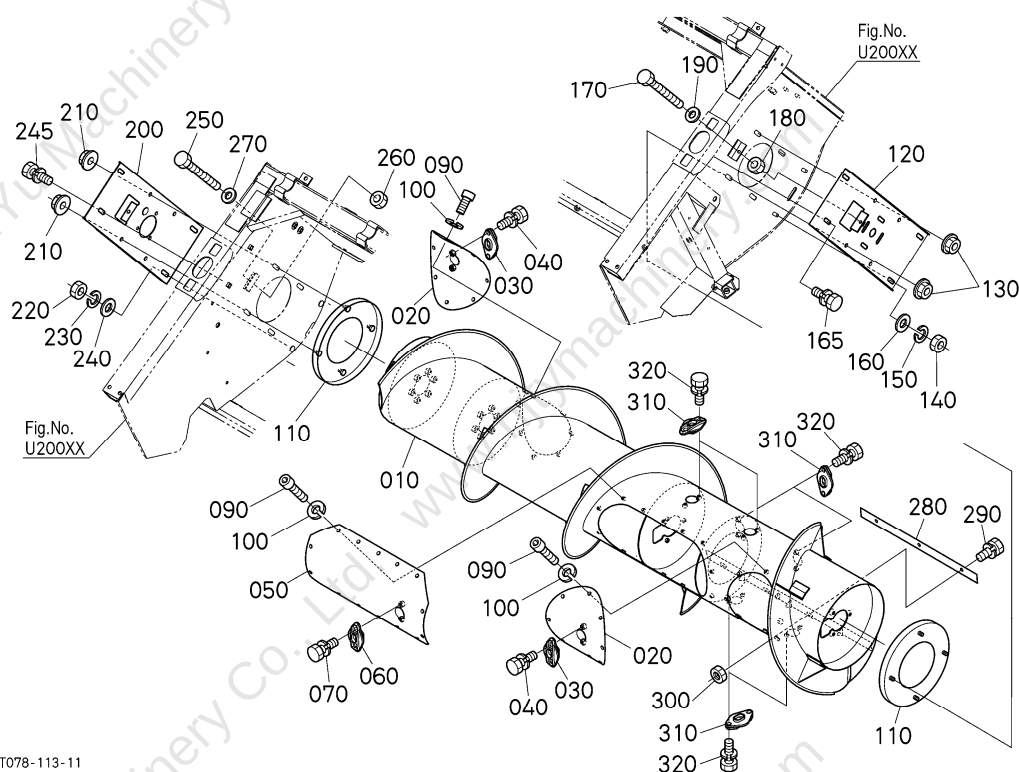 

A:DC-70G-REEL/FEEDER

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称     | PART NAME        | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|----------|------------------|------------------------|------------|---------------|
|               |                 |          |                  | A                      |            |               |
| 010           | 5T078-5211-0    | 圆筒木钻     | DRUM,AUGER       | 1                      |            |               |
| 020           | 5T072-5212-3    | 盖        | COVER,DRUM       | 2                      |            |               |
| 030           | 5T072-5245-0    | 导向件      | GUIDE            | 2                      |            |               |
| 040           | 01125-60820     | 螺栓       | BOLT             | 4                      |            |               |
| 050           | 5T072-5214-4    | 盖        | COVER,DRUM 2     | 1                      |            |               |
| 060           | 5T072-5245-0    | 导向件      | GUIDE            | 1                      |            |               |
| 070           | 01125-60820     | 螺栓       | BOLT             | 2                      |            |               |
| 080           | —               | 无        | BLANK            | —                      |            |               |
| 090           | 01311-10816     | 内六角螺栓    | BOLT,SOCKET HEAD | 30                     |            |               |
| 100           | 04512-60080     | 弹簧垫圈     | WASHER SPRING    | 30                     |            |               |
| 110           | 5T072-5215-0    | 导杆. 圆筒   | GUIDE,DRUM       | 2                      |            |               |
| 120           | 5T072-5216-0    | 发电机支架(左) | STAY,DRUM LH     | 1                      |            |               |
| 130           | 02131-50100     | 螺帽       | NUT              | 4                      |            |               |
| 140           | 02118-50100     | 螺帽       | HEX.NUT          | 2                      |            |               |
| 150           | 04512-60100     | 弹簧垫圈     | WASHER, SPRING   | 2                      |            |               |
| 160           | 04013-60100     | 平垫圈      | WASHER,PLAIN     | 2                      |            |               |
| 165           | 01135-61020     | 螺栓       | BOLT             | 2                      |            |               |
| 170           | 01155-50855     | 螺栓       | HEX.BOLT         | 1                      |            |               |
| 180           | 02114-50080     | 螺帽       | HEX.NUT          | 1                      |            |               |
| 190           | 04013-50080     | 平垫圈      | WASHER,PLAIN     | 1                      |            |               |
| 200           | 5T072-5217-0    | 发电机支架(右) | STAY,DRUM RH     | 1                      |            |               |
| 210           | 02131-50100     | 螺帽       | NUT              | 4                      |            |               |
| 220           | 02118-50100     | 螺帽       | HEX.NUT          | 2                      |            |               |
| 230           | 04512-60100     | 弹簧垫圈     | WASHER, SPRING   | 2                      |            |               |
| 240           | 04013-60100     | 平垫圈      | WASHER,PLAIN     | 2                      |            |               |
| 245           | 01135-61020     | 螺栓       | BOLT             | 2                      |            |               |
| 250           | 01155-50855     | 螺栓       | HEX.BOLT         | 1                      |            |               |
| 260           | 02114-50080     | 螺帽       | HEX.NUT          | 1                      |            |               |
| 270           | 04013-50080     | 平垫圈      | WASHER,PLAIN     | 1                      |            |               |
| 280           | 5T072-5213-2    | 板        | PLATE,AUGER      | 1                      |            |               |

↔ 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

[illegible]

A: DC-70G-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 螺旋滚筒轴 AUGER DRUM SHAFT

 


A:DC-70G-REEL/FEEDER

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称     | PART NAME         | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|----------|-------------------|------------------------|------------|---------------|
|               |                 |          |                   | A                      |            |               |
| 010           | 5T072-5221-0    | 螺旋. 转动轴  | SAHFT,AUGER DRIVE | 1                      |            |               |
| 020           | 5T072-5229-0    | 半圆键      | KEY,WOODRUFF      | 2                      |            |               |
| 025           | 5T072-5224-0    | 轴套. 圆筒驱动 | BOSS,DRUM DRIVE   | 1                      |            |               |
| 030           | 5T072-5222-0    | 支架. 轴    | BRACKET,SHAFT     | 1                      |            |               |
| 040           | 08141-06206     | 滚珠轴承     | BEARING,BALL      | 1                      |            |               |
| 050           | 04611-00620     | 内卡环      | CIR-CLIP,INTERNAL | 1                      |            |               |
| 060           | 01123-51020     | 螺栓       | BOLT,SEMS         | 3                      |            |               |
| 070           | 5T072-5224-0    | 轴套. 圆筒驱动 | BOSS,DRUM DRIVE   | 1                      |            |               |
| 080           | 01133-51020     | 螺栓       | BOLT,SEMS         | 12                     |            |               |
| 090           | 5T072-5225-0    | 电池支架     | BRACKET,CRANK     | 1                      |            |               |
| 100           | 08141-06205     | 滚珠轴承     | BEARING,BALL      | 1                      |            |               |
| 110           | 04611-00520     | 内卡环      | CIR-CLIP,INTERNAL | 1                      |            |               |
| 120           | 04011-50180     | 平垫圈      | WASHER,PLAIN      | 1                      |            |               |
| 130           | 04512-60180     | 弹簧垫圈     | WASHER,SPRING     | 1                      |            |               |
| 140           | 02172-50180     | 小型六角螺母   | HEX,NUT           | 1                      |            |               |
| 150           | 5T078-5231-0    | 轴        | SHAFT,FIXING      | 1                      |            |               |
| 160           | 05712-00735     | 导向键      | KEY,FEATHER       | 1                      |            |               |
| 170           | 01135-61025     | 螺栓       | BOLT              | 4                      |            |               |
| 180           | 5T072-5232-0    | 支架. 轴    | BRACKET,SHAFT     | 1                      |            |               |
| 190           | 08141-06206     | 滚珠轴承     | BEARING,BALL      | 1                      |            |               |
| 200           | 04611-00620     | 内卡环      | CIR-CLIP,INTERNAL | 1                      |            |               |
| 210           | 01123-50825     | 螺栓       | BOLT,SEMS         | 3                      |            |               |
| 220           | 04612-00300     | 外卡环      | CIR-CLIP,EXTERNAL | 2                      |            |               |
| 230           | 5T072-5234-0    | 电池支架     | BRACKET,CRANK     | 1                      |            |               |
| 240           | 04612-00250     | 挡圈卡环     | CIR-CLIP,EXTERNAL | 1                      |            |               |
|               |                 |          |                   |                        |            |               |
|               |                 |          |                   |                        |            |               |
|               |                 |          |                   |                        |            |               |
|               |                 |          |                   |                        |            |               |

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件


# U21200 螺旋鼓链 AUGER DRUM CHAIN

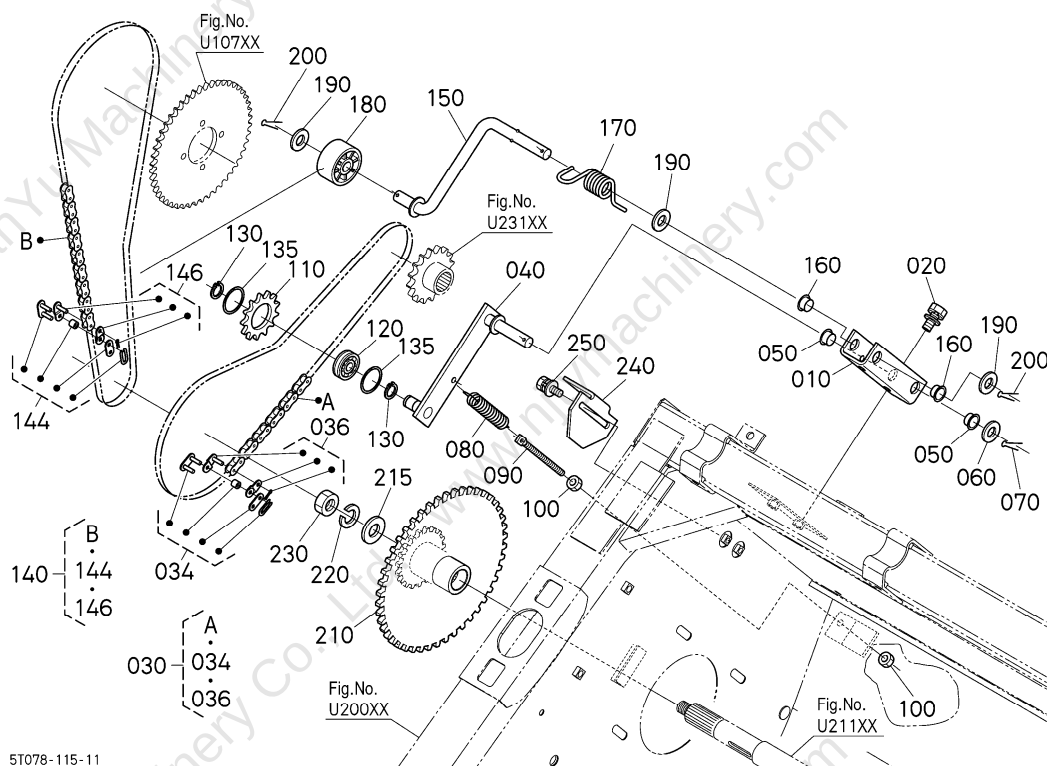

A: DC-70G-REEL/FEEDER

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称     | PART NAME           | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|----------|---------------------|------------------------|------------|---------------|
|               |                 |          |                     | A                      |            |               |
| 010           | 5T072-4921-0    | 张紧基架     | BASE,TENSION        | 1                      |            |               |
| 020           | 01135-61020     | 螺栓       | BOLT                | 2                      |            |               |
| 030           | 5T077-4930-0    | 螺旋链条组件   | ASSY CHAIN,AUGER    | 1                      |            |               |
| 034           | 5T051-4645-0    | 链条支架     | HOLDER,CHAIN        | 1                      |            |               |
| 036           | 5T051-4931-0    | 过度接头     | JOINT,CHAIN OFF SET | 1                      |            |               |
| 040           | 5T072-4933-0    | 张紧组件. 螺旋 | TENSION ARM,AUGER   | 1                      |            |               |
| 050           | T2050-2416-0    | 衬套       | BUSH                | 2                      |            |               |
| 060           | 04011-60160     | 平垫圈      | WASHER,PLAIN        | 1                      |            |               |
| 070           | 05511-50430     | 开口销      | PIN,SPLIT           | 1                      |            |               |
| 080           | 5T072-4642-0    | 弹簧       | SPRING              | 1                      |            |               |
| 090           | 5T072-1635-0    | 调整螺栓     | BOLT,TENSION        | 1                      |            |               |
| 100           | 02114-50080     | 螺帽       | HEX.NUT             | 2                      |            |               |
| 110           | 5T072-4636-0    | 键轮. 张紧   | SPROCKET,TENSION    | 1                      |            |               |
| 120           | 5T070-4637-0    | 轴承       | BEARING             | 1                      |            |               |
| 130           | 04612-00170     | 外卡环      | CIR-CLIP,EXTERNAL   | 2                      |            |               |
| 135           | 5T070-4638-0    | 卡簧       | CIR CLIP            | 2                      |            |               |
| 140           | 5T077-4940-0    | 铰链链条组件   | ASSY CHAIN,COUNTER  | 1                      |            |               |
| 144           | 5T051-4941-0    | 链条支架     | HOLDER,CHAIN        | 1                      |            |               |
| 146           | 5T051-4942-0    | 过度接头     | JOINT,CHAIN OFF SET | 1                      |            |               |
| 150           | 5T072-4943-0    | 张紧臂      | ARM,TENSION         | 1                      |            |               |
| 160           | T2050-2416-0    | 衬套       | BUSH                | 2                      |            |               |
| 170           | 5T072-4944-0    | 弹簧. 铰链   | SPRING,COUNTER      | 1                      |            |               |
| 180           | 5T072-4935-0    | 张力滚筒     | ROLLER,TENSION      | 1                      |            |               |
| 190           | 04011-60160     | 平垫圈      | WASHER,PLAIN        | 3                      |            |               |
| 200           | 05511-50430     | 开口销      | PIN,SPLIT           | 2                      |            |               |
| 210           | 5T078-5228-0    | 键轮       | SPROCKET            | 1                      | 46-19T     |               |
| 215           | 04013-50180     | 垫圈       | WASHER,PLAIN        | 1                      |            |               |
| 220           | 04512-60180     | 弹簧垫圈     | WASHER,SPRING       | 1                      |            |               |
| 230           | 02172-50180     | 小型六角螺母   | HEX.NUT             | 1                      |            |               |
| 240           | 5T072-4945-0    | 挡块       | STOPPER             | 1                      |            |               |

 ← 新旧部件可替换: ≠ 新旧部件不可替换: ← 新部件可替换旧部件: → 旧部件可替换新部件

[illegible]

A:DC-70G-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 钩爪轴 FINGER SHAFT



A: DC-70G-REEL/FEEDER

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

**U23100**

## HARVEST DRIVE SHAFT

 


A: DC-70G-REEL/FEEDER

[illegible]

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

**割刀驱动臂**  
**CUTTING BLADE DRIVE ARM**



A: DC-70G-REEL/FEEDER

[illegible]

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\Leftarrow$  新部件可替换旧部件:  $\Rightarrow$  旧部件可替换新部件

## 割刀驱动轴 CUTTING BLADE DRIVE SHAFT

 


A: DC-70G-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

割刀  
CUTTING BLADE



A: DC-70G-REEL/FEEDER


| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称    | PART NAME          | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|---------|--------------------|------------------------|------------|---------------|
|               |                 |         |                    | A                      |            |               |
| 010           | 5T078-5130-0    | 割刀总成    | ASSY CUTTING BLADE | 1                      |            |               |
| 020           | 5T078-5131-0    | 割刀组件    | COMP.CUTTING BLADE | 1                      |            |               |
| 030           | 5T078-5132-0    | 定刀板     | KNIFE BAR          | 1                      |            |               |
| 040           | 5T072-5133-0    | 切刀      | CUTTING BLADE      | 26                     |            |               |
| 050           | 5T072-5134-0    | 板       | PLATE              | 1                      |            |               |
| 060           | 5T072-5135-0    | 板       | PLATE              | 1                      |            |               |
| 070           | 5T072-5136-0    | 刀尖      | HEAD,KNIFE         | 1                      |            |               |
| 072           | 08141-06302     | 滚珠轴承    | BEARING,BALL       | 1                      |            |               |
| 073           | 04611-00420     | 内卡环     | CIR-CLIP,INTERNAL  | 2                      |            |               |
| 080           | 5T072-5137-0    | 钉       | RIVET              | 8                      |            |               |
| 090           | 5T072-5138-0    | 钉       | RIVET              | 48                     |            |               |
| 100           | 5T072-5141-0    | 刀横板保护装置 | GUARD,KNIFE        | 14                     |            |               |
| 110           | 5T072-5142-0    | 弯颈. 螺栓  | BOLT,SQ.NECK       | 28                     |            |               |
| 120           | 04512-60100     | 弹簧垫圈    | WASHER, SPRING     | 28                     |            |               |
| 130           | 02114-50100     | 螺母      | HEX.NUT            | 28                     |            |               |
| 140           | 5T078-5143-0    | 底座      | BASE               | 1                      |            |               |
| 150           | 5T072-5144-0    | 剪辑. 刀   | CLIP,KNIFE         | 5                      |            |               |
| 160           | 5T072-5145-0    | 指导. 夹片  | GUIDE,SLIDE        | 6                      |            |               |
| 170           | 5T072-5146-0    | 削刀板(右)  | KNIFE CLIP,RH      | 1                      |            |               |
| 180           | 5T072-5147-0    | 支掌件     | SUPPORT            | 1                      |            |               |
| 190           | 5T072-5148-0    | 隔片      | SPACER             | 1                      |            |               |
| 200           | 01754-50825     | 法兰螺栓    | BOLT,FLANGE        | 2                      |            |               |
| 210           | 02751-50080     | 法兰螺母    | NUT,FLANGE         | 2                      |            |               |
| 220           | 5T072-5149-0    | 垫片      | SHIM               | 5                      |            |               |
| 230           | 5T072-5151-0    | 隔片      | SPACER             | 1                      |            |               |
| 240           | 01133-51025     | 螺栓      | BOLT,SEMS          | 8                      |            |               |
|               |                 |         |                    |                        |            |               |
|               |                 |         |                    |                        |            |               |
|               |                 |         |                    |                        |            |               |

$\longleftrightarrow$  新旧部件可替换;  $\nrightarrow$  新旧部件不可替换;  $\leftarrow$  新部件可替换旧部件;  $\rightarrow$  旧部件可替换新部件

U40200 分压器 (左)  
DIVIDER (LEFT)

---

The diagram illustrates the U40200 Divider (Left) assembly. It consists of three main components: a small cylindrical part labeled 025, a larger cylindrical part labeled 080, and a long, thin rod-like part labeled 070. The components are shown in a perspective view, with the 025 part at the top left, the 080 part in the middle, and the 070 part extending from the 080 part towards the bottom right.

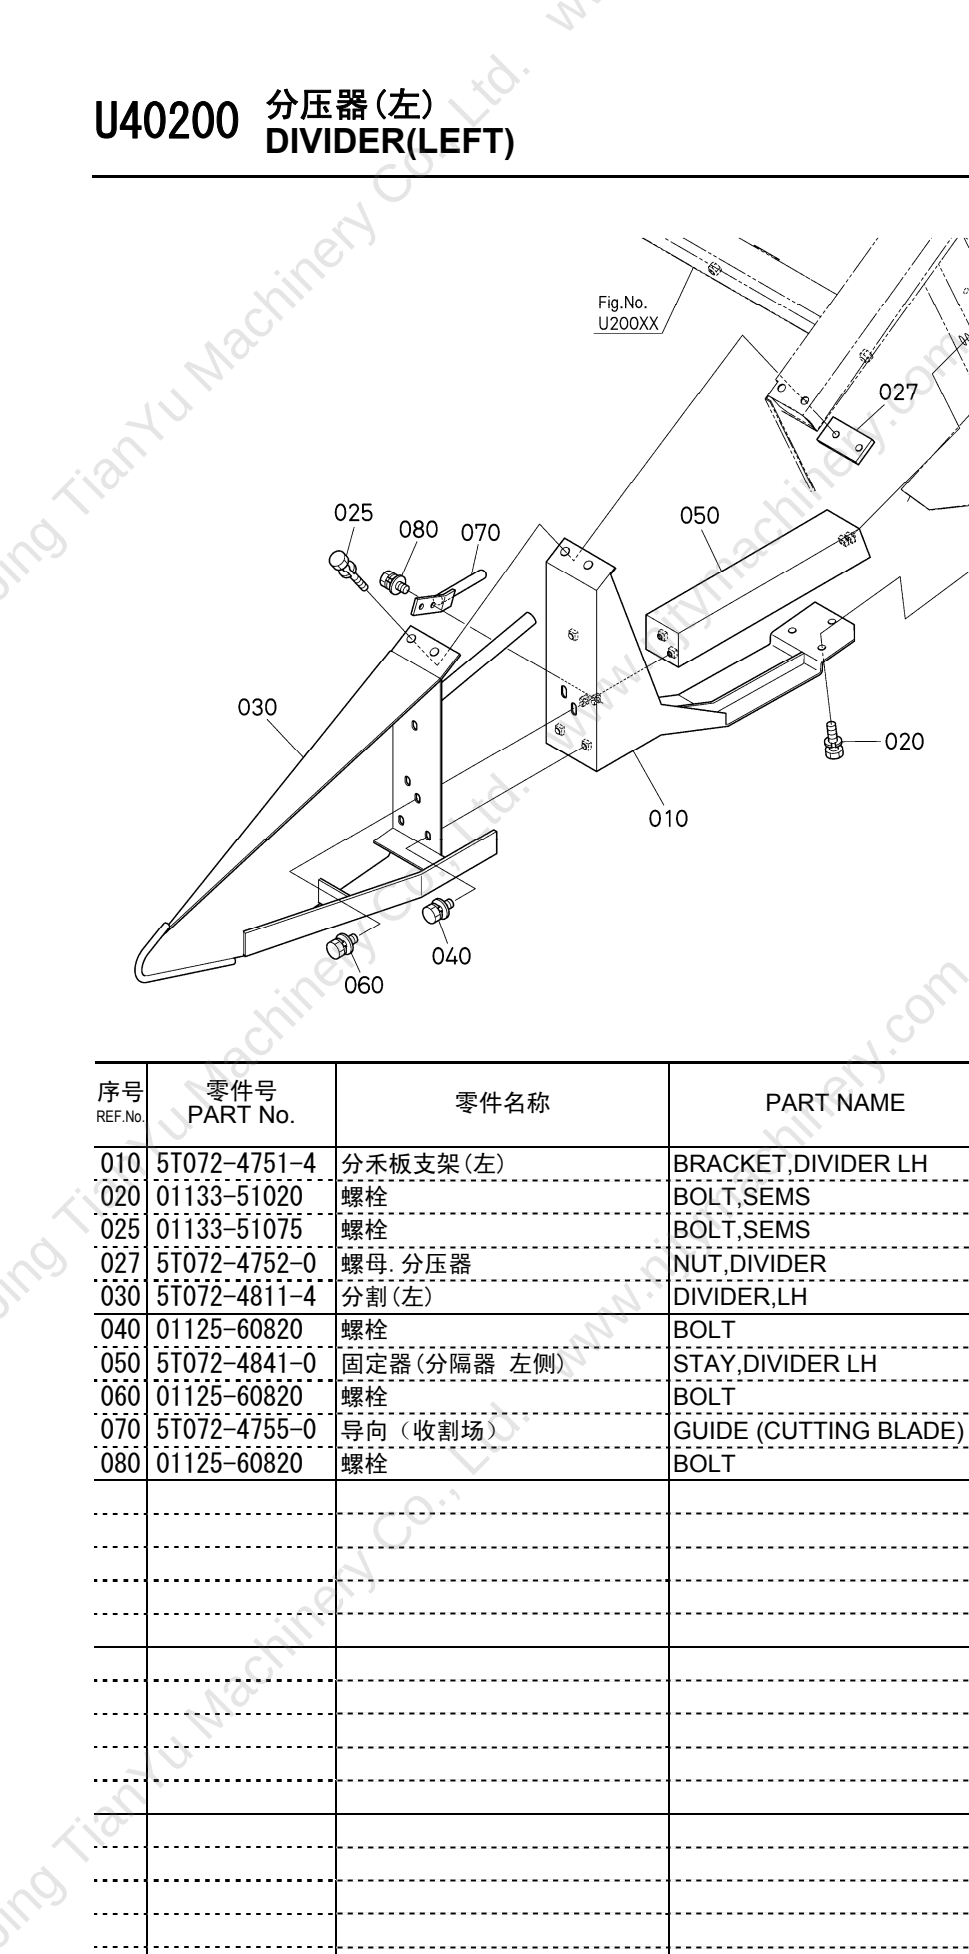 


A:DC-70G-REEL/FEEDER

[illegible]

203

 **U40300 分压器(右)**  
**DIVIDER(RIGHT)**

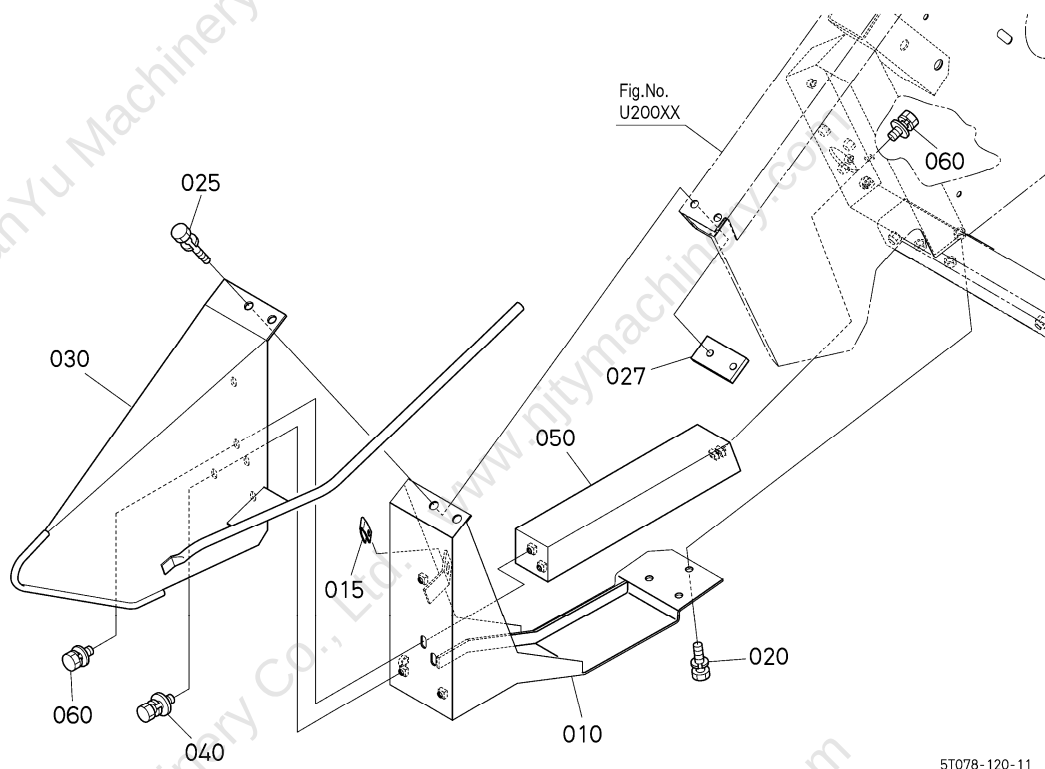

A:DC-70G-REEL/FEEDER

[illegible]

# U70300

## REEL ELEVATOR CYLINDER



 
A: DC-70G-REEL/FEEDER

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

# U70500

## 盘移动缸[组成部分]

## REEL ELEVATOR CYLINDER [COMPONENT PARTS]

[illegible]

## 馈线框架 FEEDER FRAME



Fig.No.  
H001XX

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

## 馈线罩 FEEDER COVER



Fig.No.  
U750XX

A: DC-70G-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

**U75300 馈线风扇罩**  
**FEEDER FAN COVER**



5T078-037-11

A:DC-70G-REEL/FEEDER

[illegible]

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## FEEDER DRIVE SHAFT



5T078-124-10

A: DC-70G-REEL/FEEDER

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称    | PART NAME          | 数量/机器序列号<br>Q'TY/S.No. | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|---------|--------------------|------------------------|------------|---------------|
|               |                 |         |                    | A                      |            |               |
| 010           | 5T078-4611-0    | 轴       | SHAFT,FEEDER       | 1                      |            |               |
| 020           | 05712-00745     | 导向键     | KEY,FEATHER        | 1                      |            |               |
| 030           |                 | 无       | BLANK              | -                      |            |               |
| 040           | 08141-06206     | 滚珠轴承    | BEARING,BALL       | 2                      |            |               |
| 050           | 04611-00620     | 内卡环     | CIR-CLIP,INTERNAL  | 2                      |            |               |
| 060           | 5T078-4612-0    | 键轮      | SPROCKET           | 2                      |            |               |
| 070           | 5T078-4613-0    | 螺钉, 链轮  | SCREW,SPROCKET     | 2                      |            |               |
| 075           | 02072-50120     | 螺母      | NUT                | 2                      |            |               |
| 080           | 5T078-4614-0    | 盖, 输送刀轴 | COVER,FEEDER-SHAFT | 1                      |            |               |
| 085           | 5T078-4624-0    | 螺母板     | PLATE,NUT          | 2                      |            |               |
| 086           | 5T078-4625-0    | 盖支座     | STAY(COVER)        | 3                      |            |               |
| 087           | 5T078-4626-0    | 钉       | RIVET              | 4                      |            |               |
| 088           | 01025-50620     | 螺栓      | BOLT               | 6                      |            |               |
| 090           | 5T078-4617-0    | 防尘      | COVER,DUST         | 2                      |            |               |
| 100           | 5T078-4621-0    | V 形皮带轮  | PULLEY,V           | 1                      |            |               |
| 110           | 04011-50180     | 平垫圈     | WASHER,PLAIN       | 1                      |            |               |
| 120           | 04512-60180     | 弹簧垫圈    | WASHER,SPRING      | 1                      |            |               |
| 130           | 02172-50180     | 小型六角螺母  | HEX.NUT            | 1                      |            |               |
| 140           | 5T078-5621-0    | 键轮      | SPROCKET           | 1                      |            |               |
| 150           | 5T078-5623-0    | V 形皮带轮  | PULLEY,V           | 1                      |            |               |
| 160           | 01133-51035     | 螺栓      | BOLT,SEMS          | 4                      |            |               |
| 170           | 04011-50180     | 平垫圈     | WASHER,PLAIN       | 1                      |            |               |
| 180           | 04512-60180     | 弹簧垫圈    | WASHER,SPRING      | 1                      |            |               |
| 190           | 02172-50180     | 小型六角螺母  | HEX.NUT            | 1                      |            |               |
|               |                 |         |                    |                        |            |               |
|               |                 |         |                    |                        |            |               |
|               |                 |         |                    |                        |            |               |
|               |                 |         |                    |                        |            |               |

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

## 喂线传动链 FEEDER DRIVE CHAIN


 


Fig.No.  
U760XX

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

## 馈线链 FEEDER CHAIN

 

A: DC-70G-REEL/FEEDER

| 序号<br>REF.No. | 零件号<br>PART No. | 零件名称    | PART NAME         | 数量/机器序列号   | 互换<br>I.C. | 备注<br>REMARKS |
|---------------|-----------------|---------|-------------------|------------|------------|---------------|
|               |                 |         |                   | Q'TY/S.No. |            |               |
|               |                 |         |                   | A          |            |               |
| 010           | 5T051-4640-0    | 链条组件    | ASSY CHAIN        | 1          |            |               |
| 012           | 5T051-4645-0    | 链条支架    | HOLDER,CHAIN      | 2          |            |               |
| 014           | 5T051-4646-0    | 链条滚滑杆   | CHAIN,ROLLER LINK | 1          |            |               |
| 020           | 5T078-5631-0    | 张紧臂     | ARM,TENSION       | 1          |            |               |
| 030           | 5T057-1085-0    | 轴瓦      | BUSH              | 2          |            |               |
| 040           | 04011-50200     | 平垫圈     | WASHER,PLAIN      | 1          |            |               |
| 050           | 05511-50435     | 开口销     | SPLINT            | 1          |            |               |
| 060           | 5T072-4636-0    | 键轮 张紧   | SPROCKET,TENSION  | 5          |            |               |
| 070           | 5T070-4637-0    | 轴承      | BEARING           | 5          |            |               |
| 075           | 5T070-4638-0    | 卡簧      | CIR CLIP          | 10         |            |               |
| 080           | 04612-00170     | 外卡环     | CIR-CLIP,EXTERNAL | 2          |            |               |
| 090           | 5T078-4642-0    | 弹簧      | SPRING,TENSION    | 1          |            |               |
| 100           | 5T078-5632-0    | 张紧螺栓 链条 | BOLT,TENSION      | 1          |            |               |
| 110           | 02174-50140     | 螺母      | HEX.NUT           | 2          |            |               |
| 120           | 5T078-5633-0    | 填补箱     | INTERLOCKER       | 1          |            |               |
| 130           | 05122-51645     | 连接销     | PIN,JOINT         | 1          |            |               |
| 140           | 05511-50430     | 开口销     | PIN,SPLIT         | 1          |            |               |
| 150           | 5T078-5634-0    | 轴环      | COLLAR            | 1          |            |               |
| 160           | 5T078-5635-0    | 隔片      | SPACER            | 1          |            |               |
| 170           | 04013-60100     | 平垫圈     | WASHER,PLAIN      | 4          |            |               |
| 180           | 04512-60100     | 弹簧垫圈    | WASHER, SPRING    | 4          |            |               |
| 190           | 02118-50100     | 螺帽      | HEX.NUT           | 4          |            |               |
| 200           | 5T078-5636-0    | 量尺 张力   | GAUGE,TENSION     | 1          |            |               |
| 205           | 5T078-5637-0    | 橡胶      | RUBBER,GAUGE      | 1          |            |               |
| 210           | 04011-60160     | 平垫圈     | WASHER,PLAIN      | 1          |            |               |
| 220           | 5T078-4638-0    | 滚轴盖     | ROLLER CAP        | 2          |            |               |
| 230           | 5T078-5638-0    | 测量仪垫    | CUSHION,GAUGE     | 2          |            |               |
|               |                 |         |                   |            |            |               |
|               |                 |         |                   |            |            |               |
|               |                 |         |                   |            |            |               |

$\leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

# U76600

**馈线滚筒**  
**FEEDER DRUM**




Fig.No.  
U750XX

A: DC-70G-REEL/FEEDER

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

# U90100
 
### 标签(盘/馈线)



A: DC-70G-REEL/FEEDER

$\Leftrightarrow$  新旧部件可替换:  $\neq$  新旧部件不可替换:  $\leftarrow$  新部件可替换旧部件:  $\rightarrow$  旧部件可替换新部件

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. |
|--------------------------|-----------|---------------|--------------------------|-----------|---------------|--------------------------|-----------|---------------|--------------------------|-----------|---------------|
| HH164-3243-0...6...010   |           |               | YT680-1019-0...77...120  |           |               | 01025-50620 ...51...020  |           |               | 01123-60816 ...110...050 |           |               |
| HHTA0-5990-0...75...170  |           |               | YW030-0010-0...76...010  |           |               | 127...150                |           |               | 150...070                |           |               |
| K2011-2153-0...96...015  |           |               | 77...010                 |           |               | 209...150                |           |               | 150...140                |           |               |
| K7001-3962-0...74...120  |           |               | YW077-0061-0...79...130  |           |               | 210...088                |           |               | 152...040                |           |               |
| K7561-1118-0...74...160  |           |               | YW226-0112-0...79...090  |           |               | 01025-50630 ...21...090  |           |               | 152...110                |           |               |
| 75...100                 |           |               | YW226-0510-0...79...250  |           |               | 01025-50640 ...124...050 |           |               | 152...190                |           |               |
| K7561-3312-0...30...015  |           |               | YW315-0071-0...79...200  |           |               | 01027-50616 ...119...160 |           |               | 153...090                |           |               |
| PG001-3413-0...143...110 |           |               | YW315-0072-0...79...220  |           |               | 168...100                |           |               | 153...110                |           |               |
| PG001-6218-0...135...060 |           |               | YW599-0010-0...84...010  |           |               | 01053-50610 ...172...017 |           |               | 153...180                |           |               |
| PL501-6885-0...184...180 |           |               | 85...010                 |           |               | 01053-50612 ...79...160  |           |               | 157...070                |           |               |
| PP501-7529-0...87...050  |           |               | YW600-0010-0...78...010  |           |               | 01123-50818 ...10...080  |           |               | 01123-60816 ...174...070 |           |               |
| PR005-9532-0...97...045  |           |               | 79...010                 |           |               | 10...140                 |           |               | 01125-50825 ...31...100  |           |               |
| R1401-5135-0...33...050  |           |               | 01023-50612 ...60...040  |           |               | 01123-50820 ...22...060  |           |               | 142...045                |           |               |
| RG411-4290-0...38...070  |           |               | 152...070                |           |               | 70...180                 |           |               | 160...100                |           |               |
| RD201-6405-2...71...010  |           |               | 209...130                |           |               | 84...020                 |           |               | 163...060                |           |               |
| T0070-1642-0...40...050  |           |               | 01023-50614 ...29...080  |           |               | 85...020                 |           |               | 191...015                |           |               |
| T1060-3037-0...46...080  |           |               | 01023-50616 ...15...090  |           |               | 103...200                |           |               | 209...030                |           |               |
| 58...060                 |           |               | 69...090                 |           |               | 104...200                |           |               | 01125-50830 ...33...085  |           |               |
| T1060-3227-0...47...070  |           |               | 76...070                 |           |               | 146...190                |           |               | 01125-50835 ...119...090 |           |               |
| 161...190                |           |               | 97...170                 |           |               | 146...210                |           |               | 01125-50850 ...78...040  |           |               |
| T1060-3681-0...14...160  |           |               | 01023-50616 ...158...150 |           |               | 01123-50820 ...147...230 |           |               | 01125-50855 ...178...200 |           |               |
| T1065-1561-0...43...120  |           |               | 167...030                |           |               | 147...250                |           |               | 01125-50860 ...166...110 |           |               |
| T1065-1566-0...43...230  |           |               | 182...080                |           |               | 151...080                |           |               | 01125-50865 ...33...020  |           |               |
| T1150-2245-0...69...020  |           |               | 01023-50618 ...1...180   |           |               | 152...030                |           |               | 01125-50870 ...78...050  |           |               |
| T1275-1563-0...43...130  |           |               | 23...130                 |           |               | 190...050                |           |               | 01125-60816 ...39...030  |           |               |
| T1850-3901-0...47...010  |           |               | 01023-50620 ...4...200   |           |               | 01123-50822 ...5...035   |           |               | 39...040                 |           |               |
| T2050-2416-0...196...050 |           |               | 18...130                 |           |               | 26...030                 |           |               | 41...110                 |           |               |
| 196...160                |           |               | 23...160                 |           |               | 01123-50825 ...9...060   |           |               | 96...030                 |           |               |
| TA043-6404-0...43...090  |           |               | 01023-50622 ...1...200   |           |               | 146...040                |           |               | 118...105                |           |               |
| TC210-2628-0...140...150 |           |               | 01023-60650 ...8...030   |           |               | 147...050                |           |               | 118...120                |           |               |
| TC220-5840-0...73...170  |           |               | 01025-50612 ...38...130  |           |               | 01123-50825 ...154...020 |           |               | 01125-60816 ...132...020 |           |               |
| 74...070                 |           |               | 48...040                 |           |               | 155...140                |           |               | 143...080                |           |               |
| TC232-1670-0...38...030  |           |               | 110...130                |           |               | 176...080                |           |               | 150...190                |           |               |
| TC232-1671-0...38...040  |           |               | 118...060                |           |               | 195...210                |           |               | 154...140                |           |               |
| TC232-1673-0...38...050  |           |               | 150...050                |           |               | 198...160                |           |               | 159...040                |           |               |
| TC402-6838-0...53...060  |           |               | 181...070                |           |               | 207...150                |           |               | 166...030                |           |               |
| 56...040                 |           |               | 181...220                |           |               | 01123-50828 ...9...070   |           |               | 166...050                |           |               |
| 57...040                 |           |               | 01025-50616 ...33...070  |           |               | 23...090                 |           |               | 166...070                |           |               |
| TC420-5897-0...74...150  |           |               | 49...150                 |           |               | 01123-50830 ...28...110  |           |               | 166...090                |           |               |
| TC422-1607-0...36...030  |           |               | 50...020                 |           |               | 01123-50835 ...22...160  |           |               | 167...180                |           |               |
| TC422-1609-0...36...020  |           |               | 01025-50616 ...50...040  |           |               | 01123-50840 ...69...110  |           |               | 01125-60816 ...169...020 |           |               |
| TD030-1254-0...140...020 |           |               | 61...070                 |           |               | 01123-50845 ...146...150 |           |               | 169...110                |           |               |
| TD060-3012-2...46...020  |           |               | 79...230                 |           |               | 147...160                |           |               | 170...040                |           |               |
| TD270-1601-0...36...010  |           |               | 111...160                |           |               | 01123-50860 ...186...050 |           |               | 170...060                |           |               |
| YR484-1517-0...77...080  |           |               | 119...150                |           |               | 188...110                |           |               | 171...170                |           |               |
| YR700-0315-0...77...090  |           |               | 127...120                |           |               | 01123-51020 ...195...060 |           |               | 172...140                |           |               |
| YT011-0019-0...85...030  |           |               | 128...120                |           |               | 01123-51025 ...82...040  |           |               | 178...090                |           |               |
| YT011-0020-0...85...040  |           |               | 130...020                |           |               | 82...100                 |           |               | 178...190                |           |               |
| YT082-5111-0...79...110  |           |               | 130...040                |           |               | 139...060                |           |               | 178...230                |           |               |
| YT102-5131-0...77...100  |           |               | 161...200                |           |               | 01123-51030 ...72...070  |           |               | 178...250                |           |               |
| YT104-2101-0...79...240  |           |               | 01025-50616 ...162...030 |           |               | 01123-51030 ...139...120 |           |               | 01125-60816 ...180...130 |           |               |
| YT107-0048-0...79...100  |           |               | 163...080                |           |               | 01123-51230 ...178...020 |           |               | 181...150                |           |               |
| YT232-0072-0...85...050  |           |               | 164...060                |           |               | 181...020                |           |               | 184...110                |           |               |
| YT450-0022-0...79...030  |           |               | 164...120                |           |               | 01123-51235 ...96...070  |           |               | 208...070                |           |               |
| YT637-0012-0...85...060  |           |               | 167...110                |           |               | 01123-51240 ...200...020 |           |               | 208...090                |           |               |
| YT637-0013-0...85...070  |           |               | 181...180                |           |               | 01123-60814 ...14...140  |           |               | 01125-60820 ...33...040  |           |               |
| YT637-0014-0...85...080  |           |               | 181...200                |           |               | 161...260                |           |               | 36...070                 |           |               |
| YT637-0015-0...85...090  |           |               | 184...210                |           |               | 01123-60816 ...3...020   |           |               | 40...020                 |           |               |
| YT637-0016-0...85...100  |           |               | 01025-50620 ...47...080  |           |               | 42...150                 |           |               | 40...170                 |           |               |
| YT665-0013-0...77...110  |           |               | 49...050                 |           |               | 76...050                 |           |               | 41...130                 |           |               |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. |
|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|
| 01125-60820     | 46        | 050           | 01125-60820     | 193       | 040           | 01133-51225     | 183       | 100           | 01754-50816     | 113       | 090           |
|                 | 53        | 020           |                 | 193       | 070           | 01133-51230     | 168       | 030           | 01754-50820     | 14        | 200           |
|                 | 63        | 165           |                 | 194       | 290           |                 | 199       | 060           |                 | 17        | 030           |
|                 | 63        | 180           |                 | 194       | 320           | 01133-51235     | 213       | 040           | 01754-50825     | 202       | 200           |
|                 | 78        | 030           |                 | 203       | 040           |                 | 213       | 080           | 01754-50830     | 4         | 080           |
|                 | 80        | 050           |                 | 203       | 060           | 01133-51240     | 40        | 100           |                 | 21        | 080           |
|                 | 95        | 100           |                 | 203       | 080           |                 | 139       | 100           | 01754-50840     | 14        | 190           |
|                 | 95        | 110           |                 | 204       | 040           | 01133-51635     | 207       | 020           |                 | 86        | 140           |
|                 | 97        | 020           |                 | 204       | 060           | 01133-51640     | 188       | 030           | 01754-50845     | 64        | 050           |
|                 | 97        | 040           |                 | 207       | 110           |                 | 207       | 070           | 01754-50855     | 25        | 110           |
| 01125-60820     | 97        | 060           | 01125-60820     | 207       | 170           | 01135-51030     | 128       | 020           | 01754-50855     | 42        | 130           |
|                 | 97        | 080           | 01127-50816     | 120       | 190           |                 | 201       | 110           | 01754-50865     | 88        | 100           |
|                 | 97        | 100           |                 | 134       | 027           | 01135-51040     | 82        | 130           | 01754-50875     | 4         | 100           |
|                 | 97        | 130           |                 | 150       | 130           | 01135-51275     | 105       | 090           | 01754-50885     | 4         | 120           |
|                 | 99        | 030           | 01127-50820     | 109       | 110           |                 | 106       | 090           | 01754-50890     | 64        | 040           |
|                 | 111       | 130           |                 | 119       | 030           | 01135-61020     | 177       | 080           | 01754-51040     | 75        | 030           |
|                 | 113       | 080           |                 | 119       | 070           |                 | 193       | 165           |                 | 75        | 110           |
|                 | 114       | 150           |                 | 135       | 120           |                 | 193       | 245           | 01754-51055     | 75        | 040           |
|                 | 116       | 020           |                 | 144       | 075           |                 | 196       | 020           | 01754-51070     | 42        | 030           |
|                 | 116       | 110           |                 | 163       | 020           | 01135-61025     | 136       | 030           | 01754-51235     | 64        | 160           |
| 01125-60820     | 118       | 020           | 01127-50820     | 163       | 100           | 01135-61025     | 137       | 020           | 01754-51240     | 70        | 020           |
|                 | 118       | 040           |                 | 177       | 040           |                 | 177       | 020           | 01774-51225     | 98        | 050           |
|                 | 119       | 020           |                 | 192       | 020           |                 | 177       | 100           | 01811-50812     | 127       | 090           |
|                 | 119       | 190           |                 | 192       | 040           |                 | 177       | 110           |                 | 128       | 050           |
|                 | 120       | 250           |                 | 197       | 250           |                 | 189       | 060           |                 | 128       | 070           |
|                 | 124       | 170           | 01127-50830     | 42        | 040           |                 | 191       | 050           |                 | 128       | 090           |
|                 | 124       | 190           | 01128-50820     | 68        | 210           |                 | 195       | 170           | 01811-50815     | 208       | 020           |
|                 | 127       | 020           | 01133-51020     | 13        | 050           | 01135-61230     | 40        | 120           | 01820-50615     | 163       | 085           |
|                 | 127       | 070           |                 | 120       | 150           |                 | 96        | 090           | 01820-50815     | 132       | 040           |
|                 | 127       | 126           |                 | 126       | 290           | 01153-50812     | 25        | 160           |                 | 162       | 120           |
| 01125-60820     | 131       | 020           | 01133-51020     | 144       | 030           | 01153-50812     | 64        | 090           | 01952-00616     | 159       | 070           |
|                 | 131       | 050           |                 | 144       | 110           | 01153-50816     | 63        | 105           | 01952-00825     | 152       | 080           |
|                 | 135       | 030           |                 | 187       | 060           | 01155-50840     | 198       | 190           | 02012-60060     | 126       | 190           |
|                 | 135       | 100           |                 | 195       | 080           | 01155-50855     | 193       | 170           |                 | 126       | 230           |
|                 | 138       | 020           |                 | 203       | 020           |                 | 193       | 250           |                 | 211       | 060           |
|                 | 142       | 020           |                 | 204       | 020           | 01173-51020     | 211       | 130           |                 | 211       | 100           |
|                 | 142       | 040           | 01133-51025     | 62        | 020           | 01173-51025     | 144       | 080           | 02014-50060     | 114       | 040           |
|                 | 143       | 020           |                 | 101       | 090           | 01173-51260     | 105       | 020           |                 | 126       | 200           |
|                 | 143       | 050           |                 | 101       | 160           |                 | 105       | 060           |                 | 126       | 240           |
|                 | 144       | 180           |                 | 102       | 090           |                 | 106       | 020           |                 | 211       | 070           |
| 01125-60820     | 147       | 140           | 01133-51025     | 102       | 160           | 01173-51260     | 106       | 060           | 02014-50060     | 211       | 110           |
|                 | 155       | 150           |                 | 103       | 080           | 01173-51635     | 136       | 150           | 02021-50050     | 162       | 060           |
|                 | 161       | 050           |                 | 104       | 080           | 01175-51055     | 198       | 020           | 02021-50060     | 58        | 030           |
|                 | 161       | 180           |                 | 107       | 090           |                 | 198       | 060           |                 | 120       | 050           |
|                 | 162       | 110           |                 | 107       | 160           | 01176-61025     | 127       | 030           |                 | 147       | 270           |
|                 | 168       | 180           |                 | 108       | 090           | 01222-50610     | 154       | 040           |                 | 155       | 120           |
|                 | 175       | 050           |                 | 108       | 160           | 01311-10812     | 199       | 100           |                 | 159       | 090           |
|                 | 176       | 020           |                 | 144       | 060           | 01311-10816     | 193       | 090           |                 | 161       | 090           |
|                 | 177       | 045           |                 | 187       | 030           | 01513-50820     | 28        | 030           |                 | 161       | 160           |
|                 | 178       | 210           |                 | 187       | 080           | 01513-50822     | 28        | 130           |                 | 167       | 060           |
| 01125-60820     | 179       | 160           | 01133-51025     | 202       | 240           | 01513-50822     | 86        | 130           | 02021-50060     | 167       | 160           |
|                 | 179       | 240           | 01133-51030     | 44        | 020           | 01517-61640     | 127       | 050           |                 | 169       | 050           |
|                 | 182       | 020           |                 | 171       | 200           | 01518-50822     | 23        | 100           |                 | 169       | 070           |
|                 | 183       | 120           |                 | 172       | 020           | 01754-50610     | 10        | 120           |                 | 169       | 090           |
|                 | 186       | 065           |                 | 181       | 090           | 01754-50618     | 21        | 040           | 02054-50050     | 209       | 080           |
|                 | 186       | 080           | 01133-51035     | 136       | 170           | 01754-50655     | 24        | 020           | 02056-50060     | 4         | 240           |
|                 | 186       | 110           |                 | 210       | 160           | 01754-50660     | 22        | 030           |                 | 18        | 117           |
|                 | 191       | 090           | 01133-51040     | 168       | 220           | 01754-50665     | 22        | 040           |                 | 42        | 050           |
|                 | 191       | 110           | 01133-51075     | 203       | 025           | 01754-50800     | 87        | 040           | 02072-50120     | 210       | 075           |
|                 | 192       | 026           |                 | 204       | 025           | 01754-50812     | 2         | 050           | 02114-50080     | 40        | 070           |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. |
|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|
| 02114-50080     | 40        | 150           | 02131-50100     | 193       | 130           | 02810-50060     | 129       | 080           | 04013-50080     | 166       | 180           |
|                 | 44        | 040           |                 | 193       | 210           |                 | 150       | 150           |                 | 168       | 060           |
|                 | 88        | 120           | 02156-50080     | 3         | 040           | 02810-50080     | 159       | 020           |                 | 177       | 180           |
|                 | 113       | 050           |                 | 22        | 090           | 03004-50614     | 122       | 080           |                 | 184       | 060           |
|                 | 141       | 110           |                 | 28        | 040           | 03016-50616     | 155       | 100           |                 | 193       | 190           |
|                 | 146       | 070           |                 | 86        | 150           |                 | 159       | 060           |                 | 193       | 270           |
|                 | 147       | 080           | 02172-50140     | 112       | 040           |                 | 161       | 140           |                 | 198       | 200           |
|                 | 148       | 180           |                 | 123       | 050           | 03024-50310     | 61        | 040           | 04013-50180     | 196       | 215           |
|                 | 156       | 090           | 02172-50180     | 187       | 140           | 03024-50512     | 31        | 040           | 04013-60040     | 167       | 090           |
|                 | 166       | 160           |                 | 195       | 140           |                 | 209       | 050           | 04013-60050     | 51        | 050           |
| 02114-50080     | 193       | 180           | 02172-50180     | 196       | 230           | 03024-50520     | 19        | 150           | 04013-60050     | 209       | 060           |
|                 | 193       | 260           |                 | 210       | 130           | 03024-60416     | 184       | 190           |                 | 209       | 100           |
|                 | 196       | 100           |                 | 210       | 190           | 03034-50310     | 122       | 110           | 04013-60060     | 79        | 150           |
| 02114-50100     | 202       | 130           | 02174-50120     | 116       | 220           | 03034-50406     | 125       | 150           |                 | 110       | 150           |
| 02116-50100     | 84        | 040           |                 | 146       | 130           | 03034-50520     | 52        | 020           |                 | 112       | 090           |
| 02118-50100     | 109       | 030           |                 | 147       | 190           | 03034-50525     | 48        | 020           |                 | 117       | 020           |
|                 | 109       | 060           |                 | 153       | 160           |                 | 51        | 040           |                 | 122       | 070           |
|                 | 109       | 090           |                 | 157       | 120           | 03034-50620     | 58        | 090           |                 | 177       | 210           |
|                 | 115       | 040           |                 | 171       | 080           | 03054-50510     | 5         | 090           | 04013-60100     | 127       | 045           |
|                 | 115       | 070           | 02174-50140     | 116       | 160           | 03614-50410     | 121       | 070           |                 | 177       | 130           |
| 02118-50100     | 177       | 120           | 02174-50140     | 200       | 110           | 04011-50100     | 79        | 140           | 04013-60100     | 193       | 160           |
|                 | 181       | 100           |                 | 212       | 110           | 04011-50120     | 105       | 040           |                 | 193       | 240           |
|                 | 184       | 050           | 02174-50160     | 133       | 110           |                 | 105       | 080           |                 | 212       | 170           |
|                 | 188       | 080           |                 | 140       | 090           |                 | 106       | 040           | 04013-60120     | 96        | 060           |
|                 | 189       | 080           |                 | 144       | 160           |                 | 106       | 080           |                 | 146       | 110           |
|                 | 190       | 130           |                 | 144       | 230           |                 | 184       | 140           |                 | 147       | 170           |
|                 | 193       | 140           |                 | 207       | 090           | 04011-50140     | 110       | 020           |                 | 168       | 090           |
|                 | 193       | 220           | 02174-50200     | 114       | 120           |                 | 116       | 170           |                 | 168       | 140           |
|                 | 198       | 040           | 02176-50120     | 63        | 140           |                 | 156       | 030           | 04013-60140     | 112       | 020           |
|                 | 198       | 080           |                 | 72        | 060           | 04011-50180     | 187       | 120           |                 | 123       | 030           |
| 02118-50100     | 211       | 030           | 02176-50120     | 98        | 100           | 04011-50180     | 195       | 120           | 04015-60060     | 60        | 050           |
|                 | 212       | 190           | 02176-50200     | 67        | 160           |                 | 210       | 110           |                 | 114       | 020           |
| 02121-50080     | 38        | 020           | 02552-50060     | 124       | 040           |                 | 210       | 170           |                 | 150       | 155           |
|                 | 40        | 030           |                 | 209       | 160           | 04011-50200     | 82        | 070           |                 | 155       | 110           |
|                 | 46        | 100           | 02552-50080     | 41        | 080           |                 | 190       | 090           |                 | 159       | 080           |
|                 | 47        | 060           | 02751-50060     | 15        | 110           |                 | 190       | 150           |                 | 161       | 150           |
|                 | 54        | 030           |                 | 16        | 050           |                 | 212       | 040           |                 | 182       | 090           |
|                 | 56        | 030           |                 | 18        | 150           | 04011-50220     | 133       | 060           | 04015-60080     | 40        | 130           |
|                 | 57        | 030           |                 | 96        | 050           |                 | 141       | 030           |                 | 63        | 100           |
|                 | 71        | 020           |                 | 96        | 110           | 04011-60160     | 63        | 040           |                 | 80        | 040           |
| 02121-50080     | 119       | 095           | 02751-50080     | 17        | 060           | 04011-60160     | 133       | 090           | 04015-60080     | 111       | 050           |
|                 | 120       | 120           |                 | 23        | 120           |                 | 168       | 210           |                 | 146       | 050           |
|                 | 121       | 050           |                 | 38        | 140           |                 | 188       | 040           |                 | 147       | 060           |
|                 | 149       | 040           |                 | 53        | 050           |                 | 196       | 060           |                 | 149       | 035           |
|                 | 152       | 090           |                 | 55        | 030           |                 | 196       | 190           |                 | 174       | 060           |
|                 | 155       | 050           |                 | 55        | 050           |                 | 212       | 210           | 04015-60100     | 120       | 160           |
|                 | 155       | 080           |                 | 111       | 060           | 04012-50060     | 151       | 070           |                 | 188       | 060           |
|                 | 158       | 020           |                 | 113       | 070           | 04012-50080     | 3         | 060           | 04015-60120     | 40        | 110           |
|                 | 161       | 070           |                 | 119       | 060           | 04013-50080     | 25        | 140           |                 | 98        | 080           |
|                 | 161       | 120           |                 | 144       | 077           |                 | 41        | 070           |                 | 168       | 020           |
| 02121-50080     | 161       | 240           | 02751-50080     | 202       | 210           | 04013-50080     | 68        | 220           | 04015-60120     | 171       | 060           |
|                 | 174       | 040           | 02761-50050     | 60        | 070           |                 | 76        | 090           |                 | 213       | 050           |
|                 | 186       | 120           | 02761-50060     | 153       | 050           |                 | 88        | 110           | 04015-60160     | 136       | 130           |
|                 | 191       | 030           |                 | 182       | 100           |                 | 111       | 090           |                 | 207       | 030           |
|                 | 194       | 300           | 02763-50080     | 146       | 155           |                 | 111       | 120           | 04512-60050     | 209       | 090           |
|                 | 198       | 210           |                 | 167       | 140           |                 | 115       | 090           | 04512-60060     | 4         | 250           |
|                 | 205       | 100           |                 | 176       | 140           |                 | 116       | 080           |                 | 21        | 070           |
|                 | 208       | 050           | 02771-50100     | 44        | 030           |                 | 124       | 080           |                 | 42        | 060           |
| 02131-50100     | 137       | 040           |                 | 176       | 160           |                 | 129       | 020           |                 | 114       | 030           |
|                 | 137       | 060           |                 | 213       | 070           |                 | 129       | 060           | 04512-60080     | 3         | 050           |
|                 |           |               | 02810-50060     | 129       | 040           |                 |           |               |                 |           |               |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. |
|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|
| 04512-60080     | 22        | 100           | 04611-00350     | 148       | 107           | 04612-00150     | 156       | 040           | 04811-10320     | 102       | 130           |
|                 | 25        | 150           |                 | 156       | 057           |                 | 156       | 060           |                 | 107       | 130           |
|                 | 28        | 050           |                 | 201       | 080           | 04612-00160     | 63        | 050           |                 | 108       | 130           |
|                 | 40        | 060           | 04611-00360     | 75        | 090           | 04612-00170     | 133       | 050           | 04811-10500     | 86        | 120           |
|                 | 40        | 140           | 04611-00420     | 148       | 140           |                 | 141       | 070           | 04811-10850     | 14        | 170           |
|                 | 44        | 050           |                 | 158       | 080           |                 | 183       | 070           | 04811-50650     | 73        | 100           |
|                 | 86        | 160           |                 | 181       | 050           |                 | 196       | 130           |                 | 73        | 145           |
|                 | 146       | 060           |                 | 181       | 140           |                 | 212       | 080           | 04811-50900     | 139       | 130           |
|                 | 147       | 070           |                 | 200       | 040           | 04612-00200     | 148       | 070           | 04811-51100     | 139       | 050           |
|                 | 166       | 170           |                 | 202       | 073           |                 | 178       | 150           | 04814-00060     | 15        | 040           |
| 04512-60080     | 193       | 100           | 04611-00450     | 73        | 130           | 04612-00200     | 179       | 110           | 04814-00150     | 19        | 050           |
| 04512-60100     | 109       | 080           | 04611-00470     | 146       | 030           |                 | 179       | 140           | 04814-06310     | 16        | 030           |
|                 | 127       | 040           |                 | 146       | 180           |                 | 190       | 030           | 04815-50650     | 64        | 150           |
|                 | 177       | 140           |                 | 147       | 040           | 04612-00220     | 133       | 070           | 04816-00070     | 126       | 210           |
|                 | 188       | 070           |                 | 147       | 220           |                 | 141       | 040           |                 | 126       | 250           |
|                 | 189       | 070           |                 | 148       | 050           | 04612-00240     | 72        | 090           |                 | 211       | 080           |
|                 | 193       | 150           |                 | 158       | 120           | 04612-00250     | 14        | 180           |                 | 211       | 120           |
|                 | 193       | 230           |                 | 160       | 050           |                 | 75        | 180           | 04816-00120     | 68        | 060           |
|                 | 198       | 030           |                 | 160       | 090           |                 | 86        | 050           | 04816-00420     | 67        | 130           |
|                 | 198       | 070           | 04611-00520     | 70        | 080           |                 | 116       | 130           | 04816-06300     | 101       | 180           |
| 04512-60100     | 202       | 120           | 04611-00520     | 73        | 040           | 04612-00250     | 158       | 110           | 04816-06300     | 102       | 180           |
|                 | 211       | 020           |                 | 74        | 030           |                 | 180       | 080           |                 | 107       | 180           |
|                 | 212       | 180           |                 | 153       | 080           |                 | 195       | 240           |                 | 108       | 180           |
| 04512-60120     | 63        | 130           |                 | 154       | 090           |                 | 198       | 130           | 04816-50350     | 140       | 170           |
|                 | 72        | 050           |                 | 157       | 060           |                 | 199       | 040           | 04817-00100     | 47        | 030           |
|                 | 98        | 090           |                 | 178       | 130           | 04612-00260     | 65        | 040           |                 | 73        | 050           |
|                 | 105       | 030           |                 | 180       | 100           | 04612-00280     | 69        | 140           |                 | 77        | 030           |
|                 | 105       | 070           |                 | 195       | 110           | 04612-00300     | 158       | 050           | 04817-00110     | 74        | 180           |
|                 | 106       | 030           | 04611-00550     | 171       | 130           |                 | 178       | 070           |                 | 77        | 040           |
|                 | 106       | 070           | 04611-00620     | 101       | 110           |                 | 195       | 220           |                 | 86        | 090           |
| 04512-60120     | 116       | 230           | 04611-00620     | 102       | 110           | 04612-00320     | 176       | 120           | 04817-00120     | 75        | 150           |
|                 | 146       | 120           |                 | 107       | 110           | 04612-00350     | 140       | 040           | 04817-00140     | 79        | 190           |
|                 | 147       | 180           |                 | 108       | 110           |                 | 173       | 050           |                 | 86        | 070           |
|                 | 153       | 150           |                 | 158       | 060           | 04612-00400     | 67        | 050           |                 | 86        | 110           |
|                 | 157       | 110           |                 | 171       | 180           |                 | 201       | 020           | 04817-00160     | 2         | 060           |
|                 | 171       | 070           |                 | 178       | 060           | 04612-00420     | 183       | 050           |                 | 77        | 050           |
| 04512-60140     | 67        | 210           |                 | 195       | 050           | 04612-00500     | 136       | 090           |                 | 79        | 120           |
|                 | 200       | 100           |                 | 195       | 200           | 04612-00680     | 66        | 070           | 04817-00180     | 74        | 200           |
| 04512-60160     | 133       | 100           |                 | 198       | 150           | 04612-01000     | 134       | 080           | 04817-00200     | 77        | 060           |
|                 | 136       | 140           |                 | 210       | 050           |                 | 135       | 070           | 04817-00220     | 79        | 170           |
| 04512-60160     | 140       | 080           | 04611-00680     | 172       | 080           | 04711-00060     | 154       | 030           | 04817-05160     | 79        | 080           |
|                 | 144       | 150           |                 | 172       | 110           |                 | 172       | 015           | 04817-50300     | 70        | 140           |
|                 | 144       | 220           |                 | 179       | 050           | 04717-00810     | 64        | 100           |                 | 88        | 030           |
|                 | 207       | 080           |                 | 179       | 210           | 04717-01000     | 37        | 070           | 04817-50550     | 81        | 050           |
| 04512-60180     | 187       | 130           | 04611-00720     | 73        | 110           |                 | 70        | 120           | 05012-00408     | 1         | 080           |
|                 | 195       | 130           |                 | 73        | 147           |                 | 95        | 070           | 05012-00410     | 87        | 030           |
|                 | 196       | 220           | 04611-00800     | 67        | 070           | 04717-01200     | 31        | 047           | 05012-00609     | 1         | 090           |
|                 | 210       | 120           |                 | 136       | 120           |                 | 64        | 080           | 05012-00612     | 1         | 100           |
|                 | 210       | 180           |                 | 140       | 210           |                 | 88        | 050           |                 | 4         | 060           |
| 04611-00170     | 75        | 140           |                 | 201       | 050           | 04724-00100     | 139       | 070           | 05012-00818     | 64        | 060           |
| 04611-00220     | 70        | 040           | 04611-00900     | 103       | 130           | 04724-00140     | 15        | 050           | 05012-01018     | 1         | 110           |
|                 | 87        | 060           |                 | 104       | 130           | 04810-00600     | 83        | 090           | 05122-50614     | 110       | 145           |
| 04611-00320     | 68        | 150           | 04612-00100     | 77        | 020           | 04810-50900     | 103       | 110           |                 | 112       | 080           |
|                 | 101       | 150           | 04612-00120     | 116       | 210           |                 | 104       | 110           | 05122-50645     | 177       | 190           |
|                 | 102       | 150           |                 | 161       | 220           | 04811-00710     | 31        | 070           | 05122-50820     | 115       | 080           |
|                 | 107       | 150           | 04612-00140     | 116       | 060           | 04811-06630     | 75        | 070           | 05122-50845     | 182       | 040           |
|                 | 108       | 150           | 04612-00150     | 134       | 030           | 04811-10090     | 79        | 210           | 05122-50850     | 177       | 160           |
| 04611-00350     | 73        | 180           |                 | 135       | 050           | 04811-10300     | 11        | 160           | 05122-51240     | 205       | 040           |
|                 | 74        | 080           |                 | 148       | 110           |                 | 88        | 080           | 05122-51645     | 212       | 130           |
|                 | 134       | 060           |                 | 148       | 150           | 04811-10320     | 101       | 130           | 05411-00414     | 74        | 130           |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. |
|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|
| 05411-00420     | 18        | 100           | 06331-35012     | 64        | 070           | 08141-06202     | 156       | 055           | 09500-30528     | 154       | 050           |
| 05411-00528     | 25        | 120           | 06331-45010     | 95        | 080           |                 | 201       | 070           | 09502-55210     | 70        | 100           |
| 05411-00620     | 30        | 020           |                 | 139       | 080           | 08141-06203     | 133       | 040           | 09503-58011     | 140       | 220           |
| 05411-00625     | 68        | 090           | 06331-45012     | 31        | 045           |                 | 141       | 060           | 09504-06211     | 140       | 160           |
| 05511-50215     | 76        | 100           |                 | 88        | 040           |                 | 155       | 070           | 09661-40030     | 20        | 040           |
|                 | 111       | 110           | 06611-15010     | 101       | 140           |                 | 161       | 110           | 09661-40140     | 20        | 030           |
|                 | 124       | 090           |                 | 102       | 140           |                 | 168       | 200           | 09661-40150     | 20        | 100           |
|                 | 168       | 070           |                 | 103       | 120           | 08141-06204     | 146       | 020           | 09661-40300     | 20        | 010           |
|                 | 177       | 170           |                 | 104       | 120           |                 | 147       | 030           | 11460-6311-0    | 45        | 100           |
|                 | 184       | 070           |                 | 107       | 140           |                 | 148       | 040           | 11460-6312-0    | 45        | 230           |
| 05511-50425     | 168       | 150           | 06611-15010     | 108       | 140           | 08141-06204     | 160       | 040           | 11460-6327-0    | 45        | 110           |
| 05511-50430     | 110       | 030           |                 | 207       | 060           |                 | 171       | 030           | 11460-6350-0    | 45        | 060           |
|                 | 184       | 150           | 06613-10675     | 63        | 070           |                 | 190       | 020           | 12599-7411-0    | 209       | 110           |
|                 | 196       | 070           |                 | 141       | 015           |                 | 213       | 030           | 13961-8421-0    | 70        | 170           |
|                 | 196       | 200           |                 | 156       | 015           | 08141-06205     | 180       | 090           | 13963-9201-0    | 45        | 260           |
|                 | 212       | 140           |                 | 172       | 013           |                 | 195       | 100           | 14182-9203-0    | 43        | 260           |
| 05511-50435     | 190       | 100           |                 | 175       | 040           | 08141-06206     | 158       | 040           | 14911-4275-0    | 33        | 100           |
|                 | 190       | 160           |                 | 177       | 050           |                 | 178       | 050           |                 | 33        | 130           |
|                 | 212       | 050           |                 | 179       | 090           |                 | 195       | 040           |                 | 34        | 020           |
| 05511-50440     | 124       | 140           |                 | 180       | 020           |                 | 195       | 190           |                 | 34        | 090           |
| 05511-50535     | 82        | 080           | 06616-35010     | 80        | 030           | 08141-06206     | 198       | 140           | 14911-4275-0    | 64        | 190           |
| 05511-50550     | 82        | 120           | 07011-10030     | 126       | 060           |                 | 199       | 070           | 14971-4275-0    | 20        | 060           |
| 05511-51612     | 110       | 160           | 07012-10810     | 126       | 020           |                 | 201       | 100           |                 | 20        | 110           |
| 05511-51615     | 151       | 060           | 07012-11012     | 126       | 030           |                 | 210       | 040           |                 | 34        | 050           |
| 05515-51600     | 103       | 170           | 07012-11214     | 126       | 040           | 08141-06208     | 67        | 060           | 15021-1424-0    | 25        | 190           |
|                 | 104       | 170           | 07012-11417     | 126       | 050           |                 | 201       | 040           | 15021-3366-0    | 20        | 130           |
|                 | 205       | 030           | 07111-00100     | 126       | 090           | 08141-06210     | 136       | 080           | 15101-3358-0    | 95        | 020           |
| 05515-60800     | 182       | 050           | 07113-02100     | 126       | 100           | 08141-06302     | 148       | 130           | 15108-4329-0    | 32        | 070           |
| 05515-61200     | 205       | 050           | 07211-10150     | 126       | 110           |                 | 200       | 030           | 15108-4361-0    | 32        | 040           |
| 05525-51200     | 124       | 210           | 07715-00401     | 10        | 040           |                 | 202       | 072           | 15108-4378-0    | 32        | 050           |
| 05712-00410     | 8         | 050           | 07715-00401     | 11        | 100           | 08141-06303     | 146       | 170           | 15221-0175-0    | 3         | 010           |
| 05712-00525     | 14        | 040           | 07715-00403     | 14        | 110           |                 | 147       | 210           | 15221-0337-0    | 3         | 080           |
|                 | 146       | 090           | 07715-01605     | 68        | 030           | 08141-06304     | 70        | 070           | 15221-0338-0    | 1         | 060           |
|                 | 147       | 090           | 07715-03205     | 14        | 090           |                 | 153       | 070           | 15221-0339-0    | 1         | 070           |
|                 | 147       | 120           | 07715-03213     | 4         | 150           |                 | 154       | 070           | 15221-0349-0    | 3         | 090           |
|                 | 157       | 090           | 08101-06205     | 70        | 060           |                 | 157       | 050           | 15221-1315-3    | 25        | 060           |
|                 | 171       | 050           | 08101-06206     | 101       | 040           |                 | 178       | 120           | 15221-1328-0    | 25        | 070           |
| 05712-00530     | 153       | 130           |                 | 102       | 040           |                 | 179       | 020           | 15221-1333-0    | 25        | 040           |
| 05712-00535     | 70        | 160           |                 | 107       | 040           |                 | 179       | 180           | 15221-1398-0    | 25        | 050           |
| 05712-00720     | 10        | 060           |                 | 108       | 040           | 08141-06305     | 199       | 030           | 15221-1431-0    | 25        | 100           |
| 05712-00720     | 42        | 080           | 08101-06306     | 140       | 140           | 08141-06307     | 136       | 110           | 15221-1435-3    | 25        | 090           |
| 05712-00730     | 11        | 130           | 08101-06308     | 103       | 060           | 08143-06300     | 150       | 170           | 15221-1443-0    | 25        | 130           |
|                 | 140       | 200           |                 | 104       | 060           | 08241-05205     | 74        | 010           | 15221-1627-0    | 10        | 070           |
| 05712-00735     | 144       | 130           | 08141-06001     | 116       | 190           |                 | 86        | 040           | 15221-2336-0    | 11        | 170           |
|                 | 144       | 200           |                 | 154       | 080           | 08511-01510     | 156       | 020           | 15221-3365-0    | 1         | 120           |
|                 | 195       | 160           | 08141-06004     | 148       | 020           | 08511-01620     | 63        | 030           | 15221-3568-2    | 8         | 060           |
|                 | 198       | 100           |                 | 181       | 040           | 09230-20426     | 200       | 060           | 15221-4317-0    | 32        | 020           |
| 05712-00740     | 187       | 110           |                 | 181       | 130           | 09318-88150     | 5         | 020           | 15221-5547-0    | 14        | 070           |
| 05712-00745     | 210       | 020           | 08141-06005     | 158       | 100           | 09318-88180     | 22        | 130           | 15221-5574-0    | 14        | 100           |
| 06111-52023     | 76        | 020           |                 | 160       | 080           |                 | 30        | 040           | 15221-5623-0    | 21        | 050           |
| 06111-52023     | 80        | 060           | 08141-06006     | 171       | 110           | 09318-88200     | 29        | 110           | 15221-6641-0    | 21        | 060           |
|                 | 84        | 070           |                 | 173       | 020           | 09318-89020     | 37        | 050           | 15221-8821-0    | 4         | 230           |
|                 | 205       | 015           | 08141-06008     | 172       | 070           | 09318-89045     | 37        | 030           |                 | 16        | 040           |
|                 | 205       | 080           |                 | 172       | 100           | 09318-89055     | 39        | 060           |                 | 18        | 140           |
| 06112-53033     | 79        | 180           |                 | 178       | 160           | 09318-89076     | 39        | 070           | 15221-9153-0    | 17        | 050           |
|                 | 86        | 060           |                 | 179       | 040           |                 | 39        | 095           |                 | 22        | 070           |
| 06114-52023     | 84        | 050           |                 | 179       | 200           | 09500-20477     | 65        | 060           |                 | 27        | 040           |
| 06311-25020     | 74        | 170           |                 | 180       | 060           | 09500-25428     | 158       | 070           | 15223-8334-0    | 4         | 210           |
| 06311-25040     | 74        | 190           | 08141-06202     | 134       | 070           | 09500-26528     | 154       | 060           | 15224-4301-0    | 32        | 010           |
| 06331-35010     | 70        | 110           |                 | 148       | 105           | 09500-30478     | 160       | 020           |                 | 33        | 080           |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No.         | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.         | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.         | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.         | 页<br>PAGE | 序号<br>REF.No. |
|-------------------------|-----------|---------------|-------------------------|-----------|---------------|-------------------------|-----------|---------------|-------------------------|-----------|---------------|
| 15224-4320-0...32...030 |           |               | 16433-0446-0...9...080  |           |               | 1A021-5416-0...15...010 |           |               | 1A091-2397-0...12...210 |           |               |
| 15224-8776-0...32...080 |           |               | 16483-1710-0...28...020 |           |               | 1A021-5435-0...18...010 |           |               | 1A091-2398-0...12...210 |           |               |
| 15241-3695-0...4...130  |           |               | 16483-1711-0...28...100 |           |               | 1A021-5602-0...18...070 |           |               | 1A091-2401-2...10...090 |           |               |
| 15261-9601-0...3...100  |           |               | 16652-6431-0...43...140 |           |               | 1A021-5613-3...21...020 |           |               | 1A093-0150-3...2...010  |           |               |
| 15321-7326-0...22...140 |           |               | 16652-6477-0...43...110 |           |               | 1A021-5660-2...16...010 |           |               | 1A093-4202-0...20...090 |           |               |
| 15321-7334-0...1...130  |           |               | 16652-6478-0...43...050 |           |               | 1A021-5721-2...15...080 |           |               | 1A093-5136-0...20...120 |           |               |
| 15331-5135-0...17...100 |           |               | 16661-7305-0...23...050 |           |               | 18...120                |           |               | 1A094-0551-0...5...010  |           |               |
| 15331-9666-0...17...090 |           |               | 16661-7355-0...23...030 |           |               | 1A021-5739-0...18...115 |           |               | 1C010-1356-0...3...120  |           |               |
| 15425-6339-0...45...150 |           |               | 16691-5798-0...18...090 |           |               | 1A021-5792-0...18...110 |           |               | 1C020-9581-0...19...030 |           |               |
| 15425-6340-0...45...030 |           |               | 16851-9627-0...1...140  |           |               | 1A021-6001-7...16...020 |           |               | 1C020-9673-0...19...040 |           |               |
| 15434-3326-0...95...010 |           |               | 17111-1361-2...3...160  |           |               | 1A021-7292-0...22...050 |           |               | 1C040-3367-0...29...070 |           |               |
| 15449-7415-0...24...010 |           |               | 17111-1362-0...3...150  |           |               | 1A021-7301-2...22...170 |           |               | 1E013-3501-3...8...010  |           |               |
| 15461-7411-0...24...030 |           |               | 17111-9701-0...42...090 |           |               | 1A021-7333-2...4...190  |           |               | 1E013-9149-2...27...060 |           |               |
| 15471-2331-2...11...140 |           |               | 17123-6301-6...44...010 |           |               | 1A021-7334-0...22...110 |           |               | 1E090-6442-0...42...020 |           |               |
| 15471-7425-0...23...140 |           |               | 45...010                |           |               | 1A021-7351-0...23...040 |           |               | 1G065-4236-0...20...050 |           |               |
| 15471-9153-0...3...030  |           |               | 17123-6302-4...45...180 |           |               | 1A021-7352-0...23...060 |           |               | 1G279-2133-0...11...040 |           |               |
| 15501-7247-0...38...090 |           |               | 17123-6303-0...45...130 |           |               | 1A021-8721-0...47...040 |           |               | 1G311-4310-0...35...020 |           |               |
| 15511-9666-0...45...240 |           |               | 17123-6304-0...45...070 |           |               | 1A021-9102-0...22...080 |           |               | 1G311-4325-0...35...080 |           |               |
| 15521-3693-0...4...140  |           |               | 17123-6307-0...45...040 |           |               | 1A021-9103-0...4...090  |           |               | 1G311-4338-0...35...060 |           |               |
| 15521-7332-0...4...160  |           |               | 17123-6308-0...45...020 |           |               | 1A021-9602-0...22...020 |           |               | 1G311-4357-0...35...050 |           |               |
| 15521-9602-0...1...020  |           |               | 17123-6314-0...45...170 |           |               | 1A023-5641-6...21...100 |           |               | 1G311-4358-0...35...030 |           |               |
| 15521-9603-0...1...030  |           |               | 17123-6320-0...45...140 |           |               | 1A024-3323-0...29...090 |           |               | 1G311-4393-0...35...070 |           |               |
| 15531-7243-2...38...060 |           |               | 17123-6326-0...45...120 |           |               | 1A024-3715-2...30...030 |           |               | 1G311-8746-0...35...040 |           |               |
| 15601-0456-0...9...150  |           |               | 17123-6332-0...45...210 |           |               | 1A051-7343-0...23...080 |           |               | 1G410-4335-0...33...010 |           |               |
| 15601-1555-3...10...010 |           |               | 17123-6338-0...45...160 |           |               | 1A053-5700-5...18...060 |           |               | 35...010                |           |               |
| 15601-9201-2...18...020 |           |               | 17123-6350-0...45...050 |           |               | 1A053-5715-0...18...080 |           |               | 1G513-3655-0...7...030  |           |               |
| 15601-9665-0...18...030 |           |               | 17123-9331-0...45...190 |           |               | 1A053-5748-2...1...190  |           |               | 1G557-9665-0...29...030 |           |               |
| 15611-5545-0...14...060 |           |               | 17123-9332-0...45...200 |           |               | 1A071-0704-4...9...090  |           |               | 1G622-3708-3...6...020  |           |               |
| 15621-1403-0...25...170 |           |               | 17311-2231-2...11...080 |           |               | 1A071-0705-4...9...110  |           |               | 1G633-0304-0...3...070  |           |               |
| 15748-6057-0...17...080 |           |               | 17311-2297-0...11...080 |           |               | 1A071-0706-4...9...130  |           |               | 1G633-1176-0...26...010 |           |               |
| 15841-1462-0...18...040 |           |               | 17311-2298-0...11...080 |           |               | 1A083-2501-2...13...010 |           |               | 1G633-1231-0...27...010 |           |               |
| 15841-5385-0...19...130 |           |               | 17311-6328-0...45...080 |           |               | 1A085-7270-4...22...010 |           |               | 1G633-7428-0...42...070 |           |               |
| 15841-5386-0...19...140 |           |               | 17331-7334-2...5...060  |           |               | 1A091-0436-2...9...030  |           |               | 1G633-7429-0...42...100 |           |               |
| 15841-9151-0...15...100 |           |               | 17333-9101-3...2...030  |           |               | 1A091-0454-0...9...020  |           |               | 1G633-7469-0...42...120 |           |               |
| 15841-9602-0...3...170  |           |               | 17369-6757-0...43...270 |           |               | 9...100                 |           |               | 1G633-7493-0...42...110 |           |               |
| 15881-6409-0...43...150 |           |               | 17391-9616-0...1...040  |           |               | 9...120                 |           |               | 1G701-0413-0...4...070  |           |               |
| 15881-6415-0...43...280 |           |               | 17456-3642-0...7...020  |           |               | 9...140                 |           |               | 1G730-3641-4...7...010  |           |               |
| 15881-6426-0...43...080 |           |               | 19004-0462-0...13...040 |           |               | 1A091-0482-0...9...050  |           |               | 1G730-3701-0...30...010 |           |               |
| 15881-6433-0...43...160 |           |               | 19013-0345-0...3...130  |           |               | 1A091-0558-0...5...030  |           |               | 1G730-3716-0...30...060 |           |               |
| 15881-6471-0...43...060 |           |               | 19077-5209-2...17...020 |           |               | 1A091-0709-5...9...010  |           |               | 1G730-5371-2...19...090 |           |               |
| 15881-6480-0...43...100 |           |               | 19077-5211-3...17...020 |           |               | 1A091-1235-0...27...020 |           |               | 1G730-5372-0...19...100 |           |               |
| 15881-9104-0...43...200 |           |               | 19077-5212-3...17...020 |           |               | 1A091-1236-0...27...030 |           |               | 1G730-7303-2...23...010 |           |               |
| 15881-9105-0...43...220 |           |               | 19202-1658-0...73...020 |           |               | 1A091-1426-0...25...080 |           |               | 1G730-7341-0...23...020 |           |               |
| 15881-9201-0...43...030 |           |               | 19202-2325-0...11...150 |           |               | 1A091-1450-4...5...040  |           |               | 1G742-0512-0...5...070  |           |               |
| 15881-9202-0...43...250 |           |               | 19202-2328-0...11...110 |           |               | 1A091-1511-0...10...020 |           |               | 1G751-8813-0...4...220  |           |               |
| 15881-9301-0...43...070 |           |               | 19212-6310-0...45...090 |           |               | 1A091-1651-3...10...050 |           |               | 1G777-9665-0...29...050 |           |               |
| 15881-9302-0...43...210 |           |               | 19212-9713-0...45...220 |           |               | 1A091-2347-2...11...180 |           |               | 1G778-5454-0...15...070 |           |               |
| 15881-9303-0...43...180 |           |               | 19222-4328-0...32...060 |           |               | 1A091-2348-2...9...025  |           |               | 1G790-0331-2...3...140  |           |               |
| 15881-9304-0...43...190 |           |               | 19223-2565-2...23...150 |           |               | 9...105                 |           |               | 1G790-0360-2...3...140  |           |               |
| 16221-7327-0...22...150 |           |               | 19830-1232-0...28...090 |           |               | 9...125                 |           |               | 1G790-0361-2...3...140  |           |               |
| 16241-1172-0...28...080 |           |               | 1A021-0543-0...5...080  |           |               | 1A091-2348-2...9...145  |           |               | 1G790-0362-2...3...140  |           |               |
| 16241-6490-0...43...240 |           |               | 1A021-1172-0...22...120 |           |               | 11...190                |           |               | 1G790-0363-2...3...140  |           |               |
| 16241-7336-0...30...050 |           |               | 1A021-2131-0...11...030 |           |               | 1A091-2353-2...11...200 |           |               | 1G790-1182-0...26...020 |           |               |
| 30...070                |           |               | 1A021-2319-2...13...060 |           |               | 1A091-2354-2...12...210 |           |               | 1G790-5216-2...17...020 |           |               |
| 16241-7337-0...23...070 |           |               | 1A021-2411-0...11...120 |           |               | 1A091-2391-0...11...180 |           |               | 1G790-5373-0...19...110 |           |               |
| 16241-9602-0...4...020  |           |               | 1A021-2498-2...10...100 |           |               | 1A091-2392-0...11...180 |           |               | 1G790-5374-0...19...120 |           |               |
| 16271-9616-0...1...050  |           |               | 1A021-3311-0...1...160  |           |               | 1A091-2393-0...11...190 |           |               | 1G791-1601-0...10...030 |           |               |
| 16285-6357-0...45...250 |           |               | 1A021-3515-0...8...020  |           |               | 1A091-2394-0...11...190 |           |               | 1G796-5362-0...19...060 |           |               |
| 16285-9201-0...45...270 |           |               | 1A021-5166-0...1...170  |           |               | 1A091-2395-0...11...200 |           |               | 1G796-5642-2...21...110 |           |               |
| 16429-9201-0...27...050 |           |               | 1A021-5412-0...18...015 |           |               | 1A091-2396-0...11...200 |           |               | 1G840-0402-6...4...010  |           |               |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No.         | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. |
|-------------------------|-----------|---------------|--------------------------|-----------|---------------|--------------------------|-----------|---------------|--------------------------|-----------|---------------|
| 1G841-9101-0...4...110  |           |               | 1K531-6460-2...43...170  |           |               | 53415-4128-0...120...100 |           |               | 5G127-7126-0...50...010  |           |               |
| 1G850-3211-0...2...040  |           |               | 31351-3792-0...79...040  |           |               | 120...280                |           |               | 5G127-7127-0...49...140  |           |               |
| 1G850-5115-0...14...030 |           |               | 31351-3793-0...79...020  |           |               | 121...020                |           |               | 50...030                 |           |               |
| 1G851-0481-3...9...040  |           |               | 31351-3795-0...79...050  |           |               | 122...130                |           |               | 5G200-1113-0...120...040 |           |               |
| 1G851-2302-0...11...090 |           |               | 31351-3796-0...79...050  |           |               | 167...050                |           |               | 169...060                |           |               |
| 1G852-1311-0...25...010 |           |               | 31351-3797-0...79...050  |           |               | 53650-6127-0...132...090 |           |               | 5G200-1149-0...167...120 |           |               |
| 1G852-1312-0...25...020 |           |               | 31351-3861-3...14...150  |           |               | 145...040                |           |               | 5G200-2232-0...183...060 |           |               |
| 1G852-5345-0...19...070 |           |               | 32580-4436-0...65...130  |           |               | 53721-5318-0...167...150 |           |               | 5G230-2119-0...171...150 |           |               |
| 1G861-5569-2...14...080 |           |               | 34260-3688-0...112...030 |           |               | 53821-2219-0...199...090 |           |               | 173...040                |           |               |
| 1G861-9730-0...14...120 |           |               | 123...040                |           |               | 53961-3172-0...68...160  |           |               | 5G230-2265-0...172...090 |           |               |
| 1G896-0414-0...12...220 |           |               | 35880-3033-0...67...080  |           |               | 53961-6142-0...170...020 |           |               | 5G230-2265-0...179...220 |           |               |
| 1G896-1324-0...25...030 |           |               | 36880-4003-0...66...050  |           |               | 170...080                |           |               | 180...040                |           |               |
| 1G896-1358-0...3...110  |           |               | 36919-5334-0...123...010 |           |               | 54511-8813-0...126...070 |           |               | 5G250-1137-0...60...060  |           |               |
| 1G896-1423-0...25...180 |           |               | 37410-4218-0...109...040 |           |               | 54516-3213-0...115...060 |           |               | 5H215-2579-0...33...115  |           |               |
| 1G896-3566-0...8...040  |           |               | 3G700-1732-0...38...080  |           |               | 54617-1212-0...70...130  |           |               | 34...070                 |           |               |
| 1G896-3709-0...6...030  |           |               | 3G704-1739-0...38...100  |           |               | 88...020                 |           |               | 58...050                 |           |               |
| 1G896-4241-0...17...070 |           |               | 41071-4114-0...75...080  |           |               | 54711-8513-0...126...080 |           |               | 94...030                 |           |               |
| 1G896-5132-0...17...120 |           |               | 41092-1463-0...68...170  |           |               | 54721-3461-0...72...100  |           |               | 5H215-5331-2...145...030 |           |               |
| 1G896-5220-0...17...020 |           |               | 44366-6897-0...40...180  |           |               | 54821-1734-0...70...090  |           |               | 5H400-1246-0...133...030 |           |               |
| 1G896-9665-0...17...110 |           |               | 44512-2364-0...68...130  |           |               | 55231-2615-0...39...015  |           |               | 141...050                |           |               |
| 1G911-1452-3...5...100  |           |               | 50080-3411-0...112...100 |           |               | 55311-3155-0...109...050 |           |               | 5H400-8550-0...126...010 |           |               |
| 1G911-4250-0...19...010 |           |               | 117...030                |           |               | 55311-4126-0...34...075  |           |               | 5H400-8561-0...126...120 |           |               |
| 1G911-5344-0...19...080 |           |               | 177...200                |           |               | 58...070                 |           |               | 5H400-8562-0...126...130 |           |               |
| 1G911-5410-0...15...020 |           |               | 50080-3412-0...111...080 |           |               | 89...020                 |           |               | 5H400-8563-0...126...140 |           |               |
| 1G911-5427-0...15...060 |           |               | 115...100                |           |               | 94...020                 |           |               | 5H400-8564-0...126...150 |           |               |
| 1G911-5615-0...21...030 |           |               | 116...090                |           |               | 96...035                 |           |               | 5H470-1100-5...72...010  |           |               |
| 1G911-9102-2...5...110  |           |               | 207...130                |           |               | 96...120                 |           |               | 73...010                 |           |               |
| 1G911-9201-0...15...030 |           |               | 50727-4361-2...171...190 |           |               | 145...050                |           |               | 74...005                 |           |               |
| 1G916-2516-0...13...030 |           |               | 52000-3143-0...114...110 |           |               | 55417-5252-0...200...050 |           |               | 75...010                 |           |               |
| 1G916-6382-0...13...020 |           |               | 52200-1513-2...64...030  |           |               | 55511-2118-3...98...070  |           |               | 5H470-2710-4...86...010  |           |               |
| 1G921-1619-0...14...165 |           |               | 52200-1533-0...64...110  |           |               | 55541-2158-0...103...030 |           |               | 5H470-2710-4...87...010  |           |               |
| 1G922-5101-4...17...010 |           |               | 52200-1628-0...66...080  |           |               | 104...030                |           |               | 5H474-1561-0...65...070  |           |               |
| 1G923-9101-0...28...120 |           |               | 52200-1712-3...68...020  |           |               | 55571-3145-0...113...040 |           |               | 5H475-1226-2...140...070 |           |               |
| 1G924-1172-0...28...070 |           |               | 52200-1713-0...68...050  |           |               | 55611-3145-0...111...020 |           |               | 144...140                |           |               |
| 1G924-1602-7...14...010 |           |               | 52200-1714-0...68...070  |           |               | 55611-3146-0...113...020 |           |               | 144...210                |           |               |
| 1G924-1632-0...14...130 |           |               | 52200-1734-0...68...180  |           |               | 56713-1533-5...72...040  |           |               | 5H483-1531-0...70...010  |           |               |
| 1G924-2111-2...11...010 |           |               | 52200-1748-0...84...030  |           |               | 58218-1155-0...36...060  |           |               | 5H483-1534-0...70...050  |           |               |
| 1G924-2190-2...11...010 |           |               | 52200-1756-3...69...100  |           |               | 58511-1531-0...64...120  |           |               | 5H484-3138-0...53...030  |           |               |
| 1G924-2198-0...11...060 |           |               | 52200-1766-0...69...130  |           |               | 58600-1532-0...72...020  |           |               | 54...010                 |           |               |
| 1G924-2201-4...11...050 |           |               | 52200-1767-0...69...150  |           |               | 58600-2523-0...93...020  |           |               | 56...010                 |           |               |
| 1G924-2425-4...10...130 |           |               | 52200-2516-0...98...060  |           |               | 58600-2523-0...93...040  |           |               | 5H484-3138-0...57...010  |           |               |
| 1G924-3324-0...29...100 |           |               | 52200-2676-0...31...050  |           |               | 93...060                 |           |               | 5H484-3139-0...53...040  |           |               |
| 1G924-5300-4...19...020 |           |               | 52259-1621-0...66...030  |           |               | 93...080                 |           |               | 54...020                 |           |               |
| 1G924-9580-2...29...040 |           |               | 52259-1623-0...66...040  |           |               | 93...100                 |           |               | 55...020                 |           |               |
| 1G934-0101-4...1...010  |           |               | 52270-1733-0...68...110  |           |               | 93...120                 |           |               | 56...020                 |           |               |
| 1G934-1164-0...28...060 |           |               | 52270-1737-0...68...120  |           |               | 58700-1153-2...75...160  |           |               | 57...020                 |           |               |
| 1G934-1701-2...28...010 |           |               | 52300-7517-0...109...020 |           |               | 58813-1645-0...67...090  |           |               | 5H484-4290-0...49...070  |           |               |
| 1G934-3304-0...29...010 |           |               | 52500-1532-0...70...030  |           |               | 59700-1148-0...63...110  |           |               | 5H484-4291-0...49...110  |           |               |
| 1G934-3305-2...29...060 |           |               | 52500-3275-3...113...030 |           |               | 59700-1555-0...65...020  |           |               | 5H484-4292-0...49...120  |           |               |
| 1G934-5605-2...21...010 |           |               | 52600-2738-0...88...060  |           |               | 65...080                 |           |               | 5H484-4293-0...49...130  |           |               |
| 1J550-5387-0...20...080 |           |               | 52600-3144-0...114...100 |           |               | 59700-2564-0...38...110  |           |               | 5H491-1543-0...65...050  |           |               |
| 1J700-2214-0...11...070 |           |               | 52600-3145-0...114...090 |           |               | 59700-2611-2...39...017  |           |               | 5H491-1545-0...65...100  |           |               |
| 1J854-2437-0...10...110 |           |               | 52791-1544-0...65...090  |           |               | 59700-2625-0...39...090  |           |               | 5H491-1546-0...65...110  |           |               |
| 1J860-2105-0...11...020 |           |               | 52807-1102-0...73...030  |           |               | 39...110                 |           |               | 5H491-1613-0...65...120  |           |               |
| 1J860-2109-0...11...020 |           |               | 74...020                 |           |               | 59700-2766-0...72...110  |           |               | 5H491-1625-0...66...060  |           |               |
| 1J860-3314-0...1...150  |           |               | 52807-1116-0...74...100  |           |               | 59700-2767-0...72...120  |           |               | 5H491-1632-0...67...030  |           |               |
| 1J860-3352-0...29...120 |           |               | 52807-1118-3...75...020  |           |               | 59700-4288-2...49...080  |           |               | 5H491-1643-2...67...040  |           |               |
| 1J860-5175-0...14...020 |           |               | 52807-1121-0...75...120  |           |               | 59800-2813-0...84...060  |           |               | 5H491-1711-0...68...010  |           |               |
| 1J860-9579-0...29...020 |           |               | 53415-4128-0...99...040  |           |               | 5G046-1128-0...168...130 |           |               | 5H492-1647-0...67...150  |           |               |
| 1K411-6402-0...43...040 |           |               | 118...100                |           |               | 5G072-1119-0...183...020 |           |               | 5H492-1649-0...67...180  |           |               |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. |
|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|
| 5H492-3539-0... | 120       | 110           | 5T050-1756-0... | 69        | 060           | 5T051-6123-0... | 129       | 030           | 5T051-6611-2... | 144       | 010           |
| 5H493-1616-0... | 66        | 020           | 5T050-4650-3... | 211       | 040           |                 | 129       | 070           | 5T051-6613-0... | 144       | 020           |
| 5H493-1750-3... | 69        | 005           | 5T050-4651-3... | 126       | 180           | 5T051-6163-2... | 132       | 010           | 5T051-6615-0... | 144       | 050           |
| 5H493-1751-0... | 69        | 010           |                 | 211       | 050           | 5T051-6191-0... | 128       | 060           | 5T051-6619-3... | 144       | 070           |
| 5H493-1752-0... | 69        | 040           | 5T050-4652-3... | 126       | 220           | 5T051-6192-0... | 128       | 080           | 5T051-6622-0... | 144       | 100           |
| 5H493-1753-0... | 69        | 120           |                 | 211       | 090           | 5T051-6193-2... | 127       | 080           | 5T051-6623-0... | 144       | 065           |
| 5H493-1758-0... | 69        | 070           | 5T050-5926-0... | 209       | 040           | 5T051-6194-0... | 127       | 085           | 5T051-6631-2... | 144       | 120           |
| 5H493-1766-2... | 69        | 115           | 5T050-5943-0... | 61        | 020           | 5T051-6211-0... | 130       | 010           | 5T051-6632-4... | 144       | 170           |
| 5H493-1771-0... | 69        | 117           | 5T050-6621-0... | 144       | 040           | 5T051-6212-0... | 130       | 030           | 5T051-6633-2... | 144       | 190           |
| 5H540-4591-0... | 176       | 030           |                 | 144       | 090           | 5T051-6213-0... | 127       | 100           | 5T051-6635-0... | 144       | 240           |
| 5H540-4591-0... | 205       | 110           | 5T051-1216-0... | 88        | 070           | 5T051-6217-0... | 128       | 110           | 5T051-6711-0... | 153       | 010           |
| 5H583-4125-0... | 48        | 050           | 5T051-1646-0... | 67        | 190           | 5T051-6218-0... | 128       | 130           | 5T051-6712-0... | 153       | 060           |
| 5H601-1225-0... | 63        | 060           | 5T051-1648-0... | 67        | 140           | 5T051-6219-2... | 128       | 100           |                 | 157       | 040           |
| 5H601-1648-0... | 67        | 200           | 5T051-2620-0... | 41        | 010           | 5T051-6221-0... | 127       | 125           | 5T051-6713-0... | 153       | 020           |
| 5H601-1713-0... | 68        | 040           | 5T051-2621-0... | 41        | 020           | 5T051-6310-9... | 136       | 005           | 5T051-6714-0... | 153       | 030           |
| 5H601-2119-0... | 118       | 015           | 5T051-2622-0... | 41        | 030           |                 | 137       | 005           | 5T051-6715-2... | 153       | 100           |
| 5H601-2695-0... | 31        | 060           | 5T051-2623-0... | 41        | 040           | 5T051-6311-7... | 136       | 010           | 5T051-6718-0... | 153       | 120           |
| 5H601-4194-0... | 47        | 020           | 5T051-2624-0... | 41        | 050           | 5T051-6312-5... | 136       | 020           | 5T051-6721-2... | 153       | 170           |
| 5H630-1011-0... | 73        | 080           | 5T051-2625-0... | 41        | 060           | 5T051-6313-0... | 136       | 040           | 5T051-6723-0... | 154       | 100           |
| 5H630-1012-2... | 73        | 160           | 5T051-2626-2... | 41        | 090           | 5T051-6314-2... | 136       | 070           | 5T051-6724-0... | 154       | 110           |
| 5H630-1020-0... | 73        | 090           | 5T051-2712-0... | 86        | 100           | 5T051-6315-0... | 136       | 050           | 5T051-6725-0... | 154       | 130           |
| 5H630-1030-0... | 73        | 140           | 5T051-3117-0... | 110       | 190           | 5T051-6317-0... | 136       | 100           | 5T051-6729-0... | 154       | 120           |
| 5H630-1051-0... | 74        | 050           | 5T051-3118-0... | 110       | 180           | 5T051-6318-2... | 136       | 160           | 5T051-6741-2... | 156       | 010           |
| 5H630-1070-2... | 74        | 090           | 5T051-3134-0... | 118       | 030           | 5T051-6322-4... | 137       | 010           | 5T051-6752-0... | 155       | 020           |
| 5H630-1072-2... | 74        | 140           | 5T051-3226-0... | 114       | 010           | 5T051-6324-3... | 137       | 030           | 5T051-6766-2... | 155       | 160           |
| 5H630-1080-0... | 74        | 210           | 5T051-3232-0... | 114       | 060           | 5T051-6325-0... | 137       | 050           | 5T051-6767-2... | 155       | 170           |
| 5H630-1090-3... | 75        | 050           | 5T051-3322-2... | 156       | 070           | 5T051-6345-2... | 134       | 010           | 5T051-6811-4... | 157       | 010           |
| 5H632-2713-0... | 86        | 030           | 5T051-4126-0... | 54        | 040           | 5T051-6347-0... | 134       | 025           | 5T051-6812-0... | 158       | 010           |
| 5H632-3253-0... | 112       | 060           | 5T051-4361-0... | 165       | 110           | 5T051-6348-2... | 134       | 020           | 5T051-6814-0... | 158       | 030           |
| 5H669-4250-0... | 42        | 010           | 5T051-4362-0... | 165       | 080           |                 | 148       | 100           | 5T051-6815-0... | 158       | 140           |
| 5H669-4250-0... | 43        | 010           | 5T051-4364-0... | 165       | 130           | 5T051-6348-2... | 156       | 050           | 5T051-6817-2... | 159       | 010           |
| 5H687-7530-2... | 122       | 090           | 5T051-4366-0... | 165       | 090           | 5T051-6387-0... | 127       | 130           | 5T051-6818-0... | 157       | 020           |
| 5H730-4251-0... | 43        | 020           | 5T051-4369-0... | 165       | 150           | 5T051-6388-2... | 127       | 140           | 5T051-6827-2... | 157       | 080           |
| 5H746-1148-0... | 63        | 090           | 5T051-4382-0... | 165       | 060           | 5T051-6411-9... | 142       | 010           | 5T051-6831-5... | 159       | 030           |
| 5H746-2712-0... | 87        | 020           | 5T051-4640-0... | 212       | 010           | 5T051-6413-3... | 142       | 015           | 5T051-6832-2... | 159       | 050           |
| 5K101-2526-0... | 153       | 140           | 5T051-4645-0... | 196       | 034           | 5T051-6416-0... | 142       | 050           | 5T051-6833-0... | 159       | 100           |
|                 | 157       | 100           |                 | 212       | 012           | 5T051-6417-0... | 142       | 060           | 5T051-6851-4... | 161       | 010           |
| 5K101-2616-0... | 147       | 110           | 5T051-4646-0... | 212       | 014           | 5T051-6418-3... | 143       | 090           | 5T051-6852-8... | 161       | 040           |
| 5K101-2634-0... | 135       | 040           | 5T051-4931-0... | 196       | 036           | 5T051-6420-0... | 143       | 100           | 5T051-6853-2... | 161       | 080           |
| 5K101-2656-0... | 150       | 100           | 5T051-4941-0... | 196       | 144           | 5T051-6421-0... | 143       | 010           | 5T051-6854-2... | 160       | 010           |
| 5K101-2656-0... | 152       | 160           | 5T051-4942-0... | 196       | 146           | 5T051-6426-0... | 142       | 070           | 5T051-6856-0... | 160       | 030           |
|                 | 152       | 240           | 5T051-5433-0... | 206       | 020           | 5T051-6427-0... | 142       | 080           | 5T051-6858-3... | 161       | 060           |
| 5K101-3139-0... | 136       | 060           | 5T051-5434-0... | 206       | 030           | 5T051-6457-0... | 148       | 190           | 5T051-6861-0... | 158       | 130           |
|                 | 157       | 030           | 5T051-5435-0... | 206       | 040           | 5T051-6465-2... | 134       | 040           | 5T051-6862-0... | 161       | 020           |
| 5K101-3149-0... | 160       | 015           | 5T051-5614-0... | 112       | 110           | 5T051-6515-2... | 140       | 010           | 5T051-6865-0... | 161       | 130           |
| 5K101-3157-0... | 160       | 070           | 5T051-5642-0... | 140       | 180           | 5T051-6517-0... | 140       | 050           | 5T051-6911-0... | 147       | 010           |
| 5K101-3159-0... | 158       | 090           | 5T051-5643-0... | 140       | 190           | 5T051-6521-2... | 140       | 030           | 5T051-6912-0... | 146       | 080           |
| 5K101-3169-0... | 160       | 060           | 5T051-5644-2... | 135       | 010           | 5T051-6522-2... | 140       | 130           |                 | 147       | 100           |
| 5K101-3191-0... | 161       | 250           | 5T051-5649-0... | 139       | 110           | 5T051-6524-2... | 140       | 100           | 5T051-6914-0... | 146       | 100           |
| 5K101-5113-0... | 153       | 040           | 5T051-6101-2... | 128       | 010           | 5T051-6525-0... | 140       | 100           | 5T051-6915-0... | 146       | 160           |
| 5K101-5113-0... | 155       | 030           | 5T051-6102-2... | 127       | 010           | 5T051-6526-0... | 140       | 100           | 5T051-6915-0... | 147       | 200           |
|                 | 161       | 030           | 5T051-6113-5... | 128       | 030           | 5T051-6536-0... | 140       | 110           | 5T051-6917-0... | 147       | 130           |
| 5K190-5122-0... | 154       | 010           | 5T051-6114-6... | 131       | 010           | 5T051-6551-0... | 139       | 040           | 5T051-6918-0... | 146       | 140           |
| 5T018-7110-3... | 150       | 010           | 5T051-6115-5... | 131       | 040           | 5T051-6571-6... | 133       | 010           |                 | 147       | 150           |
| 5T018-7111-5... | 150       | 030           | 5T051-6117-2... | 131       | 030           | 5T051-6572-0... | 133       | 080           | 5T051-6919-0... | 146       | 010           |
| 5T018-7112-2... | 150       | 020           |                 | 131       | 060           | 5T051-6581-2... | 141       | 010           |                 | 147       | 020           |
| 5T018-7145-2... | 150       | 160           | 5T051-6118-0... | 128       | 045           | 5T051-6585-0... | 141       | 080           | 5T051-6922-0... | 148       | 010           |
| 5T018-7153-2... | 149       | 010           | 5T051-6119-4... | 128       | 040           | 5T051-6586-0... | 141       | 100           | 5T051-6924-0... | 148       | 030           |
| 5T018-9136-0... | 161       | 075           | 5T051-6121-0... | 129       | 010           | 5T051-6588-0... | 156       | 080           | 5T051-6926-0... | 148       | 060           |
| 5T050-1752-0... | 69        | 030           | 5T051-6122-0... | 129       | 050           | 5T051-6589-2... | 141       | 090           | 5T051-6931-0... | 148       | 080           |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. |
|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|
| 5T051-6933-0... | 148...    | 160           | 5T055-6422-0... | 143...    | 030           | 5T057-7173-3... | 151...    | 050           | 5T072-2174-0... | 97...     | 090           |
| 5T051-6934-0... | 148...    | 170           | 5T055-6423-0... | 143...    | 070           | 5T057-7182-0... | 150...    | 120           | 5T072-2179-0... | 97...     | 120           |
| 5T051-6936-0... | 148...    | 120           | 5T055-6451-3... | 138...    | 010           | 5T057-7217-0... | 162...    | 100           | 5T072-2312-0... | 101...    | 020           |
| 5T051-6941-0... | 146...    | 200           | 5T055-6763-0... | 155...    | 090           | 5T057-7222-2... | 163...    | 030           |                 | 102...    | 020           |
|                 | 147...    | 240           | 5T055-7829-0... | 174...    | 020           | 5T057-7226-0... | 163...    | 025           |                 | 107...    | 020           |
| 5T051-6951-2... | 127...    | 060           | 5T055-7833-0... | 171...    | 090           | 5T057-7241-2... | 163...    | 090           |                 | 108...    | 020           |
| 5T051-7114-0... | 132...    | 080           | 5T055-7834-0... | 171...    | 140           | 5T070-2215-0... | 103...    | 140           | 5T072-2314-0... | 101...    | 100           |
|                 | 152...    | 060           | 5T055-7842-0... | 173...    | 030           |                 | 104...    | 140           |                 | 102...    | 100           |
| 5T051-7115-0... | 152...    | 210           | 5T055-7953-0... | 82...     | 030           | 5T070-2321-0... | 101...    | 060           |                 | 107...    | 100           |
| 5T051-7116-0... | 150...    | 040           | 5T055-8127-0... | 82...     | 023           |                 | 102...    | 060           |                 | 108...    | 100           |
|                 |           |               |                 |           |               |                 |           |               |                 |           |               |
| 5T051-7124-0... | 152...    | 010           | 5T055-8128-0... | 82...     | 025           | 5T070-2321-0... | 107...    | 060           | 5T072-2315-0... | 101...    | 050           |
| 5T051-7125-0... | 152...    | 020           | 5T055-8129-0... | 82...     | 020           |                 | 108...    | 060           |                 | 102...    | 050           |
| 5T051-7126-0... | 152...    | 100           | 5T055-8141-0... | 83...     | 020           | 5T070-2385-0... | 103...    | 050           |                 | 107...    | 050           |
| 5T051-7127-0... | 152...    | 120           | 5T055-8142-0... | 83...     | 030           |                 | 104...    | 050           |                 | 108...    | 050           |
| 5T051-7136-2... | 150...    | 060           | 5T055-8143-0... | 83...     | 040           | 5T070-2610-0... | 39...     | 010           | 5T072-2317-2... | 101...    | 170           |
| 5T051-7137-0... | 150...    | 080           | 5T055-8144-0... | 83...     | 050           | 5T070-3152-0... | 110...    | 140           |                 | 102...    | 170           |
| 5T051-7138-0... | 150...    | 090           | 5T055-8145-0... | 83...     | 060           | 5T070-3254-3... | 111...    | 070           |                 | 107...    | 170           |
| 5T051-7144-2... | 152...    | 250           | 5T055-8146-0... | 83...     | 070           | 5T070-4256-0... | 31...     | 030           |                 | 108...    | 170           |
| 5T051-7153-0... | 149...    | 060           | 5T055-8172-2... | 178...    | 040           | 5T070-4637-0... | 196...    | 120           | 5T072-2318-0... | 101...    | 030           |
| 5T051-7154-0... | 152...    | 170           | 5T055-8174-2... | 178...    | 110           |                 | 212...    | 070           |                 | 102...    | 030           |
|                 |           |               |                 |           |               |                 |           |               |                 |           |               |
| 5T051-7155-0... | 152...    | 180           | 5T055-8174-2... | 179...    | 100           | 5T070-4638-0... | 196...    | 135           | 5T072-2319-0... | 101...    | 080           |
| 5T051-7156-0... | 149...    | 020           |                 | 179...    | 130           |                 | 212...    | 075           |                 | 102...    | 080           |
| 5T051-7157-0... | 149...    | 030           | 5T055-8175-0... | 179...    | 010           | 5T070-7924-0... | 178...    | 170           |                 | 107...    | 080           |
| 5T051-7167-0... | 152...    | 130           | 5T055-8177-0... | 178...    | 140           |                 | 179...    | 030           |                 | 108...    | 080           |
| 5T051-7168-0... | 152...    | 150           | 5T055-8179-0... | 179...    | 120           | 5T070-8173-0... | 178...    | 100           | 5T072-2325-0... | 103...    | 160           |
| 5T051-7169-0... | 152...    | 140           | 5T055-8182-2... | 179...    | 170           | 5T070-9522-0... | 126...    | 280           |                 | 104...    | 160           |
| 5T051-7211-7... | 162...    | 010           | 5T055-8184-0... | 180...    | 070           | 5T071-3138-0... | 55...     | 010           | 5T072-2341-2... | 105...    | 010           |
| 5T051-7212-3... | 162...    | 020           | 5T055-8193-0... | 51...     | 010           | 5T071-4386-2... | 165...    | 160           |                 | 106...    | 010           |
| 5T051-7213-0... | 162...    | 090           | 5T057-1085-0... | 212...    | 030           | 5T071-5111-0... | 201...    | 010           | 5T072-2342-3... | 105...    | 050           |
| 5T051-7214-0... | 162...    | 050           | 5T057-1086-0... | 133...    | 020           | 5T071-5647-0... | 135...    | 090           |                 | 106...    | 050           |
|                 |           |               |                 |           |               |                 |           |               |                 |           |               |
| 5T051-7214-0... | 170...    | 090           | 5T057-1086-0... | 148...    | 090           | 5T071-5648-0... | 135...    | 110           | 5T072-2345-0... | 101...    | 070           |
| 5T051-7215-0... | 162...    | 070           | 5T057-1087-0... | 141...    | 020           | 5T071-6131-0... | 131...    | 035           |                 | 102...    | 070           |
| 5T051-7216-3... | 162...    | 080           | 5T057-1088-0... | 207...    | 050           | 5T071-6164-0... | 132...    | 060           |                 | 107...    | 070           |
| 5T051-7223-2... | 163...    | 050           | 5T057-2755-0... | 81...     | 040           | 5T071-6167-0... | 145...    | 020           |                 | 108...    | 070           |
| 5T051-7225-0... | 163...    | 070           | 5T057-2759-0... | 81...     | 030           | 5T071-6194-0... | 128...    | 085           | 5T072-2360-0... | 107...    | 010           |
|                 | 164...    | 050           | 5T057-2763-0... | 81...     | 060           | 5T071-7142-2... | 150...    | 180           |                 | 108...    | 010           |
|                 | 164...    | 110           | 5T057-2764-0... | 81...     | 070           | 5T071-7170-3... | 151...    | 010           | 5T072-2361-0... | 107...    | 030           |
| 5T051-7243-0... | 147...    | 260           | 5T057-4211-0... | 49...     | 040           | 5T071-7171-0... | 151...    | 020           |                 | 108...    | 030           |
| 5T051-7244-0... | 132...    | 050           | 5T057-4223-0... | 49...     | 060           | 5T071-7174-2... | 151...    | 030           | 5T072-2384-2... | 103...    | 020           |
| 5T051-7625-0... | 60...     | 030           |                 | 49...     | 160           | 5T071-7175-0... | 150...    | 110           |                 | 104...    | 020           |
|                 |           |               |                 |           |               |                 |           |               |                 |           |               |
| 5T051-8812-0... | 124...    | 015           | 5T057-4224-2... | 49...     | 020           | 5T071-7177-0... | 151...    | 025           | 5T072-2388-2... | 103...    | 040           |
| 5T051-9113-2... | 140...    | 100           | 5T057-4228-0... | 48...     | 010           | 5T071-7221-2... | 163...    | 010           |                 | 104...    | 040           |
| 5T051-9127-2... | 140...    | 100           |                 | 51...     | 030           | 5T071-7951-0... | 82...     | 010           | 5T072-2390-2... | 103...    | 010           |
| 5T054-1511-2... | 64...     | 010           | 5T057-5421-0... | 205...    | 010           |                 | 83...     | 010           |                 | 104...    | 010           |
| 5T054-1512-2... | 64...     | 020           |                 | 206...    | 010           | 5T071-7955-0... | 82...     | 090           | 5T072-2393-0... | 103...    | 190           |
| 5T054-1541-3... | 65...     | 010           | 5T057-5650-0... | 139...    | 090           | 5T071-7956-0... | 82...     | 110           |                 | 104...    | 190           |
| 5T054-1542-2... | 65...     | 030           | 5T057-6136-0... | 162...    | 040           | 5T071-8183-3... | 179...    | 230           | 5T072-2394-0... | 103...    | 180           |
| 5T054-1610-0... | 66...     | 010           | 5T057-6867-0... | 163...    | 040           | 5T072-1141-3... | 63...     | 010           |                 | 104...    | 180           |
| 5T054-1739-0... | 68...     | 100           | 5T057-6142-0... | 164...    | 040           | 5T072-1142-0... | 62...     | 030           | 5T072-2395-2... | 103...    | 100           |
| 5T054-1741-0... | 68...     | 140           |                 | 164...    | 100           | 5T072-1144-0... | 63...     | 080           |                 | 104...    | 100           |
|                 |           |               |                 |           |               |                 |           |               |                 |           |               |
| 5T054-1754-2... | 69...     | 050           | 5T057-6214-0... | 127...    | 110           | 5T072-1149-0... | 63...     | 120           | 5T072-2396-0... | 101...    | 120           |
| 5T054-1759-0... | 69...     | 080           | 5T057-6518-0... | 140...    | 060           | 5T072-1151-0... | 63...     | 150           |                 | 102...    | 120           |
| 5T054-1761-4... | 72...     | 080           | 5T057-6578-2... | 134...    | 050           | 5T072-1152-0... | 63...     | 160           |                 | 107...    | 120           |
| 5T054-1768-0... | 69...     | 160           | 5T057-6867-0... | 161...    | 100           | 5T072-1213-3... | 88...     | 130           |                 | 108...    | 120           |
| 5T054-1781-0... | 68...     | 080           | 5T057-6868-0... | 161...    | 210           | 5T072-1214-2... | 88...     | 140           | 5T072-2397-0... | 103...    | 070           |
| 5T054-7885-0... | 176...    | 040           | 5T057-6869-2... | 161...    | 230           | 5T072-1635-0... | 196...    | 090           |                 | 104...    | 070           |
| 5T054-7952-0... | 83...     | 080           | 5T057-7122-0... | 152...    | 050           | 5T072-2116-0... | 40...     | 190           | 5T072-2398-0... | 103...    | 090           |
| 5T055-5641-0... | 139...    | 010           | 5T057-7132-0... | 152...    | 200           | 5T072-2123-0... | 95...     | 030           |                 | 104...    | 090           |
| 5T055-6412-3... | 142...    | 030           | 5T057-7152-0... | 149...    | 070           | 5T072-2161-2... | 99...     | 010           | 5T072-2551-0... | 41...     | 120           |
| 5T055-6415-2... | 142...    | 035           | 5T057-7172-0... | 151...    | 040           | 5T072-2162-2... | 99...     | 020           | 5T072-2559-0... | 38...     | 010           |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. |
|--------------------------|-----------|---------------|--------------------------|-----------|---------------|--------------------------|-----------|---------------|--------------------------|-----------|---------------|
| 5T072-2565-0...49...010  |           |               | 5T072-4335-0...125...050 |           |               | 5T072-4945-0...196...240 |           |               | 5T072-5522-0...187...090 |           |               |
| 5T072-2576-2...33...110  |           |               | 5T072-4338-0...125...030 |           |               | 5T072-5112-0...201...030 |           |               | 5T072-5523-0...187...050 |           |               |
| 5T072-2585-2...34...080  |           |               | 5T072-4343-2...125...080 |           |               | 5T072-5115-0...201...060 |           |               | 5T072-5535-0...187...100 |           |               |
| 5T072-2593-0...95...050  |           |               | 5T072-4344-2...125...090 |           |               | 5T072-5116-0...201...090 |           |               | 5T072-5541-0...188...010 |           |               |
| 5T072-2598-0...34...095  |           |               | 5T072-4348-2...125...100 |           |               | 5T072-5121-0...200...010 |           |               | 5T072-5543-0...188...020 |           |               |
| 5T072-2634-0...39...020  |           |               | 5T072-4352-0...214...010 |           |               | 5T072-5125-0...200...070 |           |               | 5T072-5544-2...188...050 |           |               |
| 5T072-2666-3...40...160  |           |               | 5T072-4353-0...214...020 |           |               | 5T072-5126-0...200...080 |           |               | 5T072-5553-0...186...030 |           |               |
| 5T072-2671-5...31...010  |           |               | 5T072-4354-0...214...030 |           |               | 5T072-5127-0...200...090 |           |               | 188...090                |           |               |
| 5T072-2672-2...31...090  |           |               | 5T072-4355-0...214...050 |           |               | 5T072-5133-0...202...040 |           |               | 5T072-5554-2...186...040 |           |               |
| 5T072-2673-0...31...020  |           |               | 5T072-4361-0...185...050 |           |               | 5T072-5134-0...202...050 |           |               | 188...100                |           |               |
| 5T072-2676-0...31...080  |           |               | 5T072-4361-0...214...070 |           |               | 5T072-5135-0...202...060 |           |               | 5T072-5561-0...186...060 |           |               |
| 5T072-2843-2...80...020  |           |               | 5T072-4362-0...185...060 |           |               | 5T072-5136-0...202...070 |           |               | 5T072-5581-0...186...090 |           |               |
| 5T072-2891-0...76...060  |           |               | 5T072-4367-0...165...100 |           |               | 5T072-5137-0...202...080 |           |               | 5T072-5582-0...186...100 |           |               |
| 5T072-2892-0...76...080  |           |               | 185...070                |           |               | 5T072-5138-0...202...090 |           |               | 5T072-7711-0...168...160 |           |               |
| 5T072-2912-0...33...060  |           |               | 5T072-4368-0...165...070 |           |               | 5T072-5141-0...202...100 |           |               | 5T072-7712-0...168...170 |           |               |
| 5T072-2995-0...103...150 |           |               | 185...040                |           |               | 5T072-5142-0...202...110 |           |               | 5T072-7713-0...168...190 |           |               |
| 104...150                |           |               | 214...040                |           |               | 5T072-5144-0...202...150 |           |               | 5T072-7714-0...166...100 |           |               |
| 5T072-3128-0...112...050 |           |               | 214...080                |           |               | 5T072-5145-0...202...160 |           |               | 5T072-7822-0...168...110 |           |               |
| 115...020                |           |               | 5T072-4371-0...125...130 |           |               | 5T072-5146-0...202...170 |           |               | 5T072-7825-2...168...010 |           |               |
| 116...050                |           |               | 5T072-4372-3...125...140 |           |               | 5T072-5147-0...202...180 |           |               | 5T072-7828-2...168...080 |           |               |
| 5T072-3128-0...117...050 |           |               | 5T072-4375-2...165...030 |           |               | 5T072-5148-0...202...190 |           |               | 5T072-7831-0...171...010 |           |               |
| 124...110                |           |               | 5T072-4384-0...165...020 |           |               | 5T072-5149-0...202...220 |           |               | 5T072-7832-0...171...020 |           |               |
| 184...160                |           |               | 185...020                |           |               | 5T072-5151-0...202...230 |           |               | 5T072-7836-0...171...210 |           |               |
| 5T072-3224-2...119...100 |           |               | 5T072-4385-0...125...110 |           |               | 5T072-5212-3...193...020 |           |               | 5T072-7843-0...172...030 |           |               |
| 5T072-3231-0...114...050 |           |               | 5T072-4386-0...184...170 |           |               | 5T072-5213-2...193...280 |           |               | 5T072-7845-0...171...160 |           |               |
| 5T072-3234-2...119...170 |           |               | 5T072-4387-0...185...030 |           |               | 5T072-5214-4...193...050 |           |               | 5T072-7846-0...174...050 |           |               |
| 5T072-3235-2...114...070 |           |               | 5T072-4388-2...165...040 |           |               | 5T072-5215-0...193...110 |           |               | 5T072-7847-0...174...030 |           |               |
| 5T072-3236-0...111...100 |           |               | 5T072-4393-0...125...160 |           |               | 5T072-5216-0...193...120 |           |               | 5T072-7848-0...166...140 |           |               |
| 5T072-3237-2...114...080 |           |               | 5T072-4396-0...125...190 |           |               | 5T072-5217-0...193...200 |           |               | 5T072-7849-0...166...150 |           |               |
| 5T072-3238-0...114...140 |           |               | 5T072-4397-0...185...160 |           |               | 5T072-5221-0...195...010 |           |               | 5T072-7851-4...172...010 |           |               |
| 5T072-3243-4...114...130 |           |               | 5T072-4398-0...185...110 |           |               | 5T072-5222-0...195...030 |           |               | 5T072-7855-0...172...120 |           |               |
| 5T072-3257-0...113...010 |           |               | 5T072-4422-0...125...120 |           |               | 5T072-5224-0...195...025 |           |               | 5T072-7857-0...172...130 |           |               |
| 5T072-3263-0...113...060 |           |               | 5T072-4423-0...185...090 |           |               | 195...070                |           |               | 5T072-7861-2...180...120 |           |               |
| 5T072-3265-0...112...010 |           |               | 5T072-4424-2...185...100 |           |               | 5T072-5225-0...195...090 |           |               | 5T072-7868-0...167...070 |           |               |
| 5T072-3282-0...119...140 |           |               | 5T072-4425-0...185...120 |           |               | 5T072-5229-0...195...020 |           |               | 5T072-7869-2...167...100 |           |               |
| 5T072-3299-2...109...070 |           |               | 5T072-4426-0...185...140 |           |               | 5T072-5232-0...195...180 |           |               | 5T072-7872-0...169...030 |           |               |
| 5T072-3321-3...113...100 |           |               | 5T072-4541-3...207...100 |           |               | 5T072-5234-0...195...230 |           |               | 5T072-7875-2...167...170 |           |               |
| 5T072-3322-0...111...140 |           |               | 5T072-4622-0...199...080 |           |               | 198...120                |           |               | 5T072-7879-0...168...040 |           |               |
| 5T072-3512-0...121...010 |           |               | 5T072-4636-0...196...110 |           |               | 5T072-5243-0...198...170 |           |               | 5T072-7887-0...168...120 |           |               |
| 5T072-3513-2...121...030 |           |               | 212...060                |           |               | 5T072-5244-0...126...170 |           |               | 5T072-7889-0...167...080 |           |               |
| 5T072-3514-0...121...060 |           |               | 5T072-4642-0...196...080 |           |               | 5T072-5244-0...198...180 |           |               | 5T072-7892-0...176...010 |           |               |
| 5T072-3516-0...121...040 |           |               | 5T072-4643-0...190...120 |           |               | 5T072-5245-0...193...030 |           |               | 5T072-7895-0...176...140 |           |               |
| 5T072-3546-0...120...240 |           |               | 5T072-4721-0...191...020 |           |               | 193...060                |           |               | 5T072-7898-0...176...090 |           |               |
| 5T072-3548-0...118...130 |           |               | 5T072-4751-4...203...010 |           |               | 194...310                |           |               | 5T072-7899-0...176...150 |           |               |
| 120...010                |           |               | 5T072-4752-0...203...027 |           |               | 5T072-5251-0...198...090 |           |               | 5T072-7913-0...177...030 |           |               |
| 5T072-3549-0...120...020 |           |               | 204...027                |           |               | 5T072-5252-0...198...110 |           |               | 5T072-7914-2...177...070 |           |               |
| 5T072-3551-5...122...010 |           |               | 5T072-4755-0...203...070 |           |               | 5T072-5412-0...189...020 |           |               | 5T072-7915-0...176...130 |           |               |
| 5T072-3552-0...122...060 |           |               | 5T072-4761-2...204...010 |           |               | 5T072-5413-0...189...030 |           |               | 5T072-7918-0...170...050 |           |               |
| 5T072-3553-0...122...020 |           |               | 5T072-4762-0...191...040 |           |               | 5T072-5414-0...189...040 |           |               | 5T072-7921-2...178...010 |           |               |
| 5T072-3554-0...122...030 |           |               | 5T072-4811-4...203...030 |           |               | 5T072-5415-0...189...050 |           |               | 5T072-7923-0...178...080 |           |               |
| 5T072-3555-0...122...040 |           |               | 5T072-4831-4...204...030 |           |               | 5T072-5422-2...205...020 |           |               | 5T072-7925-0...178...220 |           |               |
| 5T072-3556-0...122...050 |           |               | 5T072-4841-0...203...050 |           |               | 5T072-5427-0...205...090 |           |               | 5T072-7931-2...180...010 |           |               |
| 5T072-4113-0...46...030  |           |               | 204...050                |           |               | 5T072-5451-0...190...010 |           |               | 5T072-7932-0...181...030 |           |               |
| 5T072-4114-2...46...040  |           |               | 5T072-4871-0...192...023 |           |               | 5T072-5452-0...190...040 |           |               | 5T072-7933-0...178...240 |           |               |
| 5T072-4115-0...46...090  |           |               | 5T072-4913-0...199...050 |           |               | 5T072-5455-0...190...060 |           |               | 5T072-7934-0...181...010 |           |               |
| 5T072-4116-0...46...060  |           |               | 5T072-4921-0...196...010 |           |               | 5T072-5463-0...190...080 |           |               | 5T072-7939-0...181...060 |           |               |
| 5T072-4118-0...34...100  |           |               | 5T072-4933-0...196...040 |           |               | 190...140                |           |               | 5T072-7945-0...181...120 |           |               |
| 5T072-4251-0...48...030  |           |               | 5T072-4935-0...196...180 |           |               | 5T072-5465-0...190...070 |           |               | 5T072-7947-0...181...170 |           |               |
| 5T072-4322-0...36...040  |           |               | 5T072-4943-0...196...150 |           |               | 5T072-5466-0...190...110 |           |               | 5T072-7948-0...181...190 |           |               |
| 5T072-4326-0...125...010 |           |               | 5T072-4944-0...196...170 |           |               | 5T072-5522-0...187...040 |           |               | 5T072-7954-2...55...040  |           |               |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No.          | 页<br>PAGE | 序号<br>REF.No. |
|--------------------------|-----------|---------------|--------------------------|-----------|---------------|--------------------------|-----------|---------------|--------------------------|-----------|---------------|
| 5T072-7957-0...82...060  |           |               | 5T077-2752-0...80...010  |           |               | 5T078-2731-0...89...010  |           |               | 5T078-3561-2...120...130 |           |               |
| 5T072-7965-0...172...035 |           |               | 81...010                 |           |               | 5T078-2732-2...89...030  |           |               | 5T078-3562-2...120...140 |           |               |
| 5T072-7966-0...171...100 |           |               | 5T077-2756-0...81...020  |           |               | 5T078-2751-0...90...010  |           |               | 5T078-3563-0...120...170 |           |               |
| 183...030                |           |               | 5T077-4930-0...196...030 |           |               | 5T078-2752-0...90...020  |           |               | 5T078-3591-0...120...260 |           |               |
| 5T072-7967-0...171...120 |           |               | 5T077-4940-0...196...140 |           |               | 5T078-2753-0...90...030  |           |               | 5T078-3592-0...120...270 |           |               |
| 183...040                |           |               | 5T077-6166-0...145...010 |           |               | 5T078-2761-0...91...010  |           |               | 5T078-3751-0...120...090 |           |               |
| 5T072-7968-0...172...040 |           |               | 5T077-6414-0...142...017 |           |               | 5T078-2762-0...92...010  |           |               | 5T078-3752-0...120...200 |           |               |
| 179...060                |           |               | 5T077-6753-2...155...040 |           |               | 5T078-2771-0...93...010  |           |               | 5T078-3755-0...120...210 |           |               |
| 179...250                |           |               | 5T077-6754-0...155...060 |           |               | 5T078-2775-0...93...030  |           |               | 5T078-3756-0...120...220 |           |               |
| 5T072-7969-0...172...060 |           |               | 5T077-6768-0...155...180 |           |               | 5T078-2778-0...93...050  |           |               | 5T078-3757-0...120...230 |           |               |
| 5T072-7969-0...179...070 |           |               | 5T077-7219-0...162...025 |           |               | 5T078-2781-0...93...070  |           |               | 5T078-4121-0...52...010  |           |               |
| 179...260                |           |               | 5T078-1112-0...47...050  |           |               | 5T078-2785-0...93...090  |           |               | 5T078-4161-0...49...030  |           |               |
| 5T072-7974-0...182...060 |           |               | 5T078-1115-0...62...010  |           |               | 5T078-2788-0...93...110  |           |               | 5T078-4241-2...58...010  |           |               |
| 5T072-7975-0...182...070 |           |               | 5T078-1157-0...62...040  |           |               | 5T078-2791-0...94...010  |           |               | 5T078-4243-0...59...010  |           |               |
| 5T072-7976-2...177...060 |           |               | 5T078-1211-0...88...010  |           |               | 5T078-2846-0...80...070  |           |               | 5T078-4245-2...60...010  |           |               |
| 5T072-7977-5...170...070 |           |               | 5T078-1212-0...88...090  |           |               | 5T078-2872-0...78...020  |           |               | 5T078-4246-0...58...040  |           |               |
| 5T072-7994-0...82...050  |           |               | 5T078-1218-0...40...200  |           |               | 5T078-2901-0...33...030  |           |               | 5T078-4247-0...61...010  |           |               |
| 5T072-7996-0...171...040 |           |               | 5T078-1219-0...63...170  |           |               | 5T078-3111-0...118...010 |           |               | 5T078-4248-2...58...020  |           |               |
| 5T072-8113-0...183...010 |           |               | 5T078-1516-0...64...170  |           |               | 5T078-3113-2...110...010 |           |               | 5T078-4249-0...42...140  |           |               |
| 5T072-8116-0...184...080 |           |               | 5T078-1518-0...64...180  |           |               | 5T078-3114-0...110...040 |           |               | 5T078-4253-2...60...020  |           |               |
| 5T072-8117-0...183...080 |           |               | 5T078-1535-0...70...150  |           |               | 5T078-3115-0...110...060 |           |               | 5T078-4333-0...58...100  |           |               |
| 5T072-8118-0...184...090 |           |               | 5T078-1536-0...70...105  |           |               | 5T078-3119-0...110...070 |           |               | 5T078-4334-0...125...040 |           |               |
| 5T072-8125-0...167...190 |           |               | 5T078-2111-4...96...010  |           |               | 5T078-3122-0...110...170 |           |               | 5T078-4337-2...125...020 |           |               |
| 5T072-8126-0...167...200 |           |               | 5T078-2114-3...96...020  |           |               | 5T078-3124-0...117...010 |           |               | 5T078-4342-0...125...070 |           |               |
| 5T072-8134-0...184...100 |           |               | 5T078-2115-0...96...080  |           |               | 5T078-3127-0...117...040 |           |               | 5T078-4351-0...214...090 |           |               |
| 5T072-8135-0...184...200 |           |               | 5T078-2129-2...97...140  |           |               | 5T078-3137-0...118...050 |           |               | 5T078-4363-0...165...140 |           |               |
| 5T072-8136-2...184...120 |           |               | 5T078-2131-2...97...050  |           |               | 5T078-3181-2...116...010 |           |               | 5T078-4365-0...165...120 |           |               |
| 5T072-8138-2...184...010 |           |               | 5T078-2132-2...97...110  |           |               | 5T078-3182-0...116...120 |           |               | 5T078-4373-0...165...010 |           |               |
| 5T072-8139-2...184...020 |           |               | 5T078-2133-3...97...150  |           |               | 5T078-3183-0...116...030 |           |               | 5T078-4383-0...185...010 |           |               |
| 5T072-8141-0...184...030 |           |               | 5T078-2136-0...40...010  |           |               | 5T078-3184-0...116...100 |           |               | 5T078-4394-0...125...170 |           |               |
| 5T072-8142-0...184...040 |           |               | 5T078-2139-3...97...160  |           |               | 5T078-3185-2...116...040 |           |               | 5T078-4395-0...125...180 |           |               |
| 5T072-8171-0...178...030 |           |               | 5T078-2151-0...98...010  |           |               | 5T078-3186-0...116...180 |           |               | 5T078-4413-0...61...080  |           |               |
| 5T072-8176-0...178...180 |           |               | 5T078-2152-0...98...020  |           |               | 5T078-3188-0...116...140 |           |               | 5T078-4414-0...214...100 |           |               |
| 5T072-8178-2...179...080 |           |               | 5T078-2153-0...98...030  |           |               | 5T078-3189-0...116...150 |           |               | 5T078-4511-4...207...010 |           |               |
| 5T072-8181-2...179...150 |           |               | 5T078-2154-0...98...040  |           |               | 5T078-3191-0...116...200 |           |               | 5T078-4515-0...208...010 |           |               |
| 5T072-8186-0...179...190 |           |               | 5T078-2171-2...97...010  |           |               | 5T078-3194-0...53...010  |           |               | 5T078-4521-0...208...030 |           |               |
| 5T072-8711-4...177...150 |           |               | 5T078-2172-0...97...030  |           |               | 5T078-3195-0...123...020 |           |               | 5T078-4522-0...208...040 |           |               |
| 5T072-8811-2...124...010 |           |               | 5T078-2173-0...97...070  |           |               | 5T078-3221-0...119...010 |           |               | 5T078-4525-0...208...060 |           |               |
| 5T072-8813-0...124...020 |           |               | 5T078-2176-0...96...040  |           |               | 5T078-3222-3...119...040 |           |               | 5T078-4526-2...208...080 |           |               |
| 5T072-8814-0...124...030 |           |               | 5T078-2177-0...96...100  |           |               | 5T078-3225-0...119...080 |           |               | 5T078-4531-0...207...040 |           |               |
| 5T072-8861-3...124...060 |           |               | 5T078-2310-0...101...010 |           |               | 5T078-3251-0...111...010 |           |               | 5T078-4543-2...207...120 |           |               |
| 5T072-8862-0...124...100 |           |               | 102...010                |           |               | 5T078-3253-2...111...030 |           |               | 5T078-4551-0...207...140 |           |               |
| 5T072-8863-0...124...070 |           |               | 5T078-2545-0...39...100  |           |               | 5T078-3259-0...111...150 |           |               | 5T078-4611-0...210...010 |           |               |
| 5T072-8865-2...124...180 |           |               | 5T078-2546-0...39...050  |           |               | 5T078-3275-0...115...010 |           |               | 5T078-4612-0...210...060 |           |               |
| 5T072-8871-5...124...120 |           |               | 5T078-2547-0...39...080  |           |               | 5T078-3285-3...119...180 |           |               | 5T078-4613-0...210...070 |           |               |
| 5T072-8911-0...124...160 |           |               | 5T078-2549-0...41...100  |           |               | 5T078-3292-0...109...010 |           |               | 5T078-4614-0...210...080 |           |               |
| 5T072-8921-0...124...200 |           |               | 5T078-2553-0...38...120  |           |               | 5T078-3294-0...109...100 |           |               | 5T078-4616-0...207...160 |           |               |
| 5T072-8931-0...124...130 |           |               | 5T078-2554-0...37...040  |           |               | 5T078-3311-0...115...050 |           |               | 5T078-4617-0...210...090 |           |               |
| 5T072-8941-0...124...150 |           |               | 5T078-2556-0...37...010  |           |               | 5T078-3332-0...118...070 |           |               | 5T078-4621-0...210...100 |           |               |
| 5T072-9520-0...126...260 |           |               | 5T078-2557-0...37...020  |           |               | 5T078-3336-2...118...110 |           |               | 5T078-4624-0...210...085 |           |               |
| 5T072-9521-0...126...270 |           |               | 5T078-2558-0...37...060  |           |               | 5T078-3352-0...110...090 |           |               | 5T078-4625-0...210...086 |           |               |
| 5T076-1514-2...64...130  |           |               | 5T078-2566-3...36...050  |           |               | 5T078-3353-0...110...100 |           |               | 5T078-4626-0...210...087 |           |               |
| 5T076-1515-2...64...140  |           |               | 5T078-2577-0...34...030  |           |               | 5T078-3355-0...110...110 |           |               | 5T078-4633-0...211...010 |           |               |
| 5T076-1641-2...67...010  |           |               | 5T078-2578-0...34...060  |           |               | 5T078-3365-0...110...120 |           |               | 5T078-4638-0...212...220 |           |               |
| 5T076-1642-2...67...020  |           |               | 5T078-2581-0...33...090  |           |               | 5T078-3391-0...118...080 |           |               | 5T078-4642-0...212...090 |           |               |
| 5T076-1735-0...68...190  |           |               | 5T078-2582-0...34...010  |           |               | 5T078-3392-0...118...090 |           |               | 5T078-4655-2...213...010 |           |               |
| 5T076-1736-0...68...200  |           |               | 5T078-2584-0...33...120  |           |               | 5T078-3541-0...120...030 |           |               | 5T078-4656-2...213...020 |           |               |
| 5T076-2312-0...100...010 |           |               | 5T078-2594-0...95...090  |           |               | 5T078-3543-0...120...080 |           |               | 5T078-4657-2...213...025 |           |               |
| 5T076-2583-0...34...040  |           |               | 5T078-2656-2...40...040  |           |               | 5T078-3544-0...120...180 |           |               | 5T078-4658-0...213...060 |           |               |
| 5T077-1652-3...67...120  |           |               | 5T078-2659-0...40...080  |           |               | 5T078-3559-2...122...120 |           |               | 5T078-4711-2...191...010 |           |               |

# 零件号索引 NUMERICAL INDEX

| 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. | 零件号<br>PART No. | 页<br>PAGE | 序号<br>REF.No. |
|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|-----------------|-----------|---------------|
| 5T078-4741-2... | 191       | 080           | 5T078-7818-0... | 166       | 080           |                 |           |               |                 |           |               |
| 5T078-4742-2... | 191       | 100           | 5T078-7819-0... | 167       | 010           |                 |           |               |                 |           |               |
| 5T078-4861-0... | 192       | 010           | 5T078-7821-0... | 169       | 010           |                 |           |               |                 |           |               |
| 5T078-4865-0... | 204       | 015           | 5T078-7822-0... | 169       | 100           |                 |           |               |                 |           |               |
| 5T078-4881-0... | 192       | 030           | 5T078-7823-0... | 167       | 040           |                 |           |               |                 |           |               |
| 5T078-4911-0... | 199       | 010           | 5T078-7824-0... | 174       | 010           |                 |           |               |                 |           |               |
| 5T078-5130-0... | 202       | 010           | 5T078-7826-0... | 167       | 020           |                 |           |               |                 |           |               |
| 5T078-5131-0... | 202       | 020           | 5T078-7827-0... | 168       | 050           |                 |           |               |                 |           |               |
| 5T078-5132-0... | 202       | 030           | 5T078-7841-3... | 173       | 010           |                 |           |               |                 |           |               |
| 5T078-5143-0... | 202       | 140           | 5T078-7891-0... | 175       | 010           |                 |           |               |                 |           |               |
| 5T078-5211-0... | 193       | 010           | 5T078-7893-0... | 175       | 020           |                 |           |               |                 |           |               |
| 5T078-5228-0... | 196       | 210           | 5T078-7894-0... | 175       | 030           |                 |           |               |                 |           |               |
| 5T078-5231-0... | 195       | 150           | 5T078-7896-0... | 176       | 100           |                 |           |               |                 |           |               |
| 5T078-5241-0... | 198       | 010           | 5T078-7897-0... | 176       | 110           |                 |           |               |                 |           |               |
| 5T078-5242-0... | 198       | 050           | 5T078-7911-0... | 177       | 010           |                 |           |               |                 |           |               |
| 5T078-5411-3... | 189       | 010           | 5T078-7915-0... | 170       | 045           |                 |           |               |                 |           |               |
| 5T078-5425-0... | 205       | 060           | 5T078-7916-0... | 177       | 090           |                 |           |               |                 |           |               |
| 5T078-5426-0... | 205       | 070           | 5T078-7917-0... | 170       | 030           |                 |           |               |                 |           |               |
| 5T078-5511-0... | 187       | 010           | 5T078-7941-0... | 181       | 110           |                 |           |               |                 |           |               |
| 5T078-5521-0... | 187       | 020           | 5T078-7943-0... | 181       | 080           |                 |           |               |                 |           |               |
| 5T078-5531-0... | 187       | 070           | 5T078-7946-0... | 181       | 160           |                 |           |               |                 |           |               |
| 5T078-5551-3... | 186       | 010           | 5T078-7949-0... | 181       | 210           |                 |           |               |                 |           |               |
| 5T078-5552-3... | 186       | 020           | 5T078-7961-0... | 169       | 040           |                 |           |               |                 |           |               |
| 5T078-5562-0... | 186       | 070           | 5T078-7962-0... | 169       | 080           |                 |           |               |                 |           |               |
| 5T078-5591-0... | 186       | 130           | 5T078-7963-0... | 170       | 010           |                 |           |               |                 |           |               |
| 5T078-5592-0... | 186       | 140           | 5T078-7971-0... | 182       | 010           |                 |           |               |                 |           |               |
| 5T078-5613-0... | 112       | 120           | 5T078-7972-0... | 182       | 030           |                 |           |               |                 |           |               |
| 5T078-5621-0... | 210       | 140           | 5T078-8121-0... | 183       | 090           |                 |           |               |                 |           |               |
| 5T078-5622-0... | 199       | 020           | 5T078-8123-0... | 183       | 110           |                 |           |               |                 |           |               |
| 5T078-5623-0... | 210       | 150           | 5T078-8511-0... | 126       | 160           |                 |           |               |                 |           |               |
| 5T078-5631-0... | 212       | 020           | 62151-4241-2... | 115       | 030           |                 |           |               |                 |           |               |
| 5T078-5632-0... | 212       | 100           | 66363-3924-0... | 73        | 190           |                 |           |               |                 |           |               |
| 5T078-5633-0... | 212       | 120           |                 | 74        | 072           |                 |           |               |                 |           |               |
| 5T078-5634-0... | 212       | 150           | 66363-3925-0... | 73        | 200           |                 |           |               |                 |           |               |
| 5T078-5635-0... | 212       | 160           |                 | 74        | 075           |                 |           |               |                 |           |               |
| 5T078-5636-0... | 212       | 200           | 66363-3949-0... | 73        | 120           |                 |           |               |                 |           |               |
| 5T078-5637-0... | 212       | 205           | 66363-3971-0... | 75        | 130           |                 |           |               |                 |           |               |
| 5T078-5638-0... | 212       | 230           | 66415-8386-0... | 74        | 220           |                 |           |               |                 |           |               |
| 5T078-5645-0... | 135       | 020           | 66611-3633-0... | 77        | 070           |                 |           |               |                 |           |               |
| 5T078-5646-0... | 135       | 080           | 67111-5583-0... | 49        | 090           |                 |           |               |                 |           |               |
| 5T078-5912-2... | 209       | 010           | 67111-5584-0... | 49        | 100           |                 |           |               |                 |           |               |
| 5T078-5913-2... | 209       | 020           | 67950-9542-0... | 122       | 100           |                 |           |               |                 |           |               |
| 5T078-5922-3... | 209       | 070           | 68171-6363-0... | 95        | 040           |                 |           |               |                 |           |               |
| 5T078-5928-2... | 209       | 120           | 68351-6217-2... | 40        | 090           |                 |           |               |                 |           |               |
| 5T078-5931-0... | 209       | 140           | 68728-7615-0... | 86        | 080           |                 |           |               |                 |           |               |
| 5T078-5942-0... | 61        | 030           | 69191-6329-0... | 76        | 040           |                 |           |               |                 |           |               |
| 5T078-5944-0... | 61        | 060           | 6A000-3982-0... | 75        | 060           |                 |           |               |                 |           |               |
| 5T078-5945-0... | 61        | 050           | 6A110-3515-0... | 73        | 150           |                 |           |               |                 |           |               |
| 5T078-5947-0... | 209       | 043           |                 | 74        | 060           |                 |           |               |                 |           |               |
| 5T078-5948-0... | 209       | 045           | 6A610-3533-0... | 74        | 110           |                 |           |               |                 |           |               |
| 5T078-5949-0... | 209       | 047           | 70244-5638-0... | 116       | 070           |                 |           |               |                 |           |               |
| 5T078-6751-0... | 155       | 010           | 7C765-5126-0... | 180       | 110           |                 |           |               |                 |           |               |
| 5T078-6761-2... | 155       | 130           |                 |           |               |                 |           |               |                 |           |               |
| 5T078-7231-0... | 164       | 010           |                 |           |               |                 |           |               |                 |           |               |
| 5T078-7232-0... | 164       | 070           |                 |           |               |                 |           |               |                 |           |               |
| 5T078-7242-0... | 132       | 030           |                 |           |               |                 |           |               |                 |           |               |
| 5T078-7810-0... | 166       | 010           |                 |           |               |                 |           |               |                 |           |               |
| 5T078-7815-0... | 166       | 020           |                 |           |               |                 |           |               |                 |           |               |
| 5T078-7816-0... | 166       | 040           |                 |           |               |                 |           |               |                 |           |               |
| 5T078-7817-0... | 166       | 060           |                 |           |               |                 |           |               |                 |           |               |